

Usage Notes:

- > For drivers and more, visit **uart-adapter.com**
- > USB, VIN, and GND must always be connected for proper operation. PWR then turns on.
- > Connect VIN to a voltage header or supply equal to your UART level.
- > Maximum working voltage is not isolation voltage. Do *not* use voltages higher than 5.4V to prevent damage.

Safety and Liability:

Only use the product in dry environments and avoid excessive dirt or contamination. The user assumes all responsibility and liability for proper and safe handling of the product. At the end of life, dispose accordingly with other electronic products and separate from household waste.

FCC Notice:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) This device must accept any interference received, including interference that may cause undesired operation.



μ Art

USB-UART Converter
Usage Notes