
Dupline Car Park System Type GP62x022xx724-US Ultrasonic Sensor

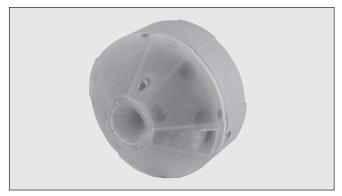

parking bay is occupied or

Each sensor need to be con-

nected to the Dupline 3-wire bus. The bus provides power

and enables the sensors to

transmit the status of the park-

ing bays to the carpark moni-

toring devices (GP3482 9091 724), which keep track of the

number of free parking bays in

an area and show the result on

The sensors GP62x0 22xx

724-US can also be used for

detection of cars in a count

system together with GPMZC-

SET. The sensor has a mode designed for rapid detection

of cars which can be used in a

count system. Please refer to the MZC Installation manual.

the connected displays.

booked.

Product Description

The ultrasonic sensor is part of the car park system which contains other variants of sensors, monitors and displays.

The GP62x0 22xx 724-US sensor is installed in the middle of the ceiling above the parking bay and detects whether a car is parked in the bay. The parking bay status is indicated using the built in LEDs, for GP6220 2201 724-US or GP6220 2202 724-US. The GP6240 2224 724-US has not built in LED, but uses the passive LED indicators GP6289 000x-US to show the status.

E.g. green LED indicates that the parking bay is available for parking.

A red LED indicates that the

Input/Output Specifications

RJ12 connector	for address programming with Carpark Configurator GP7380 0080
2x3-pin connector	 Printed dot on the sensor is Dupline[®] + D- or Gnd POW (power from DMM or Coupler). See drawing on page 3 (System diagram)
1x2-pin connector	Not in use for Carpark sensors GP6220 220x 724 -US. Only in use for GP6240 2224 724-US and the passive LED indicator GP6289 000x-US. See drawing example on page 5

NOTE: The sensor connectors are using the "push-wire connection" methode. Use 1.5 mm² single core wire for the sensor installation.

- Ultrasonic sensor for detection of cars
- Narrow detection beam makes the sensor suitable for count installation
- Fast reaction detects cars with a speed up to 20 km/h Low current consumption
- Self-calibration of the sensor can be performed
- globally on all sensors at once or locally on a single sensor Wide measuring range

CARLO GAVAZZI

- Protected against dust and moisture Dupline 3-wire bus system with power
- Address coding with Carpark Configurator GP73800080 GP6220 2201 724-US has built in green/red LED indicator
- GP6220 2202 724-US has built in blue/red LED indicator GP6240 2224 724-US has no LED built in. The sensor is design to be used together with the passive LED indicator GP6289 000x-US
- cULus approved

Ordering key	GP 62x0 22xx 724-US
Type: Dupline [®] Housing Input type Addresses Inputs Supply	

Type Selection

GP6220 2201 724-US GP6220 2202 724-US GP6240 2224 724-US Sensor with green/red LED Sensor with blue/red LED Sensor without LED

Supply Specifications

Power supply:	21 VDC min.; 30 VDC max. (Overvoltage category III (IEC60664))
Consumption on the Dupline bus	0.03 mA
Max. supply current	
GP6220 220x 724-US GP6240 2224 724-US	20 mA 15 mA
Nominel Supply	28 VDC / 19 mA 0,53 W



in the transparent part

General Specifications

Ultrasonic frequency	40 kHz	
Max. distance between ceiling and floor	4.0 m	
Min. distance between ceiling and floor	1.5 m	
Min. calibration distance	1.5 m	LED
Hysterese	±30 cm	GP62
Sensor in "Normal" mode Sensor activations time	3 sec. See fig. 1 (Default)	Oc Ba
Sensor in "Lane" mode Sensor activations time	0.4 sec. with a max car speed on 20 km/hour. See fig. 2	GP62 O Ba GP62
Sensor temperature compensation	The built-in temperature compensation makes the sensor stabile and reliable without any calibration	The addr • St
Water and condensation-resistant	The bottom part plus sensor has been designed in a such a way that water entering from the ceiling flows right through the sensor and out of small holes	• Ca Prog Appr MTB

	of the sensor without getting in contact with the electronic board and without doing any dam- age.
LED indication:	
GP62202201 724-US Occupied:	Red LED continuously lit
Bay available:	Green LED continuously lit
GP62202202 724-US	
Occupied:	Red LED continuously lit
Bay available: GP62402224 724-US	Blue LED continuously lit
	No LED
The sensor uses 2 Dupline [®] addresses	
Status address	Indicates the status of
	the sensor.
	Default Dupline® address
Calibration address	is A2 For common sensor
• Calibration address	calibration.
	Default Dupline [®] address
	is P1
Programming unit	GP7380 0080
Approval	cULus (UL60950)
MTBF	70,000 hours

Mode of Operation

The ceramic sensor emits an acoustic signal at a frequency of 40 kHz which is reflected when it hits the floor and returned to the sensor. The reflected signal indicates whether the parking bay is available or occupied.

Sensor addresses

• Status Dupline[®] address The Dupline bus address used by the sensor to transmit the status of the parking bay. The same address can be used to force the red LED ON** for booking of free parking bays (this feature requires management by central PC software). Please refer to the Dupline Carpark system manual for further information about the Dupline addressing scheme and the rules that apply for the assignment.

 Calibration Dupline[®] address

This address is used to trig- 3-

ger the sensor to perform a self calibration. Several sensors can be given the same calibration address, thereby making it possible to calibrate multiple sensors at once by sending a single trigger signal on that address. The programming unit GP73800080 is used to send out the trigger signal.

Modes

The sensor has two modes. Normal mode or Lane mode.

In *Normal mode*, the sensor detects the presence of a car in the parking bay and lights the red LED**. See fig. 1 on page 4. At the same time the sensor sends a signal out on the Dupline[®] 3-wire bus. When the parking bay is empty the LED will change to green** and also send a signal out on the Dupline[®] 3-wire bus.

The sensor will not react to objects lower than 0,3 m. To avoid a weak signal, the sensor must be installed pointing directly at a hard surface, as for instance concrete. A soft or uneven surface will reduce the signal.

In *Lane mode*, the sensor is designed to be mounted in the ceiling above the lane. The sensor is able to detect moving cars with a maximum speed of 20 km/hour. See fig. 2 on page 4.

When the sensor detects a moving car it sends a signal to the Carpark system that count down the total amount of free places, and show the reduced amount on the local display but also on the display that show the total amount of free places.

 
This is to prevent to many moving cars in a specific carpark area. The sensor does not show the actual status on the LED's. The LED's^{**} only works as feedback during calbration, startup and show the fail status.


Sensor used as "count sensor" with the MZC

The sensor can also be used in a count system, where rapid detection is needed. When two sensors are mounted in the ceiling after each other, the connected GPMZC can detect the cars and also the direction in which the cars are going. The "Lane Mode" that is used for sensors in "count mode", has additional functions where the installer can program the sensor to detect cars with different velocities. The LED is programmable to be either selected or deselected. Please refer to the MZC installation manual for further information.


** GP6240 2224 724-US uses the passive LED indicator GP6289 000x-US


CARLO GAVAZZI



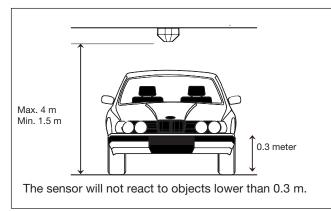




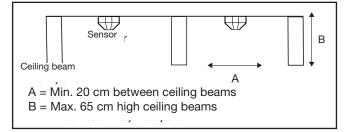

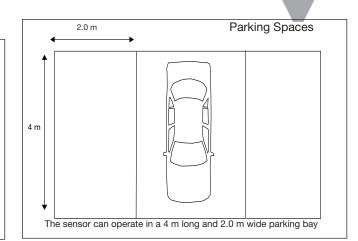

Mounting sensor

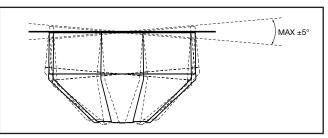

To receive the best signal, the sensor must be installed with an angle on the ceiling on maximum $\pm 5^{\circ}$.

Calibration

Note:

The calibration procedure is equal on all sensor types. The GP6240 2224 724-US does not have built-in LED indication but uses a passive LED indicator. This explanation describe a standard calibration procedure.

The sensor is self-callibrating. It is important to perform the calibration when the parking bay is empty.

There are two ways of calibrating a sensor.

Manual calibration is a local calibration of the single sensor.

- Push the button on the out side of the sensor.
- The LED flashes green for 30 seconds with 1 Hz. (The electrician has time to get clear of the sensor before the calibration starts).
- The calibration starts when the LED flashes green for 6 seconds with 4 Hz.
- If the calibration is OK, the LED will respond with a constant green light.

Automatic calibration with the Carpark Configurator GP 7380 0080 is a global calibration of all connected sensors. The parking bay must be empty during the calibration process.

Error messages:

- If the calibration fails, the LED will respond with a constant flashing red light.
 If the LED flashes red, the sensor could be out of range or the sensor is not aligned correctly.
- Adjust the sensor into the sensing area and recalibrate the sensor.

- If Dupline[®] is not connected/defect the LED will flash red.
- If Dupline[®] is short circuit the LED will flash red.
- Sensor first time start up. The sensor LED will flash red because it's needs calibration.

NOTE:

The sensor must always be calibrated when installed, regardless of function: spaces detection, lane detection or as a "count sensor" in a count installation.




Environment

Dimensions

Protection: IP 34

- Operating temperature: -40°C to 70°C (-40°F to 158°F)
- Storage temperature: -40°C to 85°C (-40°F to 185°F)
- Pollution Degree: 3 (IEC 60664)
- Dimensions: Ø118 x 76 mm
- Material: The case is made of polypropylene. The sensor lid is made of clear Polycarbonate.

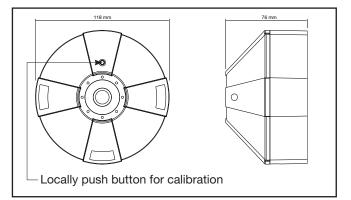

System Diagram


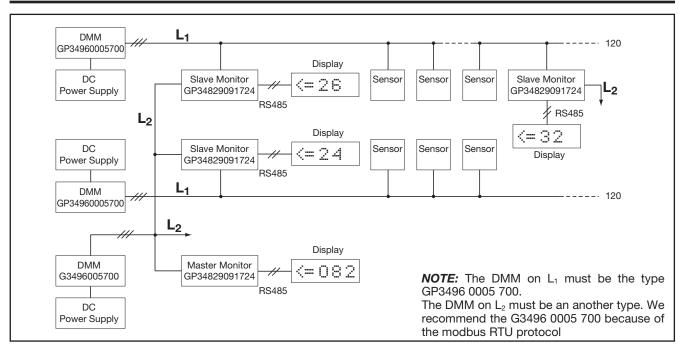


Fig. 1 and Fig. 2

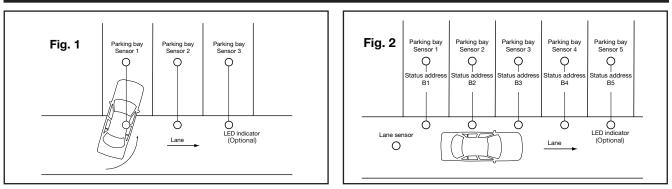

The sensors can be used as both parking bay (Normal mode) and lane sensors (Lane mode).


See the "Carpark Installation Manual" on how to program the sensors.

The sensors are basically equal to each other.

It is only the programming that makes them different from each other.


The GP6240 2224 724-US does not have a built-in LED.

CARLO GAVAZZI

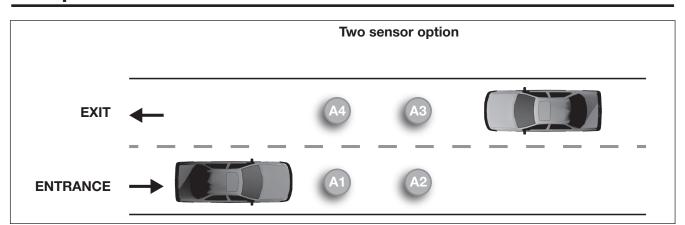

Example of a sensor in a count installation

Wiring Diagram

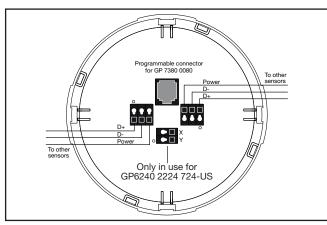


Note: The 2 x 3 pin connector are internally connected on the PCB.


Note: X and Y is not in use for model number GP6220 2201 724-US and GP6220 2202 724-US

NOTE: The wiring of the sensors must always be made with 1.5 \mbox{mm}^2 single core wire

Connection diagram

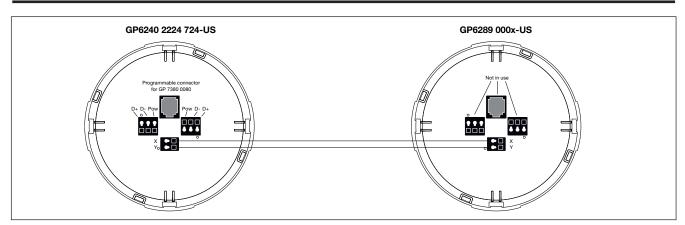

Bottom part: mounted in ceiling

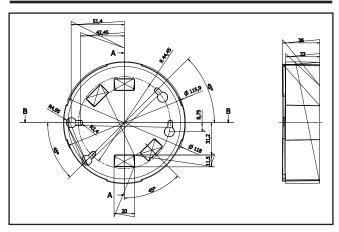

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Carlo Gavazzi:

<u>GP62890001</u> <u>GP62402224724-US</u> <u>GP62402224724</u> <u>GP62202201724</u> <u>GP62202201724-US</u> <u>GP62202202724-US</u>