


Inductive Sensors

Single or Dual Loop Detectors

Type LD with teach-in

CARLO GAVAZZI

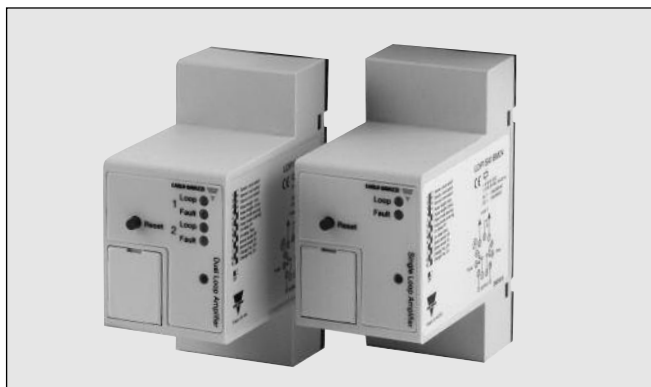

- Single or Dual loop detector
- Automatic adjustment of detection level
- Manual sensitivity for compensations of variations
- Easy installation via 11 pin circular plug
- Rated operational voltage: 24 VAC/DC, 115 VAC or 230 VAC
- Pulse or presence relay output
- Output 1A/250 VAC SPDT relay
- LED indication for power, relay status and loop fault
- Sensitivity boost – only LDP1
- Selectable frequency – prevents cross-talk
- Direction logic – only LDP2

Product Description

Loop detectors for detection of vehicles. The vehicle loop detector is designed to handle all parking, drive-through and access control applications for controlling doors, gates, barriers or fences.

The principle is based on a change in the inductance within the loop when a metallic object (vehicles) is passing. The microprocessor evaluates the changes.

Ordering Key

LDP1 SA1 B 230

Type _____
 Plug mounting _____
 Loop inputs _____
 Function _____
 Adjustment _____
 Outputs _____
 Relay versions _____
 Power supply _____

Type Selection

Mounting	Relay	Ordering no. Supply: 24 VAC/DC	Ordering no. Supply: 115 VAC	Ordering no. Supply: 230 VAC
Single loop	SPDT	LDP1SA1BM24	LDP1SA1B115	LDP1SA1B230
Dual loop	SPST	LDP2TA2BM24	LDP2TA2B115	LDP2TA2B230

Specifications

Rated operational voltage (U_B)		Frequency range	
Pin 2 & 1	230	13 - 120 kHz	
	115	Loop inductance	
	M24	15 - 1500 µH	
Rated insulation voltage	19.2 to 28.8 VAC/DC	Operating frequency (f)	
Rated impulse withstand voltage	<2.0 kVAC (rms)	Relay output	
	4 kV (1.2/50 µs) (line/neutral)	1 HZ	
Rated operational power		Response time	
AC supply	3 VA	400 mS	
AC/DC supply	1.5 VA / 1.5 W	Environment	
Power on delay (t_v)		Overvoltage category	
< 10 sec Typ. 4 sec		III (IEC 60664)	
Outputs		Degree of protection	
Minimum switching current	10 mA @ 12 V	IP 20 (IEC 60529, 60947-1)	
Rated insulation voltage	250 VAC (rms) (cont./elec.)	Pollution degree	
Relay Rating (AgNi 90/10)		2 (IEC 60664/60664A, 60947-1)	
Resistive loads	AC1	Temperature	
	DC1	Operating	
Mechanical life (typical)	≥ 15 x 10 ⁶ operations	-40° to +70°C (-40° to +158°F)	
	@ 18'000 imp/h	Storage	
Electrical life (typical)	AC1	-50° to +85°C (-58° to +185°F)	
Sensitivity		Housing material	
8 sensitivity settings available		NORYL SE1, light grey	
		Weight	
		AC supply	
		150 g	
		AC/DC supply	
		85 g	
		Approvals	
		UL508	
		CE marking	
		Yes	



Mode of Operation

Application

The LDP Vehicle Loop Detector is based on micro-processor technology, which has enabled a large number of functions to be implemented. The functions are primarily for use in the Parking/Access Control Industry like control for gates, barriers, fences, etc. Standard operations are implemented including programmable pulse and presence option.

Principle

The Vehicle Loop Detector is based on the inductive principle, using a coil of wire buried in the driveway and connected to the loop detector. The change in inductance will be measured as a change in frequency. The output relay activates when the loop is activated and releases again when the loop returns to a non-activated condition.

Setup

The loop has to be in a passive condition (no object in the loop area) during start-up and adjustment. The loop detector will automatically calibrate when the reset button has been activated, which will be indicated by the yellow LED flashing. The functioning can now be checked by activating the loop with the actual object. Now the yellow LED will go on, and the output relay will be activated according to the dip-switch settings.

If the loop detector does not react, the sensitivity must be manual adjusted by means of the dip-switches. **Important:** reset the system after changing the Dip-switch settings.

Temperature compensation
The frequency will increase as a result of decreasing temperatures and vice versa. To compensate for this, or any other situation that courses slowly change in frequency, the LD auto tunes constantly. That means if the frequency changes slowly there will be no detection. The auto tune function compensates for both increasing or decreasing in frequency.

Fault detection
This function is useful if the cable disconnect. The alarm will be indicated via the red LED in front of the housing. This LED is constantly lighting when the loop is open or too large and flashing when a short circuit occurs or a loop is too small.

Sensitivity
8 sensitivity settings are available on the dip-switch-

es in front of the module, to allow flexibility in configuration and application (Compensation for variation in loop construction).

Reset switch
The reset switch enables the detector to be manually reset during commissioning and testing. The detector will re-tune the sensing loop and become ready for vehicle detection.

Relay output
The single loop detector has two SPDT relays – one for pulse output and one for presence output. The dual loop detector has two SPST relays – one for each loop. Pulse output (one shot): It is possible to select the length of the output period to 0.2s or 1 second. The pulse output can be setup to activate on detection of a vehicle or when the vehicle leaves the loop. Presence output: The output will be activated as long as there is a vehicle parked in the loop. It will be possible to activate a filter (ON-delay of 2 seconds), which prevents a false detection from a small

or fast moving object. **Pulse output mode**
The relay activates only for a short period when the vehicle enters or leaves the loop.


Permanent output mode
The relay will remain active as long as there is a vehicle parked in the loop.

Pulse length
Extends the pulse length from 0.2 sec to 1 sec.

On-delay
Prevents false detections of small or fast moving objects.


Sense boost (only single channel loop detector)
This feature sets the undetected level to maximum sensitivity and is used to prevent loss of detection of high-bed vehicles.

Selectable frequency
The frequency of the loop is determined by the inductance of the loop and the frequency switch setting. If the frequency switch is on, the frequency is reduced. It may be necessary to change the frequency to prevent cross talk between adjacent loops. The frequency function will only change the frequency of one channel of the dual loop detector. **Important:** Be careful when installing the detector next to another inductive load, as this can have an effect on the detector and cause false detections.

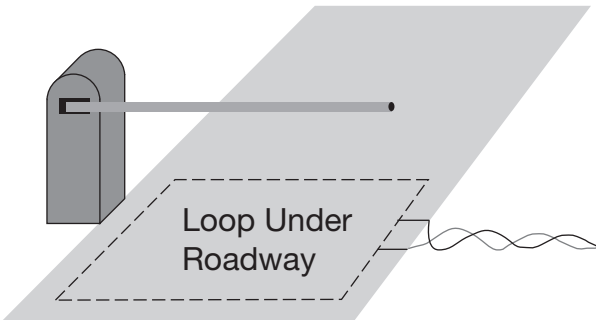


Operation Diagram

LDP1 / Presence and Pulse mode

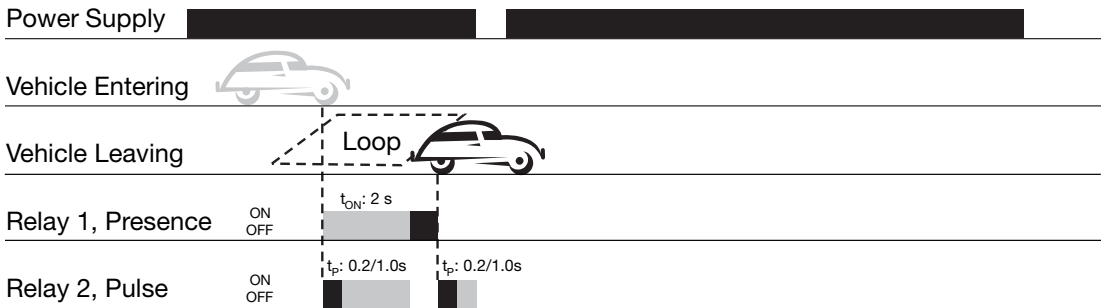


Operation Diagram (cont.)


LDP2 / Direction Logic Mode

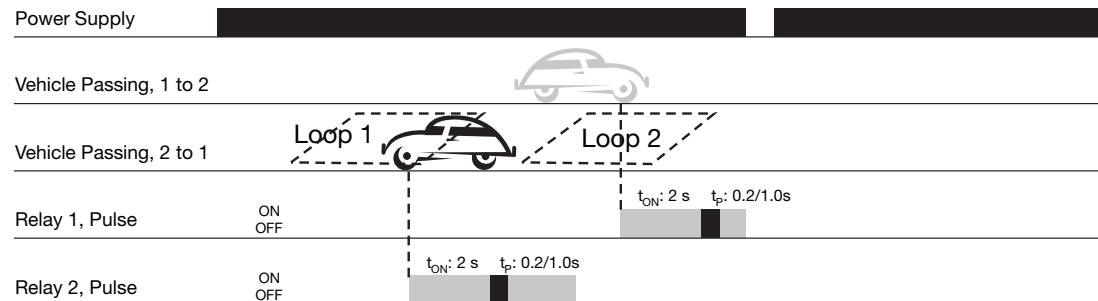


LDP2 / Presence Mode

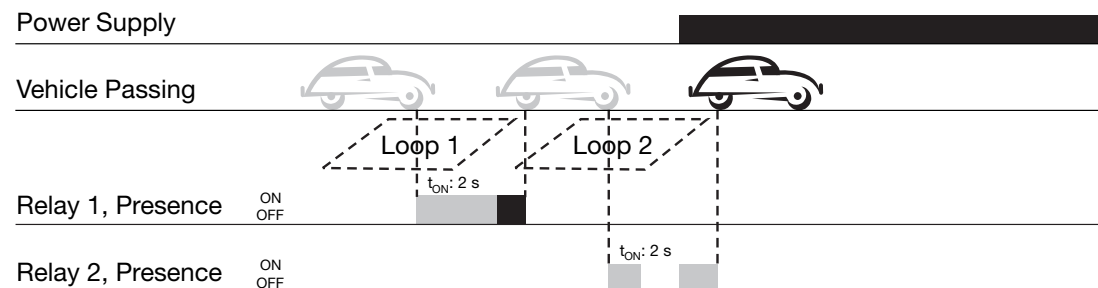

LDP2 / Pulse Entering

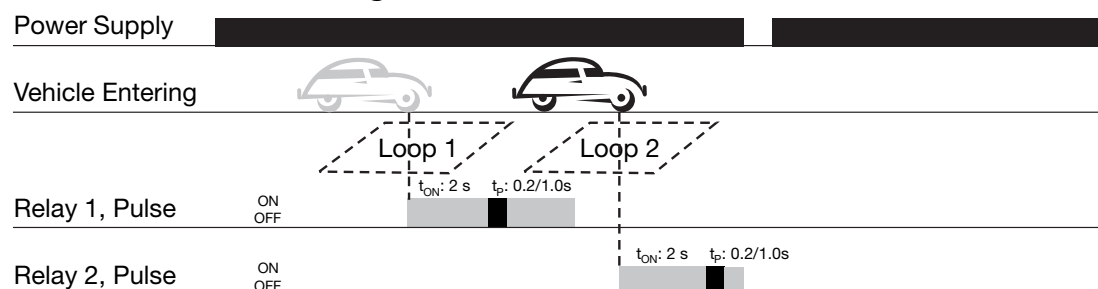


LDP2 / Pulse Leaving

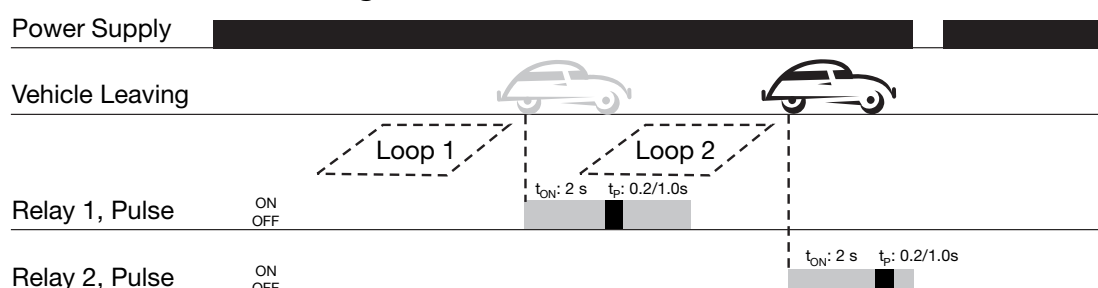



Dip Switch Settings

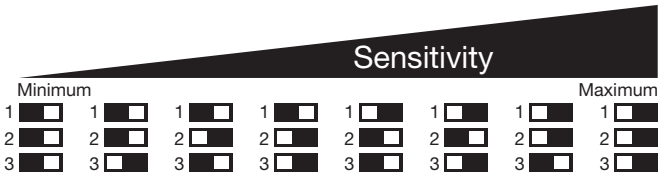

LDP1

- 4 ☐ 1 sec ☐ 0.2 sec Pulse length
- 5 ☐ Leaving ☐ Entering Pulse mode
- 6 ☐ Off ☐ 2 sec On delay
- 7 ☐ Off ☐ On Sensitivity boost
- 8 ☐ A ☐ B Loop frequency "Cross talk"

LDP2


- 4 ☐ 1 sec ☐ 0.2 sec Pulse length
- 5 ☐ Leaving ☐ Entering Pulse mode
- 6 ☐ Off ☐ 2 sec On delay
- 7 ☐ Pulse ☐ Presence Pulse/presence mode
- 8 ☐ A ☐ B Loop frequency "Cross talk"

Direction logic

Function
The Dual loop detector (LDP2) is implemented with direction logic as standard. The function enables the detector to give a pulse output on relay#1 for a vehicle travelling from loop 1 to loop 2 and a pulse output on relay#2 for a vehicle travelling from loop 2 to loop 1.

If a vehicle is detected, and the corresponding direction is indicated, both loops must be in a non-activated condition again before the next object can be detected.

For Direction logic mode set Dipswitch 5 to "Entering" and Dipswitch 7 to "Presence".

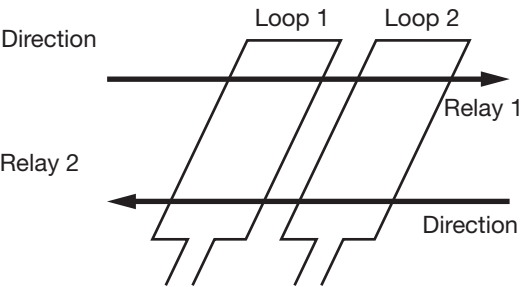

Important:
Reset the detector after changing the Dip-switch settings

Loop Diagram

Loop installation
The loop geometry must be adapted to the respective application. The setup will be optimal if the loop has the same size as the object to be detected.

After determining the loop geometry, a groove must be cut in the ground for installing the loop.

Cut an inclined groove of 45° angle at the corners of the loop, which will protect it from excessive wear.

Clean the groove for moisture and place the wire as tight as possible along the button of the groove.

Before sealing up the groove, it is recommendable to check the loop inductance using a measuring device. Optimum value: 80-300 µH.

When sealing up the groove, ensure that the temperature of the sealing compound does not exceed the max temperature of the loop insulation, as this might cause an earth fault.


Loop turns
The number of turns strongly depends on the circumference of the loop. The smaller the loop, the more turns are required.

Cable Recommendations


- Use 1.5mm squared cable. Use silicon coated cable, if placed directly into the ground
- Use 2m of spacing between two adjacent loops.
- Use screened feeder cable in electrically noisy environments or where feeder runs parallel

to power cables.

Loop circumference (m)	No. of turns
>10	2
6-10	3
<6	4

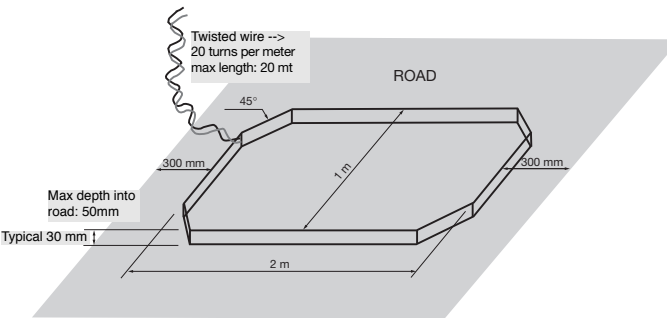


Dimension Drawing

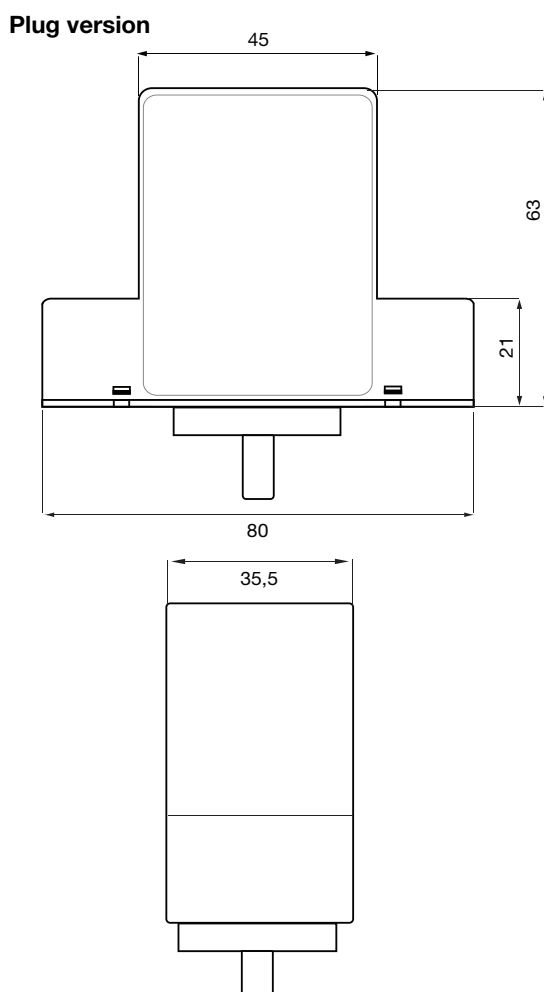


Wiring Diagram

LDP1

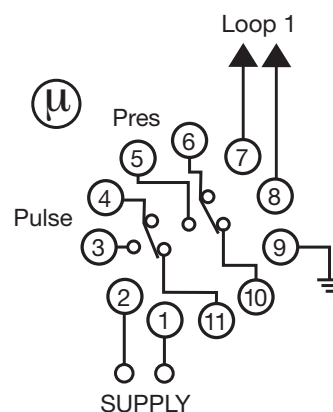

LDP2

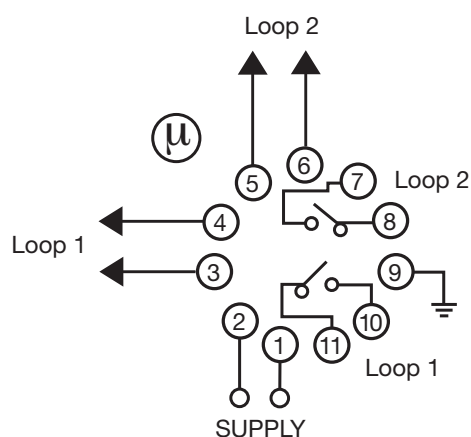

Pin configuration

Pin n.	Single Channel Detector	Dual Channel Detector
1	Supply	Supply
2	Supply	Supply
3	Pulse relay NO	NO Loop #1
4	Pulse relay COM	Loop #1
5	Presence relay NO	Loop #2
6	Presence relay COM	Loop #2
7	Loop	Pulse/Presence relay #2 NO
8	Loop	Pulse/Presence relay #2 COM
9	Earth	Earth
10	Presence relay NC	Pulse/Presence relay #1 NO
11	Pulse relay NC	Pulse/Presence relay #1 COM

Accessories

- 11-pole circular socket ZPD11

Delivery Contents

- Detector
- Packaging: Carton box

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Carlo Gavazzi:](#)

[LDP1SA1B230](#) [LDP2TA2BM24](#) [LDP2TA2B115](#) [LDP1SA1BM24](#) [LDP2TA2B230](#) [LDP1SA1B115](#)