# **Combination Wrist Strap - Footwear Tester Installation, Operation and Maintenance**





Figure 1. Combination Wrist Strap - Footwear Tester (ComboTester).

#### **Combo Tester Parts Familiarization**

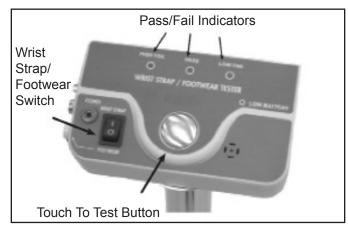


Figure 2. Combination Wrist Strap - Footwear Controls (ComboTester).

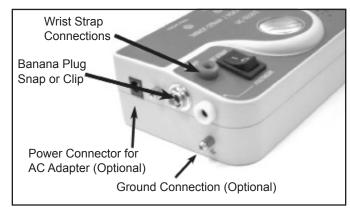


Figure 3. Combination Wrist Strap - Footwear, wrist strap connections (ComboTester).

The SCS Combo Tester meets ANSI/ESD S20.20 and ESD TR53 Compliance Verification testing of personnel grounding wrist strap and footwear. The lower limit verifies the presence of current limiting resistance.


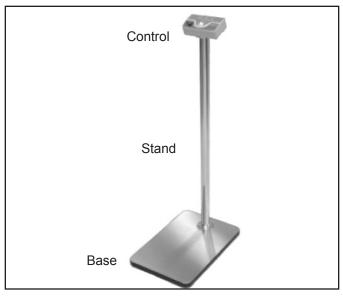


Figure 4. Combination Wrist Strap - Footwear Stand (ComboTester).

## **Assembly Instructions**

- 1. Remove the parts from the packaging materials.
- 2. Place the base on the floor.
- 3. Remove the white cover plastic from the base.
- 4. Put the stand on the base, with the pins at the top.
- 5. Two pins should face the base.

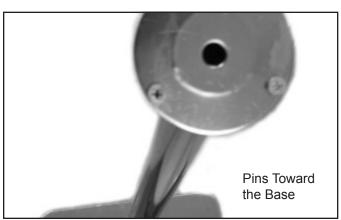

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com



6. Secure the Stand to the Base with three 10mm bolts.



- 7. Confirm that the battery is in the Control, or if using the AC adapter, remove the battery.
- Align the slots on the Control with the pins on the Stand.
- 9. Slide the Control down onto the pins.



Connect the power adapter to the Control and 110 AC if not using the battery. **Grounding:** If desired, the unit can be grounded by connecting the included wire from the ground point on the Control to a suitable ground.

#### Instructions for Use

#### **Testing a Wrist Strap**

1. Switch the Control to "Wrist Strap".

Result	Indication	Range
High Fail Pass	Red Light Green Light + tone	>10 megohms 750 kilohms - 10 megohms
Low Fail	Yellow Light	<750 kilohms

- 2. While wearing the wrist strap, connect the cord to the Control by the banana plug, snap, or clip.
- 3. Touch the silver button.
- 4. The Control will test the wrist strap and report:

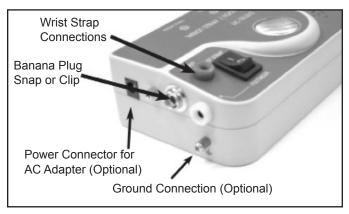


Figure 5. Testing Wrist Strap or Footwear.

#### **Testing Foot Grounders to "Footwear"**

- 1. Switch the Control to "Footwear".
- 2. While wearing the footwear, put one foot onto the Base.
- 3. Touch the silver button.
- 4. The Control will test the footwear and report:

Result	Indication	Range
High Fail Pass	Red Light Green Light + tone	>10 megohms 750 kilohms - 10 megohms
Low Fail	Yellow Light	<750 kilohms

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

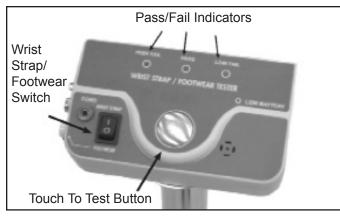


Figure 6. Testing Wrist Strap or Footwear.

### **Specifications**

#### **Resistance Ranges**

Wrist Strap 750 kilohms to 10 megohms

Footwear 750 kilohms to 100 megohms

Accuracy ±20%

Power Supply 9 volt alkaline battery or AC adapter

#### **Calibration Verification**

This solid state unit is non-adjustable. However, correct operation may be checked using the following procedure:

#### **Equipment**

Resistance Substitution Box 700 kilohms to 110 megohms (Discrete resistors can be used in place of the substitution box.)

#### **Procedure**

750 1.11 - 1....

Connect the leads of the substitution box to the wrist strap banana jack and to the Press to Test button. Press and hold the "Press to Test" button. Adjust the substitution box to each of the following resistance values. The Combo Tester should display the proper indication.

750 kilohm - 10 megohm range	Вох	Combo Tester
	<675 kilohms	Fail - Low
	5 megohms	Pass
	>11 megohms	Fail - High

Connect the leads of the substitution box to the Base and to the Press to Test button. Press and hold the "Press to Test" button. Adjust the substitution box to each of the following resistance values. The Combo Tester should display the proper indication.

100 megohm range	Вох	Combo Teste
	<675 kilohms	Fail - Low
	5 megohms	Pass
	>110 megohms	Fail - High

Values between these points can be checked at the user's discretion. Should the unit not display the proper value, increase (or decrease) the resistance by 10%. If the correct value is still not displayed, return the unit to the factory for service.

# Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See the SCS Warranty -

http://staticcontrol.descoindustries.com/warranty.aspx

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

SCS:

COMBOTESTER