-SCS USER GUIDE TB-9058 -----

SMP Device ID Programmer Installation and Operation Instructions





SCS 770036 SMP Device ID Programmer

Description

The SCS SMP Device ID Programmer is used to program the Modbus address for the SCS EM Aware Monitor, WS Aware Monitor and Ground Master Monitor. Programming of the Modbus address allows the SCS SMP Software to locate and poll each monitor.

The SMP Device ID Programmer is compatible with the following items:

Item	Description		
<u>CTC034-030-5-WW</u>	EM Aware Monitor, Event Only, Modbus Output		
<u>CTC034-031-5-WW</u>	EM Aware Monitor, Event, Field & lonization, Modbus Output		
<u>CTC061-5-242-WW</u>	WS Aware Monitor, Modbus Output, with Standard Remotes		
<u>CTC061-5-243-WW</u>	WS Aware Monitor, Modbus Output, with Big Brother Remotes		
<u>CTC062-5-242-WW</u>	WS Aware Monitor, Modbus Output, with Standard Remotes		
<u>CTC062-5-243-WW</u>	WS Aware Monitor, Modbus Output, with Big Brother Remotes		
<u>CTC065-5-WW</u>	Ground Master Monitor, Modbus Output		

Packaging

- 1 SMP Device ID Programmer with RJ45 Cable
- 1 USB Cable, 1 m Length
- 1 Driver Installation CD

Installation

Driver Installation

- 1. Use the included USB cable to connect the SMP Device ID Programmer to your PC.
- Windows will generally find and install its driver automatically. Use the included Driver Installation CD if this does not happen.
- 3. Take note of the COM port that Windows assigns to the SMP Device ID Programmer.



SMP ID Programmer Software

- 1. Visit the SCS Software Download web page: <u>StaticControl.com/SoftwareDownloads.aspx</u>
- 2. Download the SMP ID Programmer ZIP file to your PC, and run the setup.exe file.
- 3. Follow the on-screen prompts to install the software to your PC. The application will automatically open when complete.

Operation

1. Open the SMP ID Programmer application.

Idress 1-32		×
Scan	Device WS&GM	•
Change	New MB Ad	dress
	ddress 1-32 Scan Change	Idress 1-32 Device Scan WS&GM New MB Ad Change

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

 Use the drop down menu to select the COM port that is associated with your SMP Device ID Programmer.

sos Change Mo	dbus A	ddress 1-32		
Select COM	1 Port	Scan		
COM1 COM2 COM3 COM4		Change	New MB Ac	ddress
COM5 COM6 COM7 COM7	Ŧ			

 Use the Device drop down menu to select the SCS monitor type that you choose to program. Select "WS&GM" if programming the WS Aware Monitor or Ground Master Monitor. Select "EM_AWARE" if programming the EM Aware Monitor.

Change Modbus A	ddress 1-32	
Select COM Port COM5	Scan Change	Device

- 4. Connect the programmer's RJ45 plug into the SCS monitor. Power the monitor using its 12VDC power adapter.
- 5. Click the Scan button, and the monitor's current ID number will populate into the MB Address field.



6. Enter the desired ID number into the "New MB Address" field. It may be any number between 1-4.

Change Modbus Ad	dress 1-32
Select COM Port	Device Scan WS&GM 👻
MB Address	Change Rew MB Address

7. Click the Change button, and a confirmation prompt will appear.



- 8. Click the OK button.
- 9. Click the Scan button again to confirm that the new ID number is programmed into the monitor.



10. The monitor is now ready to be deployed and connected to your SMP system. Repeat steps 3-9 if more monitors need to be programmed.

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

Specifications

Size

1.7" L x 2.2" W x 1.0" H (43 mm L x 56 mm W x 25 mm H)

Weight .1 lbs. (.05 kg)

Operating System Compatibility Windows XP or newer

Made in Taiwan

Limited Warranty, Warranty Exclusions, Limit of Liability and RMA Request Instructions

See the SCS Warranty http://staticcontrol.descoindustries.com/warranty.aspx

SCS - 926 JR Industrial Drive, Sanford, NC 27332 • (919) 718-0000 • Website: StaticControl.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

