


R197.235._82

 
Series: SMB CARLOCK

To obtain th complete P/N please fill in the blank "_" with the coding letter

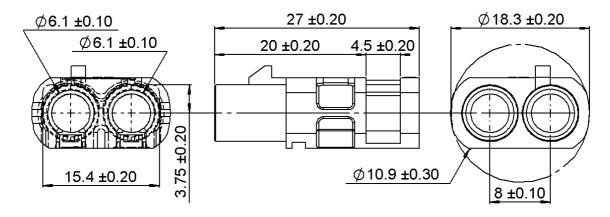

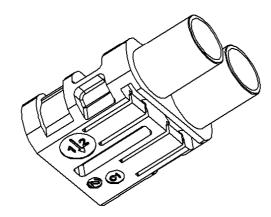

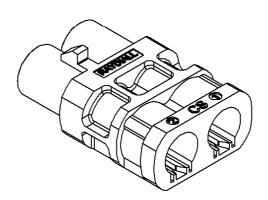



Housing to be used with:

R299.197.000 + R299.197.900 R299.197.010 + R299.197.900

All dimensions are in mm.				
COMPONENTS	MATERIALS	PLATING	(μm)	
		UL CLASSIFICATION	COLOR	
HOUSING	PA6.6 GF15 (POLYAMIDE)	UL 94 V-2	See Page2	

PACKAGING

Standard	Other
3000	Contact us

MECHANICAL CHARACTERISTICS

ENVIRONMENTAL

-40/+110 ° C Mating life 100 Cycles mini Operating temperature

Weight **1,91** g


Issue: 1609

In the effort to improve our products, we reserve the right to make changes judged to be



R197.235._82

Series: SMB CARLOCK

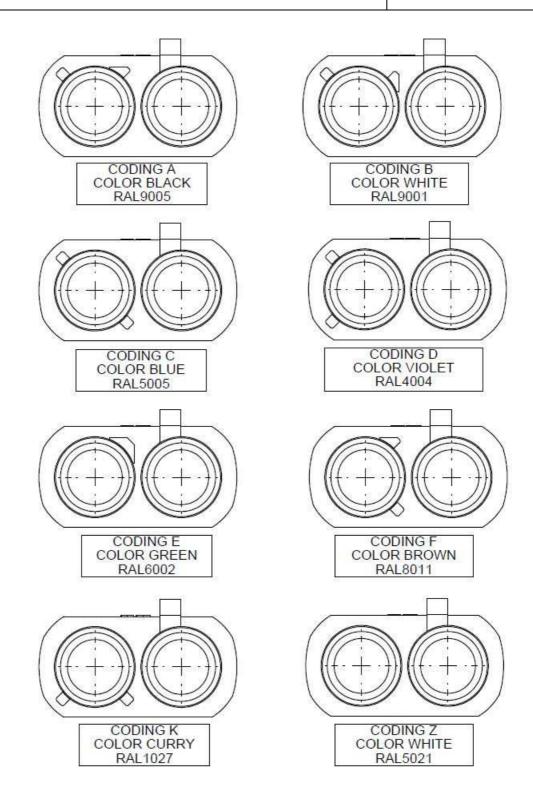

- -For other Coding, please contact us
- -To obtain the complete P/N please fill in the blank "_" with the coding letter

Issue: 1609 A

In the effort to improve our products, we reserve the right to make changes judged to be necessary.




R197.235._82

Series: SMB CARLOCK

RECOMMENDED MOUNTING PROCEDURE



• Pre-insertion of the coax into the housing

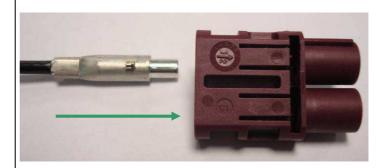


• Orientation of the tab of the coax with the slot of the housing.

Orientation of the slot






 • Push the connector into the housing until it clip on.

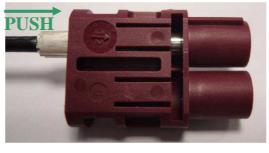







• Repeat the operation 1 and 2 to insert the coax into the second way.



Issue: 1609

In the effort to improve our products, we reserve the right to make changes judged to be




R197.235._82

Series: SMB CARLOCK

RECOMMENDED DISASSEMBLING PROCEDURE



- To unlock the coax from the housing, rotate the coax until the tab is not in front of the elastic finger of the housing.
- insert a screw driver between the elastic finger and the slot of the housing as shown on the picture.
- Tip down the screw driver as shown on the picture to lift up the elastic finger until you have enough room.

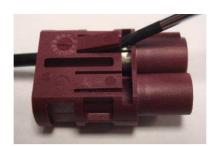





- Hold on the elastic finger up and rotate the coax until the tab is in front of the elastic finger of the housing. (you can use the crimping of the jacket as a reference).
- pull on the cable assembly to remove the coax from the housing.
- Repeat the operation 1 and 2 to remove the coax from the second way.



Do not use anymore the housing after removing it.







Issue: 1609 A

In the effort to improve our products, we reserve the right to make changes judged to be



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Raydiall Automotive:

R197.235.A82 R197.235.C82 R197.235.D82 R197.235.F82 R197.235.K82