







# HARDWARE


#### **FRONT VIEW**

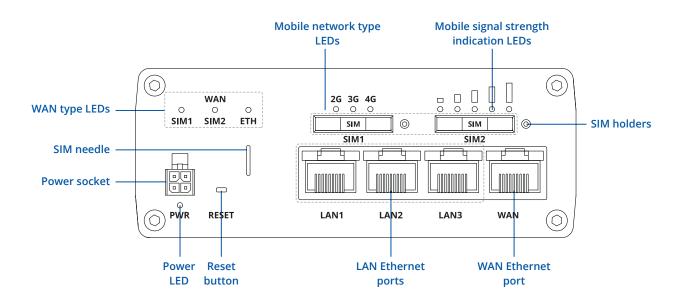

**BACK VIEW** 

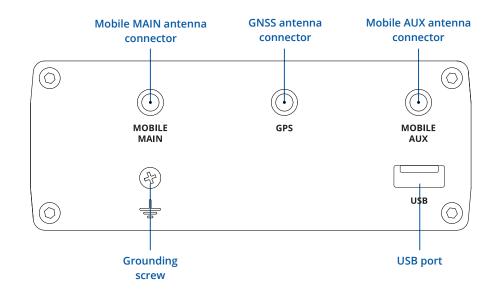

# **POWER SOCKET PINOUT**

 



# **FEATURES**

## MOBILE

Mobile module	4G (LTE) – Cat 6 up to 300 Mbps, 3G – Up to 42 Mbps
SIM switch	2 SIM cards, auto-switch cases: weak signal, data limit, SMS limit, roaming, no network, network denied, data connection fail
Status	Signal strength, SINR, RSRP, RSRQ, Bytes sent/received, connected band, carrier aggregation, IMSI, ICCID
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, Email to SMS, SMS to Email, SMS to HTTP, SMS to SMS, SMS auto reply
USSD	Supports sending and reading Unstructured Supplementary Service Data messages
Black/White list	Operator black/white list
Multiple PDN	Possibility to use different PDNs for multiple network access and services
Band management	Band lock, Used band status display
APN	Auto APN
Bridge mode	Direct connection (bridge) between mobile ISP and device on LAN

## ETHERNET

V	VAN	1 x WAN port (can be configured as LAN) 10/100/1000 Mbps, compliance with IEEE 802.3, IEEE 802.3u, 802.3az standards, supports auto MDI/MDIX crossover
---	-----	--

3 x LAN ports, 10/100/1000 Mbps, compliance with IEEE 802.3, IEEE 802.3u, 802.3az standards, supports auto MDI/MDIX
crossover

#### NETWORK

LAN

Routing	Static routing, Dynamic routing (BGP, OSPF v2, RIP v1/v2, EIGRP, NHRP)
Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, FTP, SMTP, SSL v3, TLS, ARP, VRRP, PPP, PPPoE, UPNP, SSH, DHCP, Telnet client, SNMP, MQTT, Wake on LAN (WOL)
VoIP passthrough support	H.323 and SIP-alg protocol NAT helpers, allowing proper routing of VoIP packets
Connection monitoring	Ping Reboot, Wget reboot, Periodic Reboot, LCP and ICMP for link inspection
Firewall	Port forwards, traffic rules, custom rules
DHCP	Static and dynamic IP allocation, DHCP Relay, Relayd
QoS / Smart Queue Management (SQM)	Traffic priority queuing by source/destination, service, protocol or port
DDNS	Supported >25 service providers, others can be configured manually
Network backup	VRRP, Mobile and Wired WAN options, each of which can be used as an automatic Failover
Load balancing	Balance Internet traffic over multiple WAN connections
Hospot	Internal/external Radius server, captive portal, built in customizable landing page
SSHFS	Possibility to mount remote file system via SSH protocol

# SECURITY

Authentication	Pre-shared key, digital certificates, X.509 certificates
Firewall	Pre-configured firewall rules can be enabled via WebUI, unlimited firewall configuration via CLI; DMZ; NAT; NAT-T
Attack prevention	DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention (SYN-FIN, SYN-RST, X-mas, NULL flags, FIN scan attacks)
VLAN	Port and tag based VLAN separation
Mobile quota control	Custom data limits for both SIM cards
WEB filter	Blacklist for blocking out unwanted websites, Whitelist for specifying allowed sites only
Access control	Flexible access control of TCP, UDP, ICMP packets, MAC address filter



#### VPN

OpenVPN         Multiple clients and a server can run simultaneously, 12 encryption methods           OpenVPN Encryption         DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC           IPsec         IKEv1, IKEv2, with 5 encryption methods for IPsec (DES, 3DES, AES128, AES192, AE           GRE         GRE tunnel	
OpenVPN Encryption     AES-192-CBC, AES-256-CBC       IPsec     IKEv1, IKEv2, with 5 encryption methods for IPsec (DES, 3DES, AES128, AES192, AE	
	, CAST5-CBC, RC2-64-CBC, AES-128-CBC,
	\$256)
GRE GRE tunnel	
PPTP, L2TP Client/Server instances can run simultaneously, L2TPv3 support	
Stunnel Proxy designed to add TLS encryption functionality to existing clients and servers	without any changes in the program's code
DMVPN Method of building scalable IPsec VPNs	
SSTP SSTP client instance support	
ZeroTier ZeroTier VPN client support	
WireGuard WireGuard VPN client and server support	

#### MODBUS TCP SLAVE

ID filtering	Respond to one ID in range [1;255] or any
Allow remote access	Allow access through WAN
Custom registers	Modbus TCP custom register block, which allows to read/write to a file inside the router, and can be used to extend Modbus TCP slave functionality

#### MODBUS TCP MASTER

Supported functions	01, 02, 03, 04, 05, 06, 15, 16
Supported data formats	8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC), HEX, ASCII

#### **MQTT GATEWAY**

Gateway	/
---------	---

Allows sending commands and receiving data from Modbus Master trough MQTT broker

## DATA TO SERVER

Protocols

HTTP(S), MQTT, Azure MQTT, Kinesis

#### **MONITORING & MANAGEMENT**

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI, troubleshoot, event log, system log, kernel log
FOTA	Firmware update from server, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, EMAIL to SMS, SMS to Email, SMS to HTTP, SMS to SMS, SMS autoreply
Call	Reboot, Status, Mobile data on/off, Output on/off
TR-069	OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem
MQTT	MQTT Broker, MQTT publisher
SNMP	SNMP (v1, v2, v3), SNMP trap
JSON-RPC	Management API over HTTP/HTTPS
MODBUS	MODBUS TCP status/control
RMS	Teltonika Remote Management System (RMS)

## SYSTEM CHARACTERISTICS

CPU	Quad-core ARM Cortex A7, 717 MHz
RAM	256 MB, DDR3
FLASH storage	256 MB, SPI Flash



#### **FIRMWARE / CONFIGURATION**

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices at once
Keep settings	Update FW without losing current configuration

## FIRMWARE CUSTOMIZATION

Operating system RutOS (OpenWrt based Linux OS)		
Supported languages Busybox shell, Lua, C, C++		
Development tools SDK package with build environment provided		

## LOCATION TRACKING

GNSS	GPS, GLONASS, BeiDou, Galileo and QZSS		
Coordinates	GNSS coordinates via WebUI, SMS, TAVL, RMS		
NMEA	NMEA 0183		
Server software	Supported server software: TAVL, RMS		
Geofencing Configurable multiple geofence zones			

#### USB

Data rate USB 2.0			
Applications Samba share, USB-to-serial			
External devices	Possibility to connect external HDD, flash drive, additional modem, printer		
Storage formats     FAT, FAT32, NTFS			

# **INPUT/OUTPUT**

Input	1 x Digital Input, 0 - 6 V detected as logic low, 8 - 30 V detected as logic high			
Output 1 x Digital Output, Open collector output, max output 30 V, 300 mA				
Events	SMS, Email, RMS			
I/O juggler Allows to set certain I/O conditions to initiate event				

#### POWER

Connector 4 pin industrial DC power socket			
Input voltage range     9 – 50 VDC, reverse polarity protection, voltage surge/transient protection			
PoE (passive)	Passive PoE. Possibility to power up through LAN port, not compatible with IEEE 802.3af, 802.3at and 802.3bt standards		
Power consumption	9 W Max		

# PHYSICAL INTERFACES (PORTS, LEDS, ANTENNAS, BUTTONS, SIM)

Ethernet	4 x RJ45 ports, 10/100/1000 Mbps			
I/Os	1 x Digital Input, 1 x Digital Output on 4 pin power connector			
Status LEDs	3 x WAN type, 2 x Mobile connection type, 5 x Mobile connection strength, 8 x LAN status, 3 x WAN status, 1x Power			
SIM	2 x SIM slots (Mini SIM - 2FF), 1.8 V/3 V, external SIM holders			
Power	1 x 4 pin DC connector			
Antennas	2 x SMA for LTE, 1 x SMA for GNNS			
USB	1 x USB A port for external devices			
Reset	Reboot/User default reset/Factory reset button			
Other	1 x Grounding screw			



#### PHYSICAL SPECIFICATION

Casing material Aluminium housing with DIN rail mounting option				
Dimensions (W x H x D)	115 x 44.2 x 95.1 mm			
Weight	455 g			
Mounting options	DIN rail, flat surface placement			

#### **OPERATING ENVIRONMENT**

Operating temperature	-40 C to 75 C
Operating humidity	10 % to 90 % non-condensing
Ingress Protection Rating	IP30

# **REGULATORY & TYPE APPROVALS**

Regulatory

CE/RED, EAC, RoHS, WEEE

#### **EMI IMMUNITY**

Standards	Draft EN 301 489-1 V2.2.0, Draft EN 301 489-19 V2.1.0, Draft EN 301 489-52 V1.1.0			
EN61000-4-2:2009	ESD			
RS	EN 61000-4-3:2006 + A1:2008 + A2:2010			
EFT	EN 61000-4-4:2012			
Surge protection	EN 61000-4-5:2014			
CS	EN 61000-4-6:2014			
DIP EN 61000-4-11:2014				

## RF

Standards

EN 301 908-1 V11.1.1, EN 301 908-2 V11.1.1, EN 301 908-13 V11.1.2, EN303 413 V1.1.1

#### SAFETY


Standards

IEC 62368-1:2014, EN 62368-1:2014 + A11:2017 EN 50665:2017, EN 62311:2008



# **HARDWARE INSTALLATION**

- 1. Pull out the SIM needle from the front panel of the router.
- 2. Push the SIM holder button with the SIM needle.
- 3. Pull out the SIM holder.
- 4. Insert your SIM card into the SIM holder.
- 5. Slide the SIM holder back into the router.
- 6. Attach all antennas.
- 7. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power outlet.
- 8. Connect to the device via an Ethernet cable connected to LAN port.

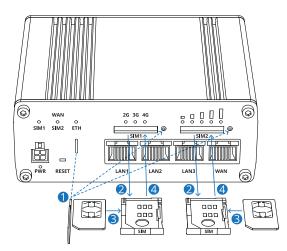

#### LOGIN TO DEVICE

1. To enter the router's Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.

2. Use login information shown in image A when prompted for authentication.

3. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter, and one digit. This step is mandatory, and you will not be able to interact with the router's WebUI before you change the password.

4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the router's main operating parameters.

5. Go to the Overview page and pay attention to the Signal Strength indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.

A.	<b>TELTONIKA</b>	]	В.	MOBILE	<b>.1</b> ∬-65 dBm
	AUTHORIZATION REQUIRED	admin		Data connection state	Connected
	Please anter your username and password	admin01		State	Registered (home); OPERATOR; 4G (LTE)
				SIM card slot in use	Ready
		LOG N		Bytes received/sent*	348.7 KB / 223.5 KB
			J		

#### **TECHNICAL INFORMATION**

Radio specifications				
RF technologies 3G, 4G, GNSS				
Max RF power	24 dBm@WCDMA, 23 dBm@LTE			
	Bundled accessories specifications*			
Power adapter	Input: 0.6A@100-240VAC, Output: 12VDC, 1.5A, 4-pin plug			
Mobile antenna 698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain** 3 dBi, omnidirectional, SMA male connector				
GNSS antenna	1575.42~1602 MHz, 2.2~5 VDC, VSWR<1.5, active total gain** 28 dB (typ.), RHCP polarization, SMA male connector			
*Ouden and a demandant				

\*Order code dependent.

\*\*Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.



# WHAT'S IN THE BOX?

## **STANDARD PACKAGE CONTAINS\***

- Router RUTX09
- 18 W PSU
- 2 x LTE antennas (swivel, SMA male)
- 1 x GNSS antenna (adhesive, SMA male, 3 m cable)
- SIM Adapter kit
- Ethernet cable (1.5 m)
- QSG (Quick Start Guide)
- RMS Flyer
- Packaging box





 $\star$  For all standard order codes standard package contents are the same, execpt for PSU.



# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
RUTX0900000	851762	8517.62.00	Standard package

For more information on all available packaging options - please contact us directly.

# **AVAILABLE VERSIONS**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
RUTX09 0****	Europe, the Middle East, Africa, APAC <sup>2</sup> , Brasil	<ul> <li>4G (LTE-FDD): B1, B3, B5, B7, B8, B20, B28, B32<sup>1</sup></li> <li>4G (LTE-TDD): B38, B40, B41</li> <li>3G: B1, B3, B5, B8</li> </ul>
RUTX09 1****	North America	<ul> <li>4G (LTE-FDD): B2, B4, B5, B7, B12, B13, B25, B26, B29<sup>1</sup>, B30, B66</li> <li>3G: B2, B4, B5</li> </ul>
RUTX09 4****	Australia	• 4G (LTE-FDD): B3, B7, B28

The price and lead-times for region (operator) specific versions may vary. For more information please contact us. 1 - LTE-FDD B29 and B32 Support Rx Only, and in 2×CA it is Only for Secondary Component Carrier. 2 - Excluding Japan and CMCC.



# **MOUNTING OPTIONS**

# **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx



ORDER CODE	HS CODE	HTS CODE
PR5MEC00	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

# **COMPACT DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	ABS + PC plastic
Weight	6.5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	70 mm x 25 mm x 14,5 mm
RoHS Compliant	V



#### **DIN RAIL KIT**

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC11	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

# **SURFACE MOUNTING KIT**

Parameter	Value
Mounting standard	Flat surface mount
Material	ABS + PC plastic
Weight	2x5 g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	25 mm x 48 mm x 7.5 mm
RoHS Compliant	V



#### **DIN RAIL KIT**

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	HS CODE	HTS CODE
PR5MEC12	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.



# **RUTX09 SPATIAL MEASUREMENTS & WEIGHT**


#### MAIN MEASUREMENTS

W x H x D dimensions for RUTX09:		
Device housing*:	115 x 44.2 x 95.1	
Box:	355 x 60 x 175	

\*Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.


### **TOP VIEW**

The figure below depicts the measurements of RUTX09 and its components as seen from the top:

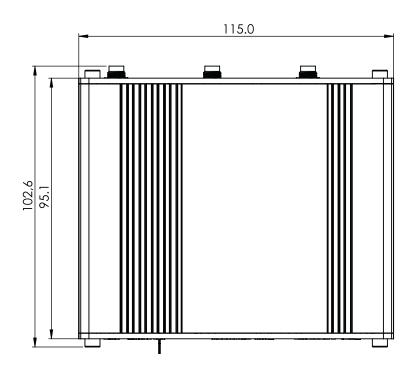

# **RIGHT VIEW**


The figure below depicts the measurements of RUTX09 and its components as seen from the right side:

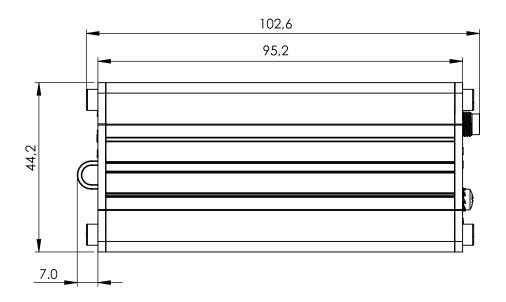




#### FRONT VIEW

The figure below depicts the measurements of RUTX09 and its components as seen from the front panel side:

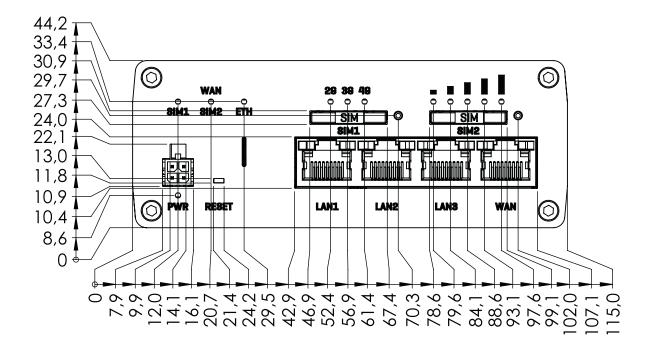

#### **REAR VIEW**


The figure below depicts the measurements of RUTX09 and its components as seen from the back panel side:

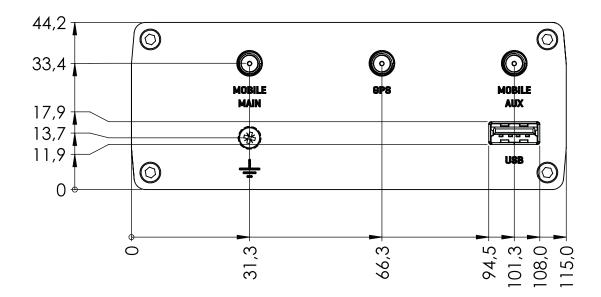



# MOUNTING SPACE REQUIREMENTS


The figure below depicts an approximation of the device's dimensions when cables and antennas are attached:

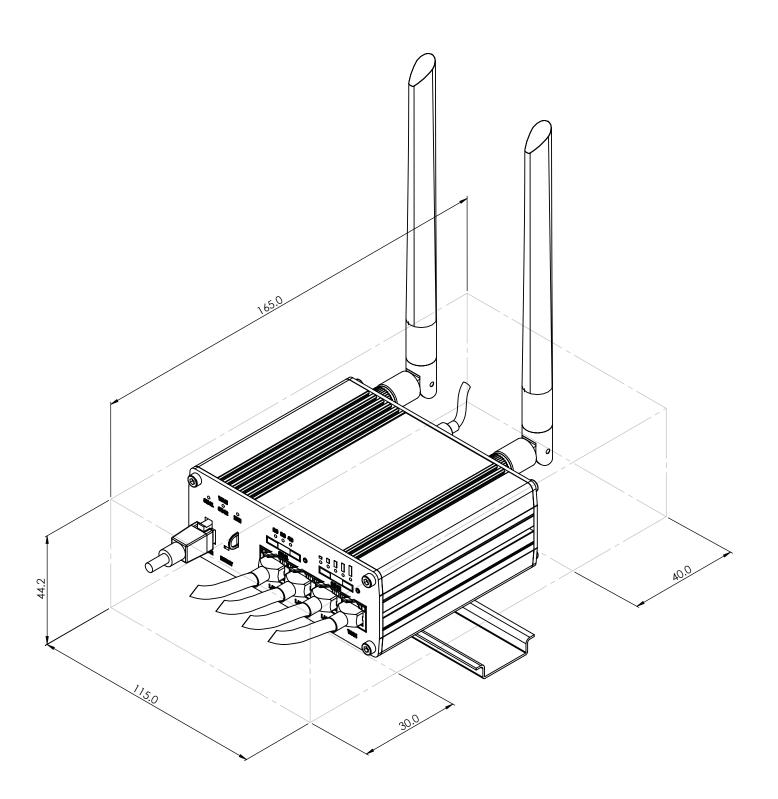



## **DIN RAIL**

The scheme below depicts protrusion measurements of an attached DIN Rail:

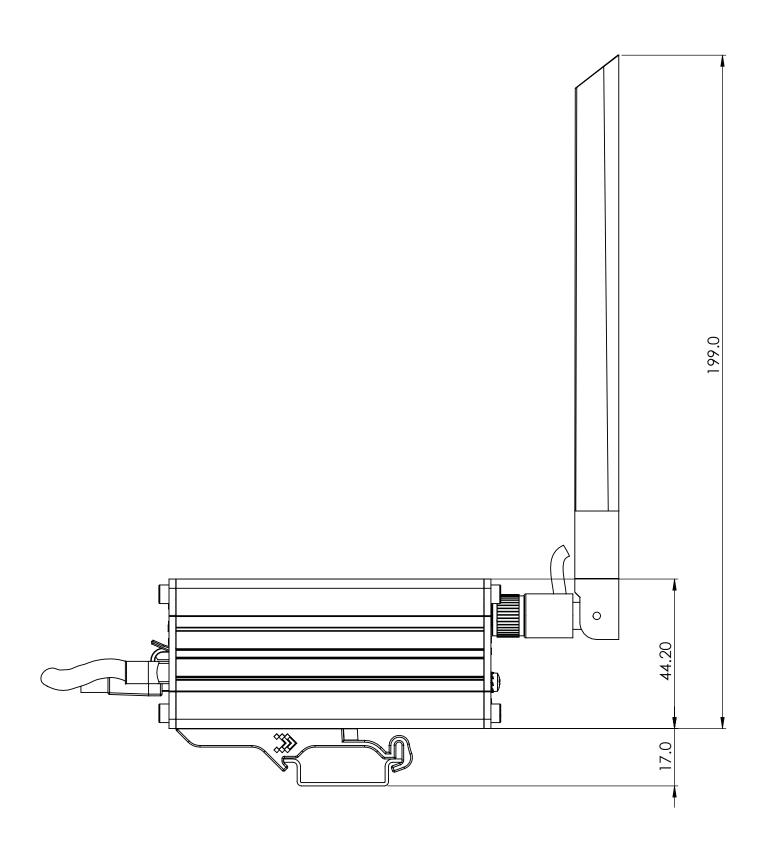

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Teltonika: RUTX09000000