# AndeShape<sup>™</sup> AICE-MICRO

## **USB JTAG Debugger for AndesCore™ V5 Families**

### **General Description**

AndeShape AICE-MICRO is a FT2232H based JTAG debugging device, which works with AndeSight<sup>™</sup> Development Suite and AndesCore V5 Families through JTAG interface supported by OpenOCD

## Release

#### Features


- Supports Andes JTAG debug port
- Supports multiple JTAG devices through Andes JTAG debug port interface
- Supports the debug-on-reset feature
- Supports 10-pin and 20-pin Andes JTAG connector, and connects to the debug host through a micro USB cable
- Powered by the USB connection; no additional power supply required
- Supports Vref pin for auto IO voltage detection and regulation from 1.8V to 3.3V
- Maximum debug interface frequency: 10 MHz
- RoHS compliant

#### **Development Tools and Platforms**

- AndeSight v3.1.2 or later
- AndeShape Development Platforms

#### Accessories

 10-pin to 20-pin JTAG adapter & 10-pin JTAG cable

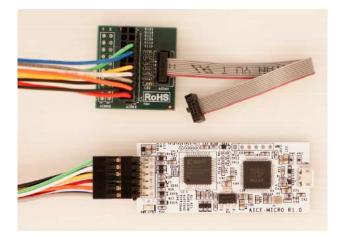

AICE-MICRO and 10-pin to 20-pin JTAG adapter



#### Andes Technology Corporation

www.andestech.com 10F, No. 1, Sec. 3, Gongdao 5th Rd., East Dist., Hsinchu City, Taiwan 30069, R.O.C Tel: + 886-3-572-6533 E-mail: sales@andestech.com



Copyright© 2018-2019 Andes Technology Corporation. All information contained in this document is subject to change without notice.

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Andes Technology: AICE-MICRO