

 BMR491 series DC-DC Converters
 28701-BMR491 05 Rev B March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Key Features

- Industry standard low profile Quarter-brick
 58.4 x 36.8 x 14.5 mm (2.30 x 1.45 x 0.57 in)
- High efficiency, typ. 97.4 % at 54 Vin, half load
- Input to output 1500V isolated, functional
- Thermal design power up to 1540W
- Peak power up to 2450W (≤ 1 second)
- Dual side baseplate to enhance thermal performance
- Black-box functionality
- MTBF over 7 Million hours

General Characteristics

- Input voltage range: 48-60 V
- Output voltage: 12 V
- Thermal design current: 128 A (peak 205 A)
- Flex power designer support
- Compliant with PMBus 1.3 version
- Monotonic start-up
- Input and output over voltage protection
- Over temperature protection
- Output short-circuit protection
- Remote control
- · Highly automated manufacturing ensures quality
- ISO 9001/14001 certified supplier



Safety Approvals



Design for Environment





Meets requirements in hightemperature lead-free soldering processes.

Contents

Ordering Information General Information Safety Specification	
Absolute Maximum Ratings	4
Electrical Specification	
12 V, 128 A / 1540 W	BMR4913208 / 8575
EMC Specification	8
Operating Information	12
Thermal Consideration	
Dimensions and Pinout	
Mechanical Information	
Soldering Information	19
Delivery Information	20
Product Qualification Specification	22
PMBus commands	23



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Ordering Information

Product program	Vin	Output
BMR491 3208 / 857	48 - 60	12 V / 128 A, 1540 W (TDP – thermal design power), 2450W (peak power), dual side baseplate, 4-pin digital interface

Product number and Packaging

BMR491	n ₁	n ₂	n ₃	n ₄	1	n ₅	n ₆	n ₇	n ₈
Mechanical option	Х				/				
Baseplate		Х			/				
Hardware option			Х	Х	/				
Configuration file					/	Х	Х	Х	
Delivery package									х

Options	Description
n ₁	0 = Standard pin length 5.33 mm(0.210 in.) 2 = Lead length 3.69 mm(0.145 in.) 3 = Lead length 4.57 mm(0.180 in.)
n_2	2 = dual side baseplate
n ₃ n ₄	08 = 48-60 Vin, 12 Vout, 1540W (TDP), 2450W (peak power), isolated, 4-pin digital interface
n ₅ n ₆ n ₇	857 = CDA Configuration for 48-60 Vin, 12 Vout, 1540 (TDP) & 2450W (peak power)
	xxx = Application Specific Configuration
n ₈	*Default = Foam tray

Example: a 12 V/ 1540 W operating at 48-60Vin, through-hole mounted, 4.57mm pin lead length product with dual side baseplate, with 4-pin digital interface, and foam tray would be BMR491 3208/857

General Information

Reliability

The failure rate (λ) and mean time between failures (MTBF= $1/\lambda$) is calculated at max output power and an operating ambient temperature (T_A) of +40°C. Flex Power Modules uses Telcordia SR-332 Issue 4 Method 1 to calculate the mean steady-state failure rate and standard deviation (σ).

Telcordia SR-332 Issue 4 also provides techniques to estimate the upper confidence levels of failure rates based on the mean and standard deviation.

Mean steady-state failure rate, λ	Std. deviation, σ
129 nFailures/h	8.4 nFailures/h

Compatibility with RoHS requirements

The products are compatible with the relevant clauses and requirements of the RoHS directive 2011/65/EU and 2015/863 and have a maximum concentration value of 0.1% by weight in homogeneous materials for lead, mercury, hexavalent chromium, PBB, PBDE, DEHP, BBP, DBP, DIBP and of 0.01% by weight in homogeneous materials for cadmium.

Exemptions in the RoHS directive utilized in Flex Power Modules products are found in the Statement of Compliance document.

Flex Power Modules fulfills and will continuously fulfill all its obligations under regulation (EC) No 1907/2006 concerning the registration, evaluation, authorization and restriction of chemicals (REACH) as they enter into force and is through product materials declarations preparing for the obligations to communicate information on substances in the products.

Quality Statement

The products are designed and manufactured in an industrial environment where quality systems and methods like ISO 9000, Six Sigma, and SPC are intensively in use to boost the continuous improvements strategy. Infant mortality or early failures in the products are screened out and they are subjected to an ATE-based final test. Conservative design rules, design reviews and product qualifications, plus the high competence of an engaged work force, contribute to the high quality of the products.

Warranty

Warranty period and conditions are defined in Flex Power Modules General Terms and Conditions of Sale.

Limitation of Liability

Flex Power Modules does not make any other warranties, expressed or implied including any warranty of merchantability or fitness for a particular purpose (including, but not limited to, use in life support applications, where malfunctions of product can cause injury to a person's health or life).

© Flex 2022

The information and specifications in this technical specification is believed to be correct at the time of publication. However, no liability is accepted for inaccuracies, printing errors or for any consequences thereof. Flex reserves the right to change the contents of this technical specification at any time without prior notice.

MTBF (mean value) for the BMR491 series = 7.74 Mh. MTBF at 90% confidence level = 7.14 Mh



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Safety Specification

General information

Flex Power DC/DC converters and DC/DC regulators are designed in accordance with the safety standards IEC 62368-1, EN 62368-1 and UL 62368-1 Audio/video, information and communication technology equipment - Part 1: Safety requirements

IEC/EN/UL 62368-1 contains requirements to prevent injury or damage due to the following hazards:

- Electrical shock
- · Electrically-caused fire
- · Injury caused by hazardous substances
- · Mechanically-caused injury
- Skin burn
- · Radiation-caused injury

On-board DC/DC converters, Power interface modules and DC/DC regulators are defined as component power supplies. As components they cannot fully comply with the provisions of any safety requirements without "conditions of acceptability". Clearance between conductors and between conductive parts of the component power supply and conductors on the board in the final product must meet the applicable safety requirements. Certain conditions of acceptability apply for component power supplies with limited stand-off (see Mechanical Information for further information). It is the responsibility of the installer to ensure that the final product housing these components complies with the requirements of all applicable safety standards and regulations for the final product.

Component power supplies for general use shall comply with the requirements in IEC/EN/UL 62368-1. Product related standards, e.g. IEEE 802.3af *Power over Ethernet*, and ETS-300132-2 *Power interface at the input to telecom equipment, operated by direct current (dc)* are based on IEC/EN/UL 60950-1 with regards to safety.

Flex Power DC/DC converters, Power interface modules and DC/DC regulators are UL 62368-1 recognized and certified in accordance with EN 62368-1. The flammability rating for all construction parts of the products meet requirements for V-0 class material according to IEC 60695-11-10, *Fire hazard testing, test flames* – 50 W horizontal and vertical flame test methods.

Isolated DC/DC converters

The product may provide basic or functional insulation between input and output according to IEC/EN/UL 62368-1 (see Safety Certificate), different conditions shall be met if the output of a basic or a functional insulated product shall be considered as ES1 energy source.

For basic insulated products (see Safety Certificate) the output is considered as ES1 energy source if one of the following conditions is met:

- The input source provides supplementary or double or reinforced insulation from the AC mains according to IEC/EN/UL 62368-1.
- The input source provides functional or basic insulation from the AC mains and the product's output is reliably connected to protective earth according to IEC/EN/UL 62368-1.

For functional insulated products (see Safety Certificate) the output is considered as ES1 energy source if one of the following conditions is met:

- The input source provides double or reinforced insulation from the AC mains according to IEC/EN/UL 62368-1.
- The input source provides basic or supplementary insulation from the AC mains and the product's output is reliably connected to protective earth according to IEC/EN/UL 62368-1.
- The input source is reliably connected to protective earth and provides basic or supplementary insulation according to IEC/EN/UL 62368-1 and the maximum input source voltage is 60 Vdc.

Galvanic isolation between input and output is verified in an electric strength test and the isolation voltage (V_{iso}) meets the voltage strength requirement for basic insulation according to IEC/EN/UL 62368-1.

It is recommended to use a slow blow fuse at the input of each DC/DC converter. If an input filter is used in the circuit the fuse should be placed in front of the input filter. In the rare event of a component problem that imposes a short circuit on the input source, this fuse will provide the following functions:

 Isolate the fault from the input power source so as not to affect the operation of other parts of the system
 Protect the distribution wiring from excessive current and power loss thus preventing hazardous overheating




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Absolute Maximum Ratings

Characteristics		min	typ	max	Unit
T _{P1}	Operating Temperature (see Thermal Consideration section)	-40		+115	°C
Ts	Storage temperature	-55		+125	°C
Vı	Input voltage	-0.5		+65	V
Cout	Output Capacitive Load	270		15000	μF
V _{iso}	Isolation voltage (input to output test voltage)			1500	Vdc
V _{iso}	Isolation voltage (input to base plate test voltage)			1500	Vdc
V _{iso}	Isolation voltage (base plate to output test voltage)			0	Vdc
V _{tr}	Input voltage transient (tp 100 ms)			+80	V
V _{RC}	Remote Control pin voltage	-0.3		20	V

Stress in excess of Absolute Maximum Ratings may cause permanent damage. Absolute Maximum Ratings, sometimes referred to as no destruction limits, are normally tested with one parameter at a time exceeding the limits in the Electrical Specification. If exposed to stress above these limits, function and performance may degrade in an unspecified manner.

Fundamental Circuit Diagram

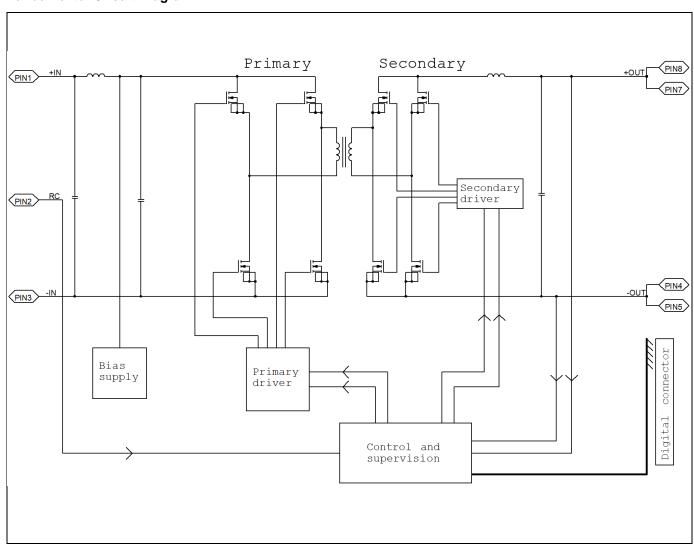



Characteristics

Technical Specification

max

BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

min

typ

14

BMR491 3208/857

Unit

٧

Electrical Specification 12V, 128A (205A) ≤1540W (2450W)

 T_{P1} = -30 to +95°C, V_{I} = 48 to 60 V, unless otherwise specified under Conditions. Typical values given at: T_{P1} = +25°C, V_{I} = 54 V, max P_{OTDP} , unless otherwise specified under Conditions, see Note 1. Additional C_{out} = 1 mF, C_{in} = 0.47 mF

Conditions

Charac	tensues	Conditions	111111	тур	IIIax	Offic
Vı	Input voltage range		48		60	V
V_{loff}	Turn-off input voltage	Decreasing input voltage	42	43	44	V
V_{lon}	Turn-on input voltage	Increasing input voltage	45	46	47	V
Cı	Internal input capacitance			9.5		μF
P _{OTDP}	Output power (TDP)	See Note 1	0		1540	W
P _{OMAX}	Output power peak (t ≤1s)	See Note 1			2450	W
		$P_O = 50\%$ of P_{OTDP}		97.4		
n	Efficiency	$P_O = 100\%$ of P_{OTDP}		96.9		%
η	Efficiency	$P_O = 50\%$ of P_{OTDP} , $V_I = 48 \text{ V}$		97.5		76
		$P_{O} = 100\%$ of P_{OTDP} , $V_{I} = 48 \text{ V}$		96.7		
P_d	Power Dissipation	$P_O = 100\%$ of P_{OTDP}	44	49.0	65	W
Pli	Input idling power	P _O = 0 W		8	10	W
P _{RC}	Input standby power	(turned off with RC)		0.9		W
Fs	Switching frequency	0-100 % of P _{OTDP}	170	180	190	kHz
V _{Oi}	Output voltage initial setting and accuracy	T _{P1} = +25°C, V _I = 54 V, P _O = 0 W	11.97	12	12.03	V
	Output voltage tolerance band	$P_0 = 0 - 100\% \text{ of } P_{OTDP}$ $V_1 = 48 - 60 \text{ V}$	11.4		12.24	V
	Low line input; output voltage tolerance band	$P_0 = 0 - 100\%$ of P_{OTDP} $V_1 = 48 - 51 \text{ V}$	11.4		12.24	V
	Output adjust range	0-100% of P _{OTDP}	8		13	V
Vo	Idling voltage	$P_0 = 0 \text{ W}, V_1 = 54 \text{ V}$	11.91		12.04	V
	Idling voltage	$P_{O} = 0 \text{ W}, V_{I} = 48 \text{ V}$	11.81		12.04	
	Line regulation	$V_1 = 51 - 60 \text{ V}, P_0 = 100\% \text{ of } P_{OTDP}$		15		mV
	Low input Line regulation	V _I = 48 – 51 V, 100% of P _{OTDP}		550	700	mV
	Load regulation	0 - 100% of P _{OTDP}		25		mV
V_{tr}	Load transient voltage deviation	Load step 25-50-25% P _{OTDP} , di/dt = 1 A/µs.		±350		mV
t _{tr}	Load transient recovery time	See Note 2		300		μs
tr	Ramp-up time (from 0–100% of V _{Oi})			10		ms
ts	Start-up time (from V _i connection to 90% of V _{Oi})			40		ms
t _{RC}	RC start-up time			11		ms
lo	Output current	V _I = 48 - 60 V, see Note1	0	128	205	А
I _{lim}	Current limit threshold	$T_{P1} < max T_{P1}$	210	235	240	А
I _{sc}	Short circuit current	I _{rms} , see Note 3		3		А
V _{Oac}	Output ripple & noise	See ripple & noise section, max P _{OTDP}		120		mVp-p
OV/D	0			- 11		

Note 1: The maximum output current is rated to 205A. The maximum power is <2450W (t < 1s) and the continuous power (TDP, Thermal Design Power) is <1540W, depending on thermal conditions.

Note 2: Cout = 6.16 mF

OVP

Note 3: Hiccup short circuit protection

Output over voltage protection




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		


Typical Characteristics 12V, 128A (205A) ≤1540W (2450W)

BMR491 3208/857


Efficiency

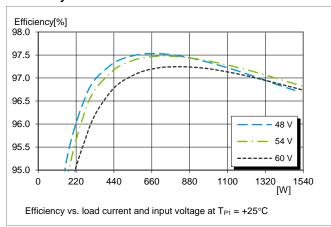


Power Dissipation

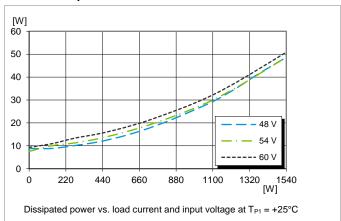


Output Power Derating – 1 inch heatsink

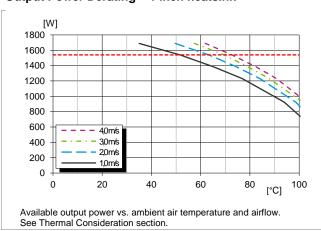


Line Characteristics - typical

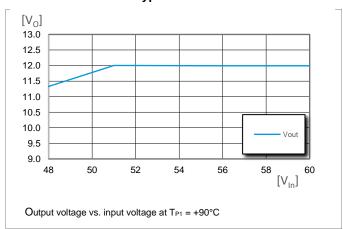

Available Power

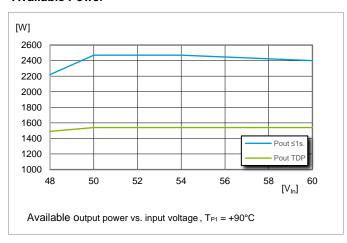

Power loss @ max temperature

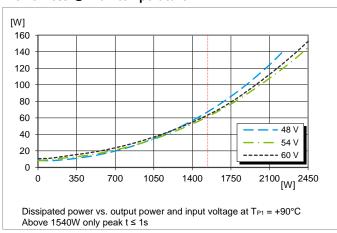




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Typical Characteristics 12V, 128A (205A) ≤1540W (2450W)

BMR491 3208/857

Maximum Output Power

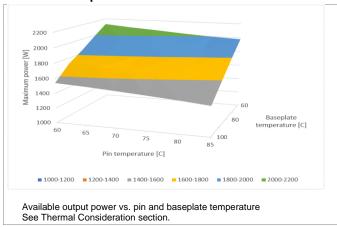




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

EMC Specification


Conducted EMI measured according to EN55022 / EN55032, CISPR 22 / CISPR 32 and FCC part 15J (see test set-up). The fundamental switching frequency is 180 kHz for BMR491. The EMI characteristics below is measured at $V_I = 54 \text{ V}$ and max I_O .

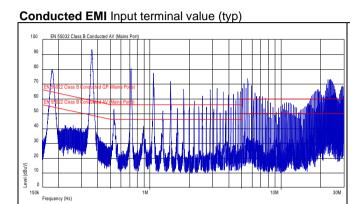


EMI without filter. EN55032 Test method and limits are the same as EN55022. 470 uF 100V input capacitor and 470 uF 16 V OS-CON output capacitor used.

Optional external filter for class B


Suggested external input filter in order to meet class B in EN 55022 / EN 55032, CISPR 22 / CISPR 32 and FCC part 15J.

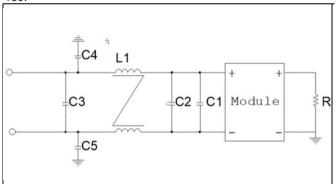

Filter components: $C1 = 470 \ \mu F \ (e-lyt)$ $C2 = 4 \times 10 \ \mu F \ MLCC$ $C3 = 4 \times 4.7 \ uF \ MLCC$ $C4, \ C5 = 4.7 \ nF \ MLCC, \ 1kV, \ Open \ fail$ $L1 = 1.3 \ mH$

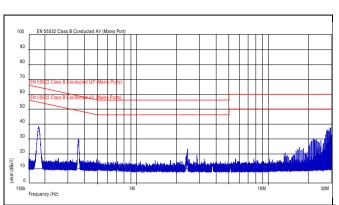

EMI with filter, EN55022 Test method and limits are the same as EN55032.

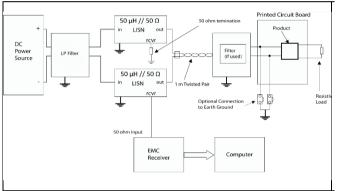

Test set-up.


Layout recommendations

Radiated EMI performance of the product will depend on the PWB layout and ground layer design. It is also important to consider the stand-off of the product. If a ground layer is used, it should be connected to the output of the product and the equipment ground or chassis.

A ground layer will increase the stray capacitance in the PWB and improve the high frequency EMC performance.

Output ripple and noise

Output ripple and noise measured according to figure below. See Design Note 022 for detailed information.

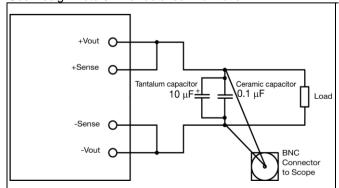

Output ripple and noise test setup



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Power Management Overview

This product is equipped with a PMBus interface. The product incorporates a wide range of readable and configurable power management features that are simple to implement with a minimum of external components. Additionally, the product includes protection features that continuously safeguard the load from damage due to unexpected system faults. A fault is also shown as an alert on the SALERT pin. Following product parameters can continuously be monitored by a host: Input voltage, output voltage/current, duty cycle and internal temperature.

The product is delivered with a default configuration suitable for a wide range operation in terms of input voltage, output voltage, and load. Configuration is stored in an internal Non-Volatile Memory (NVM). All power management functions can be reconfigured using the PMBus interface

Throughout this document, different PMBus commands are referenced. A detailed description of each command is provided in the appendix at the end of this specification.

Flex Power Designer software suite can be used to configure and monitor this product via the PMBus interface. For more information please contact your local Flex sales representative.

SMBus Interface

This product provides a PMBus digital interface that enables the user to configure many aspects of the device operation as well as to monitor the input and output voltages, output current and device temperature. The product can be used with any standard two-wire I²C (master must allow for clock stretching) or SMBus host device. In addition, the product is compatible with PMBus version 1.3 and includes an SALERT line to help mitigate bandwidth limitations related to continuous fault monitoring. The product supports 100 kHz and 400 kHz bus clock frequency only. The PMBus signals, SCL, SDA and SALERT require passive pull-up resistors as stated in the SMBus Specification. Pull-up resistors are required to guarantee the rise time as follows:


Eq. 7
$$\tau = R_P C_p \le 1us$$

where R_p is the pull-up resistor value and C_p is the bus load. The maximum allowed bus load is 400 pF. The pull-up resistor should be tied to an external supply between 2.7 to 3.8 V, which should be present prior to or during power-up. If the proper power supply is not available, voltage dividers may be applied. Note that in this case, the resistance in the equation above corresponds to parallel connection of the resistors forming the voltage divider.

It is recommended to always use PEC (Packet Error Check) when communicating via PMBus. There is an optional setting that makes PEC required which further increase communication robustness. This can be configured by setting bit 7 in command MFR_SPECIAL_OPTIONS (0xE0).

PMBus Addressing

Following figure and table show recommended resistor values with min and max voltage range for hard-wiring PMBus addresses (series E96, 1% tolerance resistors suggested):

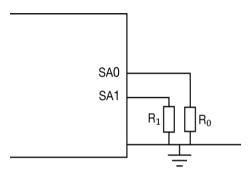

Schematic of connection of address resistors, (SA0 is not used for variants with the 4 pin digital header variant)

SA1 Index	R _{SA1} [kΩ]	Resulting address with MFR_OFFSET_ADDRESS = 96d
0	10	96d (0x60)
1	15	97d (0x61)
2	21	98d (0x62)
3	28	99d (0x63)
4	35.7	100d (0x64)
5	45.3	101d (0x65)
6	56.2	102d (0x66)
7	69.8	103d (0x67)
8	88.7	104d (0x68)
9	107	105d (0x69)
10	130	106d (0x6A)
11	158	107d (0x6B)
12	191	108d (0x6C)
13	≥ 232	109d (0x6D)

SA1 pin can be configured with a resistor to GND according to the following equation.

PMBus Address(decimal) = SA1 index + MFR_OFFSET_ADDRESS

If the calculated PMBus address is 0, 11 or 12, PMBus address 127 is assigned instead. From a system point of view, the user shall also be aware of further limitations of the addresses as stated in the PMBus Specification. It is not recommended to keep the SA1 pin left open. See section MFR_OFFSET_ADDRESS (0xEE) how to set the command to utilize single address pin option. Specific variants may already have a default non-zero value set for MFR_OFFSET_ADDRESS.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

SCL VILLE VI

Setup and hold times timing diagram

Setup time, t_{set}, is the time data, SDA, must be stable before the rising edge of the clock signal, SCL. The hold time t_{hold}, is the time data, SDA, must be stable after the rising edge of the clock signal, SCL. If these times are violated incorrect data may be captured or meta-stability may occur and the bus communication may fail. All standard SMBus protocols must be followed, including clock stretching. This product supports the BUSY flag in the status commands to indicate product being too busy for SMBus response. A bus-free time delay between every SMBus transmission (between every stop & start condition) must occur. Refer to the SMBus specification, for SMBus electrical and timing requirements. Note that an additional delay of 5 ms has to be inserted in case of storing the RAM content into the internal non-volatile memory.

Monitoring via PMBus

It is possible to continuously monitor a wide variety of parameters through the PMBus interface. These include, but are not limited to, the parameters listed in the table below.

Parameter	PMBus Command
Input voltage	READ_VIN
Output voltage	READ_VOUT
Output current	READ_IOUT
Temperature *	READ_TEMPERATURE_1
Switching Frequency	READ_FREQUENCY
Duty cycle	READ_DUTY_CYCLE

^{*}Reports the temperature from temperature sensor set in command 0xDC, internal (controller IC)/external (temp sensor).

Monitoring Faults

Fault conditions can be detected using the SALERT pin, which will be asserted low when any number of preconfigured fault or warning conditions occurs. The SALERT pin will be held low until faults and/or warnings are cleared by the CLEAR_FAULTS command, or until the output voltage has been re-enabled. It is possible to mask which fault conditions should not assert the SALERT pin by the command SMBALERT_MASK. In response to the SALERT signal, the user may read a number of status commands to find out what fault or warning condition occurred, see table below.

Fault & Warning Status	PMBus Command
	STATUS_BYTE
Overview, Power Good	STATUS_WORD
Output voltage level	STATUS_VOUT
Output current level	STATUS_IOUT
Input voltage level	STATUS_INPUT
Temperature level	STATUS_TEMPERATURE
PMBus communication	STATUS_CML
Miscellaneous	STATUS_MFR_SPECIFIC

Black Box/ Event Recorder Overview

A black box, or history event recorder, is provided to capture brick data at the time of fault occurrence. The intent is to assist in fault diagnosis.

- 48 life cycle & fault & events
 - status flags according to PMBus spec part II rev 1.3
 - life cycle events such as
 - boot
 - o fault event recorder erased
 - VinOff/VinOn
 - Vin drop out
- 24 event slots are dedicated for faults
 - Fault events are defined by setting SMBALERT MASK
 - The default configuration defines following faults:
 - VOUT UV Fault
 - VOUT OV Fault
 - o VIN UV Fault
 - VIN OV Fault
 - IOUT UC Fault
 - o IOUT OC Fault
 - UT Fault
 - o OT Fault
- First in first out (in case the event recorder was not erased the oldest event gets discarded as new events are recorded)
- When memory is full, the oldest 4 events are erased. A "full" event recorder therefore contains a minimum of 20 fault events and 20 life cycle events.
- Reading the event recorder involves setting the index (PMBus write byte) and reading the indexed event (PMBus read block)
- Ability to clear the section of the event recorder that are dedicated for faults

An event contains following information:

- EventID# < 2^16
- Time stamp 100 ms resolution < 13.6 years
- Status Word, non sticky bits
- Status bytes for all PMBus status registers, nonsticky bits
- Telemetry for Vin, Vout, lout and temperature (resolution below)



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Black Box/ Event Recorder resolution for telemetry

Following resolutions are valid

- Vin: 0.5 V
- Vout: 2^(VoutMode+8) V
 - e.g. if VoutMode = -11, Vout resolution is $2^{-11+8} = 2^{-3} = 125 \text{ mV}$
- lout: Resolution depends on IOUT_OC_FAULT_LIMIT
 - o e.g. if IOUT_OC_FAULT_LIMIT < 85 A, lout resolution is 0.5 A)
- Temperature: 1 °C

Unit off status codes

Applies only to the life cycle section of the event recorder

When the Status Word in an event is 0x0040 (Unit off) the StatusMfr byte indicates if the unit was turned on or off and with what source.

NS_UNIT_IS_OFF (cfg)	0
NS_UNIT_IS_OFF (priRC)	1
NS_UNIT_IS_OFF (secRC)	2
NS_UNIT_IS_OFF (PMBus)	3
NS_UNIT_IS_ON (cfg)	4
NS_UNIT_IS_ON (priRC)	5
NS_UNIT_IS_ON (secRC)	6
NS_UNIT_IS_ON (PMBus)	7

Power Good status codes

Applies only to the life cycle section of the event recorder When the Status Word in an event is 0x0800 (Power Good) the StatusMfr byte indicates if PG was asserted or deasserted. 0 means power is not good, 1 means power is good

Manufacturer status codes (StatusMfr)

When status word is 0x0001 a system event is reported in the StatusMfr byte:

- 0x01 BOOT_EVENT
- INPUT_LOW_ EVENT 0x02
- 0x04 CANCEL_EVENT
- **ERASE_EVENT** 80x0
- 0x10 CLR EVENT
- 0x20 ERASE_OVFL_EVENT

All codes apply to the life cycle section of the event recorder. Only INPUT_LOW_DETECT, CANCEL_EVENT and ERASE_OVFL_EVENT apply to the fault section of the event recorder.

- BOOT EVENT records time data when needed
- An INPUT_LOW_ EVENT might be recorded at shut down. The purpose of this event is to store time data at shutdown unless it has already been stored
- Maximum time between two events is 2.1 years. A time out will be recorded as a CANCEL_EVENT
- An ERASE_EVENT is recorded in the life cycle section when the fault section is cleared
- A CLR_EVENT is recorded in the life cycle section when a CLEAR_FAULTS command is sent to the unit

An ERASE OVFL EVENT indicates that the event recorder was overloaded while erasing old records but did recover

Reading the event recorder

EVENT INDEX

Writing to this command sets current index to read by the READ_EVENT command. It also provides means to clear the fault section of the event recorder and finding the newest event (equal to number of events stored in the event recorder)

Write byte	Read after write
0 - 47	same value as written.
254	Index of newest record in the life cycle
	section of the event recorder.
255	Index of newest record in the fault section
	of the event recorder.
0xAA	0xAA. The fault section of the event
	recorder is cleared.

For all the above; READ_EVENT is prepared for reading the index that was written.

Index 0-23 refers to the fault section of the event recorder Index 24-47 refers to the life cycle section of the event recorder

READ_EVENT

One event, prepared by writing to EVENT_INDEX, read as a 23 byte block.

Notes

- When clearing the fault section of the event recorder, the event id number is reset but time stamp data is
- Clearing the fault section of the event recorder takes typically 121 ms. During this time fault handling is disabled and a PMBus host must not access the
- Reading an empty event will return 0xFF in all bytes.
- Setting up the event record (after indexing with the EVENT_INDEX command) takes typically 30 us. Reading within this time frame will return unpredictable result.

PMBus command details

EVENT_INDEX (read/write byte 0xDB)

Offset value 0-47. 0 is always the oldest event in the fault section of the event recorder. 24 is the oldest event in the life cycle section. For other options see above.

Start	Device Address & R/W	Command byte 0xDB	Index value (byte)	PEC	Stop

READ EVENT (read block 0xD7)

			,		
Start	Device Address & W	Command Code 0xD7	Repeated start	Device Address & R	Block count = 23
Ev	rentID# (high byte)	EventID# (low byte)	TimeStamp (byte3)	TimeStamp (byte2)	
Ţ	imeStamp (byte1)	TimeStamp (byte0)	StatusWord (high byte)	StatusWord (low byte)	
	StatusVout	Statuslout	StatusInput	StatusTemperature	
	StatusCML	StatusOther	StatusMfr	VinValue (high byte)	
V	inValue (low byte)	VoutValue (high byte)	VoutValue (low byte)	loutValue (high byte)	
lo	utValue (low byte)	TemperatureValue (high byte)	TemperatureValue (low byte)	PEC	Stop



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Non-Volatile Memory (NVM)

The product incorporates two Non-Volatile Memory areas for storage of the PMBus command values; the Default NVM and the User NVM. Default NVM is pre-loaded with Flex factory default values. Default NVM is write-protected and can be used to restore the Flex factory default values through the command RESTORE_DEFAULT_ALL (0x12). User NVM is pre-loaded with Flex factory default values. User NVM is writable and open for customization. Values in NVM are loaded during initialization according to section Initialization Procedure, where after commands can be changed through the PMBus Interface. STORE_USER_ALL (0x15) command will store the changed parameters to the User NVM.

Operating Information

Input Voltage

 
Input voltage range 48 to 60 Vdc meets the requirements for normal input voltage range in -48 Vdc systems, -50.0 to -58.0 V. At input voltages exceeding 60 V, the power loss will be higher than at normal input voltage and T_{P1} must be limited to absolute max +115°C. The absolute maximum continuous input voltage is 64 Vdc.

Short duration transient disturbances can occur on the DC distribution and input of the product when a short circuit fault occurs on the equipment side of a protective device (fuse or circuit breaker). Voltage level, duration and energy of the disturbance are dependent on the particular DC distribution network characteristics and can be sufficient to damage the product unless measures are taken to suppress or absorb this energy. Transient voltage can be limited by capacitors and other energy absorbing devices like zener diodes connected across the positive and negative input conductors at a number of strategic points in the distribution network. End-user must secure that the transient voltage will not exceed the value stated in the Absolute maximum ratings. ETSI TR 100 283 examines the parameters of DC distribution networks and provides guidelines for controlling the transient and reduce its harmful effect.

Turn-on and -off Input Voltage

Product monitors the input voltage and will turn on and turn off at configured thresholds (see Electrical Specification). Turn-on input voltage voltage threshold is set higher than the corresponding turn-off threshold. Hence, there is a hysteresis between turn-on and turn-off input voltage levels.

Remote Control (RC)



Products are fitted with a remote control function referenced to the primary negative input connection (-In), with negative and positive logic options available. RC function allows the product to be turned on/off by an external device like a semiconductor or mechanical switch.

RC pin has an internal pull up resistor.

External device must provide a minimum required sink current >0.5 mA to guarantee a voltage not higher than maximum voltage on the RC pin (see Electrical characteristics table). When the RC pin is left open, the voltage generated on the RC pin is max 5 V. Standard product is provided with "negative logic" RC and will be off until the RC pin is connected to the –In. To turn off the product the RC pin should be left open. In situations where it is desired to have the product to power up automatically without the need for control signals or a switch, the RC pin shall be wired directly to –In.

Remote Control (secondary side)

CTRL-pin can be configured as remote control via the PMBus interface. In the default configuration the CTRL-pin is disabled and floating. Output can be configured to internal pull-up to 3.3 V using the MFR_MULTI_PIN_CONFIG (0xF9) command. Logic options for the secondary remote control can be positive or negative logic. Logic option for the secondary remote control is easily configured via ON_OFF_CONFIG (0x02) using Flex Power Designer software command, see also MFR_MULTI_PIN_CONFIG section. When not used it is recommended to connect the CTRL pin to DGND.

Peak Power Considerations

DC/DC converter have a peak capability t≤1sec in order to handle higher power than the thermal design power (TDP) for the converter. In the peak power area the power loss increases. Extended use of peak power capability will cause increase heating of the converter. A guideline is that the average power-loss of the converter during a 10sec period not exceeding the maximum TDP power-loss. Overload protections do not monitor the average power and will not actively limit the power over time. For further assistance, contact your local Flex Power Modules representative.

Input and Output Impedance

Impedance of both the input source and the load will interact with the impedance of the product. It is important that the input source has low characteristic impedance. Minimum recommended external input capacitance is 270 μ F. Electrolytic capacitors will be degraded in low temperature. Needed input capacitance in low temperature should be equivalent to 270 μ F at 20°C. Performance in some



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

applications can be enhanced by addition of external capacitance as described under External Decoupling Capacitors. If the input voltage source contains significant inductance, the addition of a low ESR ceramic capacitor of 22 - 100 μF capacitor across the input of the product will ensure stable operation. The minimum required capacitance value depends on the output power and the input voltage. The higher output power the higher input capacitance is needed.

A minor leakage current in standby mode might over time build up a few volts if not taken care of with external load.

External Decoupling Capacitors

When powering loads with significant dynamic current requirements, the voltage regulation at the point of load can be improved by addition of decoupling capacitors at the load. The most effective technique is to locate low ESR ceramic and electrolytic capacitors as close to the load as possible, using several parallel capacitors to lower the effective ESR. Ceramic capacitors will handle high-frequency dynamic load changes while the electrolytic capacitors are used to handle low frequency dynamic load changes. It is equally important to use low resistance and low inductance PWB layouts and cabling.

External decoupling capacitors will become part of the product's control loop. The control loop is optimized for a wide range of external capacitance and the maximum recommended value that could be used without any additional analysis is found in the Electrical specification.

ESR of the capacitors is a very important parameter. Stable operation is guaranteed with a verified ESR value of >1 $m\Omega$ across the output connections.

For further information please contact your local Flex Power Modules representative.

PMBus configuration and support

The product provides a PMBus digital interface that enables the user to configure many aspects of the device operation as well as monitor the input and output parameters. Flex Power Designer software suite can be used to configure and monitor this product via the PMBus interface. For more information, please contact your local Flex sales representative.

Output Voltage Adjust using PMBus


Output voltage of the product can be reconfigured via PMBus command VOUT_COMMAND (0x21) or VOUT_TRIM (0x22). This can be used when adjusting the output voltage above or below output voltage initial setting up to a certain level, see Electrical specification for adjustment range.

When increasing the output voltage, the voltage at the output pins must be kept within the plotted area, see graph. Output voltage setting must be kept below the threshold of the over voltage protection, (OVP) to prevent the product from shutting down. At increased output voltages the maximum power rating of the product remains the same, and the max output

current must be decreased correspondingly. According to below graph the BMR491 is operating at max duty cycle where the output voltage start to droop.

Green curve in graph below shows max trimmable Vout for 10.4V output voltage versions.

Output voltage adjust range

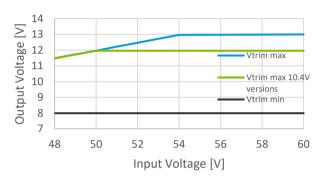

Margin Up/Down Controls

These controls allow the output voltage to be momentarily adjusted, either up or down, by a nominal 10%. The margin high and margin low shall be limited to max and min output voltage if the nominal output voltage is changed. This provides a convenient method for dynamically testing the operation of the load circuit over its supply margin or range. It can also be used to verify the function of supply voltage supervisors.

Margin up and down levels of the product can easily be reconfigured using Flex Power Designer software.

Soft-start Power Up

Default rise time for a single product is 10 ms. When starting by applying input voltage the control circuit boot-up time adds an additional 30 ms delay. soft-start and soft-stop control functionality allows the output voltage to ramp-up and ramp-down with defined timing with respect to the control of the output. This can be used to control inrush current and manage supply sequencing of multiple controllers. Rise time is the time taken for the output to ramp to its target voltage, while the fall time is the time taken for the output to ramp down from its regulation voltage to 0 V. TON_DELAY (0x60) time sets a delay from when the output is enabled until the output voltage starts to ramp up. TOFF_DELAY (0x64) delay time sets a delay from when the output is disabled until the output voltage starts to ramp down.

For modules intended for paralell operation the TON_DELAY (0x60) is set to 200ms to ensure a stable startup for all paralleled devices.

Before module initiates startup sequence it checks for any parameters exceeding fault levels that could affect startup.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

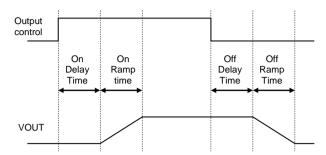


Illustration of Soft-Start and Soft-Stop.

By default, soft-stop is disabled, and the regulation of output voltage stops immediately when the output is disabled. Soft-stop can be enabled through the PMBus command ON_OFF_CONFIG (0x02). The delay and ramp times can be reconfigured using the PMBus commands TON_DELAY (0x60), TON_RISE (0x61), TOFF_DELAY (0x64) and TOFF_FALL (0x65).

Pre-bias Start-up

The product has a Pre-bias start up functionality and will not sink current during start up if a pre-bias source is present at the output terminals. If the Pre-bias voltage is lower than the target value set in VOUT_COMMAND (0x21), the product will ramp up to the target value. If the Pre-bias voltage is higher than the target value set in VOUT_COMMAND (0x21), the product will ramp down to the target value and in this case sink current for a time interval set by the command TOFF_MAX_WARN_LIMIT (0x66).

Over/Under Temperature Protection (OTP, UTP)

Products are protected from thermal overload by an internal over temperature sensor.

The product will make continuous attempts to start up (non-latching mode) and resume normal operation automatically when the temperature has dropped below the temperature threshold set in command OT_WARN_LIMIT (0x51). In the temperature readout (0x8D) range between OT_WARN_LIMIT (0x51) and OT_FAULT_LIMIT (0x4F) the module will not start-up.

If for any reason the module needs to start or restart, it will wait until the temperature readout value is below the value of OT_WARN_LIMIT.

This includes restarts initiated by OCP, input and output OVP or any other protection as well as Vin and remote control. OTP and hysteresis of the product can be re-configured using the PMBus interface. The product has also an undertemperature protection. OTP and UTP fault limit and fault response can be configured via the PMBus. Note: using the fault response "continue without interruption" may cause permanent damage to the product.

Input Over/Under Voltage Protection

The product can be protected from high input voltage and low input voltage by a pre-configured value with a response time of 100us. Over/under-voltage fault level and fault response is easily configured using Flex Power Designer software, see also Appendix – PMBus commands.

Output Over Voltage Protection (OVP)

Products includes over voltage limiting circuitry for protection of the load. The default OVP limit is 17% above the nominal output voltage but customer specific OVP limits are available. If the output voltage exceeds the OVP limit, the product can respond in different ways.

The default response from an over voltage fault is to immediately shut down. The device will continuously check for the presence of the fault condition, and when the fault condition no longer exists the device will be re-enabled. OVP fault level and fault response can be configured via the PMBus interface, see Appendix – PMBus commands.

Over Current Protection (OCP)

Current limiting circuitry for protection at continuous overload is included. For standard configuration the output current is measured through a built in shunt on secondary side and the shunt voltage is measured by the controller. Over current limit is set in command IOUT_OC_FAULT_LIMIT (0x46). Shutdown and automatic restart will occur for output currents in excess of max output current (max I_{O}). The product will resume normal operation after removal of the overload. Load distribution should be designed for the maximum output short circuit current specified.

Over current protection of the product can be configured via the PMBus interface, see Appendix – PMBus commands.

Switching frequency

Switching frequency is set to 180kHz as default but this can be reconfigured via the PMBus interface. The product is optimized at this frequency, but can run at lower and higher frequency (150kHz-230kHz). Electrical performance can be affected if the switching frequency is changed.

Power Good

Power good indicates when the product is ready to provide regulated output voltage to the load. During ramp-up and during a fault condition, PG is held high. By default, PG is asserted low after the output has ramped to a voltage above 8V, and de-asserted if the output voltage falls below 5V. These thresholds may be changed using the PMBus commands POWER_GOOD_ON (0x5E) and POWER_GOOD_OFF (0x5F).

By default, the PG pin is configured as Push/pull output, but it is also possible to set the output in open drain mode by the command MFR_MULTI_PIN_CONFIG (0xF9), see Appendix – PMBus commands.

The polarity is by default configured to active low, the polarity of PG can be set to active high in the command MFR_PGOOD_POLARITY (0xD0):

0xD0 = 00 (active low)

0xD0 = 01 (active high)

Products provides Power Good flag in the Status Word register that indicates the output voltage is within a specified tolerance of its target level and no-fault condition exists.

It is not recommended to use Push-pull when paralleling PG-pins.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Multi pin configuration

MFR_MULTI_PIN_CONFIG (0xF9) command can be reconfigured using the PMBus interface to enable or disable different functions and set the pin configuration of the digital header (pin 6-15). Standard configuration for stand-alone product is set to Power Good Push/pull (0x04). Products that are configured for parallel operation have Power Good configured to Open Drain (0x06). MULTI_PIN_CONFIG is easily configured using Flex Power Designer, see Appendix – PMBus commands.

Address Offset

Command MFR_OFFSET_ADDRESS (0xEE) is used to configure an address offset. PMBus-address offset's value increments the address value following the formula in the PMBus Addressing section of documentation.

Thermal Consideration

General


The products are designed to operate in different thermal environments and sufficient cooling must be provided to ensure reliable operation.


These high output power modules require external cooling such as heat sink or cold wall.

Wind speed and temperature are measured in a point upstream the device. Output Current Derating graph found in the Output section for each model provides the available output current vs. ambient air temperature and air velocity at $V_1 = 54 \text{ V}$.


For products using any form of heat sink structure a top spacing board and side airflow guides are used to ensure airflow hitting the module and not diverted away. Distance between the tested device and the top space board and the side airflow guides are 6.35mm ± 1mm.

Product is tested on a 254 x 254 mm, 35 µm (1 oz), 16-layer test board mounted vertically in a wind tunnel.

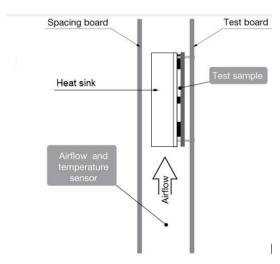

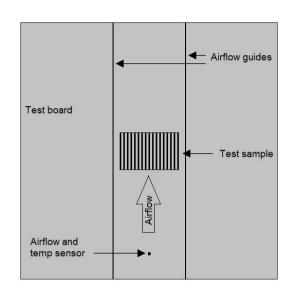

For products with base plate used in a sealed box/cold wall application, cooling is achieved mainly by conduction through the cold wall. Output Current Derating graphs are found in the Output section for each model. The product is tested in a sealed box test set up with ambient temperatures 85°C. See Design Note 028 for further details.

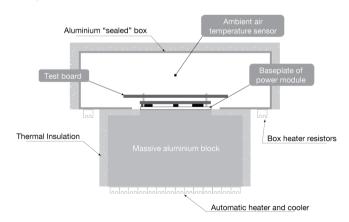

3D graph is useful for applications where the converter is connected to a low thermal impedance such as a large heatsink or water-cooled cold plate.

Graph shows the maximum power that can be obtained without exceeding maximum temperature for P1. One axis represents the baseplate temperature, the other +OUT pin temperature (where it approaches the application board).




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Definition of product operating temperature


Product operating temperatures is used to monitor the temperature of the product, and proper thermal conditions can be verified by measuring the temperature at position P1. Temperature at these positions (T_{P1}) should not exceed the maximum temperatures in the table below. The number of measurement points may vary with different thermal design and topology. Temperatures above maximum T_{P1} , measured at the reference point P1 are not allowed and may cause permanent damage.

Position	Description	Max Temp.
P1	PCB Pin side	T _{P1} =115 ⁰ C

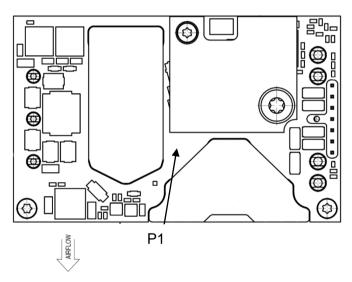

Bottom view

Connections (Bottom view)

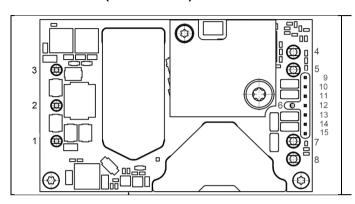


Pin	Designation	Function 4 pin	Function 7 pin
1	+In	Positive Input	Positive Input
2	RC	Remote Control	Remote Control
3	-In	Negative Input	Negative Input
4	-Out	Negative Output	Negative Output
5	-Out	Negative Output	Negative Output
6	PG	Populated on request	Populated on request
7	+Out	Positive Output	Positive Output
8	+Out	Positive Output	Positive Output
9*	PG/CTRL	Not Mounted	Power Good/SYNC or PMBus remote control or Current Share
10*	DGND/ -SENSE	Not Mounted	Digital Ground/ Negative Remote Sense
11	SDA	PMBus Data	PMBus Data
12	SALERT	PMBus alert signal	PMBus alert signal
13	SCL	PMBus Clock	PMBus Clock
14*	SA0/SA1	PMBus Address 1	PMBus Address 0/ PMBus Address 1
15*	SA0/+SENSE	Not Mounted	PMBus Address 0/ Positive Remote Sense


^{*} Hardware configurated, default values in bold text



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

BMR 491 x2xx /xxx - Hole mounted, Baseplate version

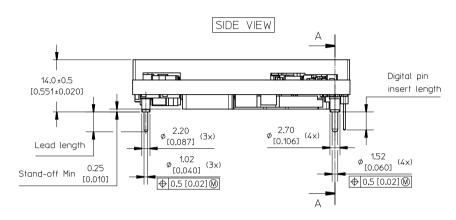

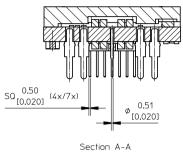

			TOP VIEW		
ļ	5.32 (0.2091)	(5.58)	47.24 [1.860]	-	ø 21
36.8 [1.45]	26.16 [1.030]	•			φ 21 [0.83] φ 20 φ [0.79] φ 19 [0.75]
Threa Ch	ded hole M3×0 amfer Max Ø3.3	5 (4x) [0.13]x90°	58.4 [2.30]	19.11 [0.752]	[0.417]

	Lead length	
		insert length
Standard	5.33 [0.210]	4.83 [0.190]
LA	3.69 [0.145]	3.19 [0.126]
LB	4 57 [0 180]	4 01 [0 158]

NOTES:

BASEPLATE INTERFACE
Material: Aluminium
For screw attachment apply mounting
torque of max 0.44 Nm [3.9 lbf in.]
M3 screw must not protrude more than
3.2 mm [0.126 in.] into the baseplate.


WEIGHT Typical: 87 g

All dimensions are in mm [inch].
Tolerance unless specified:
x.x mm ±0.50 mm. [x.xx in. ±0.02 in.]
x.xx mm ±0.25 mm. [x.xxx in. ±0.010 in.]

3D MODELS

3D .stp models are available on request.

All component placements, whether shown as physical components or symbolical outline, are for reference only and are subject to change throughout the product's life cycle unless explicitly described and dimensioned in this drawing.

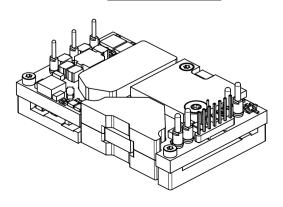

3D ISOMETRIC VIEW







BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Footprint and Pin positions valid for all versions

RECOMMENDED FOOTPRINT - TOP VIEW

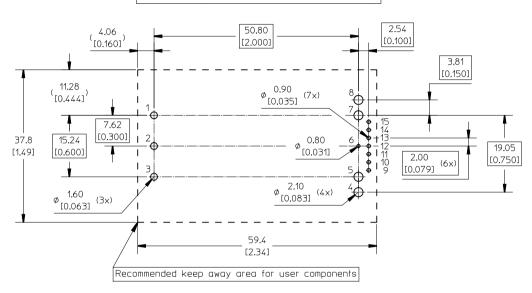

CONNECTIONS - BOTTOM VIEW

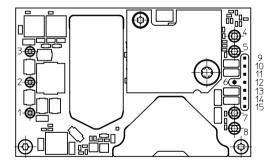

PIN SPECIFICATIONS:

Pin 1-5, 7-8 Material: Copper alloy Plating: Min Au 0.1 µm over Ni 1-3 µm

Pin 6, 9-15 Material: Brass Plating: Min Au 0.1 µm over Ni 1-3 µm



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		


Soldering Information – Hole Mount through Pin in Paste Assembly

The pin in paste mount product is intended for forced convection or vapor phase reflow soldering in SnPb and Pb-free processes.

Reflow soldering is not preferred for through-hole mounted power modules due to challenges resulting in reduced reliability. High temperature reflow soldering causing IMC layer thickness increase resulting in shorten solder joint lifetime. To avoid component or solder failure a module peak temperature higher than 245 degrees and above 217 degrees more than 90 seconds is not recommended. To prevent re-melt of module internal solder joints shielding cap is required during reflow process.

A no-clean flux is recommended to avoid entrapment of cleaning fluids in cavities inside the product or between the product and the host board, since cleaning residues may affect long time reliability and isolation voltage.

General reflow process specifications		SnPb eutectic	Pb-free
Average ramp-up (TPRODUCT)		3°C/s max	3°C/s max
Typical solder melting (liquidus) temperature	TL	183°C	221°C
Minimum reflow time above T _L	T _{PIN}	60 s	60 s
Minimum pin temperature	T _{PIN}	210°C	235°C
Peak product temperature	T _{PRODUCT}	225°C	245°C
Average ramp-down (T _{PRODUCT})		6°C/s max	6°C/s max
Maximum time 25°C to peak		6 minutes	8 minutes

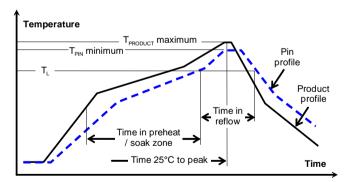

Thermocoupler Attachment

 $T_{\mbox{\scriptsize PRODUCT}}$ is measured on the base plate top side, since this will likely be the warmest part of the product during the reflow process.

 T_{PIN} temperature is measured on the power module pins solder joints at customer board.

Product reflow classification

The product has been tested for the following

Pb-free solder classification

For Pb-free solder processes, the product is qualified for MSL 3 according to IPC/JEDEC standard J-STD-020C.

Product reflow processes

SnPb solder processes

For SnPb solder processes, a pin temperature (TPIN) in excess of the solder melting temperature, (TL, 183°C for Sn63Pb37) for more than 60 seconds and a peak temperature of 220°C is recommended to ensure a reliable solder joint.

For dry packed products only: depending on the type of solder paste and flux system used on the host board, up to a recommended maximum temperature of 245°C could be used, if the products are kept in a controlled environment (dry pack handling and storage) prior to assembly.

Lead-free (Pb-free) solder processes

For Pb-free solder processes, a pin temperature (T_{PIN}) in excess of the solder melting temperature (T_{L} , 217 to 221°C for SnAgCu solder alloys) for more than 60 seconds and a peak temperature of 245°C on all solder joints is recommended to ensure a reliable solder joint.

Dry Pack Information

Products intended for Pb-free reflow soldering processes are delivered in standard moisture barrier bags according to IPC/JEDEC standard J-STD-033 (Handling, packing, shipping and use of moisture/reflow sensitivity surface mount devices).

Using products in high temperature Pb-free soldering processes requires dry pack storage and handling. In case the products have been stored in an uncontrolled environment and no longer can be considered dry, floor life according to MSL 3, the modules must be baked according to J-STD-033.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Soldering Information - Hole Mounting

The hole mounted product is intended for plated through hole mounting by wave or manual soldering. The pin temperature is specified to maximum to 270°C for maximum 10 seconds.

A maximum preheat rate of 4°C/s and maximum preheat temperature of 150°C is suggested. When soldering by hand, care should be taken to avoid direct contact between the hot soldering iron tip and the pins for more than a few seconds in order to prevent overheating.

A no-clean flux is recommended to avoid entrapment of cleaning fluids in cavities inside the product or between the product and the host board. The cleaning residues may affect long time reliability and isolation voltage.


Delivery Package Information

The products are delivered in antistatic Foam trays and in antistatic PPE trays (H option in PN, hard tray).




BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Tray Specifications – Through hole version, BP versions and Integrated Heat sink without dry pack				
Material	PE Foam			
Surface resistance	10 ⁵ < Ohm/square < 10 ¹¹			
Bakeability	The trays are not bakeable			
Tray capacity	20 converters/tray			
Box capacity	60 Base Plate products (3 full trays/box) 40 Integrated Heat Sink products (2 full trays/box)			
Weight	48 g empty tray, 1790 g full tray Open deck BP 48 g empty tray, 2077 g full tray Int Heat sink 48 g empty tray, 1754 g full tray Thin BP			

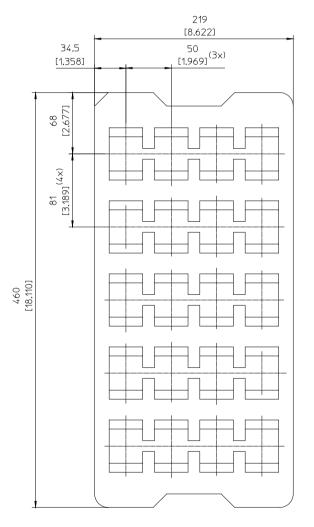

Example PE Foam tray

Tray Specifications –base plate version (dry pack, pick & place) ("H" option)			
Material	Antistatic PPE		
Surface resistance	10 ⁵ < Ohm/square < 10 ¹¹		
Bakeability	The trays can be baked at maximum 125°C for 48 hours		
Tray capacity	14 converters/tray		
Box capacity	42 products (3 full trays/box)		
Weight	214 g empty tray, 1432 g full tray Open deck BP 214 g empty tray, 1408 g full tray Thin BP		

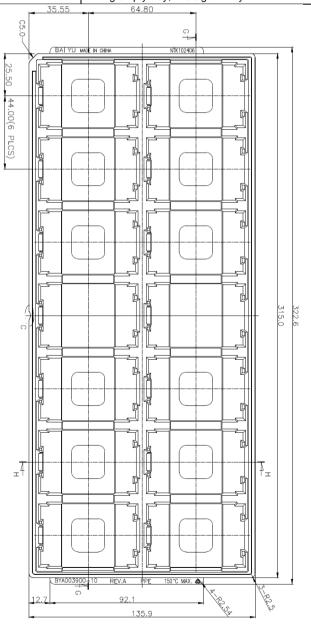

Hard tray (14 pcs)



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Product Qualification Specification

Product Qualification Spe	Cilication		
Characteristics			
External visual inspection	IPC-A-610		
Temperature shock test (Temperature cycling)	IEC 60068-2-14 Na	Temperature range Number of cycles Dwell/transfer time	-40 to 125°C 700 15 min/0-1 min
Cold (in operation)	IEC 60068-2-1 Ad	Temperature T _A Duration	-45°C 72 h
Damp heat	IEC 60068-2-67 Cy	Temperature Humidity Duration	85°C 85 % RH 1000 hours
Dry heat	IEC 60068-2-2 Bd	Temperature Duration	125°C 1000 h
Electrostatic discharge susceptibility	IEC 61340-3-1, JESD 22-A114 IEC 61340-3-2, JESD 22-A115	Human body model (HBM) Machine Model (MM)	Class 2, 2000 V Class 3, 200 V
Immersion in cleaning solvents	IEC 60068-2-45 XA, method 2	Water	55°C
Mechanical shock	IEC 60068-2-27 Ea	Peak acceleration Duration	100 g 6 ms
Moisture reflow sensitivity ¹	J-STD-020E	Level 1 (SnPb-eutectic) Level 3 (Pb Free)	225°C 245°C
Operational Life test Rapid Temp.	MIL-STD-202G, method 108A	Duration	800 h
Resistance to soldering heat ²	IEC 60068-2-20 Tb, method 1A	Solder temperature Duration	270°C 10-13 s
Robustness of terminations	IEC 60068-2-21 Test Ua1 IEC 60068-2-21 Test Ue1	Through hole mount products Surface mount products	All leads All leads
Solderability	IEC 60068-2-20 test Ta	Preconditioning Temperature, Pb-free	Steam ageing 245°C
Vibration, broad band random	IEC 60068-2-64 Fh, method 1	Frequency Spectral density Duration	10 to 500 Hz 0.07 g ² /Hz 10 min in each direction

Notes

1 Only for products intended for reflow soldering (surface mount products & pin-in paste³ products)

2 Only for products intended for wave soldering (plated through hole products)



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

PMBus Command Appendix

This appendix contains a detailed reference of the PMBus commands supported by the product.

Data Formats

The products make use of a few standardized numerical formats, along with custom data formats. A detailed walkthrough of the above formats is provided in AN304, as well as in sections 7 and 8 of the PMBus Specification Part II. The custom data formats vary depending on the command, and are detailed in the command description.

Standard Commands

The functionality of commands with code 0x00 to 0xCF is usually based on the corresponding command specification provided in the PMBus Standard Specification Part II (see Power System Management Bus Protocol Documents below). However there might be different interpretations of the PMBus Standard Specification or only parts of the Standard Specification applied, thus the detailed command description below should always be consulted.

Forum Websites

The System Management Interface Forum (SMIF)

http://www.powersig.org/

The System Management Interface Forum (SMIF) supports the rapid advancement of an efficient and compatible technology base that promotes power management and systems technology implementations. The SMIF provides a membership path for any company or individual to be active participants in any or all of the various working groups established by the implementer forums.

Power Management Bus Implementers Forum (PMBUS-IF)

http://pmbus.org/

The PMBus-IF supports the advancement and early adoption of the PMBus protocol for power management. This website offers recent PMBus specification documents, PMBus articles, as well as upcoming PMBus presentations and seminars, PMBus Document Review Board (DRB) meeting notes, and other PMBus related news.

PMBus - Power System Management Bus Protocol Documents

These specification documents may be obtained from the PMBus-IF website described above. These are required reading for complete understanding of the PMBus implementation. This appendix will not re-address all of the details contained within the two PMBus Specification documents.

Specification Part I - General Requirements Transport And Electrical Interface

Includes the general requirements, defines the transport and electrical interface and timing requirements of hard wired signals.

Specification Part II - Command Language

Describes the operation of commands, data formats, fault management and defines the command language used with the PMBus.

SMBus – System Management Bus Documents

System Management Bus Specification, Version 2.0, August 3, 2000

This specification specifies the version of the SMBus on which Revision 1.2 of the PMBus Specification is based. This specification is freely available from the System Management Interface Forum Web site at:

http://www.smbus.org/specs/



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

PMBus Command Summary and Factory Default Values of Standard Configuration

The factory default values provided in the table below are valid for the Standard configuration. Factory default values for other configurations can be found using the Flex Power Designer tool.

OPERATION ON_OFF_CONFIG		Standard Conf	iguration
		BMR 491 XXX	X/857 C
ON_OFF_CONFIG	R/W Byte	0x84	
	R/W Byte	0x18	
CLEAR_FAULTS	Send Byte		
WRITE_PROTECT	R/W Byte		
STORE_DEFAULT_ALL	Send Byte		
RESTORE_DEFAULT_ALL	Send Byte		
VOUT_MODE	Read Byte	0x15	
VOUT_COMMAND	R/W Word	0x6000	12.0 V
VOUT_TRIM	R/W Word	0x0000	0.0 V
VOUT_CAL_OFFSET	R/W Word	Unit Specific	
VOUT_MAX	R/W Word	0x7333	14.4 V
VOUT_MARGIN_HIGH	R/W Word	0x699A	13.2 V
VOUT_MARGIN_LOW	R/W Word	0x5666	10.8 V
VOUT_TRANSITION_RATE	R/W Word	0x9B02	0.1 V/ms
VOUT_DROOP	R/W Word	0xE800	0.0 mV/A
VOUT_SCALE_LOOP	R/W Word	Unit Specific	•
VOUT_SCALE_MONITOR	R/W Word	Unit Specific	
MAX DUTY			98.0 %
			180.0 kHz
			46.0 V
			43.0 V
		Unit Specific	,
			14 V
			13.8 V
			0.0 V
			0.0 V
			235.0 A
IOUT OC FAULT RESPONSE			
			8.0 V
			235.0 A
			115.0 °C
			90.0 °C
			-40.0 °C
			-50.0 °C
			55.0
			64.0 V
			0 F.O V
			62.0 V
			47.0 V
			0.0 V
			0.0 v
			8.0 V
			5.0 V
			3.0 V
	VOUT_COMMAND VOUT_TRIM VOUT_CAL_OFFSET VOUT_MAX VOUT_MARGIN_HIGH VOUT_MARGIN_LOW VOUT_TRANSITION_RATE VOUT_DROOP VOUT_SCALE_LOOP	RESTORE_USER_ALL CAPABILITY Read Byte VOUT_MODE Read Byte VOUT_COMMAND R/W Word VOUT_TRIM R/W Word VOUT_TRIM R/W Word VOUT_CAL_OFFSET R/W Word VOUT_MAX R/W Word VOUT_MARGIN_HIGH R/W Word VOUT_MARGIN_LOW R/W Word VOUT_TRANSITION_RATE R/W Word VOUT_DROOP R/W Word VOUT_SCALE_LOOP R/W Word VOUT_SCALE_LOOP R/W Word VOUT_SCALE_MONITOR R/W Word VIN_ON R/W Word VIN_OFF R/W Word VIN_OFF R/W Word VIN_OFF R/W Word INTERLEAVE R/W Word IOUT_CAL_OFFSET Read Word VOUT_OV_FAULT_LIMIT R/W Word VOUT_OV_FAULT_RESPONSE R/W Byte VOUT_UV_FAULT_LIMIT R/W Word VOUT_OC_FAULT_LIMIT R/W Word IOUT_OC_FAULT_LIMIT R/W Word VOUT_UV_FAULT_LIMIT R/W Word VOUT_UV_FAULT_LIMIT R/W Word VOUT_OV_FAULT_LIMIT R/W Word VOUT_OC_FAULT_LIMIT R/W Word VOUT_OV_FAULT_LIMIT R/W Word R/W Word VOUT_OV_FAULT_L	RESTORE_USER_ALL



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Code	Name	Data Format	Factory Default Val	ue
			Standard Configuration	
			BMR 491 XXXX/857 C	
0x63	TON_MAX_FAULT_RESPONSE	R/W Byte	0x00	
0x64	TOFF_DELAY	R/W Word	0x0005	
0x65	TOFF_FALL	R/W Word	0x000A	
0x66	TOFF_MAX_WARN_LIMIT	R/W Word	0x000F	
0x78	STATUS_BYTE	Read Byte		
0x79	STATUS_WORD	Read Word		
0x7A	STATUS_VOUT	Read Byte		
0x7B	STATUS_IOUT	Read Byte		
0x7C	STATUS_INPUT	Read Byte		
0x7D	STATUS_TEMPERATURE	Read Byte		
0x7E	STATUS_CML	Read Byte		
0x88	READ_VIN	Read Word		
0x8B	READ_VOUT	Read Word		
0x8C	READ_IOUT	Read Word		
0x8D	READ_TEMPERATURE_1	Read Word		
0x8E	READ_TEMPERATURE_2	Read Word		
0x94	READ_DUTY_CYCLE	Read Word		
0x95	READ_FREQUENCY	Read Word		
0x98	PMBUS_REVISION	Read Byte	Linit One - if: -	1
0x99	MFR_ID	R/W Block12	Unit Specific	
0x9A	MFR_MODEL	R/W Block20	Unit Specific	
0x9B	MFR_REVISION	R/W Block12	Unit Specific	
0x9C	MFR_LOCATION MFR_DATE	R/W Block12	Unit Specific	
0x9D		R/W Block12	Unit Specific	
0x9E	MFR_SERIAL	R/W Block20	Unit Specific	
0xB0 0xC4	USER_DATA_00 MFR VIN OV WARN RESPONSE	R/W Block16	Unit Specific	
0xC4 0xC5	MFR_VIN_OV_WARN_RESPONSE MFR_CONFIG_UNUSED_PINS	R/W Byte R/W Word	0x00 0x02F6	
0xC6	MFR_RC_LEVEL	R/W Byte	0x02F6	
0xC6 0xC7	MFR_KS_PRETRIG	R/W Byte	0x89	
0xC8	MFR_FAST_VIN_OFF_OFFSET	R/W Byte	0x20	
0xD0	MFR_PGOOD_POLARITY	R/W Byte	0x00	
0xD0	MFR_FAST_OCP_CFG	R/W Word	0x02F2	114 level, 2
				samples
0xD2	MFR_RESPONSE_UNIT_CFG	R/W Byte	0x55	
0xD3	MFR_VIN_SCALE_MONITOR	Read Block4	Unit Specific	101
0xD4	MFR_PREBIAS_DVDT_CFG	R/W Block8	0x1E001E00F0040	401 T
0xD5	MFR_FILTER_SELECT	R/W Byte	0x00	
0xD7	MFR_READ_EVENT MFR_TEMP_COMPENSATION	Read Block23	0,000500005000	75
0xD8		Read Block8	0x00959000858000)/ F
0xD9 0xDA	MFR_SET_ROM_MODE MFR_ISHARE_THRESHOLD	Write Block4 R/W Block8	0x000000000000000000000000000000000000	000
0xDA 0xDB	MFR_EVENT_INDEX	R/W Byte		
0xDB 0xDC	MFR_EVENT_INDEX MFR_SELECT_TEMPERATURE_SENSOR	R/W Byte	0x00	
0xDC 0xDD	MFR_VIN_OFFSET	Read Block4	Unit Specific	
0xDE	MFR_VOUT_OFFSET_MONITOR	Read Word	Unit Specific	
0xE0	MFR_SPECIAL_OPTIONS	R/W Byte	0x40	
0xE0 0xE1	MFR_TEMP_OFFSET_INT	Read Word	Unit Specific	1
0xE2	MFR_REMOTE_TEMP_CAL	Read Block4	Unit Specific	
0xE3	MFR_REMOTE_CTRL	R/W Byte	0x17	
0xE6	MFR_VFF_PARAMS	R/W Block4	0x0E010800	1
0xE7	MFR_TEMP_COEFF	Read Block6	0x00FF00FF600	
0xE8	MFR_FILTER_COEFF	R/W Block27	0x01B60267FF000	00000550355030000 05802E803
0xE9	MFR_FILTER_NLR_GAIN	R/W Block16	00005000460000005802E803 0x0900000000000000000000000000FC	
	1			_
0xEB	MFR_MIN_DUTY	R/W Word	0x4C46	70 ns, 76 ns



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Code	Name	Data Format	Factory Defaul Standard Conf BMR 491 XXX	iguration
0xEE	MFR_OFFSET_ADDRESS	R/W Byte	0x60	96 n + SA0
0xEF	MFR_DBV_CONFIG	R/W Block6	0x7A76283E3/	A20
0xF0	MFR_DEBUG_BUFF	R/W Block8		
0xF1	MFR_SETUP_PASSWORD	R/W Block12		
0xF2	MFR_DISABLE_SECURITY_ONCE	R/W Block6		
0xF4	MFR_SECURITY_BIT_MASK	Read Block32		
0xF5	MFR_TRANSFORMER_TURN	Read Byte	0x41	
0xF6	MFR_OSC_TRIM	Read Byte	0x00	
0xF7	MFR_DLC_CONFIG	R/W Block8	0x0000000000	000000
0xF8	MFR_ILIM_SOFTSTART	R/W Byte	0x14	20 %
0xF9	MFR_MULTI_PIN_CONFIG	R/W Word	0x0000	
0xFC	MFR_ADDED_DROOP_DURING_RAMP	R/W Word	0xE800	0.0 mV/A
0xFD	MFR_FIRMWARE_DATA	Read Block20		
0xFE	MFR_RESTART	Write Block4		



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

PMBus Command Details

OPERATION (0x01)Description: Sets the desired PMBus enable and margin operations.

Bit	Function	Description	Value	Function	Description
7:6	Enable	Make the device enable or disable.	00	Immediate Off	Disable Immediately without sequencing.
			01	Soft Off	Disable "Softly" with sequencing.
			10	Enable	Enable device to the desired margin state.
5:4	Margin	Select between margin high/low states or nominal output.	00	Nominal	Operate at nominal output voltage.
			01	Margin Low	Operate at margin low voltage set in VOUT_MARGIN_LOW.
			10	Margin High	Operate at margin high voltage set in VOUT_MARGIN_HIGH.
3:2	Act on Fault	Set 10b to act on fault or set to 01b to ignore fault.	01	Ignore Faults	Ignore Faults when in a margined state. The device will ignore appropriate overvoltage/undervoltage warnings and faults and respond as programmed by the warning limit or fault response command.
			10	Act on Faults	Act on Faults when in a margined state. The device will handle appropriate overvoltage/undervoltage warnings and faults and respond as programmed by the warning limit or fault response command.

ON_OFF_CONFIG (0x02)
Description: Configures how the device is controlled by the CONTROL pin and the PMBus.

Bit	Function	Description	Value	Function	Description
4	Powerup Operation	Sets the default to either operate any time power is present or for the on/off to be controlled by CONTROL pin and serial bus commands.	0	Enable Always	Unit powers up any time power is present regardless of state of the CONTROL pin, taking the RC configuration into account, see command 0xE3
			1	Enable pin or PMBus	Unit does not power up until commanded by the CONTROL pin and OPERATION command.
3	PMBus Enable Mode	Controls how the unit responds to commands received via the serial bus.	0	Ignore PMBus	Unit ignores the on/off portion of the OPERATION command from serial bus.
			1	Use PMBus	To start, the unit requires that the on/off portion of the OPERATION command is instructing the unit to run.
2	Enable Pin Mode	Controls how the unit responds to the CONTROL pin.	0	Ignore pin	Unit ignores the CONTROL/Enable pin.
			1	Use pin	Unit requires the CONTROL pin to be asserted to start the unit.
1	Enable Pin Polarity	Polarity of the CONTROL pin.	0	Active Low	Enable pin will cause device to enable when driven low.
			1	Active High	Enable pin will cause device to enable when driven high.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
0	Disable Action	CONTROL pin action when commanding the unit to turn off.	0	Soft Off	Use the programmed turn off delay and fall time.
			1	Imm. Off	Turn off the output and stop transferring energy to the output as fast as possible. The device's product literature shall specify whether or not the device sinks current to decrease the output voltage fall time.

CLEAR_FAULTS (0x03)

Description: Clears all fault status bits

WRITE_PROTECT (0x10)

Description: The WRITE_PROTECT command is used to control writing to the PMBus device. The intent of this command is to provide protection against accidental changes. This command is not intended to provide protection against deliberate or malicious changes to a device's configuration or operation.

Bit	Description	Value	Function	Description
7:0	All supported commands may have their parameters read, regardless of the WRITE PROTECT settings.	0x80	Disable all writes	Disable all writes except to the WRITE PROTECT command.
		0x40	Enable operation	Disable all writes except to the WRITE_PROTECT, OPERATION and PAGE commands.
		0x20	Enable control and Vout commands	Disable all writes except to the WRITE_PROTECT, OPERATION, PAGE, ON_OFF_CONFIG and VOUT_COMMAND commands.
		0x00	Enable all	Enable writes to all commands.
			commands	

STORE_DEFAULT_ALL (0x11)

Description: Commands the device to store its configuration into the Default Store.

RESTORE_DEFAULT_ALL (0x12)

Description: Commands the device to restore its configuration from the Default Store.

STORE_USER_ALL (0x15)

Description: Stores, at the USER level, all PMBus values that were changed since the last restore command.

RESTORE_USER_ALL (0x16)

Description: Restores PMBus settings that were stored using STORE_USER_ALL. This command is automatically performed at power up.

CAPABILITY (0x19)

Description: This command provides a way for a host system to determine some key capabilities of a PMBus device.

Bit	Function	Description	Value	Function	Description
7	Packet Error Checking	Packet error checking	0	Not supported	Packet Error Checking not supported.
			1	Supported	Packet Error Checking is supported.
6:5 Maximum Bus Speed		Bus Maximum bus speed	00	100kHz	Maximum supported bus speed is 100 kHz.
			01	400kHz	Maximum supported bus speed is 400 kHz.
			10	1MHz	Maximum supported bus speed is 1MHz



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
			11	Reserved	
4	SMBALERT #	SMBALERT	0	No SMBALERT	The device does not have a SMBALERT# pin and does not support the SMBus Alert Response protocol.
			1	Have SMBALERT	The device does have a SMBALERT# pin and does support the SMBus Alert Response protocol.
3	Numeric format	Numeric format	0		Numeric data is in LINEAR11, ULINEAR16, SLINEAR16, or DIRECT format
			1		Numeric data is in IEEE Half Precision Floating Point Format
2	AVSBus	AVSBus Support	0		AVSBus Not Supported
	Support		1		AVSBus Supported
1:0	Reserved		Χ		Reserved

VOUT_MODE (0x20)

Description: Controls how future VOUT-related commands parameters will be interpreted.

Bit	Function	Description	Format
4:0		Five bit two's complement EXPONENT for the MANTISSA delivered as the data bytes for VOUT COMMAND in VOUT LINEAR Mode, five bit VID	Integer Signed
		code identifier per in VID Mode or always set to 00000b in Direct Mode.	

Bit	Function	Description	Value	Function	Description
7:5		Set to 000b to select	000	Linear	Linear Mode Format.
		VOUT_LINEAR Mode (Five bit	001	VID	VID Mode.
		two's complement exponent for the MANTISSA delivered as the data bytes for an output voltage related command), set to 001b to select VID Mode (Five bit VID code identifier per) or set to 010b to select Direct Mode (Always set to 00000b).	010	Direct	Direct Mode.

VOUT_COMMAND (0x21)

Description: Commands the device to transition to a new output voltage.

	Bit	Description	Format	Unit
ĺ	15:0	Sets the nominal value of the output voltage.	Vout Mode	V
			Unsigned	

VOUT_TRIM (0x22)

Description: Configures a fixed offset to be applied to the output voltage when enabled.

Bit	Description	Format	Unit
15:0	Sets VOUT trim value. The two bytes are formatted as a two's complement binary mantissa,	Vout Mode	V
	used in conjunction with the exponent set in VOUT MODE.	Signed	

VOUT_CAL_OFFSET (0x23)

Description: Vout calibration value. It is a signed number in Vout linear mode. The setting will be applied output voltage.

Bit	Description	Format	Unit
15:0	Vout calibration value. It is a signed number in Vout linear mode. The setting will be applied output voltage.	Vout Mode Signed	V



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

VOUT_MAX (0x24)

Description: Configures the maximum allowed output voltage.

Bit	Description	Format	Unit
15:0	Sets the maximum possible value setting of VOUT. The maximum VOUT_MAX setting is	Vout Mode	V
	110% of the pin-strap setting.	Unsigned	

VOUT_MARGIN_HIGH (0x25)

Description: Configures the target for margin-up commands.

Bit	Description	Format	Unit
15:0	Sets the value of the VOUT during a margin high.	Vout Mode	V
1		Unsigned	

VOUT_MARGIN_LOW (0x26)

Description: Configures the target for margin-down commands.

Bit	Description	Format	Unit
15:0	Sets the value of the VOUT during a margin low.	Vout Mode	V
		Unsigned	

VOUT_TRANSITION_RATE (0x27)

Description: Configures the transition time for margins and VCOMMAND output changes.

Bit	Description	Format	Unit
15:0	Sets the transition rate during margin or other change of VOUT.	Linear	V/ms

VOUT_DROOP (0x28)

Description: Configures the Isense voltage to load current ratio.

Bit	Description	Format	Unit
15:0	Sets the effective load line (V/I slope) for the rail in which the device is used.	Linear	mV/A

VOUT_SCALE_LOOP (0x29)

Description: Gain of Vout EADC sense.

В	3it	Description	Format
1	15:0	Gain of Vout EADC sense.	Direct

VOUT_SCALE_MONITOR (0x2A)

Description: Normally there is a voltage divider in the voltage sense circuit. The scale factor is represented by VOUT_SCALE_MONITOR.

Bit	Description	Format
15:0	Normally there is a voltage divider in the voltage sense circuit. The scale factor is	Direct
	represented by VOUT_SCALE_MONITOR.	

MAX_DUTY (0x32)

Description: Configures the maximum allowed duty-cycle.

Bit	Description	Format	Unit
15:0	Sets the maximum allowable duty cycle of the switching frequency.	Linear	%

FREQUENCY_SWITCH (0x33)

Description: Controls the switching frequency in 1kHz steps.

Bit	Description	Format	Unit
15:0	Sets the switching frequency.	Linear	kHz



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

VIN_ON (0x35)

Description: The VIN_ON command sets the value of the input voltage, in volts, at which the unit should start power conversion.

Bit	Description	Format	Unit
15:0	Sets the VIN ON threshold.	Linear	V

VIN OFF (0x36)

Description: The VIN_OFF command sets the value of the input voltage, in volts, at which the unit, once operation has started, should stop power conversion.

Bit	Description	Format	Unit
15:0	Sets the VIN OFF threshold.	Linear	V

INTERLEAVE (0x37)

Description: Configures the phase offset with respect to a common SYNC clock. When multiple product share a common DC input supply, spreading of the switching phases between the products can be utilized. This reduces the input capacitance requirements and efficency losses, since the peak current drawn from the input supply is effectively spread out over the whole switch period. If two or more units have their outputs connected in parallell, interleaving will reduce ripple currents. This requires that the products are synchronized using the SYNC pin.

Bit	Function	Description	Format
11:8	Group ID Number	Value 0-15. Sets an ID number to a group of interleaved rails.	Integer Unsigned
7:4	Number of Rails	Value 0-15. Sets the number of units in the group, including the SYNC OUT product.	Integer Unsigned
3:0	Rail Position	Value 0-15. Sets the interleave order for this unit. The product configured to SYNC OUT shall be assigned to number 0	Integer Unsigned

IOUT_CAL_OFFSET (0x39)

Description: Sets the current-sense offset.

Bit	Description	Format	Unit
15:0	Sets an offset to IOUT readings. Use to compensate for delayed measurements of current ramp.	Linear	А

VOUT_OV_FAULT_LIMIT (0x40)

Description: Output over voltage fault limit.

Bi	it	Description	Format	Unit
15	5:0	Output over voltage fault limit.	Vout Mode	V
			Unsigned	

VOUT_OV_FAULT_RESPONSE (0x41)

Description: Output over voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
		Describes the device interruption operation. 00b - The PMBus device continues operation without interruption. 01b - The	10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
		PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]). 10b - The device shuts down (disables the output) and responds according to the Retry Setting in bits [5:3]. 11b - The device's output is disabled while the fault is present. Operation resumes and the output is enabled when the fault condition no longer exists.	11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries	The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



28701-BMR491 05 Rev B March 2022 BMR491 series DC-DC Converters Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power) © Flex

Bit	Function	Description	Value	Function	Description
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units. Used	0	1	
	and Delay Time	for either the amount of time the device is to continue operating	2	2	
	1	after a fault is detected or for the	3	8	
		amount of time between attempts	4	16	
		to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
			7	128	

VOUT_OV_WARN_LIMIT (0x42)
Description: Output over voltage warning limit.

Bit	Description	Format	Unit
15:0	Output over voltage warning limit.	Vout Mode	V
		Unsigned	

VOUT_UV_WARN_LIMIT (0x43)

Description: Output under voltage warning limit.

Bit	Description	Format	Unit
15:0	Output under voltage warning limit.	Vout Mode	V
		Unsigned	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

VOUT_UV_FAULT_LIMIT (0x44)Description: Output under voltage fault limit.

Bit	Description	Format	Unit
15:0	Output under voltage fault limit.	Vout Mode	V
		Unsigned	

VOUT_UV_FAULT_RESPONSE (0x45)Description: Output under voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response	Describes the device interruption operation. 00b - The PMBus	00	Ignore Fault	The PMBus device continues operation without interruption.
		without interruption. 01b - The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit	01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
	the output) and responds according to the Retry Se bits [5:3]. 11b - The devic output is disabled while the present. Operation resum the output is enabled whe fault condition no longer expectations.		11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	number of times set by these b 000b means the device does n attempt a restart. 111b means	The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Retry Twice	Bit	Function	Description	Value	Function	Description
Retry 3 times				010	Retry Twice	restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified
Retry 4 times				011	Retry 3 times	restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified
restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault. 110 Retry 6 times The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault. 111 Retry Continuously The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down. 2:0 Retry Time and Delay Time 2 4					·	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault. The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down. Retry Time and Delay Time 1				101	Retry 5 times	restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified
The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.				110	Retry 6 times	restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified
and Delay 1 2 Time 2 4				111		The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes
Time 2 4	2:0					
		Tille				



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
		Number of delay time units. Used	4	16	
		for either the amount of time the	5	32	
		device is to continue operating	6	64	
		after a fault is detected or for the amount of time between attempts to restart. The time unit is set in register 0xD2.	7	128	

IOUT_OC_FAULT_LIMIT (0x46)
Description: Output over current limit.

Bit	Description	Format	Unit
15:0	Output over current fault limit.	Linear	Α

IOUT_OC_FAULT_RESPONSE (0x47)
Description: Output over current fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response	For all values of bits [7:6],the device: Sets the corresponding fault bit in the status registers and If the device supports notifying the host, it does so.	00	Ignore Fault	The PMBus device continues to operate indefinitely while maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT without regard to the output voltage (known as constant-current or brickwall limiting).
			01	Conditioned constant current	The PMBus device continues to operate indefinitely while maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT as long as the output voltage remains above the minimum value specified by IOUT_OC_LV_FAULT_LIMIT. If the output voltage is pulled down to less than that value, then the PMBus device shuts down and responds according to the Retry setting in bits [5:3].
			10	Delay w/ Const. Current & Retry	The PMBus device continues to operate, maintaining the output current at the value set by IOUT_OC_FAULT_LIMIT without regard to the output voltage, for the delay time set by bits [2:0] and the delay time units for specified in the IOUT_OC_FAULT_RESPONSE. If the device is still operating in current limiting at the end of the delay time, the device responds as programmed by the Retry Setting in bits [5:3].
			11	Disable and Retry	The PMBus device shuts down and responds as programmed by the Retry Setting in bits [5:3].



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
5:3	Retries	The device attempts to restart the number of times set by these bits. 000b means the device does not attempt a restart. 111b means the device attempts restarting	000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
		continuously.	001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units. Used	0	1	
	and Delay	for either the amount of time the	1	2	
	Time	device is to continue operating	2	4	
		after a fault is detected or for the	3	8	
		amount of time between attempts	4	16	
		to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
1			7	128	

IOUT_OC_LV_FAULT_LIMIT (0x48)

Description: Set the output over-current low-voltage fault threshold.

Ì	Bit	Description	Format	Unit
	15:0	Set the output over-current low-voltage fault threshold.	Vout Mode	V
			Unsigned	

IOUT_OC_WARN_LIMIT (0x4A)

Description: Output over current warning limit.

Bit	Description	Format	Unit
15:0	Output over current warning limit.	Linear	Α

OT_FAULT_LIMIT (0x4F)

Description: Over temperature fault limit.

E	3it	Description	Format	Unit
·	15:0	Over temperature fault limit.	Linear	°C

OT_FAULT_RESPONSE (0x50)

Description: Over temperature fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues
					operation without interruption.



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



March 2022 28701-BMR491 05 Rev B BMR491 series DC-DC Converters Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power) © Flex

Bit	Function	Description	Value	Function	Description
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units. Used	0	1	
	and Delay	for either the amount of time the	1	2	
	Time	device is to continue operating	2	4	
		after a fault is detected or for the	3	8	
		amount of time between attempts to restart. The time unit is set in	4	16	
		register 0xD2.	5	32	
		rogicio. ONDE.	6	64	
			7	128	

OT_WARN_LIMIT (0x51)

Description: Over temperature warning limit.

	Bit	Description	Format	Unit
ſ	15:0	Over temperature warning limit.	Linear	°C

UT_WARN_LIMIT (0x52)
Description: Under temperature warning limit.

Bit	Description	Format	Unit
15:0	Under temperature warning limit.	Linear	°C

UT_FAULT_LIMIT (0x53)

Description: Under temperature fault limit.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Description	Format	Unit
15:0	Under temperature fault limit.	Linear	°C

UT_FAULT_RESPONSE (0x54)
Description: Under temperature fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



28701-BMR491 05 Rev B March 2022 BMR491 series DC-DC Converters Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power) © Flex

Bit	Function	Description	Value	Function	Description
	T-driotion		011	Retry 3 times	The PMBus device attempts to
			011	Treny 5 miles	restart 3 times. If the device fails
					to restart, it disables the output
					and remains off until the fault is
					cleared as described in Section
					10.7. The time between the start
					of each attempt to restart is set
					by the value in bits [2:] along
					with the delay time unit specified
					for that particular fault.
			100	Retry 4 times	The PMBus device attempts to
					restart 4 times. If the device fails
					to restart, it disables the output
					and remains off until the fault is
					cleared as described in Section
					10.7. The time between the start
					of each attempt to restart is set
					by the value in bits [2:] along
					with the delay time unit specified
					for that particular fault.
			101	Retry 5 times	The PMBus device attempts to
					restart 5 times. If the device fails
					to restart, it disables the output
					and remains off until the fault is
					cleared as described in Section
					10.7. The time between the start
					of each attempt to restart is set
					by the value in bits [2:] along
					with the delay time unit specified
			440	Dotm. Ctions	for that particular fault.
			110	Retry 6 times	The PMBus device attempts to
					restart 6 times. If the device fails to restart, it disables the output
					and remains off until the fault is
					cleared as described in Section
					10.7. The time between the start
					of each attempt to restart is set
					by the value in bits [2:] along
					with the delay time unit specified
					for that particular fault.
			111	Retry	The PMBus device attempts to
			[Continuously	restart continuously, without
					limitation, until it is commanded
					OFF (by the CONTROL pin or
					OPERATION command or
					both), bias power is removed, or
					another fault condition causes
					the unit to shut down.
2:0	Retry Time	Number of delay time units. Used	0	1	
	and Delay	for either the amount of time the	1	2	
	Time	device is to continue operating	2	4	
		after a fault is detected or for the	3	8	
		amount of time between attempts	4	16	
		to restart. The time unit is set in	5	32	
		register 0xD2.	6	64	
			7	128	

VIN_OV_FAULT_LIMIT (0x55)
Description: Input over voltage fault limit.

Bit	Description	Format	Unit
15:0	Input over voltage fault limit.	Linear	V



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

VIN_OV_FAULT_RESPONSE (0x56)
Description: Input over voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the
			10	Disable and	Retry Setting (bits [5:3]). The device shuts down (disables
			10	retry	the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



28701-BMR491 05 Rev B March 2022 BMR491 series DC-DC Converters Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power) © Flex

Bit	Function	Description	Value	Function	Description
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	for that particular fault. The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time and Delay Time	Number of delay time units. Used for either the amount of time the device is to continue operating after a fault is detected or for the amount of time between attempts to restart. The time unit is set in register 0xD2.	0 1 2 3 4 5 6 7	1 2 4 8 16 32 64 128	

VIN_OV_WARN_LIMIT (0x57)
Description: Input over voltage warning limit.

Bit	Description	Format	Unit
15:0	Input over voltage warning limit.	Linear	٧



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

VIN_UV_WARN_LIMIT (0x58)

Description: Input under voltage warning limit. This command set also the input voltage threshold for the HRR function (Hybrid Ratio Regulation). The HRR function is enabled with command MFR_SPECIAL_OPTIONS (0xE0).

	Bit	Description	Format	Unit
Ī	15:0	Input under voltage warning limit and/or HRR threshold.	Linear	V

VIN_UV_FAULT_LIMIT (0x59)
Description: Input under voltage fault limit.

Bit	Description	Format	Unit
15:0	Input under voltage fault limit.	Linear	V

VIN_UV_FAULT_RESPONSE (0x5A)

Description: Input under voltage fault response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time		0	1	
	and Delay		1	2	
	Time		2	4	
			3	8	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
		Number of delay time units. Used	4	16	
		for either the amount of time the	5	32	
		device is to continue operating	6	64	
		after a fault is detected or for the amount of time between attempts to restart. The time unit is set in register 0xD2.	7	128	

POWER_GOOD_ON (0x5E)

Description: Sets the output voltage threshold for asserting PG (Power Good).

Bit	Description	Format	Unit
15:0	The POWER_GOOD_ON command sets the output voltage at which an optional	Vout Mode	V
	POWER_GOOD signal should be asserted.	Unsigned	1

POWER_GOOD_OFF (0x5F)

Description: If the output voltage is lower than this one, negate power good if power good is enabled through MFR_MULTI_PIN_CONFIG and set the power good bit to 1 in PMBUS status.

Bit	Description	Format	Unit
15:0	If the output voltage is lower than this one, negate power good if power good is enabled	Vout Mode	V
	through MFR_MULTI_PIN_CONFIG and set the power good bit to 1 in PMBUS status.	Unsigned	ļ

TON_DELAY (0x60)

Description: Sets the turn-on delay time

	Bit	Description	Format	Unit
ſ	15:0	Sets the delay time from ENABLE to start of VOUT rise.	Linear	ms

TON_RISE (0x61)

Description: Sets the turn-on transition time.

Bit	Description	Format	Unit
15:0	Sets the rise time of VOUT after ENABLE and TON_DELAY.	Linear	ms

TON_MAX_FAULT_LIMIT (0x62)

Description: Sets an upper limit, in milliseconds, on how long the unit can attempt to power up the output without reaching the output undervoltage fault limit.

Bit	Description	Format	Unit
15:0	A value of 0 milliseconds means that there is no limit and that the unit can attempt to bring up the output voltage indefinitely.	Linear	ms

TON_MAX_FAULT_RESPONSE (0x63)

Description: Only some of the response types are supported.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform	The PMBus device continues
				Retries while	operation for the delay time
				Operating	specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001 Retry Once The F restar to res and re cleare 10.7. of eac by the with the	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.	
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



March 2022 28701-BMR491 05 Rev B BMR491 series DC-DC Converters Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power) © Flex

Bit	Function	Description	Value	Function	Description
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time	Number of delay time units. Used	0	1	
	and Delay	for either the amount of time the	1	2	
	Time	device is to continue operating	2	4	
		after a fault is detected or for the	3	8	
		amount of time between attempts to restart. The time unit is set in	4	16	
		register 0xD2.	5	32	
		TON_MAX_FAULT_RESPONSE	7	128	
		time unit is referenced to VOUT FAULT time unit.	,	120	

TOFF_DELAY (0x64)
Description: Sets the turn-off delay.

Bit	Description	Format	Unit
15:0	Sets the delay time from DISABLE to start of VOUT fall.	Linear	ms

TOFF_FALL (0x65)Description: Sets the turn-off transition time.

Bit	Description	Format	Unit
15:0	Sets the fall time for VOUT after DISABLE and TOFF_DELAY.	Linear	ms



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

TOFF_MAX_WARN_LIMIT (0x66)

Description: Sets an upper limit, in milliseconds, on how long the unit can attempt to power down the output without reaching 12.5% of the output voltage programmed at the time the unit is turned off.

Bit		Description	Format	Unit
15	0:		Linear	ms

STATUS_BYTE (0x78)

Description: Returns a brief fault/warning status byte.

Bit	Function	Description	Value	Description
6	Off	This bit is asserted if the unit is not providing power	0	No fault
		to the output, regardless of the reason, including simply not being enabled.	1	Fault
5	Vout Overvoltage	An output overvoltage fault has occurred.	0	No fault
	Fault		1	Fault
4	lout Overcurrent Fault	An output overcurrent fault has occurred.	0	No fault
			1	Fault
3	Vin Undervoltage	An input undervoltage fault has occurred.	0	No fault
	Fault		1	Fault
2	Temperature	A temperature fault or warning has occurred.	0	No fault
			1	Fault
1	Communication/Logic	A communications, memory or logic fault has	0	No fault
		occurred.	1	Fault
0	None of the Above	A fault or warning not listed in bits [7:1] has	0	No fault
		occurred.	1	Fault

STATUS_WORD (0x79)

Description: Returns an extended fault/warning status byte.

Bit	Function	Description	Value	Description
15	Vout	An output voltage fault or warning has occurred.	0	No fault
			1	Fault
14	lout/Pout	An output current or output power fault or warning	0	No Fault.
		has occurred.	1	Fault.
13	Input	An input voltage, input current, or input power fault	0	No Fault.
		or warning has occurred.	1	Fault.
11	Power-Good	The Power-Good signal, if present, is negated.	0	No Fault.
			1	Fault.
6	Off	This bit is asserted if the unit is not providing power	0	No fault
		to the output, regardless of the reason, including simply not being enabled.	1	Fault
5	Vout Overvoltage	An output overvoltage fault has occurred.	0	No Fault.
	Fault		1	Fault.
4	lout Overcurrent Fault	An output overcurrent fault has occurred.	0	No Fault.
			1	Fault.
3	Vin Undervoltage	An input undervoltage fault has occurred.	0	No Fault.
	Fault		1	Fault.
2	Temperature	A temperature fault or warning has occurred.	0	No Fault.
			1	Fault.
1	Communication/Logic	A communications, memory or logic fault has	0	No fault.
		occurred.	1	Fault.
0	None of the Above	A fault or warning not listed in bits [7:1] has occured.	0	No fault.
			1	Fault.

STATUS_VOUT (0x7A)

Description: Returns Vout-related fault/warning status bits.

Bit	Function	Description	Value	Description
7		Vout Overvoltage Fault.	0	No Fault.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Description
	Vout Overvoltage Fault		1	Fault.
6	Vout Overvoltage	Vout Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
5	Vout Undervoltage	Vout Undervoltage Warning.	0	No Warning.
	Warning		1	Warning.
4	Vout Undervoltage	Vout Undervoltage Fault.	0	No Fault.
	Fault		1	Fault.
3	Vout Max Warning	Vout Max Warning (An attempt has been made to	0	No Warning.
	_	set the output voltage to value higher than allowed by the Vout Max command (Section 13.5).	1	Warning.
2	Ton Max Fault	Ton-Max Fault.	0	No Fault
			1	Fault.
1	Toff Max Warning	Toff Max Warning.	0	No Warning.
			1	Warning.

STATUS_IOUT (0x7B)

Description: Returns lout-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	lout Overcurrent Fault	lout Overcurrent Fault.	0	No Fault.
			1	Fault.
6	Iout Overcurrent And	lout Overcurrent and low voltage fault.	0	No Fault.
	Low Voltage Fault		1	Fault.
5	Iout Over Current	lout Overcurrent Warning.	0	No Warning.
	Warning		1	Warning.
4	Iout Undercurrent	lout Undercurrent Fault.	0	No Fault.
	Fault		1	Fault.

STATUS_INPUT (0x7C)

Description: Returns VIN/IIN-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	Vin Overvoltage Fault	Vin Overvoltage Fault.	0	No Fault.
			1	Fault.
6	Vin Overvoltage	VIN Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
5	Vin Undervoltage	Vin Undervoltage Warning.	0	No Warning.
	Warning		1	Warning.
4	Vin Undervoltage	Vin Undervoltage Fault.	0	No Fault.
	Fault		1	Fault.
3	Insufficient Vin	Asserted when either the input voltage has never	0	No Insuffient VIN
		exceeded the input turn-on threshold Vin-On, or if		encountered yet.
		the unit did start, the input voltage decreased below	1	Insufficient Unit is off.
		the turn-off threshold.		

STATUS_TEMPERATURE (0x7D)

Description: Returns the temperature-related fault/warning status bits

Bit	Function	Description	Value	Description	
7	Overtemperature	Overtemperature Fault.	0	No Fault.	
	Fault		1	Fault.	
6	Overtemperature	Overtemperature Warning.	0	No Warning.	
	Warning		1	Warning.	
5	Undertemperature	Undertemperature Warning.	0	No Warning.	
	Warning		1	Warning.	
4	Undertemerature	Undertemperature Fault.	0	No Fault.	
	Fault		1	Fault.	



	·	
BMR491 series DC-DC Converters	28701-BMR491 05 Rev B N	larch 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex	

STATUS_CML (0x7E)

Description: Returns Communication/Logic/Memory-related fault/warning status bits.

Bit	Function	Description	Value	Description
7	Invalid Or Unsupported	Invalid Or Unsupported Command Received.	0	No Invalid Command Received.
	Command Received		1	Invalid Command Received.
6	Invalid Or Unsupported Data	Invalid Or Unsupported Data Received.	0	No Invalid Data Received.
	Received		1	Invalid Data Received.
5	Packet Error Check	Packet Error Check Failed.	0	No Failure.
	Failed		1	Failure.
4	Memory Fault	Memory Fault Detected.	0	No Fault.
	Detected	-	1	Fault.
1	Other Communication	A communication fault other than the ones listed in	0	No Fault.
	Fault	this table has occurred.	1	Fault.
0	Memory Or Logic	Other Memory Or Logic Fault has occurred.	0	No Fault.
	Fault		1	Fault.

READ_VIN (0x88)

Description: Returns the measured input voltage.

Bit	Description	Format	Unit
15:0	Returns the input voltage reading.	Linear	V

READ_VOUT (0x8B)

Description: Returns the measured output voltage.

Bit	Description	Format	Unit
15:0	Returns the measured output voltage.	Vout Mode	V
		Unsigned	

READ_IOUT (0x8C)

Description: Returns the measured output current.

Bit C	Description	Format	Unit
	The device will NACK this command when not enabled and not in the USER_CONFIG monitor mode.	Linear	Α

READ_TEMPERATURE_1 (0x8D)

Description: Returns the measured temperature (internal).

Bit	Description	Format	Unit
15:		Linear	°C

READ_TEMPERATURE_2 (0x8E)

Description: Returns the measured temperature (internal).

Bi	t	Description	Format	Unit
15	5:0		Linear	Ç

READ_DUTY_CYCLE (0x94)

Description: Returns the measured duty cycle in percent.

Bit	Description	Format	Unit
15:0	Returns the target duty cycle during the ENABLE state. The device will NACK this command	Linear	%
	when not enabled and not in the USER_CONFIG monitor mode.		



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

READ_FREQUENCY (0x95)

Description: Returns the measured SYNC frequency.

Bit	Description	Format	Unit
15:0	Returns the measured operating switch frequency. The device will NACK this command	Direct	kHz
	when not enabled and not in the USER_CONFIG monitor mode.		

PMBUS_REVISION (0x98)

Description: Returns the PMBus revision number for this device.

Bit	Function	Description	Value	Function	Description
7:4	Part I Revision	Part I Revision.	0x0	1.0	Part I Revision 1.0.
			0x1	1.1	Part I Revision 1.1.
			0x2	1.2	Part I Revision 1.2.
			0x3	1.3	Part I Revision 1.3.
3:0	Part II	Part II Revision.	0x0	1.0	Part II Revision 1.0.
	Revision		0x1	1.1	Part II Revision 1.1.
			0x2	1.2	Part II Revision 1.2.
			0x3	1.3	Part II Revision 1.3.

MFR_ID (0x99)

Description: Sets the Manufacturers ID

Bit	Description	Format
95:0	Maximum of 12 characters.	ASCII

MFR_MODEL (0x9A)

Description: Sets the MFR MODEL string.

Bit	Description	Format
159:0	Maximum of 20 characters.	ASCII

MFR_REVISION (0x9B)

Description: Sets the MFR revision string.

	Bit	Description	Format
ſ	95:0	Maximum of 12 characters.	ASCII

MFR_LOCATION (0x9C)

Description: Sets the MFR location string.

В	11 2	Description	Format
9	5:0	Maximum of 12 characters.	ASCII

MFR_DATE (0x9D)

Description: This command returns the date the regulator was manufactured.

	Bit	Description	Format
Г	95:0	Maximum of 12 characters.	ASCII

MFR_SERIAL (0x9E)

Description: This command returns a string of 13 characters and numbers that provides a unique identification of the regulator.

	Bit	Description	Format
ſ	159:0	Maximum of 20 characters.	ASCII

USER_DATA_00 (0xB0)

Description: User data



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Description	Format
127:0	16 bytes of user data.	ASCII

MFR_VIN_OV_WARN_RESPONSE (0xC4)
Description: Input over voltage Warn response.

Bit	Function	Description	Value	Function	Description
7:6	Response		00	Ignore Fault	The PMBus device continues operation without interruption.
			01	Perform Retries while Operating	The PMBus device continues operation for the delay time specified by bits [2:0] and the delay time unit specified for that particular fault. If the fault condition is still present at the end of the delay time, the unit responds as programmed in the Retry Setting (bits [5:3]).
			10	Disable and retry	The device shuts down (disables the output) and responds according to the retry setting in bits [5:3].
			11	Disable until Fault Cleared	A fault can cleared in several ways: The bit is individually cleared, The device receives a CLEAR_FAULTS command, a RESET signal (if one exists) is asserted, the output is commanded through the CTRL pin, the OPERATION command, or the combined action of the CTRL pin and OPERATION command, to turn off and then to turn back on, or Bias power is removed from the PMBus device.
5:3	Retries		000	Do Not Retry	A zero value for the Retry Setting means that the unit does not attempt to restart. The output remains disabled until the fault is cleared (Section 10.7).
			001	Retry Once	The PMBus device attempts to restart 1 time. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			010	Retry Twice	The PMBus device attempts to restart 2 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.



 BMR491 series DC-DC Converters
 28701-BMR491 05
 Rev B
 March 2022

 Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)
 © Flex

Bit	Function	Description	Value	Function	Description
			011	Retry 3 times	The PMBus device attempts to restart 3 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			100	Retry 4 times	The PMBus device attempts to restart 4 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			101	Retry 5 times	The PMBus device attempts to restart 5 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			110	Retry 6 times	The PMBus device attempts to restart 6 times. If the device fails to restart, it disables the output and remains off until the fault is cleared as described in Section 10.7. The time between the start of each attempt to restart is set by the value in bits [2:] along with the delay time unit specified for that particular fault.
			111	Retry Continuously	The PMBus device attempts to restart continuously, without limitation, until it is commanded OFF (by the CONTROL pin or OPERATION command or both), bias power is removed, or another fault condition causes the unit to shut down.
2:0	Retry Time and Delay Time	Number of delay time units. Used for either the amount of time the device is to continue operating after a fault is detected or for the amount of time between attempts to restart. The time unit is set in register 0xD2.	0 1 2 3 4 5 6 7	1 2 4 8 16 32 64 128	

MFR_CONFIG_UNUSED_PINS (0xC5)

Description: Define if pins are used (0) or unused (1). MSB defines if unused pins should be configured as input (0) or output low(1). If an unused pin is defined as input the pin must be grounded. If an unused pin is not grounded it should be defined as output low (mainly for backward compatibility).



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Mfr. FAULT2_CON input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. 1	
FIG an unused pin is not grounded it should be defined as output low. If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded, if an unused pin is not grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. Define if pin is used or unused. If an unused pin is not grounded it should be defined as output low. Define if pin is used or unused. If an unused pin is not grounded it should be defined as output low. Define if pin is used or unused. If an unused pin is not grounded it should be defined as output low. Define if pin is used or unused. If an unused pin is not grounded it should be defined as output low. Define if pin is used or unused. If unused pin is not grounded it should be defined as output low. Define	
Mfr. TMS_CONFIG If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. 1	
TMS_CONFIG input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded if an unused pin is not grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is not grounded, if an unused pin is not grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined a	
Mfr. If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined aso	
TDI_CONFIG input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. 1	
Mfr. TDO_CONFIG If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low.	
an unused pin is not grounded it should be defined as output low. If an unused pin is lot grounded, If an unused pin is defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is defined as output low. If an unused pin is not grounded, If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is output low. If an unused pin is output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is output low. If an unused pin is unused with this command overrides other configurations. If an unused pin is not grounded it should be defined as output low. If an unused pin is unused with this command overrides other configurations. If an unused pin is not grounded it should be defined as output low. If an unus	
Mfr. DPWM3B_CO If an unused pin is defined as input the pin must be grounded, If should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded, If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded, If an unused pin is not grounded, If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded, If an unused pin is not grounded, If an unused pin is not grounded, If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is not grounded it should be defined as output low. If an unused pin is unused. If an unused pin is unused with this command overrides other configurations. If an unused pin is unused with this command overrides other configurations. If an unused pin is unused with this command overrides other configurations. If an unused pin is unused pin is unused. If an unused pin is unused pin is unused. If an unused pin is unused pin is unused. If an unused pin i	
NFIG an unused pin is not grounded it should be defined as output low. 10 Mfr. DPWM3A_CO Input the pin must be grounded, If an unused pin is not grounded, If an unused pin is not grounded it should be defined as output low. 9 Mfr. If an unused pin is defined as Input the pin must be grounded, If an unused pin is not grounded it should be defined as output low. 8 Mfr. If an unused pin is not grounded it should be defined as output low. 8 Mfr. If an unused pin is defined as Input the pin must be grounded, If an unused pin is not grounded it should be defined as output low. 7 Mfr. Mfr. Define if pin is used or unused. 8 Mfr. Mfr. Define if pin is used or unused. 9 Mfr. Mfr. Define if pin is used or unused. 1 OUTPUT LOW 2 INPUT 1 OUTPUT LOW 2 INPUT 1 OUTPUT LOW 3 INPUT 4 OUTPUT LOW 5 INPUT 1 OUTPUT LOW 1 OUTPUT LOW 1 OUTPUT LOW 2 INPUT 4 OUTPUT LOW 5 INPUT 1 OUTPUT LOW 5 INPUT 1 OUTPUT LOW 5 INPUT 1 OUTPUT LOW 6 INPUT 1 OUTPUT LOW 8 INPUT 1 OUTPUT LOW 8 INPUT 1 OUTPUT LOW 9 INPUT 1 OUTPUT LOW	
Mfr. DPWM3A_CO If an unused pin is defined as input the pin must be grounded, if an unused pin is not grounded it should be defined as output low.	
NFIG an unused pin is not grounded it should be defined as output low. 9	
DPWM2B_CO NFIG	
NFIG an unused pin is not grounded it should be defined as output low. 8	
ADC_EXT_TR IG_CONFIG input the pin must be grounded, if an unused pin is not grounded it should be defined as output low. 7	
IG_CONFIG an unused pin is not grounded it should be defined as output low. 7	
FAULT2_UTIL IZATION Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. TMS_UTILIZA Setting a pin to unused. TION Setting a pin to unused. Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. TDI_UTILIZAT Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. TDI_UTILIZAT Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. TDO_UTILIZA Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. TION Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. UNUSED UNUSED UNUSED	
IZATION command overrides other configurations.	
TMS_UTILIZA TION Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. TDI_UTILIZAT command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. TDO_UTILIZA Setting a pin to unused with this command overrides other configurations. Mfr. Mfr. Define if pin is used or unused. UNUSED USED UNUSED	
TION command overrides other configurations. 5 Mfr. Mfr. Define if pin is used or unused. TDI_UTILIZAT Setting a pin to unused with this command overrides other configurations. 4 Mfr. Mfr. Define if pin is used or unused. TDO_UTILIZA Setting a pin to unused with this command overrides other configurations. 3 Mfr. Mfr. Define if pin is used or unused. UNUSED 3 Mfr. Mfr. Define if pin is used or unused. UNUSED	
5 Mfr. Mfr. TDI_UTILIZAT ION Setting a pin to unused with this command overrides other configurations. 4 Mfr. Mfr. TDO_UTILIZA TION Define if pin is used or unused. Setting a pin to unused. O USED UNUSED O USED	
ION command overrides other configurations. 4 Mfr. Mfr. Define if pin is used or unused. TDO_UTILIZA Setting a pin to unused with this command overrides other configurations. 3 Mfr. Mfr. Define if pin is used or unused. 0 USED	
TDO_UTILIZA Setting a pin to unused with this command overrides other configurations. 3 Mfr. Mfr. Define if pin is used or unused. 0 USED	
TION command overrides other configurations. 3 Mfr. Mfr. Define if pin is used or unused. 0 USED	
	_
DPWM3B_UTI	
2 Mfr. Mfr. Define if pin is used or unused. 0 USED	
DPWM3A_UTI Setting a pin to unused with this 1 UNUSED command overrides other configurations.	
1 Mfr. Mfr. Define if pin is used or unused. 0 USED	
DPWM2B_UTI Setting a pin to unused with this LIZATION command overrides other configurations.	
0 USED	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
	Mfr. ADC_EXT_TR IG_UTILIZATI ON	Define if pin is used or unused. Setting a pin to unused with this command overrides other configurations.	1	UNUSED	

MFR_RC_LEVEL (0xC6)

Description: Set the Remote control threshold when connected to AD03

Bit	Description	Format	Unit
7:0	Sets the level for triggering the Remote control.	Fixed Point	V
		Unsigned	

MFR_KS_PRETRIG (0xC7)

Description: Value sets the time for pre-trigger a kickstart pulse. Value=0 equals approximately 20us, each unit adds 450ns to this value

Bit	Description	Format	Unit
7:0	Sets the time for pre-trigger a kickstart pulse. Value=0 equals approximately 20us, each unit	Fixed Point	us
	adds 450ns to this value	Unsigned	

MFR_FAST_VIN_OFF_OFFSET (0xC8)

Description: Adds an offset to the fast VinOff criteria. The offset value is referenced to VinOff value. This is to shut down the unit in a controlled fashion when Vin is falling fast.

Bit	Description	Format	Unit
7:0	Adds an offset to the fast VinOff criteria.	Fixed Point	V
		Unsigned	

MFR_PGOOD_POLARITY (0xD0)

Description: Power good polarity (1:active high; 0: active low).

Bit	Description	Value	Function	Description
7:0	Power good polarity (1:active high; 0: active low).	0x00	Active Low	
		0x01	Active High	

MFR_FAST_OCP_CFG (0xD1)

Description: Set the fast OCP threshold

E	3it	Function	Description	Format	Unit
1	12:8	OCP samples	Sets the Number of over current samples before trigger the OCP.	Integer	sampl
				Unsigned	es
6	6:0	OCP level	Sets the level for triggering the fast OCP, resolution is in 128 divisions of 2.5V referenced to the maximum readout current.	Integer Unsigned	level
			2.57 referenced to the maximum readout current.	Unsigned	

Bit	Function	Description	Value	Function	Description
7	Enable/Disabl	Enable or disable Fast OCP	0	Disable	Disables Fast OCP
	е		1	Enable	Enables Fast OCP

MFR_RESPONSE_UNIT_CFG (0xD2)

Description: Defines the basic units 1ms, 10ms, 100ms or 1 sec for each of the four basic responses Vout, Vin, lout and Temperature. The Configured time is calculated as: Configured time = (Retry Time and Delay Time value in specific Fault response) x (unit in 0xD2)

Bit	Function	Description	Value	Function	Description
7:6	VOUT		0	1 ms/unit	
	response		1	10 ms/unit	
	delay unit		2	100 ms/unit	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
		Set the fault response delay unit according to configured delay time for VOUT_OV_FAULT_RESPONSE and VOUT_UV_FAULT_RESPONSE.	3	1 s/unit	
5:4	Vin response	Set the fault response delay unit	0	1 ms/unit	
	delay unit	according to configured delay time	1	10 ms/unit	
		for VIN_OV_FAULT_RESPONSE	2	100 ms/unit	
		and VIN_UV_FAULT_RESPONSE.	3	1 s/unit	
3:2	IOUT	Set the fault response delay unit	0	1 ms/unit	
	response	according to configured delay time	1	10 ms/unit	
	delay unit	for	2	100 ms/unit	
		IOUT_OC_FAULT_RESPONSE and IOUT_OC_FAULT_RESPONSE.	3	1 s/unit	
1:0	Temperature	Set the fault response delay unit	0	1 ms/unit	
	response	according to configured delay time	1	10 ms/unit	
	delay unit	for OT_FAULT_RESPONSE and	2	100 ms/unit	
		UT_FAULT_RESPONSE.	3	1 s/unit	

MFR_VIN_SCALE_MONITOR (0xD3)
Description: Vin Scale Monitor at ON and OFF.

Bit	Function	Description	Format
31:16	Mfr. Vin Scale	Trimmed offset at ON	Byte Array
	Monitor on		
15:0	Mfr. Vin Scale Monitor Off	Trimmed Vin Scale at OFF	Byte Array

MFR_PREBIAS_DVDT_CFG (0xD4)
Description: Mfr. prebias dV/dt configuration

Bit	Function	Description	Format	Unit
63:48	Mfr. Maximum allowable positive dVin/dt	This value state the max positive Vin change limit to execute a pre-bias start.	Fixed Point Signed	V/ms
47:32	Mfr. Maximum allowable negative dVin/dt	This value state the max negative Vin change limit to execute a pre-bias start.	Fixed Point Signed	V/ms
31:16	Mfr. Maximum allowable positive dVout/dt	This value state the max positive Vout change limit to execute a pre-bias start.	Fixed Point Signed	V/ms
15:0	Mfr. Maximum allowable negative dVout/dt	This value state the max negative Vout change limit to execute a pre-bias start.	Fixed Point Signed	V/ms

MFR_FILTER_SELECT (0xD5)
Description: Filter coefficient selection

Bit	Description	Format
7:0	Filter coefficient selection with byte 1: 0 = Vout, 1 = lout, VFF = 2	Integer Unsigned



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

MFR_READ_EVENT (0xD7)
Description: The command is prepared for reading the index that was written to MFR_EVENT_INDEX, is read as a 23-byte block. See MFR_EVENT_INDEX command for more details.

Bit	Function	Description	Format	Unit
183:1 68	Temperature	Temperature	Linear	°C
167:1 52	Load Current	Load current.	Linear	Α
151:1 36	Output Voltage	Output voltage.	Vout Mode Unsigned	V
135:1 20	Input Voltage	Input voltage.	Linear	V
119:1 12	Manufacturer Specific Status Byte	Manufacturer specific status byte.	Byte Array	
111:1 04	Status Other	Status other.	Byte Array	
47:16	EVENT Timestamp	Timestamp 100 ms resolution < 13.6 years.	Integer Unsigned	
15:0	Event ID	Event id < 2^16.	Integer Unsigned	

Bit	Function	Description	Value	Description
103	Invalid Or Unsupported	Invalid Or Unsupported Command Received.	0	No Invalid Command Received.
	Command Received		1	Invalid Command
				Received.
102	Invalid Or	Invalid Or Unsupported Data Received.	0	No Invalid Data
	Unsupported Data			Received.
	Received		1	Invalid Data Received.
101	Packet Error Check	Packet Error Check Failed.	0	No Failure.
	Failed		1	Failure.
100	Memory Fault	Memory Fault Detected.	0	No Fault.
	Detected		1	Fault.
97	Other Communication	A communication fault other than the ones listed in	0	No Fault.
	Fault	this table has occurred.	1	Fault.
96	Memory Or Logic	Other Memory Or Logic Fault has occurred.	0	No Fault.
	Fault		1	Fault.
95	Overtemperature	Overtemperature Fault.	0	No Fault.
	Fault		1	Fault.
94	Overtemperature	Overtemperature Warning.	0	No Warning.
	Warning		1	Warning.
93	Undertemperature	Undertemperature Warning.	0	No Warning.
	Warning		1	Warning.
92	Undertemerature	Undertemperature Fault.	0	No Fault.
	Fault	·	1	Fault.
87	Vin Overvoltage Fault	Vin Overvoltage Fault.	0	No Fault.
			1	Fault.
86	Vin Overvoltage	VIN Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
85	Vin Undervoltage	Vin Undervoltage Warning.	0	No Warning.
	Warning		1	Warning.
84	Vin Undervoltage	Vin Undervoltage Fault.	0	No Fault.
	Fault	-	1	Fault.
83	Insufficient Vin	Asserted when either the input voltage has never	0	No Insuffient VIN
		exceeded the input turn-on threshold Vin-On, or if		encountered yet.
		the unit did start, the input voltage decreased below	1	Insufficient Unit is off.
		the turn-off threshold.		
79	lout Overcurrent Fault	lout Overcurrent Fault.	0	No Fault.
			1	Fault.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Description
78	Iout Overcurrent And	lout Overcurrent and low voltage fault.	0	No Fault.
	Low Voltage Fault		1	Fault.
77	Iout Over Current	lout Overcurrent Warning.	0	No Warning.
	Warning		1	Warning.
76	Iout Undercurrent	lout Undercurrent Fault.	0	No Fault.
	Fault		1	Fault.
71	Vout Overvoltage	Vout Overvoltage Fault.	0	No Fault.
	Fault		1	Fault.
70	Vout Overvoltage	Vout Overvoltage Warning.	0	No Warning.
	Warning		1	Warning.
69	Vout Undervoltage	Vout Undervoltage Warning.	0	No Warning.
	Warning		1	Warning.
68	Vout Undervoltage	Vout Undervoltage Fault.	0	No Fault.
	Fault		1	Fault.
67	Vout Max Warning	Vout Max Warning (An attempt has been made to	0	No Warning.
		set the output voltage to value higher than allowed by the Vout Max command (Section 13.5).	1	Warning.
66	Ton Max Fault	Ton-Max Fault.	0	No Fault
			1	Fault.
65	Toff Max Warning	Toff Max Warning.	0	No Warning.
		, and the second	1	Warning.
63	Vout	An output voltage fault or warning has occurred.	0	No fault
			1	Fault
62	lout/Pout	An output current or output power fault or warning	0	No Fault.
		has occurred.	1	Fault.
61	Input	An input voltage, input current, or input power fault	0	No Fault.
	· ·	or warning has occurred.	1	Fault.
59	Power-Good	The Power-Good signal, if present, is negated.	0	No Fault.
			1	Fault.
54	Off	This bit is asserted if the unit is not providing power	0	No fault
		to the output, regardless of the reason, including simply not being enabled.	1	Fault
53	Vout Overvoltage	An output overvoltage fault has occurred.	0	No Fault.
	Fault		1	Fault.
52	lout Overcurrent Fault	An output overcurrent fault has occurred.	0	No Fault.
			1	Fault.
51	Vin Undervoltage	An input undervoltage fault has occurred.	0	No Fault.
	Fault	1	1	Fault.
50	Temperature	A temperature fault or warning has occurred.	0	No Fault.
	1	,	1	Fault.
49	Communication/Logic	A communications, memory or logic fault has	0	No fault.
	2 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	occurred.	1	Fault.
48	None of the Above	A fault or warning not listed in bits [7:1] has occured.	0	No fault.
10	1.5.10 01 110 7 150 70	Trical of marring flot noted in bite [1.1] flab bootiful.	1	Fault.

MFR_TEMP_COMPENSATION (0xD8)
Description: Mfr. temperature compensation parameter

Bit	Function	Description	Format
63:56	Mfr. Temperature compensation deadtime added 2	MFR_TEMP_COMPENSATION_DT_ADD_2 defines the additional dead time used at temperature levels below temperature threshold 2. Unit is nano seconds. It's an unsigned byte, meaning the value can be 0-255.	Byte Array
55:48	Mfr. Temperature compensation deadtime hysteresis 2	MFR_TEMP_COMPENSATION_DT_HYS_2 defines a level for hysteresis i.e. temperature must rise over this level again before dead times are changed.	Byte Array



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Format
47:40	Mfr. Temperature compensation deadtime threshold 2	It is a signed byte with the temperature as an integer (°C). This defines a second temperature level for temperature compensation of dead times.	Byte Array
39:32	Mfr. Temperature compensation deadtime added 1	MFR_TEMP_COMPENSATION_DT_ADD_1 defines the additional dead time used at temperature levels below temperature threshold 1. Unit is nano seconds. It's an unsigned byte, meaning the value can be 0-255.	Byte Array
31:24	Mfr. Temperature compensation deadtime hysteresis 1	MFR_TEMP_COMPENSATION_DT_HYS_1 defines a level for hysteresis i.e. temperature must rise over this level again before dead times are changed.	Byte Array
23:16	Mfr. Temperature compensation deadtime threshold 1	It is a signed byte with the temperature as an integer (°C). This defines the first temperature level for temperature compensation of dead times.	Byte Array
15:8	Mfr. Temperature compensation EDAC slope	The second byte, TEMPERATURE_COMPENSATION_EDAC_SLOPE, sets the slope of the temperature compensation taking place above the EDAC_TEMP_COMP_TRESHOLD level. This is a signed byte in Q8 format. The unit is LSB/°C/256. Example: First byte represents 40°C so EDAC_TEMP_COMP_TRESHOLD = 40. Compensate EDAC with 25mV from 40°C to 120°C. The resolution is 1.6V/1024 = 1.56mV / LSB. To compensate for the 25mV droop over 80°C we need to add 25/80 = 0.3125mV/°C = 0.3125/1.56 LSB/°C = 0.2 LSB/°C to the reference DAC. 0.2*256 = 51 so EDAC_TEMP_COMP_SLOPE = 51	Byte Array
7:0	Mfr. Temperature compensation EDAC threshold	The first byte in the block is EDAC_TEMP_COMP_TRESHOLD. This defines the level where the temperature compensation shall begin. It is a signed byte with the temperature as an integer (°C). Example: First byte represents 40°C so EDAC_TEMP_COMP_TRESHOLD = 40. Compensate EDAC with 25mV from 40°C to 120°C. The resolution is 1.6V/1024 = 1.56mV / LSB. To compensate for the 25mV droop over 80°C we need to add 25/80 = 0.3125mV/°C = 0.3125/1.56 LSB/°C = 0.2 LSB/°C to the reference DAC. 0.2*256 = 51 so EDAC_TEMP_COMP_SLOPE = 51	Byte Array

MFR_SET_ROM_MODE (0xD9)

Description: Sends system into ROM mode. Issue this command before attempting to download new firmware to the controller.

Bit	Description	Format
31:0	Sends system into ROM mode. Issue this command before attempting to download new firmware to the controller.	ASCII

MFR_ISHARE_THRESHOLD (0xDA)
Description: Mfr. current sharing threshold level

Bit	Function	Description	Format	Unit
31:24	Trim limit	Set the trim limit for output voltage. This limit the output voltage to be trimmed to a certain level to prevent max-trim if the controller sense erroneous current.	Integer Unsigned	1.7mv /LSB
15:8	Positive threshold level	Set the threshold level where the output voltage is incremental trimmed to achieve current balance between paralleled devices. The threshold level indicates at what current level the output voltage start increasing. The hysteresis where no current balancing through CTRL pin is done is between the positive and negative threshold levels.	Integer Unsigned	~50m A/LS B



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Format	Unit
7:0	Negative threshold level	Set the threshold level where the output voltage is decremental trimmed to achieve current balance between paralleled devices. The threshold level indicates at what current level the output voltage start decreasing. The hysteresis where no current balancing through CTRL pin is done is between the positive and negative threshold levels.	Integer Unsigned	~50m A/LS B

Bit	Function	Description	Value	Function	Description
56	Enable/Disabl	Enable or disable Active Current	0	Disable	Disables active current share
	е	share	1	Enable	Enables active current share

MFR_EVENT_INDEX (0xDB)

Description: Writing to this command sets current index to read by the READ_EVENT command. It also provides means to clear the fault section of the event recorder and finding the newest event (equal to number of events stored in the event recorder). 0–47: same value as written. 254: Index of newest record in the life cycle section of the event recorder. 255: Index of newest record in the fault section of the event recorder is cleared.

Bit	Description	Format
7:0	Offset value 0-47. 0 is always the oldest event in the fault section of the event recorder. 24 is the oldest event in the life cycle section.	Integer Unsigned

MFR_SELECT_TEMPERATURE_SENSOR (0xDC)

Description: Select which temperature sensor, internal one or external remote temperature sensor, is used.

Bit	Description	Value	Function	Description
0	Select which temperature sensor, internal one or external remote temperature sensor, is used.	0	Internal IC Sensor	Internal IC temperature sensor selected.
		1	External Sensor	External remote temperature sensor selected.

MFR_VIN_OFFSET (0xDD)

Description: Vin offset at ON and OFF.

Bit	Function	Description	Format
31:16	Mfr. Vin Offset on	Trimmed offset at ON	Byte Array
15:0	Mfr. Vin Offset off	Trimmed offset at OFF	Byte Array

MFR_VOUT_OFFSET_MONITOR (0xDE)

Description: Output voltage trim

Bit	Description	Format	Unit
15:0	Output voltage trim	Vout Mode	V
		Signed	

MFR_SPECIAL_OPTIONS (0xE0)

Description: Special option configuration. Bit 0 - Reserved Bit 1 - Reserved Bit 2 - DBV: 0:Disabled 1:Enabled Bit 3 - ART/DLC: 0:Disabled 1:Enabled Bit 5 - DLS: 0:Linear droop 1:Non-linear droop Bit 6 - HRR: 0:Disabled 1:Enabled Bit 7 - Require PEC

Bit	Function	Description	Value	Function	Description
7	Require	Enables/Disables Packet Error	0		Disabled
	Packet Error Check	Check. PEC required to increase communication robustness	1		Enabled
6			0		Disabled



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
	Enable HRR, (Hybrid Regulated Ratio)	Enables the HRR, Hybrid Regulated Ratio. This enables the unit to have a duty cycle head room where max duty cycle is avoided.§ The output voltage will follow the input voltage ratio, below the HRR threshold set in command VIN_UV_WARN_LIMIT (0x58).	1		Enabled
5	DLS slope	Setup how the slope of the Vout	0	Linear droop	Configured with linear droop
	configuration	droop is configured, with linear or non-linear droop.	1	Non-linear droop	Configured with non-linear droop
3	Enable	Enables/Disables ART/DLC.	0		Disabled
	ART/DLC, (Adaptive Ramp-up Time, Dynamic Load Compensation)		1		Enabled
2	Enable DBV,	Enables/Disables DBV.	0		Disabled
	(Dynamic Bus Voltage)		1		Enabled

MFR_TEMP_OFFSET_INT (0xE1)

Description: Internal temperature offset.

Bit	Description	Format	Unit
15:0	Integer [0.1 °C]	Direct	°C

MFR_REMOTE_TEMP_CAL (0xE2)

Description: External temperature offset and slope.

Bit	Description	Format
31:0	T(C) = slope x ADC(v) + offset, Byte 0 byte 1: offset, Byte 2 byte 3: slope.	Byte Array

MFR_REMOTE_CTRL (0xE3)

Description: Primary Remote Control (RC pin) configuration.

Bit	Function	Description	Value	Function	Description
4	CTRL pin		0	OR'ed w/	PriRC is OR:ed with
	Interaction			CTRL pin	OPERATION and CTRL pin.
			1	AND'ed w/	PriRC is AND:ed with
				CTRL pin	OPERATION and CTRL pin.
2	Remote CTRL	PriRC Pin Enable: 0:Disabled	0	Disabled	
	pin Enabled	1:Enabled	1	Enabled	
1	Remote CTRL	PriRC Polarity: 0:Active High	0	Active Low	
	pin Polarity	1:Active Low	1	Active High	
0	Remote Ctrl	Primary Remote Control (RC Pin)	0	Soft Stop	Pre-configured ramp down time
	On/Off	configuration. Bit 0 - PriRC			set TOFF_FALL.
		Disable Mode: 0:Soft-Stop	1	Quick Off	Disables the output immediately.
		1:Quick Off			

MFR_VFF_PARAMS (0xE6)

Description: This function is dependent of voltage levels internal to the control IC. It is not recommended to change the parameters Extra compensation, Vin stable threshold and Reference DAC threshold.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Format
31:24	Extra compensation threshold	Set a threshold where extra compensation of the VFF response is needed. The extra compensation cut the duty cycle with 50% during one period. Too low threshold creates false triggering with noisy output voltage.	Integer Unsigned
23:16	Vin stable threshold	Set a threshold where the input voltage is considered stable and a ready for new VFF response	Integer Unsigned
15:8	Reference DAC fast recover threshold	Below this threshold the reference DAC is adjusted one LSB each interrupt (~27us) otherwise it is adjusted 3 LSB.	Integer Unsigned

Bit	t Function	Description	Value	Description
0	Enable VFF, (Voltage		0	Disabled
	Feed Forward)		1	Enabled

MFR_TEMP_COEFF (0xE7)
Description: Temperature coefficient

Bit	Function	Description	Format	Unit
47:40	Mfr. Temp level 2 Comp Factor	The temperature compensation factor for current sense above temperature level 2, used to compensate IOUT_READ value.	Integer Unsigned	
39:32	Mfr. Temp level 2 Comp	The second temperature level used to compensate IOUT_READ.	Integer Unsigned	°C
31:24	Mfr. Temp level 1 Comp Factor	The temperature compensation factor for current sense above temperature level 1, used to compensate IOUT_READ value.	Integer Unsigned	
23:16	Mfr. Temp level 1 Comp	The first temperature level used to compensate IOUT_READ.	Integer Unsigned	°C
15:0	Mfr. Temp Coeff Cu	The temperature coefficient for copper.	Direct	

MFR_FILTER_COEFF (0xE8)
Description: Mfr. filter coefficients

Bit	Function	Description	Format
215:2 11	CLA scale	Filter Misc Gain Coefficient: CLA SCALE	Integer Unsigned
210:2 08	yn scale	Filter Misc Gain Coefficient: YN SCALE	Integer Unsigned
207:1 92	kcomp	Filter Misc Gain Coefficient: KCOMP	Integer Unsigned
191:1 76	KD alpha [1]	Filter Coefficient: KD alpha [1]	Integer Unsigned
175:1 60	KD alpha [0]	Filter Coefficient: KD alpha [0]	Integer Unsigned
159:1 44	KD coef [2]	Filter Coefficient: KD coef [2]	Integer Unsigned
143:1 28	KD coef [1]	Filter Coefficient: KD coef [1]	Integer Unsigned
127:1 12	KD coef [0]	Filter Coefficient: KD coef [0]	Integer Unsigned
111:9 6	KI coef [3]	Filter Coefficient: KI coef [3]	Integer Unsigned
95:80	KI coef [2]	Filter Coefficient: KI coef [2]	Integer Unsigned
79:64	KI coef [1]	Filter Coefficient: KI coef [1]	Integer Unsigned
63:48	KI coef [0]	Filter Coefficient: KI coef [0]	Integer Unsigned
47:32	KP coef [2]	Filter Coefficient: KP coef [2]	Integer Unsigned
31:16	KP coef [1]	Filter Coefficient: KP coef [1]	Integer Unsigned
15:0	KP coef [0]	Filter Coefficient: KP coef [0]	Integer Unsigned



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

MFR_FILTER_NLR_GAIN (0xE9) Description: Mfr. filter nlrgains

Bit	Function	Description	Format
121:1	AFE Gain	AFE gain	Integer Unsigned
20			
95:80	limit5	Filter Coefficient: LIMIT 5	Integer Unsigned
79:64	limit4	Filter Coefficient: LIMIT 4	Integer Unsigned
63:48	limit3	Filter Coefficient: LIMIT 3	Integer Unsigned
47:32	limit2	Filter Coefficient: LIMIT 2	Integer Unsigned
31:16	limit1	Filter Coefficient: LIMIT 1	Integer Unsigned
15:0	limit0	Filter Coefficient: LIMIT 0	Integer Unsigned

Bit	Function	Description	Value	Function	Description
127:1	Bin	Bin Configuration (6)	0	Coef [0]	
25	Configuration		1	Coef [1]	
	(6)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
124	Bin Alpha (6)	Bin Alpha (6)			
123	NL Mode	NL Mode			
122	Auto Gear Shift	Auto Gear Shift			
119:1	Bin	Bin Configuration (4)	0	Coef [0]	
17	Configuration		1	Coef [1]	
	(4)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
116	Bin Alpha (4)	Bin Alpha (4)			
115:1	Bin	Bin Configuration (5)	0	Coef [0]	
13	Configuration		1	Coef [1]	
	(5)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
112	Bin Alpha (5)	Bin Alpha (5)			
111:1	Bin	Bin Configuration (2)	0	Coef [0]	
09	Configuration		1	Coef [1]	
	(2)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
108	Bin Alpha (2)	Bin Alpha (2)			
107:1	Bin	Bin Configuration (3)	0	Coef [0]	
05	Configuration		1	Coef [1]	
	(3)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
104	Bin Alpha (3)	Bin Alpha (3)			
103:1	Bin	Bin Configuration (0)	0	Coef [0]	
01	Configuration		1	Coef [1]	
	(0)		2	Coef [2]	
			3	Coef [3]	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
100	Bin Alpha (0)	Bin Alpha (0)			
99:97	Bin	Bin Configuration (1)	0	Coef [0]	
	Configuration		1	Coef [1]	
	(1)		2	Coef [2]	
			3	Coef [3]	
			4	Coef [4]	
			5	Coef [5]	
			6	Coef [6]	
96	Bin Alpha (1)	Bin Alpha (1)			

MFR_MIN_DUTY (0xEB)
Description: Set the minimum duty cycle and minimum deadtime at min duty.

Bit	Function	Description	Format	Unit
15:8	Mfr. Min duty		Integer Unsigned	ns
7:0	Mfr. Minimum deadtime		Integer Unsigned	ns

MFR_ACTIVE_CLAMP (0xEC)

Description: Active clamp

Bit	Function	Description	Format	Unit
14:8	Mfr. pulse delay	Set the delay of the pulse to the active clamp.	Integer Unsigned	x4 ns
7:0	Mfr. pulse width	Set the pulse width to the active clamp.	Integer Unsigned	x4 ns

Bit	Function	Description	Value	Function	Description
15	Active Clamp	Set the mode of the active clamp,	0	1x frequency	Set 1x frequency inverted
	mode	1x frequency A and B output		inverted	
		inverted outputs phase/2x	1	2x frequency	Set2x frequency non-inverted
		frequency on A only non-inverted		non-inverted	·

MFR_OFFSET_ADDRESS (0xEE)

Description: Value (n) add an offset to the address on SA0 pin.

	Bit	Description	Format	Unit
	7:0		Integer Unsigned	n + SA0
L			Orisigned	0/10

MFR_DBV_CONFIG (0xEF)

Description: Configuration of Dynamic Bus Voltage.

Bit	Function	Description	Format	Unit
47:40	lout Level mid	lout level mid to high transition.	Fixed Point	Α
	to high		Unsigned	
39:32	lout Level high	lout level high to mid transition.	Fixed Point	Α
	to mid		Unsigned	
31:24	Output Voltage	Output Voltage Mid.	Fixed Point	V
	Mid		Unsigned	
23:16	lout Level low	lout level low to mid transition.	Fixed Point	Α
	to mid		Unsigned	
15:8	lout Level mid	lout level mid to low transition.	Fixed Point	Α
	to low		Unsigned	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Format	Unit
7:0	Output Voltage	Output Voltage Low.	Fixed Point	V
	Low		Unsigned	

MFR_DEBUG_BUFF (0xF0)

Description: Output contents in debug_buf.

Bit	Description	Format
63:0	Output contents in debug_buf.	Byte Array

MFR_SETUP_PASSWORD (0xF1)

Description: Once a valid new password is sent, the security is turned on.

Bit	Description	Format
95:0	A write is current password (6 bytes, default "00000000000") + new password (6 bytes) A read returns: 0x00000000000000000000000 if security is off 0x00000000000000000000001 if security is on 0x0000000000000000000000000000000000	ASCII

MFR_DISABLE_SECURITY_ONCE (0xF2)

Description: When security is on, this command is used to temporarily disable the security before the next power reset of the digital PWM controller so that a host can send any command that is either write-protected or sendbyte-protected based on a security bit mask. When security is off, this command will be NACKed.

Bit	Description	Format
47:0	A write is current password (after it was set up with MFR_SETUP_PASSWORD).	ASCII

MFR_SECURITY_BIT_MASK (0xF4)

Description: This command is used to individually enable or disable security feature for a write-protectable or sendbyte-protectable PMBUS command.

Bit	Description	Format
255:0	When protection is enabled for a PMBUS command and when security is on, the PMBUS	Byte Array
	command is write-protected or send- byte-protected.	

MFR_TRANSFORMER_TURN (0xF5)

Description: Transformer turn ratio.

Bit	Function	Description	Format
7:4	Mfr. Primary Turn	Number of turn on the primary side of transformer.	Integer Unsigned
3:0	Mfr. secondary Turn	Number of turn on the secondary side of transformer.	Integer Unsigned

MFR_OSC_TRIM (0xF6)

Description: Internal clock frequency trim value

Bit	Description	Format
7:0	Internal clock frequency trim value.	Integer Unsigned

MFR_DLC_CONFIG (0xF7)

Description: Configuration of Dynamic Load Compensation at start up.

Bit	Function	Description	Format	Unit
63:56	Ramp Factor 3, (K3)	Ramp factor for third limit. The value in Ramp Factor 3 is multiplied with the TON_RISE value, to calculate a new TON_RISE slope. The new calculated slope will immediately act as TON_RISE	Fixed Point Signed	



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Format	Unit
55:48	Third Limit	Third limit for adjustment. When the capacitance estimation reaches over the third limit RAMP_FACTOR_3 is used and the PID setting in Bank 3 is chosen. To change PID settings in Bank 3, 0xD5 must be set to 0x03 after that 0xE8 and 0xE9 can be adjusted.	Fixed Point Signed	mF
47:40	Ramp Factor 2, (K2)	Ramp factor for second limit. The value in Ramp Factor 2 is multiplied with the TON_RISE value, to calculate a new TON_RISE slope. The new calculated slope will immediately act as TON_RISE	Fixed Point Signed	
39:32	Second Limit	Second limit for adjustment. When the capacitance estimation reach over the second limit RAMP_FACTOR_2 is used.	Fixed Point Signed	mF
31:24	Ramp Factor 1, (K1)	Ramp factor for first limit. The value in Ramp Factor 1 is multiplied with the TON_RISE value, to calculate a new TON_RISE slope. The new calculated slope will immediately act as TON_RISE	Fixed Point Signed	
23:16	First Limit	First limit for adjustment. When the capacitance estimation reach over the first limit RAMP_FACTOR_1 is used.	Fixed Point Signed	mF
15:8	Voltage End	Set the end level on the Vout ramp ON for the output cap estimation measurement.	Fixed Point Signed	V
7:0	Voltage Start	Set the start and end levels on the Vout ramp ON for the output cap estimation measurement.	Fixed Point Signed	V

MFR_ILIM_SOFTSTART (0xF8)

Description: During soft start ILIM is more than the user setting. The value set in this command is in % added ILIM.

Bit	Description	Format	Unit
7:0		Integer	%
		Unsigned	

MFR_MULTI_PIN_CONFIG (0xF9)

Description: The MFR_MULTI_PIN_CONFIG command can be re-configured to enable or disable different functions and set the pin configuration of the digital header (K400) (pin 6-15).

Bit	Function	Description	Value	Function	Description
10-15		Reserved			
9	SALERT as	SALERT pin shall be used for PG	0	Standard	
	PG	signal	1	operation SALERT as PG	Setting this bit will inhibit PG on pin 21 (TCK)
8	CTRL_CS as PG	CTRL_CS pin shall be used for PG signal	0	Standard operation	
			1	CTRL_CS as PG	Setting this bit will inhibit PG on pin 21 (TCK)
7	Or PG with SALERT	These bits enable or disable the PG with Salert.	0	Disabled	
	SALERI	ro with Saleit.	1	PG with SALERT	PG shall include SALERT status i.e. "power not good" whenever SALERT is set, regardless of Vout.
6:5	Sync Mode	These bits enable or disable the	00	Disabled	
		SYNC function. When enabling choose between SYNC OUT or SYNC IN.	01	Sync in	When the product is configured to SYNC in it will synchronize its switching frequency to the product configured as SYNC out. The switching phases can be spread individually using the INTERLEAVE command 0x37
			10	Sync out	When the product is configured to SYNC out it will send out a SYNC signal that BMR90 products can connect its SYNC in pin. Only 1 product i a group can be configured to SYNC out.



BMR491 series DC-DC Converters	28701-BMR491 05	Rev B	March 2022
Input 48-60 V, Output up to 1540 W (TDP) / 2450 W (peak power)	© Flex		

Bit	Function	Description	Value	Function	Description
3	SA1 as Sync	Change function of Pin 9 on the digital header (K400). This pin can be used as SA1 or SYNC in/out	0	SA1 normal	Pin 9 configured to set the PMBus address with a resistor connected to pin 9
			1	SA1 as Sync	Pin 9 configured to be used as SYNC input/output
2	Power Good	This bit enable or disable the	0	Disabled	
	Enable	Power Good function	1	Enabled	
1	Power Good Output	Two output options are available for Power Good output, it is	0	Push/Pull	Power Good configured Push/Pull
		Push/Pull or Open Drain	1	Open Drain	Power Good configured Open Drain
0	CTRL Internal	Using CTRL internal resistor can	0	Disabled	
	Resistor	be useful if no external pull up or pull down resistor exist or no Digital header (K400) is mounted.	1	Enabled	

MFR_ADDED_DROOP_DURING_RAMP (0xFC)

Description: Set an added droop during ramp.

Bit	Description	Format	Unit
15:0	Sets an added effective load line (V/I slope) for the rail in which the device is used, during	Linear	mV/A
	ramp up.		1

MFR_FIRMWARE_DATA (0xFD)

Description: This is a 20-byte block that contains device ID and versions of the firmware.

Bit		Description	Format
15	9:0	This is a 20-byte block that contains device ID and versions of the firmware.	Byte Array

MFR_RESTART (0xFE)

Description: Writing the string "ERIC" to this command code forces the unit to restart.

Bit	Description	Format
31:0		ASCII

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Flex:

BMR4913206/855 BMR4910202/853 BMR4913208/857 BMR4912511/858 BMR4910203/851 BMR4912510/871