

LX Series Lens Shields



Datasheet



The model LXS... Lens Shield is a replaceable protective cover for the lens of an LX Series sensor. The shield is made of 1.5 mm (0.06 inch) thick clear polycarbonate to protect the sensor from damage due to weld flash or impact.

Shield models are available for every sensor length (see chart below). The shields attach to the sensor with a pre-attached, adhesive-backed Neoprene foam gasket.

- 1.5 mm (0.06 inch) clear polycarbonate lens
- Neoprene foam gasket
- Easy to install
- Available in lengths to protect 3.5-inch, 6.5-inch, and 12.5-inch long light screen emitters and receivers.

Application Note: When shields are installed on both the emitter and receiver, excess gain is reduced by 36 percent and maximum operating range is reduced by 20 percent.

Sensor Length	Lens Shield Model Number	Part Number	Lens Shield Length
3.5 inches	LXS3	71351	3.87 inches
6.5 inches	LXS6	71352	6.87 inches
12.5 inches	LXS12	71353	12.87 inches

Installing the Lens Shield

Remove all dust, dirt, and oil from the metal surfaces on all four sides of the sensor lens using a mild detergent or window cleaner and a soft cloth. Also clean the sensor lens and the lens shield, if needed.

Avoid cleaning agents containing alcohol; they will damage the sensor's acrylic lens or the status indicators. If in doubt about the composition of a cleaning agent, test a small area of the acrylic sensor lens below the active lens area (at the bottom of the sensor, just above the cable connector) by applying the cleaning agent and allowing it to evaporate.

The foam gasket is pre-attached to the lens shield. Peel the paper backing from the foam gasket. Press one end of the lens shield to the bottom end of the sensor, just above the status indicators, and apply pressure, moving slowly to the top end. The width of the lens shield corresponds closely to the width of the sensor, so it is easy to keep it centered during mounting. Peel away the protective coating from the lens shield's outer surface.

Maintaining the Lens Shield

To prevent loss of excess gain, clean the shields when they become dirty. Remove dirt and/or oil from the front face of the shield using a mild detergent or window cleaner and a soft cloth. Avoid industrial cleaning agents or cleaning agents containing alcohol, as they may damage the shield material or the sensor.

Replacing the Lens Shield

Replace the shield when it becomes pitted or scratched, or excess gain will be decreased.

To remove, peel the lens shield away from the sensor starting at either end, and continuing to the opposite end. All or most of the gasket will remain attached to the sensor; peel the gasket material away. Clean the sensor and install the new lens shield as described in these instructions.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.



THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Banner Engineering:](#)

[LXS3](#) [LXS6](#) [LXS12](#) [LXS18](#) [LXS9](#)