

## TECHNICAL DATA

# Fluke 114 Electrical Multimeter



### Compact true-rms meter for electrical troubleshooting

The Fluke 114 is the troubleshooting tool for “go/no-go” testing. It includes a feature to prevent false readings caused by ghost voltage.

### Features

- AutoVolt: automatic ac/dc voltage selection
- Large white LED backlight to work in poorly lit areas
- Resistance and continuity
- Min/Max/Average to record signal fluctuations
- CAT III 600 V safety rated

### SAFETY RATING

**CAT III 600 V**

### BUILT TO LAST

**Three-year warranty**

### IDEAL FOR ELECTRICIANS AND CONTRACTORS

- Simple one-handed operation
- Automatic ac/dc voltage selection
- Holster with probe holders for easy test lead storage
- Large white LED backlit displaywarranty

## Specifications

Accuracy is specified for 1 year after calibration, at operating temperatures of 18 °C to 28 °C, with relative humidity at 0 % to 90 %. The accuracy specifications take the form of:  $\pm$  ( [ % of reading ] + [ counts ] )

General specifications			
Maximum voltage (between any terminal and earth ground)	600 V		
Safety	IEC 61010-1: Pollution Degree 2 IEC 61010-2-033: CAT III 600 V		
Display	Digital: 6,000 counts, updates 4/sec		
Bar graph	33 segments, updates 32/sec		
Operating temperature	-10 °C to + 50 °C		
Storage temperature	-40 °C to + 60 °C		
Battery	9 volt Alkaline, IEC 6LR61		
Battery life	400 hours typical, without backlight		
Accuracy specifications			
Measurement	Range	Resolution	Accuracy ± ([% of reading] + [counts])
DC millivolts	600.0 mV	0.1 mV	0.5 % + 2
DC volts	6.000 V	0.001 V	0.5 % + 2
	60.00 V	0.01 V	
	600.0 V	0.1 V	
Auto volts	600.0 V	0.1 V	2.0 % + 3 (dc, 45 Hz to 500 Hz) 4.0 % + 3 (500 Hz to 1 kHz)
AC millivolts <sup>1</sup> true-rms	600.0 V	0.1 V	1.0 % + 3 (dc, 45 Hz to 500 Hz) 2.0 % + 3 (500 Hz to 1 kHz)
AC volts <sup>1</sup> true-rms	6.000 V	0.001 V	1.0 % + 3 (45 Hz to 500 Hz) 2.0 % + 3 (500 Hz to 1 kHz)
	60.00 V	0.01 V	
	600.0 V	0.1 V	
Continuity	600 Ω	1 Ω	Beeper on < 20 Ω off > 250 Ω; detects opens or shorts of 500 μs or longer.
Ohms	600.0 Ω	0.1 Ω	0.9 % + 2
	6.000 kΩ	0.001 kΩ	0.9 % + 1
	60.00 kΩ	0.01 kΩ	0.9 % + 1
	600.0 kΩ	0.1 kΩ	0.9 % + 1
	6.000 MΩ	0.001 MΩ	0.9 % + 1
	40.00 MΩ	0.01 MΩ	1.5 % + 2

<sup>1</sup> All ac voltage ranges except Auto-V/LoZ are specified from 1 % to 100 % of range. Auto-V/LoZ is specified from 0.0 V. Because inputs below 1 % of range are not specified, it is normal for this and other true-rms meters to display non-zero readings when the test leads are disconnected from a circuit or are shorted together. For volts, crest factor of  $\leq 3$  at 4000 counts, decreasing linearly to 1.5 at full scale. AC volts is ac-coupled. Auto-V LoZ, and ac mV are dc-coupled.

## Ordering information

**Fluke-114** Electrical Multimeter

### Included

TL75 Test Leads

Holster

User's manual

9 V battery (installed)

**Fluke.** *Keeping your world  
up and running.®*

### Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

### Fluke Europe B.V.

PO Box 1186, 5602 BD  
Eindhoven, The Netherlands

**Modification of this document is not  
permitted without written permission  
from Fluke Corporation.**

### For more information call:

In the U.S.A. (800) 443-5853 or

Fax (425) 446-5116

In Europe/M-East/Africa +31 (0)40 267 5100 or

Fax +31 (0)40 267 5222

In Canada (800)-36-FLUKE or

Fax (905) 890-6866

From other countries +1 (425) 446-5500 or

Fax +1 (425) 446-5116

Web access: <http://www.fluke.com>

©2006, 2020 Fluke Corporation.  
Specifications subject to change without notice.  
Printed in U.S.A. 10/2020 2634055c-en

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Fluke:

[FLUKE-114/CZWG](#) [FLUKE-114/R](#)