

DATASHEET

CC2725AC48TZL Conduction-Cooled, Wide-Output Range Rectifier

200-240V_{AC} Input; 2,725W-Capable; 48V_{DC} Default Output; RoHS Compliant



The CC2725AC48TZL rectifier has an extremely wide programmable output voltage capability. Featuring high-density, fully enclosed, conduction-cooled packaging, it is designed for minimal space utilization and is highly expandable for future growth. This standard rectifier incorporates both RS485 and I²C communications buses that allow it to be used in a broad range of applications. Feature-set flexibility makes this rectifier an excellent choice for applications requiring operation over a wide output-voltage range and conduction cooling.

Applications

Applications include: Wide Band Power Amplifier; Broadcast Systems; Lasers; Acoustic Noise Sensitive Systems; LED Signage.

Features

- Peak efficiency 95%
- Completely enclosed, conduction cooled
- Output constant power 2,725W from 58-50V_{DC}
- Output voltage programmable from 30V-58V_{DC}
- Remote ON/OFF control of the main output
- Comprehensive input, output and overtemp protection
- Power factor correction (meets EN/IEC 61000-3-2 and EN 60555-2 requirements)
- Redundant, parallel operation with active load sharing

- Redundant 5V Aux power
- Four front panel LED indicators
- Analog status signals
- Trim port to adjust Vo
- PMBus®-compliant I²C serial bus and RS485
- RoHS 6 compliant
- EN/IEC/UL60950-1 2nd edition (CB report)



Technical Specifications

Absolute Maximum Ratings

Stresses over the absolute maximum ratings can cause permanent damage to the device. These are absolute stress ratings only. Functional operation of the device is not implied at these or any other conditions over those given in the operations sections of the data sheet. Exposure to absolute maximum ratings for extended periods can adversely affect the device

| Parameter | Symbol | Min | Max | Unit |
|----------------------------------------|-----------------|------|-----------------|----------|
| Input Voltage - Continuous Operation | V _{IN} | 0 | 264 | V_{AC} |
| Operating Case Temperature (sink side) | T _C | -40¹ | 40 ² | °C |
| Storage Temperature | T_{stg} | -40 | 85 | °C |

Electrical Specifications

Unless otherwise indicated, specifications apply overall operating input voltage, Vo=48VDC, resistive load, and temperature conditions.

| Parameter | Symbol | Min | Тур | Max | Unit |
|---------------------------------------------------------------------------------------------------|-----------------|------|---------|-----|-----------------|
| Startup Voltage | | | | | |
| High-line Operation | V_{IN} | | | 185 | V_{AC} |
| Operating Voltage Range | | | | | |
| High-line configuration | V_{IN} | 185 | 200-240 | 264 | V_{AC} |
| Voltage Swell (no damage) | V_{IN} | 305 | | | V_{AC} |
| Low Voltage | | | | | |
| Turn Off | V_{IN} | 175 | | | V_{AC} |
| Turn On | V_{IN} | | | 185 | V_{AC} |
| Hysteresis | V_{IN} | | 10 | | V_{AC} |
| High Voltage | | | | | |
| Turn Off | V_{IN} | | | 275 | V_{AC} |
| Turn On | V_{IN} | 265 | | | V_{AC} |
| Hysteresis | V_{IN} | | 10 | | V_{AC} |
| Frequency | F _{IN} | 47 | | 66 | Hz |
| Operating Input Current (185Vac, 100% load) | I _{IN} | | | 16 | A_{AC} |
| Inrush Transient (220V _{RMS ,} TC=25 ⁰ C, excluding X-Capacitator charging | I _{IN} | | 25 | 30 | A _{PK} |
| Leakage Current (265V _{AC} 60Hz) | I _{IN} | | | 3.5 | mA |
| Power Factor (50 - 100% load) | PF | 0.96 | 0.98 | | |
| Efficiency, 240V _{AC,} 48V _{DC,} Tc=25°C 20% - 90% of FL | n | 93 | 95 | | % |
| Holdup time (output allowed to decay down to $40V_{DC}$) w/full load | т | | 12 | | ms |
| Ride through (at 240V _{AC} , 25°C, Vo>40V _{DC} with full load) | Т | 1/2 | | | cycle |
| Isolation (per EN60950) consult factory for testing to this requirement | | | | | |
| Input to Chassis & Signals | V | 1500 | | | V_{AC} |
| Input to Output | V | 3000 | | | V_{AC} |



Electrical Specifications con't.

| Parameter | Symbol | Min | Тур | Max | Unit |
|-----------------------------------------------------------------------|---------------------|-----------------------------------|-----|-------|-------------------|
| Output Power | | | | | |
| @ high line input 200 – 240 V_{AC} , $V_O ≥50V_{DC}$, $T_C ≤40$ °C | W | 2725 | | | W_{DC} |
| Factory set default set point | V _{OUT} | | 48 | | V_{DC} |
| Overall regulation (load, temperature, aging) 0-Tc≤40°C, Load >2.5A | V _{OUT} | -1 | | +1 | % |
| Output Voltage Set Range | V _{OUT} | 30 | | 58 | V_{DC} |
| Output Current³ - T _C ≤40°C | | | | | |
| 58V | I _{OUT} | 1 | | 75.7 | A_{DC} |
| 50V | I _{OUT} | 1 | | 80 | A_{DC} |
| 48V | I_{OUT} | 1 | | 85 | A_DC |
| 44V | I _{OUT} | 1 | | 85 | A_DC |
| Current Share (> 50% FL) | | | | | |
| $V_o > 42V_{DC}$ | | -5 | | 5 | %FL |
| $V_o < 42V_{DC}$ | | -10 | | 10 | %FL |
| Output Ripple (20MHz bandwidth, load >1A) | | | | | |
| RMS (5Hz to 20MHz) | V_{OUT} | | | 100 | mV_{rms} |
| Peak-to-peak (5Hz to 20Mhz) | | | | 500 | mV _{p-p} |
| External Bulk Load Capacitance | C _{OUT} | 0 | | 5,000 | mF |
| Turn on (monotonic turn-ON from 30 - 100% of Vnom above 5°C) | | | | | |
| Delay | | | 5 | | s |
| Rise Time - PMBus mode | Т | | 100 | | ms |
| Rise Time - RS-485 mode | | | 100 | | ms |
| Output Overshoot | V_{OUT} | | | 2 | % |
| Load Step Response ⁴ (I start from 0A), Vo=48V | | | | | |
| ΔΙ | I _{OUT} | | | 90 | %FL |
| ΔV | V_{OUT} | | 2.0 | | V_{DC} |
| Response Time ⁵ | Т | | 2 | | ms |
| Overvoltage | | | | | |
| 200ms delayed shutdown | V_{OUT} | >60 | | <65 | V_{DC} |
| Immediate shutdown | | | | | |
| Latched shutdown | Three restart atten | npts are imple prior to a latc | | | es windov |
| Overtemperature warning (prior to commencement of shutdown) | | | 5 | | |
| Shutdown (below the max device rating being protected) | Т | | 20 | | °C |
| Restart attempts Hysteresis (below shutdown level) | | | 10 | | |
| Isolation Output to Chassis | V | 100 | | | V _{DC} |




Electrical Specifications con't.

| MAIN OUTPUT (continued) | | | | | |
|---------------------------------------|------------------|------|-----|-----|------|
| Parameter | Symbol | Min | Тур | Max | Unit |
| Power limit down to 50V _{DC} | P _{OUT} | 2725 | | | W |

- 1. Dynamic Current limit threshold varies corresponding Vo set point and Vin
- The overload current limit threshold is set at least > 1% above the load envelope shown here
- 3. Overcurrent events that exceed the envelope by 2% will hiccup continuously at a frequency of approximately once every 24 seconds
- 4. Dynamic output UV protection Vo, set -2V is introduced when Vo set is <42V
- 5. Fixed output UV protection 36V when Vo set >42V



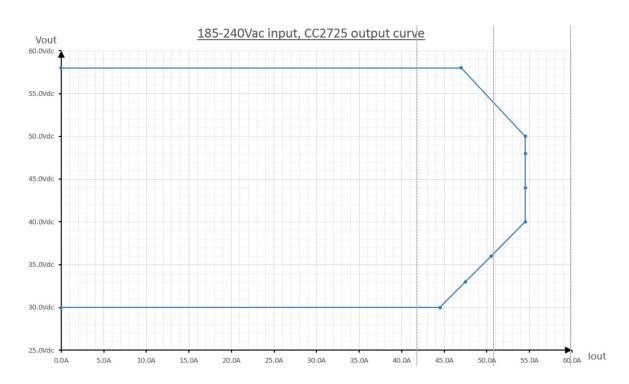

185-240Vac input

| Vo (Vdc) | 30 | 33 | 36 | 40 | 44 | 48 | 50 | 58 |
|----------|------|------|------|------|------|------|------|----|
| lo (A) | 44.5 | 47.5 | 50.5 | 54.5 | 54.5 | 54.5 | 54.5 | 47 |

Define Po curve at case temp 40°C. Ambient temp is less than 30°C.

Contract terms are for supporting all loads inside the load map. The customer will develop a control interface which maintains the operating voltage and current so as to not exceed the load map.

System power up: Upon insertion, the rectifier will delay an overload shutdown for 20 seconds.

See endnotes on page 8


-continued on next page-



Electrical Specifications con't.

| MAIN OUTPUT (continued) | | | | | |
|---------------------------------------|------------------|------|-----|-----|------|
| Parameter | Symbol | Min | Тур | Max | Unit |
| Power limit down to 50V _{DC} | P _{OUT} | 2725 | | | W |

- .. Dynamic Current limit threshold varies corresponding Vo set point and Vin
- 2. The overload current limit threshold is set at least > 1% above the load envelope shown here
- 3. Overcurrent events that exceed the envelope by 2% will hiccup continuously at a frequency of approximately once every 24 seconds
- 4. Dynamic output UV protection Vo, set -2V is introduced when Vo set is <42V
- 5. Fixed output UV protection 36V when Vo set >42V

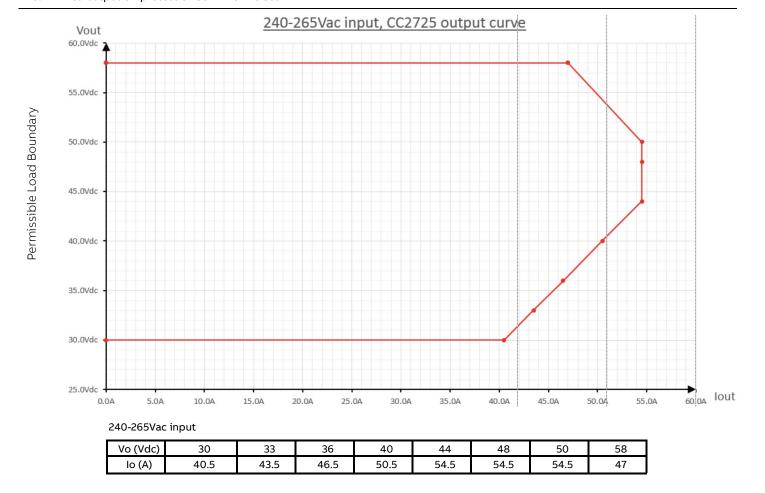

Define Po curve at case temp 40°C. Ambient temp is less than 30°C.

Contract terms are for supporting all loads inside the load map. The customer will develop a control interface which maintains the operating voltage and current so as to not exceed the load map.

System power up: Upon insertion, the rectifier will delay an overload shutdown for 20 seconds.

-continued on next page-



Electrical Specifications con't.

| 5V _{DC} Auxiliary Output (return is LGND) | | | | | | | | |
|----------------------------------------------------|-----------|-----|-----|-----|-------------------|--|--|--|
| Parameter | Symbol | Min | Тур | Max | Unit | | | |
| Output Voltage Setpoint | V_{OUT} | | 5 | | V_{DC} | | | |
| Overall Regulation | | -10 | | +5 | % | | | |
| Output Current | | 0 | | 0.2 | Α | | | |
| Ripple and Noise (20mHz bandwidth) | | | 55 | 200 | mV _{p-p} | | | |
| Over-voltage Clamp | | | | 7 | V_{DC} | | | |
| Overcurrent Limit | | 400 | | 670 | %FL | | | |
| Isolation LGND to Chassis | | 100 | • | | V_{DC} | | | |

The 5VDC should be ON before availability of the 48DC main output and should turn OFF only if insufficient input voltage exists to provide reliable 5VDC power. The PG# signal should have indicated a warning that main output has turned OFF and the 48VDC main output should be OFF way before interruption of the 5VDC output.

General Specifications

| Parameter | Min | Тур | Max | Units | Notes | |
|------------------|-----|---------------------------------------------------------------------|-----|-------|--------------------------------------------------------------------------------------------------------------------|--|
| Reliability | | TBD | | Hours | Full load, 25°C, MTBF per SR232 Reliability protection for electronic equipment, issue 2, method I, case III | |
| Service Life | | 10 | | Years | At 80% load and 25°C cold plate | |
| Unpacked Weight | | TBD | | Kg | | |
| Packed Weight | | TBD | | Kg | | |
| Heat Dissipation | Т | TBD Watts or TBD BTUs @ 80% load, TBD Watts or TBD BTUs @ 100% load | | | | |



Signal Specifications

Unless otherwise indicated, specifications apply to overall operating input voltage, resistive load, and temperature conditions. Signals are referenced to LGND unless noted otherwise.

| Parameter | Symbol | Min | Тур | Max | Unit |
|------------------------------------------------------------------------|---------------|--------------|-----|-------|-----------|
| ON / OFF | | | | | |
| Main Output OFF | V_{OUT} | $0.7V_{p-p}$ | | 5 | V_{DC} |
| Main Output ON (should be connected to LGND) | V_{OUT} | 0 | | 0.5 | V_{DC} |
| Margining (by adjusting "Margining"; see "Voltage Programming section) | | | | | |
| Programmed output voltage range | V_{OUT} | 30 | | 58 | V_{DC} |
| Linear voltage control range | $V_{control}$ | ≥ 0.1 | TBD | ≤ 3.0 | V_{DC} |
| Voltage adjustment resolution (8-bit A/D) | $V_{control}$ | | | | mV_{DC} |
| Output set to 48VDC | $V_{control}$ | 3.1 | | 3.3 | V_{DC} |
| Output set to 30VDC | $V_{control}$ | 0 | | 0.1 | V_{DC} |
| Over Temperature Warning (OTW) | | | | | |
| Logic Hi (temperature normal) | V | $0.7V_{p-p}$ | | TBD | V_{DC} |
| Sink current (note: open collector output FET) | 1 | | | 5 | mA |
| Logic LO (temperature is too high) | V | 0 | | 0.4 | V_{DC} |
| Fault | | | | | |
| Logic Hi (temperature normal) | V | | | TBD | V_{DC} |
| Sink current (note: open collector output FET) | 1 | | | 5 | mA |
| Logic LO (internal fault occured) | V | | | 0.4 | V_{DC} |
| Power Good Warning (PG) | | | | | |
| Logic Hi (output temperature normal) | V | $0.7V_{p-p}$ | | TBD | V_{DC} |
| Sink current (note: open collector output FET) | 1 | | | 5 | mA |
| Logic LO (until shutdown, temperature is too high) | V | 0 | | 0.4 | mA |

Environmental Specifications

| Parameter | Min | Тур | Max | Units | Notes |
|----------------------------------|------------------|-----|--------|-------|--------------------------------------------------------------------------------------------|
| Operating Case Temperature | -40 ⁵ | | 40 | °C | Measured at the center of the cooling surface. Refer to detailed power boundary curves. |
| Storage Temperature | -40 | | 85 | °C | · |
| Operating Altitude | | | 5000/ | m/ | |
| Operating Airitude | | | 16,463 | ft | |
| Non-operating Altitude | | | 8200/ | m/ | |
| Non-operating Artitude | | | 27,000 | ft | |
| Over Temperature Protection | | TBD | | °C | Shutdown/restart (internally measured points) |
| Humidity | | | | | |
| Operating | 5 | | 95 | % | Relative humidity, non-condensing |
| Storage | 5 | | 95 | % | |
| Shock and Vibration acceleration | | | 2.4 | Grms | |



EMC

| Parameter | Measurement | Standard | Level | Test |
|-----------------------|-----------------------------------|------------------------------------------------------------|-----------------------|------------------------------------------------------|
| | Conducted emissions | EN55032 | A +3dB margin | 0.15 - 30MHz |
| AC Input | Radiated emissions ^[2] | EN55032 | A +3dB margin | 30 - 1000MHz |
| / C III pac | Line harmonics | EN610000-3-2 THD | Table 1 5% | 0 - 2kHz 230 Vac, full load, 25°C |
| Parameter | Measurement | Standard | Criteria ⁶ | Test |
| | | | 8 | -30%, 10ms |
| | | EN610000-4-11 | 8 | -60%, 100ms |
| | Line sags and interruptions | | 8 | -100%, 5sec |
| AC Input Immunity | | sag must be higher than 80Vrms, Vo>40Vdc with full load | А | 25% line sag for 2 seconds 0.5 cycle interruption |
| | Linktoin or commo | EN610000-4-5, Level 4, 1.2/50ms | Α | 4kV, common mode |
| | Lightning surge | - error free | А | 2kV, differential mode |
| | Fast transients | EN610000-4-4, Level 3 | В | 5/50ns, 2kV (common mode) |
| Enclosure Immunity | ESD | EN610000-4-2, Level 4 | В | 8kV contact, 15kV air |

Endnotes

^{**}ISO is a registered trademark of the International Organization of Standards

¹ Designed to start and work at an ambient as low as -40°C, but meet operational limits until above -5°C

 $^{^{\}rm 2}$ Refer to power curve (Vo vs Io)

³ Refer to power boundary curves for details

 $^{^{\}rm 4}\,\text{Allow}$ to add ext Co bank

 $^{^5}$ Designed to start and work at an ambient as low as -40 °C, but meets operational limits until about -5 °C

^[2] Test with external filter

⁶ Criteria A: The product must maintain performance within specification limits. Criteria B: Temporary degradation which is self-recoverable. Criteria C: Temporary degradation which requires operator intervention.



Control and Status

The Rectifier provides three means for monitor/control: analog, PMBus®, or the ABB Galaxy-based RS485 protocol. Details of analog control are provided in this data sheet. ABB will provide separate application notes on the Galaxy RS485 or PMBus®-based protocol for users to interface to the rectifier. Contact your local ABB representative for details.

Factory default setting is Analog & PMBus® mode.

Analog Controls

Details of analog controls are provided in this data sheet under Feature Specifications. Note that some signals are ignored in RS485 mode.

Signal Reference

Unless otherwise noted, all signals are referenced to LGND ("Logic Ground"). See the Signal Definitions Table at the end of this document for further description of all the signals.

LGND is isolated from the main output of the rectifier for PMBus communications. Communications and the 5V standby output are not connected to main power return (Vout(-)) and can be tied to the system digital ground point selected by the user. (Note that RS485 communications is referenced to Vout(-), main power return of the rectifier).

LGND is capacitively coupled to Earth Ground inside the rectifier where Earth Ground is also wired to the metal case). The maximum voltage differential between LGND and Earth Ground should be less than 100VDC.

Delayed Overcurrent Shutdown During Startup

Rectifiers are programmed to stay in a constant current state for up to 20 seconds during power up. This delay has been introduced to permit the orderly application of input power to a subset of paralleled front-ends during power up. If the overload persists beyond the 20 second delay, rectifier will shut down and restart.

Auto Restart

Auto-restart is the default configuration for over-current and over-temperature shutdowns

An overvoltage shutdown is followed by three attempted restarts, each restart delayed 1 second, within a 1 minute window. If within the 1 minute window three attempted restarts failed, the unit will latch OFF. If within the 1 minute less than 3 shutdowns occurred then the count for latch OFF resets and the 1 minute window starts all over again.

To restart after a latch off either of five restart mechanisms are available.

- The hardware pin ON/OFF or DIP switch on rear side may be cycled OFF and then ON.
- 2. Turn OFF and then turn ON AC power to the unit.
- The unit may be commanded to restart via i2c through the Operation command by cycling the output OFF followed by ON.

Control Signals

There are two DIP switches and a port on rear side of rectifier, to provide way to adjust output voltage setpoint and remote on/off main power output.

A separated signal connector includes all the control and status signals.

Protocol

Establishes the communications mode of the rectifier, between analog/I2C and RS485 modes. For RS485, connect $10k\Omega$ pull-down resistor to Vout (-). Default setting of signal interface is open.

Margining


There is a trim port on rear panel of rectifier to provide an easy to adjust output voltage set-point. A DIP switch in off disable this trim pot when need to use external analog signal to adjust Vo through margin pin.

Output voltage set-point will return to factory default set-point once DIP switch for trim pot is off.

Factory default setting is switch on.

The margining pin from signal interface can also be used to adjust the output voltage set-pint once DIP is off.

The margining pin is connected to 3.3Vdc via a $8.87k\Omega$ resistor inside the Rectifier. Connecting a resistor or voltage source externally can change set-point.

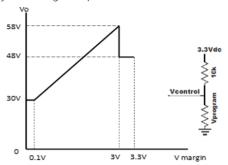

Note that in RS485 mode the margining function include trim port and DIP switch is ignored.

Please contact your local representative for details about how to change output voltage set-point through RS485 communication.



ON/OFF

There is an on/off DIP switch on rear panel of rectifier to provide on/off main power output manually.

Factory default setting is switch on.

Enable pin from signal interface can be used to control main power on/off in case on/off DIP switch is off. This pin must be pulled low to turn ON the rectifier.

Note that in RS485 mode the ON/OFF pin is ignored.

Enable_RS485

This pin is used as main power on/off in RS485 mode. In I2C/ analog mode, this pin is ignored.

Status Signals

Power Good Warning (PG)

A TTL-compatible status signal representing whether main output is delivered. This signal needs to be pulled HI externally through a resistor.

This signal is HI when the main output is being delivered and goes LO when main power is shutdown. This signal deliver duty in case output current limit condition.

Fault

A TTL-compatible status signal representing whether a internal Fault occurred. This signal needs to be pulled HI externally through a resistor.

This signal goes LO for any failure that requires rectifier replacement. These faults may be due to:

- Over-temperature shutdown
- Over-voltage shutdown
- Internal Rectifier Fault

In RS485 mode, this pin is ignored.

Over Temp Warning (OTW#)


A TTL-compatible status signal representing whether an over temperature exists. This signal needs to be pulled HI externally through a resistor.

If an over temperature should occur, this signal would pull LO for approximately 10 seconds prior to shutting down the rectifier. In its default configuration, the unit would restart if internal temperatures recover within normal operational levels. At that time the signal reverts back to its open collector (HI) state.

In RS485 mode, this pin ignored.



Front Panel LEDs

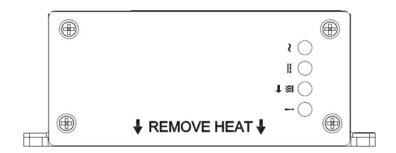

| | Analog Mode | I ² C Mode | RS485 Mode |
|---------------------------------------------|------------------------------|------------------------------------------------|------------------------------------------|
| □~ | • | ON: Input ok Blinking: Input out of limits | |
| □ | • | ON: Output ok Blinking: Overload | |
| □ <u></u> <u></u> <u></u> <u></u> <u></u> * | ON: Over-temperature Warning | ON: Over-temperature Warning Blinking: Service | ON: Over-temperature Warning |
| | ←—— | ON: Fault | ON: Fault Blinking: Not communicating |

^{*}Arrow next to "hot" symbol points to the cooling side, where heat should be removed.

Table 1: Alarm and LED State Summary

| | Rectifier LED State | | | | Monitoring Signals | | |
|------------------------------------------------|---------------------|----------------|------------------|--------------|---------------------------|-----|----------------------|
| Condition | AC OK Green | DC OK Green | Service Amber | Fault Red | Fault | отw | PG |
| ок | 1 | 1 | 0 | 0 | н | HI | HI |
| Thermal Alarm (5°C before shutdown) | 1 | 1 | 1 | 0 | Н | LO | HI |
| Thermal Shutdown | 1 | 0 | 1 | 1 | LO | LO | LO |
| AC Present But Not Within Limits | Blinks | 0 | 0 | 0 | н | н | LO |
| AC Not Present ¹ | 0 | 0 | 0 | 0 | н | НІ | LO |
| Boost Stage Failure | 1 | 0 | 0 | 1 | LO | HI | LO |
| Overvoltage Latched Shutdown | 1 | 0 | 0 | 1 | LO | HI | LO |
| Over Current | 1 | Blinks | 0 | 0 | НІ | HI | Pulsing ⁴ |
| Non-catastrophic Internal Failure ² | 1 | 1 | 0 | 1 | LO | HI | HI |
| Standby Remote ⁵ | 1 | 0 | 0 | 0 | Н | HI | LO |
| Service Request (PMBus Mode) | 1 | 1 | Blinks | 0 | HI | HI | HI |
| Communications Fault (RS485 Mode) | 1 | 1 | 0 | Blinks | N/A | N/A | High |

 $^{1\,}$ This signal is correct if another powered units provides 5VA and 8VINT as back-bias.


² Any detectable fault condition that does not cause a shutting down. For example, ORing FET failure, boost section out of regulation, etc.

⁴ Pulsing at a duty cycle of 1ms as long as the unit is in overload.


⁵ Remote on/off, or I2C command in i2c mode. or through interlock or GP command in RS485 mode.



Mechanical Outline

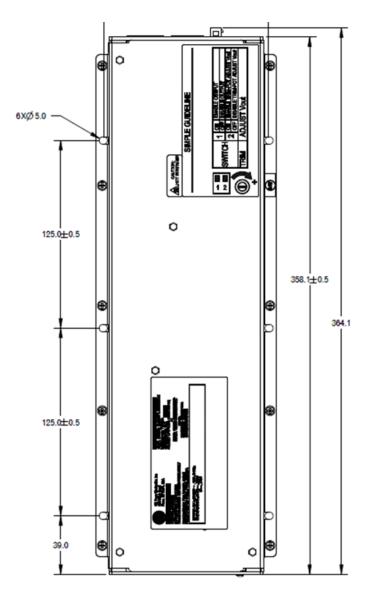


TOP VIEW

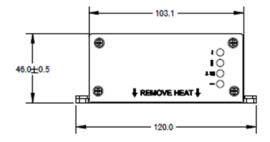

All dimensions are in mm



Wiring Interface

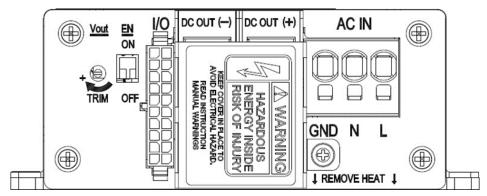

Rear View

AC Input Wiring Diagram



Whether it's a push-in spring or a leg spring, the spring principle makes for quick, tool-free conductor connection. Simply insert the solid conductors and conductors with ferrules into the push-in terminal point and release using a screwdriver. When connecting and releasing finely stranded conductors without ferrules, the terminal point can also be opened using a screwdriver.

Input, Output TBs and Signal Connector Information

| TB/Connector | Vendor P/N | Rated Current | Rated Insulation Voltage | Pitch | Pos. |
|--------------|-------------------|---------------|-----------------------------|--------|------|
| AC Input | 1719202 (Phoenix) | 41A | 1000V | 7.5mm | 3 |
| DC Output | 1735781 (Phoenix) | 76A | 1000V | 10.0mm | 2 |
| Signal I/O | 430202000 (Molex) | 5A (UL) | 350V (UL) | 3.0mm | 20 |

Wire Information for TBs

| TB Connection Data | AC Input TB | DC Ouput TB |
|-------------------------------------------------------------|-------------------------|--------------|
| Conductor cross section solid | 0.2 ~ 10mm ² | 0.75 ~ 16mm² |
| Conductor cross section flexible | 0.2 ~ 6mm ² | 0.75 ~ 16mm² |
| Conductor cross section with ferrule without plastic sleeve | 0.25 ~ 6mm ² | 0.75 ~ 16mm² |
| Conductor cross section with ferrule with plastic sleeve | 0.25 ~ 4mm ² | 0.75 ~ 10mm² |
| Conductor cross section AWG | 24-8 AWG | 24-4 AWG |
| Nominal current I _N | 41A | 76A |
| Stripping length | 15mm | 18mm |

 
Note

Recommended to use ferrule with correct stripping length for input.



Signal I/O Pin Definition

Pins Table



| PIN No. | DEF |
|---------|-----------------|
| 1 | SCL0 |
| 2 | SDA0 |
| 3 | PFW |
| 4 | INTo |
| 5 | ENABLE |
| 6 | 5VA |
| 7 | OTW |
| 8 | MARGIN |
| 9 | FAULT_IO |
| 10 | LGND |
| 11 | RS485+ |
| 12 | RS485- |
| 13 | ISHARE |
| 14 | ENABLE_RS485 |
| 15 | UNIT_ADDR |
| 16 | 8V_BUS |
| 17 | PROTOCOL_PGMDSP |
| 18 | SHELF_ADDR |
| 19 | VO- |
| 20 | N/A |

Signal Definitions

| 1/0 | Function | Type | Description |
|-------------------|-----------------------------|-----------|------------------------------------------------------------------------------------------------------------------------------------------|
| 5VA | Standby Power | Output | 5V provided for external use; return is LGND |
| Fault# | Rectifier Fault | Output | An open drain FET; normal is High, Changes to Low if internal fault |
| Ishare | Current Share | Bi-Direct | A single wire active-current-share interconnect between rectifiers. Ref: Vout (-) |
| LGND | Logic Ground | Input | Return for all signals unless Vout (-) is indicated in description |
| Enable | Output Control | Input | If shorted to LGND, main output is ON in Analog or PMBus mode. Active in case ON/OFF DIP switch is off status. Ref: LGND |
| OTW# | Over-Temperature Warning | Output | Open drain FET; normally HI, changes to low approximately 5°C prior to thermal shutdown. Ref: LGND |
| PG# | Power Good Warning | Output | Open drain FET; normally HI, changes to low if an imminent loss of the main output may occur. Ref: LGND |
| Protocol | Protocol Select | Input | Selects communications mode. No-connect for Analog/PMBus; $10k\Omega$ for RS485. Ref: Vout (-) |
| RS_485+ | RS485 Line | Bi-direct | RS485 line + Ref: Vout (-) |
| RS_485- | RS485 Line | Bi-direct | RS485 line - Ref: Vout (-) |
| Margining | Margin | Input | Allow changing of output voltage through an analog input or via resistor divider; active when ON/OFF DIP switch is off status. Ref: LGND |
| Rectifier Address | Unit_addr | Input | I2C/RS485 address setting. Ref: Vout (-) |
| Shelf Address | Shelf_addr | Input | I2C/RS485 address setting. Ref: Vout (-) |
| SCL | SCL | Input | I2C 0 channel |
| SDA | SDA | Input | I2C 0 channel |
| Alert | Interrupt | Output | I2C 0 channel |
| 8V_INT | | Output | Back Bias |
| Enable_RS485 | | Input | On/Off in RS485 mode |
| Vout (-) | | | Ref for Ishare, RS485 +/-, Unit/Shelf addr, 8V_INT |


All hardware alarm signals (Fault, PG, OTW) are open drain FETs. These signals need to be pulled HI to either 3.3V or 5V. Maximum sink current 5mA. An active LO signal (< 0.4VDC) state. All signals are referenced to LGND unless otherwise stated.

In main output in series to extend Vo application, all signals refer to LGND from different units could be tied together. Other signals refer to Vout(-) from different units can't be tied together, otherwise may cause internal circuits damage due to different VOUT(-) level.



In main output in series to extend Vo application, all signals refer to LGND from different units could be tied together. Other signals refer to Vout (-) from different units can NOT be tied together, otherwise may cause internal circuits damage due to different Vout (-) level.


DIP Switch and Vo Adjustment

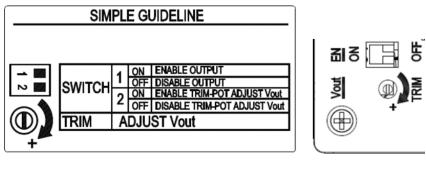

Guideline label on top

Rear View

Mounting Dimensions

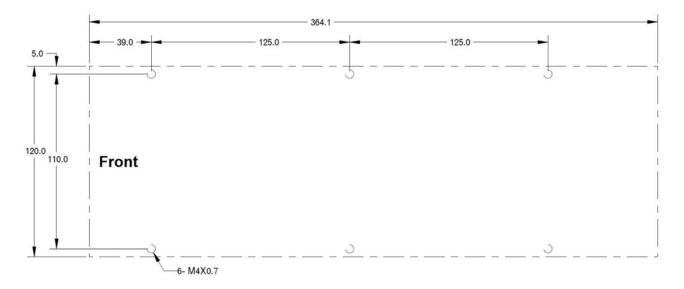


All dimensions are in mm




Mounting Diagram

Install the module to cold plate/heatsink with 6 M4 pan head screw as shown, the torque to be 1.5Nm. Apply gap filler, Laird T-putty 504, or equivalent material (thermal conductivity better than 1.8 W/mK), between module and cold plate/heatsink. Amount of Gap filler is around 20.9 cubic cm, thickness is around 0.5mm.

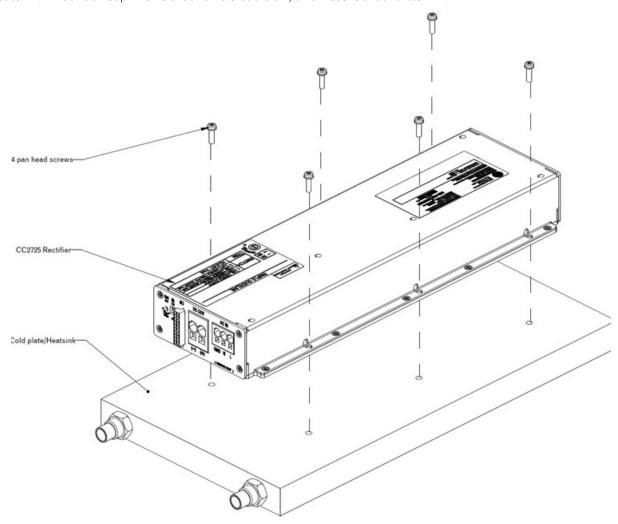

Case Temperature Monitoring Location

Below diagram indicates the hot spots of CC2725AC48TZL rectifier, they are assumed as case temperature of coldplate/heatsink as well. In application, over temperature protection will be enabled if one of the hot spots the temperature is exceeded the operating temperature.

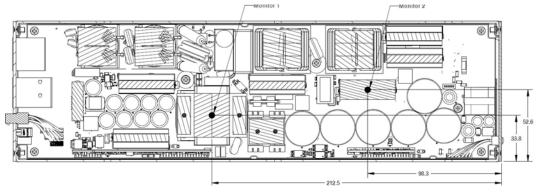





Ordering Information

Please contact your ABB Sales Representative for pricing, availability and optional features.

| ltem | Description | Comcode |
|---------------|---------------------------------------------------------------------|-------------|
| CC2725AC48TZL | Conduction cooled, 28~58Vdc output, shorter length rectifier, 2725W | 1600190297A |



ABB

601 Shiloh Rd. Plano, TX USA

Go.ABB/Industrial

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail.

ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright@ 2020 ABB

All rights reserved. All other trademarks are the property of their respective owners.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

OmniOn Power:

CC2725AC48TZL RECTIFIER