
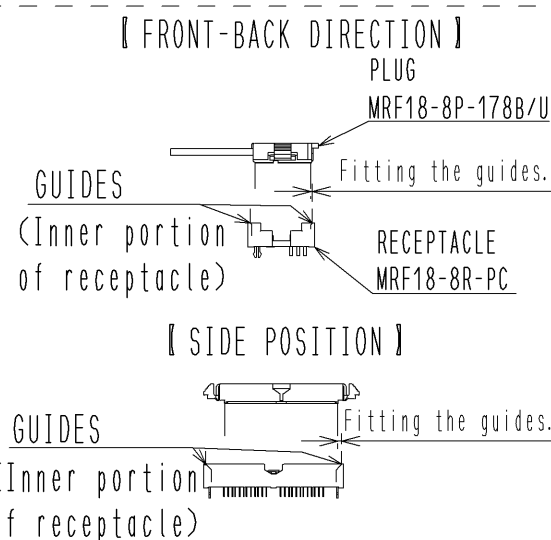
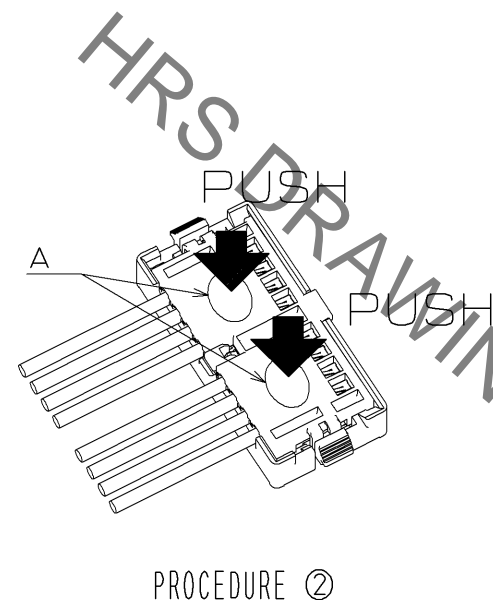


# OPERATION MANUAL FOR MRF18 SERIES

## MATING PROCEDURE

- ①Insert the plug into the receptacle along the guides of the corner edges of receptacle.
- ②Push two center areas of the plug , which shown is the drawing below.  
You can get the click feeling when the lock of the plug is set.

NOTE : Push the plug completely to the end.




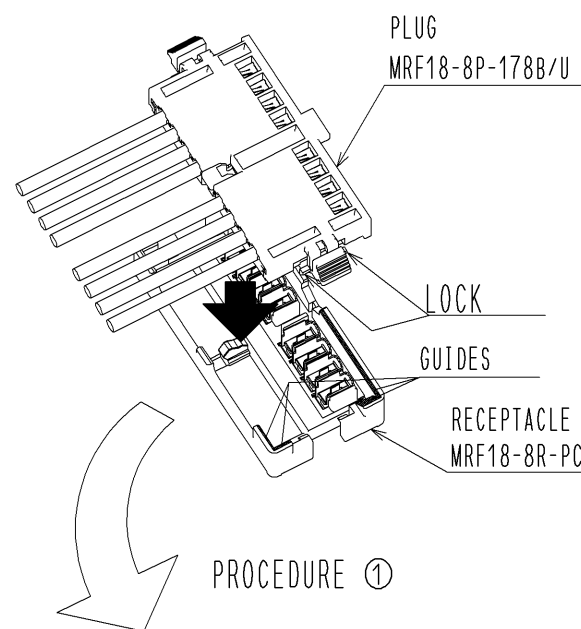


## UNMATING PROCEDURE

- ①Push the lock levers of the plug at the both sides in the direction of the arrows.
- ②Pull up the front lever of the plug vertically in the condition of pushing both side lock levers.

NOTE : Push the lock levers of the plug as completely as possible.

Please be careful not hurt nails and others because the unmating force is strong when pulling the plug.

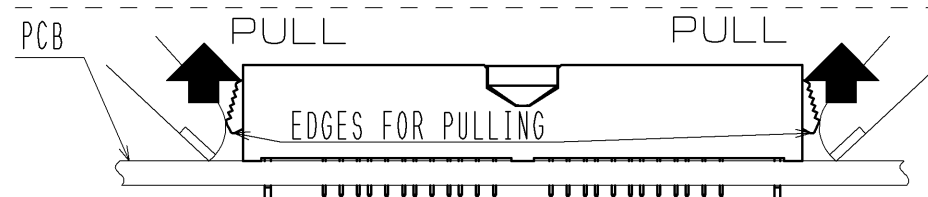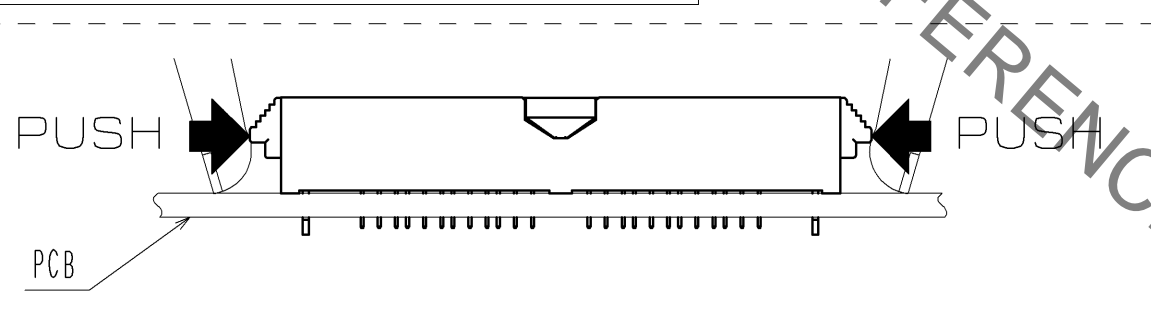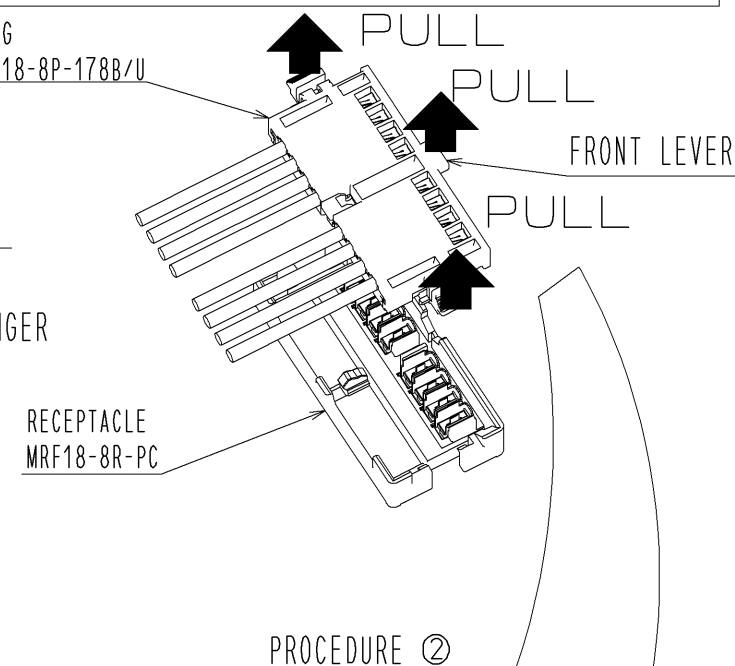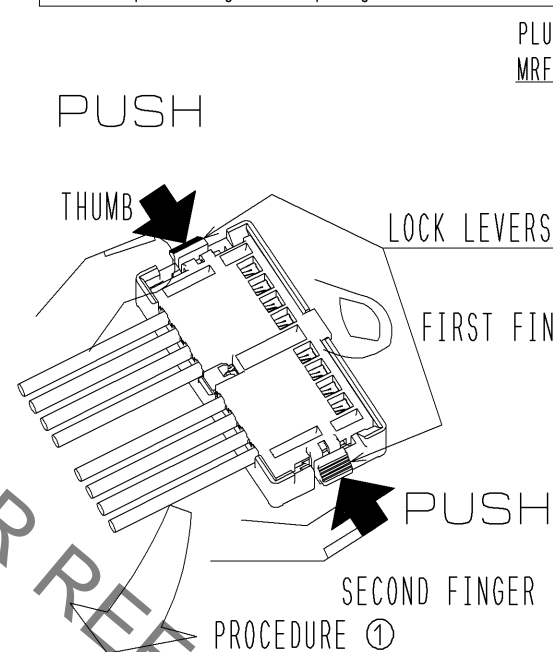

Pull up the front lever and the edges of lock levers of the plug vertically at the same time , catching and pushing the edges of lock levers with finger at the both sides

Please be careful not hurt nails and others because the unmating force is strong when pulling the plug.

**HRS**

DRAWING NO.	EDC3-351430-00
PART NO.	MRF18-8P-178B/U
CODE NO.	CL313-1105-5-00

2/2

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Hirose Electric:](#)

[MRF18-8P-178B/U](#)