


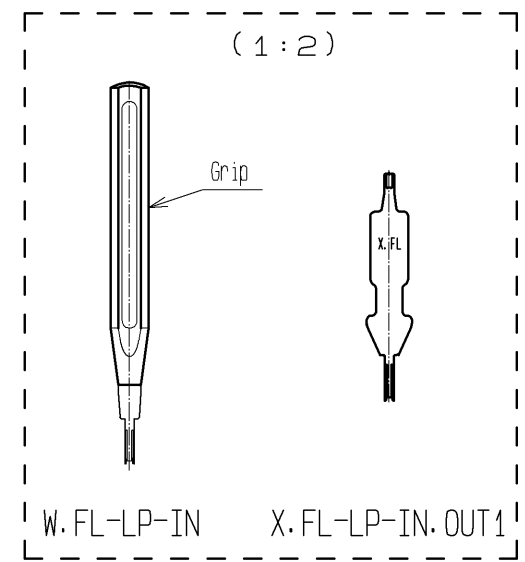
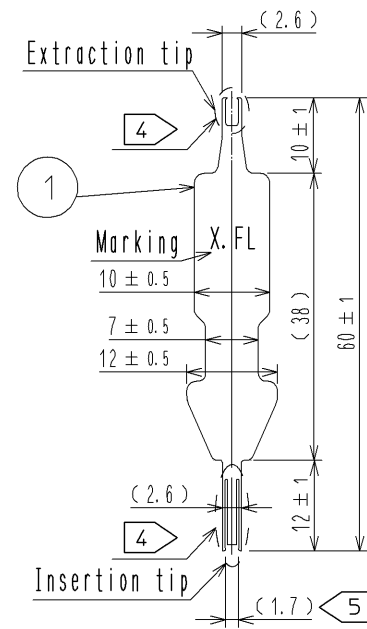
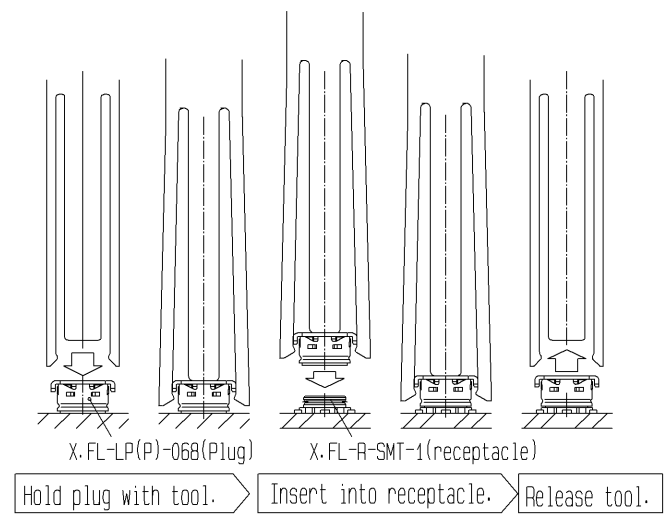


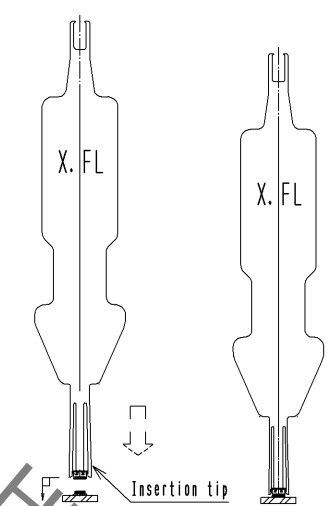



[How to insert plug] (FREE)

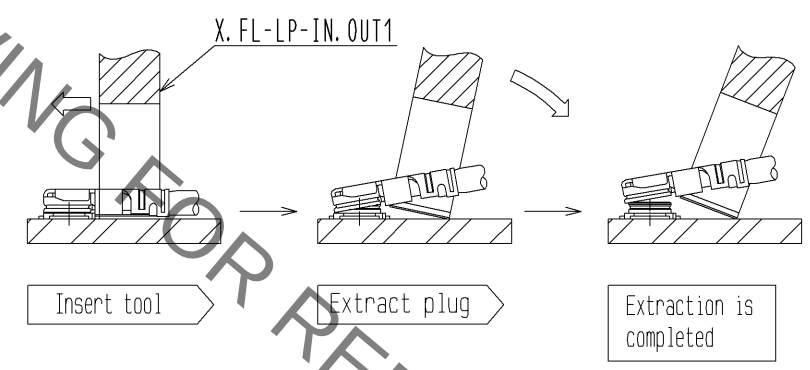

[How to extract plug] (FREE)

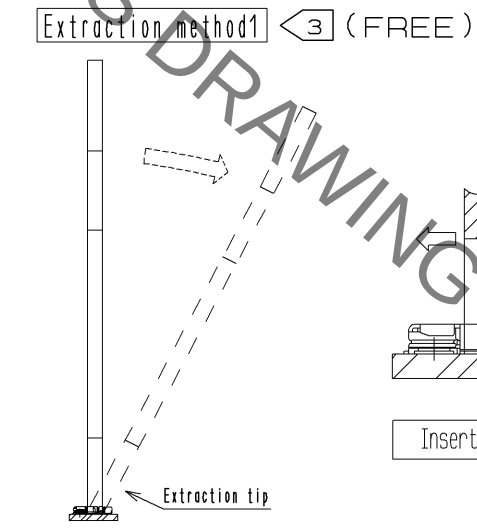

[How to extract plug] (FREE)

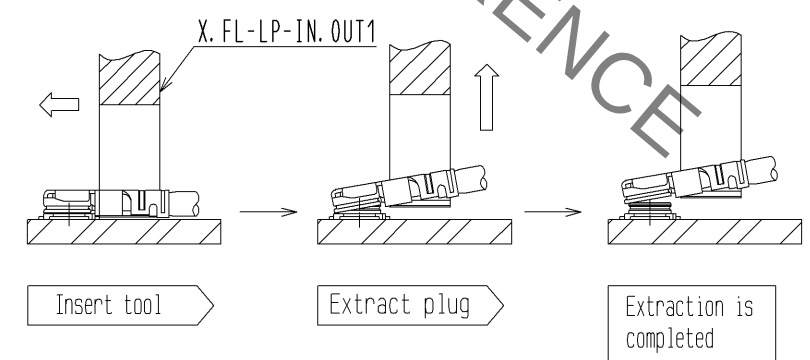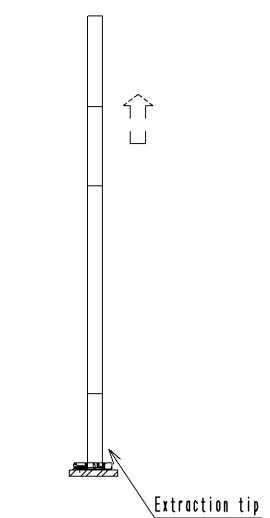

- Notes
1. This tool is to help insertion / extraction operation of X.FL-LP(P)-068 Plug to / from X.FL-R-SMT-1 Receptacle. Refer to the figure on the right for the operation instructions.
 - 2 At the time of plug insertion, align the mating axes of the plug and the receptacle. Confirm that the plug is positioned to be guided (The both axes are aligned and the plug is positioned stably.). Then insert the plug as straight as possible. Avoid an angled insertion.
 - 3 Extract the plug as shown in the figure(Extraction method1 or method2). Take a caution not to pull at the cable. Pulling at the cable can damage the connectors.
 - 4 The tool tips are structurally vulnerable to deformation. The tips are likely to be deformed when the tool is dropped. Handle carefully
 - 5 Modify the tool opening dimensions of the insertion tip for the operator's comfort, if necessary. Check that the tool does not scratch X.FL-LP(P)-068 Plug.
 6. When the connector insertion is difficult due to limited operation space at the mounted area, a special insertion tool (W.FL-LP-IN. CL331-0323-2) may become helpful. The size comparison is shown in the figure below.

RoHS COMPLIANT

1	STEEL	DEGREASING					
NO.	MATERIAL	FINISH . REMARKS	NO.	MATERIAL	FINISH . REMARKS		
UNITS mm		SCALE 1 : 1	COUNT 	DESCRIPTION OF REVISIONS	DESIGNED	CHECKED	DATE
HIROSE ELECTRIC CO., LTD.		APPROVED : MH. YAMANE	14. 03. 20	DRAWING NO.	EDC3-352093-00		
		CHECKED : NK. NINOMIYA	14. 03. 19	PART NO.	X.FL-LP-IN. OUT1		
		DESIGNED : RO. YOKOYAMA	14. 03. 18	CODE NO.	CL331-0715-2-00		
		DRAWN : RO. YOKOYAMA	14. 03. 18				

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Hirose Electric:](#)

[X.FL-LP-IN.OUT1](#)