## **USB005 User Guide**

September 2014, v1.0







International








• Provide interface between IR PowIRCenter GUI and the IR controllers

2

## **USB005 Interfaces and Spec**




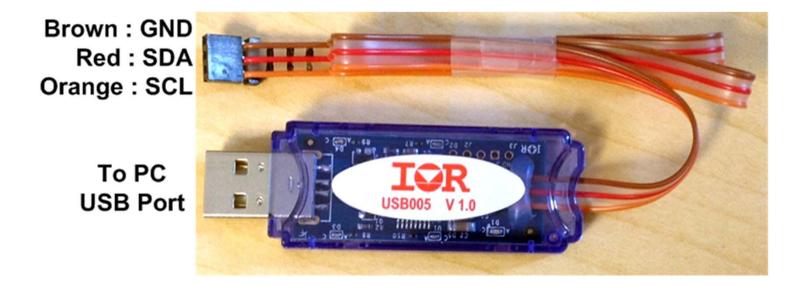

- No external power supply. Powered by USB 5V connector pin
- i2c speed up to 400 KHz. Speed can be set by IR PowIRCenter GUI.
- Require Silicon Labs USBXpress driver which is included in the IR PowIRCenter GUI installation package.
- USB005 has clear blue casing

3



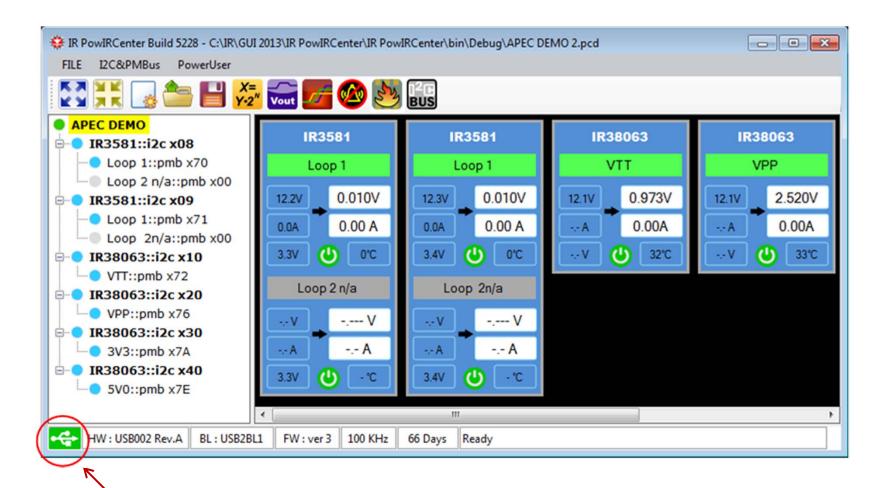

Green color indicates good USB connection between PC and USB005 board

**IOR** International Rectifier

4

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Infineon: USB005