inspired LED RF Dimmer & Wireless Remote

The **Single Zone Dimmer with Wireless Remote** is a simple, convenient solution for dimming Inspired LED plug & play systems with ease. Compatible with 12V flexible LED strips or panels, this control device provides a range of brightness levels from 0-100% with the turn of a wheel. Buttons allow the entire system to be turned on and off, while smart memory functions retain previous dimming settings.



3.5



3.36

SKU #4887

1 78

Single Zone Set

Wireless Remote

4.4

0.75

*Dimensions shown in inches

2.18

Product Features:

- Compatible with 12V DC power supplies
- Standard 3.5 x 1.3 mm input/output <u>or</u> screw terminal option available
- Quick functions (On, Off, High, Medium, Low)
- Remote and Receiver not sold separately
- Remote wall mount available for additional charge

Specifications:

- Remote requires AAA batteries (included)
- Max Load for Receiver- 6 AMPS
- Compatible with 12V DC power supplies
- RF range up to 30 meters



Instructions:



Troubleshooting-

- If lights turn on but do not dim, ensure power supply is plugged into side marked "power", and LEDs into "LED". Reversal will prevent dimming.
- 2. If lights do not turn on, check batteries. Avoid contact with touch wheel while loading new batteries as this will cause interference. If functionality is lost, remove and reload.

To Install-

- 1. Install LED lights according to their instructions
- 2. Plug 12V DC power supply into side of receiver marked "power"

.88

- 3. Connect lights to side of receiver marked "LED"
- 4. Select desired brightness level by using touch wheel
- 5. Press orange buttons to quickly turn system on and off
- 6. Press green buttons to quickly select high, med, or low settings

To Pair Remote to Receiver-

- 1. Plug 12V DC power supply into side of receiver marked "power"
- 2. Within 3 sec of connecting power press the top green key once
- 3. Connected lights will blink 3 times to indicate successful pairing
- 4. Repeat steps 1-3 to pair additional remotes
- 5. Once completed, test each remote for control

To Remove Remote from Receiver-

- 1. Plug 12V DC power supply into side of receiver marked "power"
- 2. Within 3 seconds of connecting power press the top green key <u>five times</u> in a row
- 3. Disconnected lights will blink six times to indicate successful disassociation of remote

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Inspired LED: 4887