

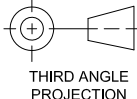

**NOTES:**

**1. OPERATION**

1. GENTLY LIFT LATCH AT SIDE OF CONNECTOR.
2. SWING COVER OFF OF CONTACTS.
3. SLIDE THE FLEX TAPE INTO THE CONNECTOR PLACING THE EDGE OF THE FLEX TAPE UNDER 2 HOLD DOWN TABS. MAKE SURE THE POLARITY IS MATCHED BETWEEN THE FLEX TAPE AND THE CONNECTOR COVER.
4. FOLD OVER THE COVER AND PRESS IN PLACE UNTIL THE LATCH IS FULLY ENGAGED.

**2. LIMIT CURRENT TO A MAXIMUM OF 5 AMPS.**

**JKL PART NO.: ZFS-CH0-8J**

			<b>METRIC</b>  THIRD ANGLE PROJECTION		DIMENSIONS ARE IN mm (INCHES) TOLERANCE UNLESS OTHERWISE SPECIFIED 1 PL +/- REF. 2 PL +/- REF. ANGLE +/-		 <b>JKL COMPONENTS CORPORATION</b>			
			DRAWN BY L. WENGSTROM		APPV'D BY L.R.		DATE 3/5/13		TITLE <b>NO SOLDER 8mm FLEX TO FLEX TAPE CONNECTOR</b>	
RELEASE & CANCEL PL-1301-04			3/5/13		- CAD DRAWING - MANUAL REVISIONS NOT PERMITTED		SIZE <b>A</b>		FSCM NO. <b>55335</b>	
REV. NO.			DESCRIPTION/ECO NUMBER		APPV'D DATE		SCALE NONE		DRAWING NO. <b>ZFS-CH0-8J</b>	
							RELEASED DATE 3/5/13		REVISION DATE	
									REV. NO. SHEET 1 OF 1	

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[JKL Components:](#)

[ZFS-CH0-8J](#)