
Littelfuse® Expertise Applied | Answers Delivered

HLMU SERIES





Wiring Diagram

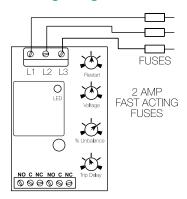

L1, L2, L3 = Line Voltage Input NO = Normally Open Contact NC = Normally Closed Contact C = Common, Transfer Contact

CAUTION: 2 amp max. fast acting fuses are recommended to protect the equipment's wiring. They are not required to protect the HLMU.

NOTE: Relay contacts are isolated, 277VAC max.

Ordering Information

•					
MODEL	OUTPUT	RESTART FUNCTION	VOLTAGE UNBALANCE	TRIP DELAY	RESTART DELAY
HLMUDLAAA	DPDT	Lockout, min off time	Adjust. 2 - 10%	Adjust. 1 - 30s	Adjust. 0.6 - 300s
HLMUDN0405N	DPDT	No restart delay	Fixed, 4%	Fixed, 5s	None
HLMUDNAAN	DPDT	No restart delay	Adjust. 2 - 10%	Adjust. 1 - 30s	None
HLMUDRAAA	DPDT	Staggered restart	Adjust. 2 - 10%	Adjust. 1 - 30s	Adjust. 0.6 - 300s

If you don't find the part you need, call us for a custom product 800-843-8848

Description

The HLMU Series is a universal voltage, encapsulated, 3-phase voltage monitor. It continuously measures the voltage of each of the three phases with microcontroller accuracy and compares the value to preset trip points. It separately senses phase reversal and loss; over, under and unbalanced voltages; and over or under frequency. Protection is assured during periods of large average voltage fluctuations, or when regenerated voltages are present. The unit trips within 200ms when phase loss is detected. Adjustable time delays are included to prevent nuisance tripping and short cycling of sensitive equipment. The isolated, 10A, DPDT relay contacts trip when a phase voltage exceeds the trip limits for the trip delay. Nominal line voltage, voltage unbalance, and time delays are knob adjustable. The phase loss setpoint and the acceptable frequency range are fixed. Both delta and wye systems can be monitored; no connection to neutral is required.

Features & Benefits

· oataroo & Dorionto				
FEATURES	BENEFITS			
Proprietary microcontroller based circuitry	Constant monitoring to protect against phase loss, phase reversal; over, under, and unbalanced voltage over and under frequency			
Universal line voltage range	Flexibility to work in 200 to 480VAC applications			
DIN rail (35mm) or surface mounting	Installation flexibility			
LED indication	Provides diagnostics of relay, fault and time delay status			
Encapsulated	Protects against shock, vibration, and humidity			
Finger-safe terminal blocks	Meets IEC 61000 safety requirements			

Operation

Upon application of line voltage, the output is de-energized and the restart delay begins. If all the three-phase voltages are within the acceptable range, the output energizes at the end of the restart delay. The microcontroller circuitry automatically senses the voltage range, and selects the correct operating frequency (50 or 60Hz). The over and under voltage trip points are set at ± 10% of the adjusted line voltage. When the measured value of any phase voltage exceeds the acceptable range limits (lower or upper) the trip delay begins. At the end of the trip delay the output relay de-energizes. If the phase voltage returns to an acceptable value before the trip delay expires, the trip delay is reset and the output remains energized. Under, over, and unbalanced voltages plus over or under frequency must be sensed for the complete trip delay before the unit trips. The unit trips in 200ms when phase loss or reversal are sensed. The unit will not energize if a fault is sensed as the line voltage is applied.

Reset: Reset is automatic upon correction of the voltage or frequency fault or phase sequence.

Restart Delay Options

L = Lockout or minimum OFF time. The restart delay begins when the output trips. The unit cannot be re-energized until the restart delay is complete. This provides a minimum off time or lockout time to allow equipment sensitive to short cycling,

Littelfuse® Expertise Applied | Answers Delivered

HLMU SERIES

time to reset. If the fault is corrected after the restart delay is complete, the output energizes immediately. The restart delay also occurs when line voltage is applied/reapplied.

R = Restart Delay on fault correction. The restart delay begins when line voltage is reapplied or when a voltage fault is corrected. This option is normally selected when staggered restarting of multiple motors on a power system is required.

N = No Restart Delay. 0.6 second initialization delay on application of line voltage applies.

Restart Notes: All restart options remain reset when the following conditions are detected:

- 1. Phase loss (phase unbalance greater than 25%)
- 2. Average line voltage less than 120VAC
- 3. Phase reversal

The restart delay begins when the condition is corrected.

LED Operation

The LED flashes green during the restart delay, then glows green when the output energizes. It flashes red during the trip delay then glows red when the output de-energizes. It flashes red/green if phase reversal is sensed. If a fault is sensed during the restart delay, the LED will glow red during that portion or the full restart delay.

Accessories



LPSM003ZXID (Indicating), LPSM003Z (Non-indicating) Fuse Holders

Littelfuse POWR-SAFE Dead Front holders provide optimum protection to personnel for Class CC and Midget-Style fuses. 600 VAC/DC



0KLK002.T Midget Fuse (2 Amp)

 10×38 fast acting, high-interrupting capacity, current-limiting type fuse. 600 VAC/500 VDC



C103PM (AL) DIN Rail

35 mm aluminum DIN rail available in a 36 in. (91.4 cm) length.



P1023-20 DIN Rail Adapter

Allows module to be mounted on a 35 mm DIN type rail with two #10 screws.

Specifications

Line Voltage

Type

3-phase delta or wye with no connection to neutral

Operating Voltage 200 - 480VAC

 Range
 Voltage Adj. Range
 Frequency

 240
 200-240VAC
 50 or 60Hz

 380
 340-420VAC
 50Hz

 480
 400-480VAC
 60Hz

 550VAC

Line Voltage Max. AC Line Frequency Phase Loss Response Time 480 400-480VAC 60Hz
550VAC
50/60 Hz automatically detected
≥ 25% unbalance
≤200ms

Undervoltage & Voltage Unbalance

Type

Overvoltage
Trip Voltage
Reset Voltage
Undervoltage
Trip Voltage
Reset Voltage
Voltage
Voltage Unbalance
Trip Setpoint

Reset on Balance Trip Delay Active On

Range

Tolerance Restart Delay Range

Tolerance
Over/Under Frequency
Phase Sequence
Response Time-Phase
Reversal & Phase Loss
Reset
Output

Type Form Rating

Life

Protection

Phase Reversal/Failure
Motors and Generators
Surge
Isolation Voltage
Circuitry
Mechanical
Mounting

Dimensions

Termination

Weight

Environmental
Operating/Storage
Temperature
Humidity

Voltage detection with delayed trip & automatic reset

109 - 113% of the adjusted line voltage ≈ -3% of the trip voltage

88 - 92% of the adjusted line voltage $\approx +3\%$ of the trip voltage

Adjustable 2 - 10% or specify fixed unbalance of 2 - 10% in 1% increments ≅ -0.7% unbalance

Over/undervoltage, voltage unbalance, over/under frequency Adjustable from 1 - 30s or specify fixed delay 1 - 30s in 1s increments

Adjustable from 0.6 - 300s; if no restart delay is selected a 0.6s initialization delay applies \pm 15%

±4%; Reset ±3%; 50/60 Hz A, B, C, L1, L2, L3

≤200 ms Automatic

Isolated Electromechanical Relay DPDT

10A resistive @ 240VAC; 8A resistive @ 277VAC; NO-1/4 hp @ 120VAC; 1/3 hp @ 240VAC

Mechanical - 1 x 10^6 Electrical (at 10A) - DPDT - 1 x 30^3

ASME A17.1 Rule 210.6 NEMA MG1 14:30, 14:35 IEEE C62.41-1991 Level B ≥ 2500V RMS input to output Encapsulated

Surface mount with one #10 (M5 x 0.7) screw Note: 0.25 in.(6.35 mm) spacing between units or other devices is required H 76.7 mm (3.0"); W 50.8 mm (2.0");

H 76.7 mm (3.0"); **W** 50.8 mm (2.0") **D** 41.7 mm (1.64")

Screw terminal connection up to 12 AWG (3.3 mm^2) wire

-40° to 60° C / -40° to 85° C 95% relative, non-condensing ≈ 3.9 oz (111 g)

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Littelfuse:

HLMUDRAAA HLMUDNAAN HLMUDLAAA HLMUDN0405N