































# REMOTE INDICATION

REMOTE INDICATION & METERS		
Product	Features	Accessory For
<b>RK-105</b> Remote Indication and Reset Assembly   	Panel-mounted remote indication and reset with NEMA 1 rating.	<b>SE-105</b> <b>SE-107</b>
<b>RK-105I</b> Remote Indication Assembly   	Panel-mounted remote indication with NEMA 1 rating.	<b>SE-105</b> <b>SE-107</b>
<b>RK-102</b> Industrial Remote Indication and Reset Kit   	Panel-mounted remote indication and reset, standard 22 mm mounting, with NEMA 4 and NEMA 13 rating.	<b>SE-105</b> <b>SE-107</b>
<b>RK-132</b> Industrial Remote Indication and Reset Kit   	Panel-mounted remote indication and reset, standard 22 mm mounting, with NEMA 4 and NEMA 13 rating.	<b>SE-134C</b> <b>SE-135</b> <b>SE-145</b>
<b>RK-325</b> Remote Indication and Reset Assembly   	Panel-mounted remote indication and reset with NEMA 1 rating.	<b>SE-325</b>
<b>RK-325I</b> Remote Indication Assembly   	Panel-mounted remote indication with NEMA 1 rating.	<b>SE-325</b>
<b>RK-302</b> Remote Indication and Reset Kit   	Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating.	<b>SE-325</b>
<b>RK-332</b> Remote Indication and Reset Kit   	Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating.	<b>SE-330</b> <b>SE-330AU</b> <b>SE-330HV</b>
<b>PGB-6130</b> Remote Indication and Reset Assembly 	Remote indication of overcurrent, phase unbalance, phase loss, phase sequence, and overtemperature. Remote reset included.	<b>PGR-6130</b>
<b>PGB-6800</b> Remote Indication and Reset Assembly 	Remote indication of overcurrent, undercurrent, phase unbalance, phase loss, and phase sequence. Remote reset included.	<b>PGR-6800</b>
<b>PGA-0500</b> Analog % Current Meter 	Panel-mounted analog meter displays ground-fault current as a percentage of the set point.	<b>SE-601</b> <b>PGR-4300</b> <b>PGR-6100</b> <b>SE-701</b> <b>SE-703</b> <b>SE-704</b>
<b>PGA-0510</b> Analog Ohm Meter 	Panel-mounted analog ohmmeter displays insulation resistance from 0 $\Omega$ to infinity.	<b>PGR-3200</b> <b>PGR-6100</b>
<b>E2323 &amp; E2324</b> Megaohmmeter & Kiloohmmeter 	Flush-mounted units designed for connection with the T3200 for instrument readings.	<b>T3200</b>
<b>M8100</b> Synchroscope 	Flush-mounted units provide illuminated indication of the phase and frequency difference between voltages on two separate AC systems.	<b>T5000</b> <b>T4500</b> <b>C6200 FlexGen</b> <b>S6000 Sigma</b>

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Littelfuse:](#)

[PGA-0500](#)