### **General Description**

The MAX77596 evaluation kit (EV kit) demonstrates the MAX77596 synchronous step-down converter IC with integrated switches. The EV kit operates over a wide input range of 3.5V to 24V and can support loads up to 300mA. The EV kit comes standard with the 3.3V fixed output voltage version of the IC. It can be easily modified to evaluate the 5V fixed output version or the adjustable output voltage version.

The EV kit includes jumpers to enable or disable the device, as well as to select either forced-PWM mode (FPWM) or skip-mode operation. A RESETB test point is available to monitor the voltage quality of the converter's output.

### **Features**

- Evaluates Both Fixed-Output and Adjustable-Output Versions (3.3V Version Is Preinstalled)
- 3.5V to 24V Input Voltage Range
- 300mA Maximum Load
- Demonstrates 1.1µA Quiescent Current at 14V Input
- RESET Output Test Point
- Simple Two-Layer Board Serves as a Reference Design
- Proven PCB Layout
- Fully Assembled and Tested

Ordering Information appears at end of data sheet.

### **Quick Start**

### **Required Equipment**

- MAX77596 EV kit
- DC power supply capable of supplying 24V, 300mA

**Evaluates: MAX77596** 

- Variable load capable of sinking 300mA<sub>DC</sub> at 3.3V
- Two voltmeters

### **Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. Read all the steps before proceeding with step 1.

- Verify that the IC is enabled by installing a shunt on pins 1-2 on jumper J1.
- 2) Verify that IC is operating in skip mode by installing a shunt on pins 2-3 on jumper J2.
- 3) Set the DC power supply to 0V.
- 4) Set the variable load to 0mA.
- 5) Connect the positive and negative terminals of the power supply to the VIN and GND1 test pads, respectively.
- 6) Connect terminals of the variable load to the VOUT and GND2 test pads. Observe the positive and negative polarity requirements of the variable load, if there are any (VOUT is positive and GND2 is negative).
- 7) Attach a voltmeter across the VOUT and GND2 test pads.
- 8) Attach a voltmeter across the RESETB and GND2 test pads.
- 9) Ramp the DC power-supply voltage from 0 to 12V.
- Verify that the voltmeter connected to VOUT measures approximately 3.3V.
- 11) Verify that the voltmeter connected to RESETB measures approximately 5V.
- 12) Enable the variable load and ramp the load current from 0mA to 300mA.
- 13) Repeat steps 10 and 11.



### **Detailed Description of Hardware**

The MAX77596 EV kit is a fully assembled and tested circuit board to evaluate the performance of the MAX77596 step-down converter IC. The EV kit operates over a 3.5V to 24V input voltage range, while consuming only  $1.1\mu A$  of quiescent current at  $14V_{IN}$  and 0mA load (fixed-output voltage version).

The EV kit can be configured to operate in forced-PWM mode (FPWM) or low-quiescent current skip mode using jumper J2. The IC can be enabled or disabled using jumper J1. The RESETB test point connects to the IC's RESET output, which monitors output-voltage quality. Refer to the MAX77596 IC data sheet for more information on the IC.

### Configuring the Output Voltage (V<sub>OUT</sub>)

The EV kit comes standard with the fixed 3.3V output version, but can easily be modified to evaluate the adjustable-output version of the device or the 5V fixed version.

To evaluate the 5V fixed output voltage version, replace U1 with the MAX77596ETBA+ and leave the rest of the board unchanged.

To evaluate the adjustable-output voltage version, replace U1 with the MAX77596ETBC+ and remove the  $0\Omega$  resistor on R4. The output voltage of the adjustable version can be set between 1V and 10V by populating resistors R3 and R4. Choose R3 to be less than or equal to  $100k\Omega$ . Then calculate R4 for the desired  $V_{OUT}$  with the following equation:

$$R4 = R3 \times [(V_{OUT}/V_{FB}) - 1]$$

where  $V_{FB} = 1V$ .

**Table 1. Enable Control (J1)** 

| SHUNT<br>POSITION | EN PIN                          | VOUT  |
|-------------------|---------------------------------|---|
| 1-2               | Connected to VIN (SUP)          | Enabled   |
| 2-3               | Connected to GND (PGND)         | Disabled  |
| Not installed     | Connected to an external source | Enabled with logic-high Disabled with logic-low |

The feed-forward capacitor (C8) is already installed for use with the external feedback resistors and the adjustable version of the IC. C8 is not required for the fixed-output-voltage version. When evaluating other versions of the device, the inductor, input capacitors, and output capacitors might need to change. Refer to the *Applications Information* section in the MAX77596 IC data sheet for more information.

Evaluates: MAX77596

### **Enable Control**

The EV kit uses jumper J1 to control the enable (EN) input. Connect EN to VIN (SUP) by shunting pins 1-2 to enable the device. Connect EN to GND by shunting pins 2-3 to disable the device. Table 1 summarizes the operation of J1.

#### **Mode Control**

The EV kit uses jumper J2 to configure the IC in either forced-PWM (FPWM) mode or skip mode. Connect the MODE pin to BIAS by installing a shunt in positions 1-2 on J2 to enable FPWM mode. Connect MODE to GND by installing a shunt in positions 2-3 on J2 to enable skip mode. Table 2 summarizes the operation of J2.

### **RESET Output**

The EV kit provides a RESETB test point to monitor the status of the  $\overline{\text{RESET}}$  pin.  $\overline{\text{RESET}}$  becomes high impedance and is pulled to the BIAS voltage level through resistor R1 after the regulator output increases above 92% of the nominal regulated voltage.  $\overline{\text{RESET}}$  goes low when the regulator output drops below 90% of the nominal regulated voltage.

**Table 2. Mode Control (J2)** 

| SHUNT<br>POSITION | MODE PIN MODE     |  |
|-------------------|-------------------|--|
| 1-2               | Connected to BIAS | Forced-PWM mode                          |
| 2-3               | Connected to GND  | Skip mode                                |
| Not installed     | Floating          | Internally pulled down to GND, skip mode |

## **Component Suppliers**

| SUPPLIER        | PHONE        | WEBSITE                |  |
|-----------------|--------------|------------------------|--|
| Murata Americas | 800-241-6574 | www.murataamericas.com |  |
| TOKO, Inc.      | 847-297-0070 | www.toko.co.jp         |  |

Evaluates: MAX77596

Note: Indicate that you are using the MAX77596 when contacting these component suppliers.

## **Ordering Information**

| PART           | TYPE   |
|----------------|--------|
| MAX77596EVKIT# | EV Kit |

#Denotes RoHS compliant.


### **MAX77596 BOM**

| PART   | QTY | DESCRIPTION   |
|--------|-----|---|
| C1     | 1   | 4.7μF ±10%, 35V X5R ceramic capacitor (0603)<br>Murata GRM188R6YA475KE15D |
| C2     | 1   | 1μF ±10%, 25V X5R ceramic capacitor (0603)<br>Murata GRM188R61A105KA61D   |
| C3     | 1   | 0.1µF ±10%, 10V X5R ceramic capacitor (0402)<br>Murata GRM155R61A104KA01D |
| C4-C6  | 3   | 22μF ±20%, 10V X5R ceramic capacitors (0603)<br>Murata GRM188R61A226ME15D |
| C8     | 1   | 5.6pF ±20%, 50V X5R ceramic capacitor (0603)<br>Murata GRM1555C1H5R6BA01D |
| J1, J2 | 2   | 3-pin headers   |
| L1     | 1   | 10μH ±30%, 1.4A inductor (2520)<br>TOKO DFE252012F-100M                   |
| R1     | 1   | 100kΩ ±5% resistor (0402)   |
| R3     | 0   | Not installed, resistor (0402)  |
| R4     | 1   | 0Ω resistor (0402)  |
| C7     | 0   | 22μF± 10%, 35V tantalum capacitor (7343), not installed                   |
| U1     | 1   | MAX77596ETBB+ (10 TDFN-EP)  |
| _      | 2   | Shunts  |
| _      | 1   | PCB: MAX77596 EV KIT  |

Evaluates: MAX77596


# Evaluates: MAX77596


## **MAX77596 Schematics**

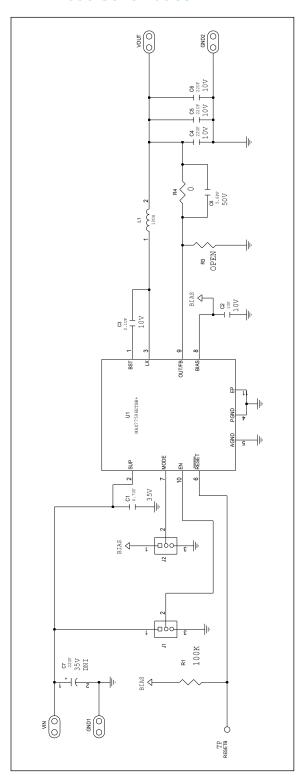



## Evaluates: MAX77596

## **MAX77596 PCB Layout**

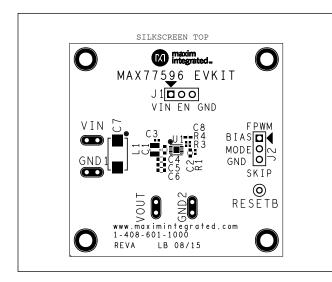

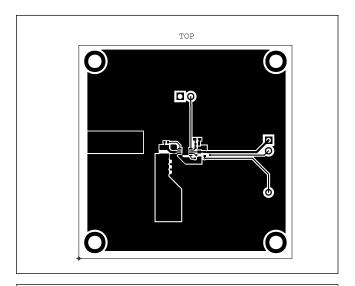

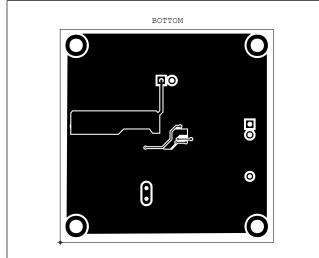

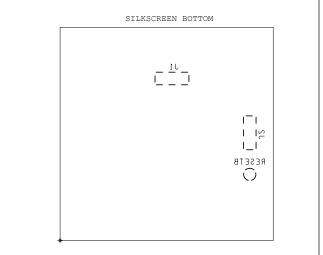

## MAX77596 Evaluation Kit

## **Revision History**

| REVISION<br>NUMBER | REVISION<br>DATE | DESCRIPTION  | PAGES<br>CHANGED |
|--------------------|------------------|--|------------------|
| 0                  | 9/15             | Initial release  | _                |
| 1                  | 3/16             | Updated General Description, Features, and Configuring the Output Voltage (V <sub>OUT</sub> ) sections | 1, 2             |

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Evaluates: MAX77596

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: MAX77596EVKIT#