

Miniature 10 Amps • 4PDT To MIL-R-83536

SPECIFICATIONS

GENERAL

Contact Arrangement 4PDT (4 Form C)
Weight 3.0 oz approx.
 Designed to meet the requirements of MIL-R-6106

PERFORMANCE

Contact Rating (Note 1):

Resistive 10 Amps @ 28 VDC or
 115/208V 400 Hz
 (Case Grounded)
Inductive 6 Amps @ 115/208V 400 Hz
 (Case Grounded)
 4 Amps @ 115/208V 60 Hz
 (Case Grounded)
Motor 4 Amps @ 28 VDC or
 115/208V 400 Hz
 (Case Grounded)
 3 Amps @ 115/208V 60 Hz
 (Case Grounded)
Lamp 2 Amps @ 28 VDC or
 115/208V 400 Hz
 (Case Grounded)
 1.5 Amps @ 115/208V 60 Hz
 (Case Grounded)

Life 100,000 operations minimum @ rated
 resistive load, 125°C

Pull In Power 500 mw approx.

Operate/Release Time: **DC Coil** **AC Coil**
 15 ms max 50 ms max
 Excluding bounce time at nominal coil voltage

Contact Bounce Time 1 ms max
 @ rated contact load, 28 VDC

Contact Voltage Drop:

Before Life 150 mv max @ 10 Amps
 and 6 VDC
After Life 175 mv max @ 10 Amps
 and 6 VDC

ENVIRONMENTAL

Temperature Range -70°C to +125°C

Vibration (Note 2) 0.12" DA 10 - 70 Hz
 30 G's 70 - 3,000 Hz

Shock (Operating)(Note 2) 200 G's 6 ms

ELECTRICAL CHARACTERISTICS

Duty Cycle Continuous

Insulation Resistance 100 megohms
 @ 500V 25°C

Dielectric Strength:

Sea Level:
 Contact to Case 1,250 VRMS
 Contact to Coil 1,250 VRMS
 Coil to Case 1,000 VRMS
 Across Open Contacts 1,250 VRMS
80,000 Feet:
 All Points 350 VRMS


MIL-R-83536/15 QUALIFIED to ER level M

Notes:


- For other ratings consult the factory.
- For applications requiring higher shock and vibration, consult the factory.
- AC coil line frequency 50 to 400 Hz.

COIL DATA:


MODEL BR230 PART NUMBER	BR230-20()-6V	BR230-78()-12V	BR230-290()-28V	BR230-890()-48V	BR230AC-()-115V (Note 3)
NOMINAL COIL VOLTAGE	6 VDC	12 VDC	28 VDC	48 VDC	115 VAC
MAXIMUM COIL VOLTAGE	8 VDC	15 VDC	29 VDC	59 VDC	122 VAC
PULL IN VOLTAGE (MAX @	4.5 VDC	9 VDC	18 VDC	36 VDC	90 VAC
DROP OUT VOLTAGE (MAX)	1.8 VDC	3.5 VDC	5.1 VDC	11 VDC	5 - 30 VAC
COIL RESISTANCE $\pm 10\%$ @ 25°C	20 OHMS	78 OHMS	290 OHMS	890 OHMS	I = 0.04 AMPS

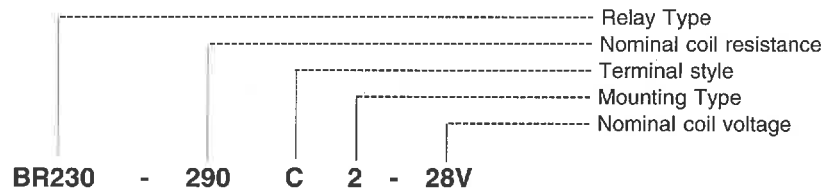




SCHEMATIC TERMINAL VIEWS

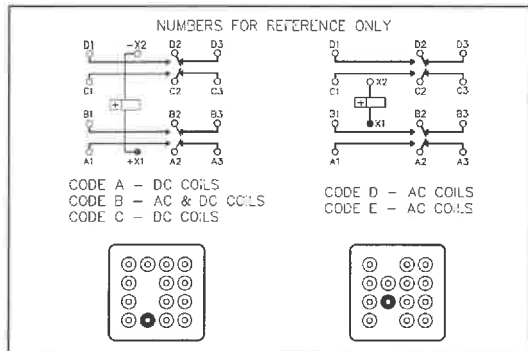

TERMINAL STYLES

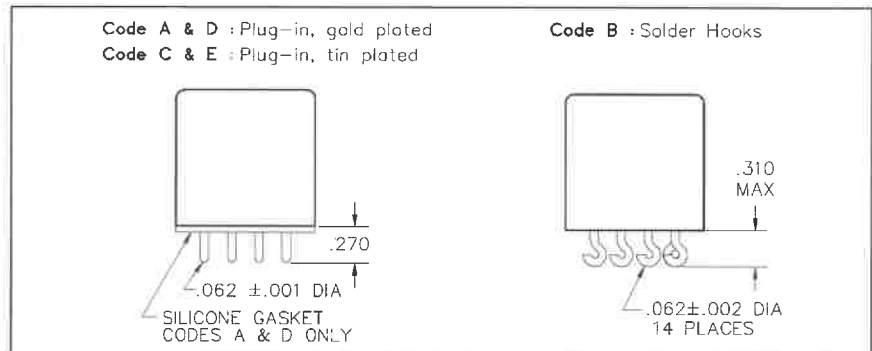

MOUNTING CODES

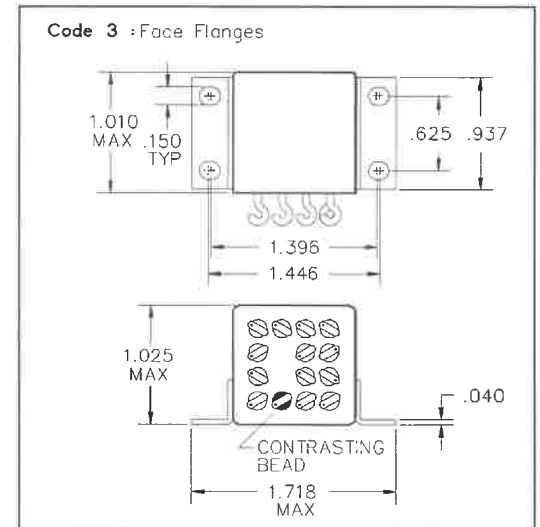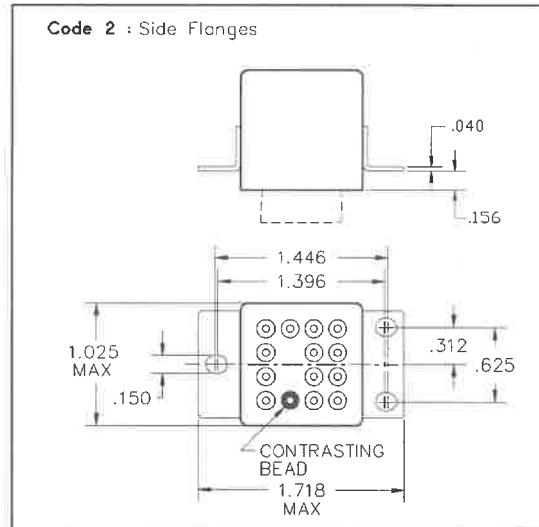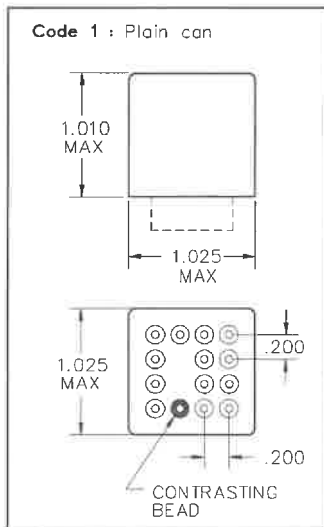

GENERAL NOTES

- Unless otherwise specified, all tests made at nominal coil voltages, @ 25°C.
- For special coil variations, switching configurations, terminals styles and mounting types, consult the factory.
- Unless otherwise specified, tolerances on decimal dimensions are $\pm .010"$.
- Specifications contained herein are subject to change without notice.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Microchip:](#)

[BR230-290B2-28V](#) [BR230-290B2-28V-021M](#) [BR230-290B1-28V](#) [BR230-290C1-28V](#) [BR230-290A2-28V](#) [BR230-290A2-28V-022L](#) [BR230-290A2-28V-022M](#) [BR230-290B1-28V-018L](#) [BR230-290B1-28V-018M](#) [BR230-290B2-28V-021L](#) [BR230-890C1-48V-025M](#) [BR230-890C2-48V-028L](#) [BR230-890C2-48V-028M](#) [BR230-890C3-48V-031L](#) [BR230-890C3-48V-031M](#) [BR230-890B1-48V-026M](#) [BR230-890B2-48V-029L](#) [BR230-890B2-48V-029M](#) [BR230-890B3-48V-032L](#) [BR230-890B3-48V-032M](#) [BR230-890C1-48V-025L](#) [BR230-78C3-12V-015M](#) [BR230-890A1-48V-027L](#) [BR230-890A1-48V-027M](#) [BR230-890A2-48V-030L](#) [BR230-890A2-48V-030M](#) [BR230-890B1-48V-026L](#) [BR230-78C2-12V-012L](#) [BR230-78C2-12V-012M](#) [BR230-78C3-12V-015L](#) [BR230-290A1-28V](#) [BR230-290A1-28V-019L](#) [BR230-290A1-28V-019M](#) [BR230-78B2-12V](#) [BR230-78B2-12V-013L](#) [BR230-78B2-12V-013M](#) [BR230-78B3-12V-016L](#) [BR230-78B3-12V-016M](#) [BR230-78C1-12V-009M](#) [BR230-78A1-12V-011L](#) [BR230-78A1-12V-011M](#) [BR230-78A2-12V-014L](#) [BR230-78A2-12V-014M](#) [BR230-78B1-12V-010L](#) [BR230-78B1-12V-010M](#) [BR230-290C2-28V](#) [BR230-290C2-28V-020L](#) [BR230-290C3-28V-023L](#) [BR230-290C3-28V-023M](#) [BR230-290B3-28V](#) [BR230-290B3-28V-024L](#) [BR230-290B3-28V-024M](#) [BR230-290C1-28V-017L](#) [BR230-78C1-12V-009L](#) [BR230-20B1-6V-002M](#) [BR230-20C1-6V-001M](#) [BR230-20A2-6V-006M](#) [BR230-20C3-6V-007L](#) [BR230-20C3-6V-007M](#) [BR230-893B3-48V-032L](#) [BR230-20B2-6V-005M](#) [BR230-20A1-6V-003M](#) [BR230-20A1-6V-003L](#) [BR230-20C1-6V-001L](#) [BR230-20B2-6V-005L](#) [BR230-20B1-6V-002L](#) [BR230-290C1-28V-017M](#) [BR230-20B3-6V-008L](#) [BR230-20C2-6V-004L](#) [BR230-20C2-6V-004M](#) [BR230-20A2-6V-006L](#) [BR230-20B3-6V-008M](#) [BR230-290C2-28V-020M](#) [BR230-20A2-28V-006L](#) [BR230-20A1-6V](#) [BR230-20A2-6V](#) [BR230-20B1-6V](#) [BR230-20B2-6V](#) [BR230-20B3-6V](#) [BR230-20C1-6V](#) [BR230-20C2-6V](#) [BR230-20C3-6V](#) [BR230-290C3-28V](#) [BR230-78A1-12V](#) [BR230-78A2-12V](#) [BR230-78B1-12V](#) [BR230-78B3-12V](#) [BR230-78C1-12V](#) [BR230-78C2-12V](#) [BR230-78C3-12V](#) [BR230-890A1-48V](#) [BR230-890A2-48V](#) [BR230-890B1-48V](#) [BR230-890B2-48V](#) [BR230-890B3-48V](#) [BR230-890C1-48V](#) [BR230-890C2-48V](#) [BR230-890C3-48V](#)