

MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

# eFuse 3 Click





PID: MIKROE-4630

eFuse 3 Click is a compact add-on board that contains an electronic eFuse. This board features the NIS6150, a resettable fuse that can significantly enhance the reliability of a USB application from both catastrophic and shutdown failures from onsemi. It is designed to buffer the load device from the excessive input voltage, which can damage sensitive circuits and protect the input side from reverse currents. It includes an over-voltage clamp circuit that limits the output voltage during transients but doesn't shut the unit down, allowing the load circuit to continue its operation. This Click board™ is suitable for automotive infotainment, overcurrent surge protection, and robust resettable fault protection.


eFuse 3 Click is supported by a mikroSDK compliant library, which includes functions that simplify software development. This <u>Click board™</u> comes as a fully tested product, ready to be used on a system equipped with the mikroBUS™ socket.

#### How does it work?

eFuse 3 Click, as its foundation, uses the NIS6150, a self-protected, resettable electronic fuse from onsemi that contains circuits to monitor the input voltage, output voltage, output current, and die temperature. It comes with ENABLE feature with a separate 'flag' for fault identification, adjustable output current-limit protection with a thermal shutdown, and a current monitoring pin. The NIS6150 also includes an internal temperature sensing circuit that senses the temperature on the die of the power FET. If the temperature reaches 175°C, the device will shut down and remove power from the load.

Mikroe produces entire development toolchains for all major microcontroller architectures. Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.



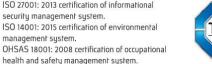






MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918
Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

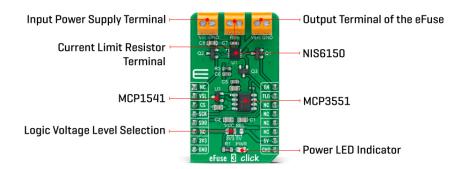

This Click board  $^{\text{TM}}$  communicates with MCU through the 3-Wire SPI serial interface using the MCP3551, a 22bit sigma-delta ADC from Microchip. The MCP3551 is used for current monitoring purposes by converting the output current from NIS6150 IMON pin with a very high resolution of 22 bits and low noise to digital data, which can be obtained via the SPI interface of the Click board  $^{\text{TM}}$ . This ADC uses the reference voltage, the 4.096V reference voltage level provided by the MCP1541 from Microchip powered from the +5V mikroBUS  $^{\text{TM}}$  power rail, resulting in high accuracy and stability. A resistor that connects to the middle connector on this Click board  $^{\text{TM}}$ , labeled as Rlim, sets the overload and short circuit current limit levels.

The VSL pin routed to the RST pin on the mikroBUS™ socket allows the overvoltage clamp to be set at either a 5.7 V or 6.5 V minimum by pulling this pin to a low logic state. It monitors the output voltage, and if the input exceeds the output voltage, the gate drive of the main FET is reduced to limit the output. This is intended to allow operation through transients while protecting the load. If an overvoltage condition exists for many seconds, the device may overheat due to the voltage drop across the FET combined with the load current. In this event, the thermal protection circuit would shut down the device.

The eFuse 3 Click also has active two additional pins of the mikroBUS™ socket, the INT and PWM pins labeled as FLG and EN. The Enable feature, routed to the PWM pin on the mikroBUS™ socket, provides a digital interface to control the output of the eFuse. That's why when this pin is pulled to a low logic state - the eFuse is turned OFF. On the other hand, the 'flag' pin routed to the INT pin on the mikroBUS™ socket sends information to the MCU regarding the state of the chip. If a thermal fault occurs, the voltage on this pin will go to a low state to signal a monitoring circuit that the device is in thermal shutdown.

This Click board  $^{\text{TM}}$  can operate with both 3.3V and 5V logic voltage levels selected via the VCC SEL jumper. This way, it is allowed for both 3.3V and 5V capable MCUs to properly use the SPI communication lines. However, the Click board  $^{\text{TM}}$  comes equipped with a library containing easy-to-use functions and an example code that can be used, as a reference, for further development.

## **Specifications**

Type	Power Switch		
1 ' '	Can be used for automotive infotainment, overcurrent surge protection, and robust		
	resettable fault protection.		

Mikroe produces enrire development rooichains for all major microcontroller architectures

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.









MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

On-board modules	NIS6150 - self-protected, resettable electronic fuse from onsemi MCP3551 - 22bit sigma-delta ADC from Microchip MCP1541 - 4.096V reference voltage from Microchip
Key Features	Integrated reverse current protection, adjustable current limit, current monitoring, increased efficiency, automotive qualified, and more.
Interface	SPI
Feature	No ClickID
Compatibility	mikroBUS™
Click board size	M (42.9 x 25.4 mm)
Input Voltage	3.3V or 5V

# **Pinout diagram**

This table shows how the pinout on eFuse 3 Click corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes	Pin	mikro™ BUS				Pin	Notes	
	NC	1	AN	PWM	16	EN	Enable	
Overvolatage Clamp	VSL	2	RST	INT	15	FLG	Interrupt	
SPI Chip Select	CS	3	CS	RX	14	NC		
SPI Clock	SCK	4	SCK	TX	13	NC		
SPI Data OUT	SDO	5	MISO	SCL	12	NC		
	NC	6	MOSI	SDA	11	NC		
Power Supply	3.3V	7	3.3V	5V	10	5V	Power Supply	
Ground	GND	8	GND	GND	9	GND	Ground	

# **Onboard settings and indicators**

Label	Name	Default	Description
LD1	PWR	-	Power LED Indicator
JP1	VCC SEL		Logic Level Voltage Selection 3V3/5V: Left position 3V3, Right position 5V

# eFuse 3 Click electrical specifications

Description	Min	Тур	Max	Unit
Supply Voltage VCC	3.3	-	5	V
Supply Voltage VIN	-	5	10	V
Maximum Output Voltage	5.7	6.1	6.7	V
Current Limit	-	1.2	-	Α
ON Resistance	-	135	200	mΩ
Operating Temperature Range	-40	+25	+150	°C

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

## **Software Support**

We provide a library for the eFuse 3 Click as well as a demo application (example), developed using MikroElektronika <u>compilers</u>. The demo can run on all the main MikroElektronika <u>development boards</u>.

Package can be downloaded/installed directly from NECTO Studio Package Manager(recommended way), downloaded from our  $\underline{\mathsf{LibStock}^{\mathsf{TM}}}$  or found on  $\underline{\mathsf{mikroE}}$  github account.

## **Library Description**

This library contains API for eFuse 3 Click driver.

Key functions:

- efuse3 cfg setup Config Object Initialization function.
- efuse3 init Initialization function.
- efuse3 default cfg Click Default Configuration function.

### **Examples description**

This library contains API for the eFuse 3 Click driver. The library contains drivers to enable/disable the device, for reading ADC voltage, overflow status, output and current value [A].

The demo application is composed of two sections:

The full application code, and ready to use projects can be installed directly from NECTO Studio Package Manager(recommended way), downloaded from our  $\underline{\mathsf{LibStock}}^{\mathsf{TM}}$  or found on  $\underline{\mathsf{mikroE}}$  github account.

Other mikroE Libraries used in the example:


- MikroSDK.Board
- MikroSDK.Log
- Click.eFuse3

#### Additional notes and informations

Depending on the development board you are using, you may need <u>USB UART click</u>, <u>USB UART 2 click</u> or <u>RS232 click</u> to connect to your PC, for development systems with no UART to USB interface available on the board. The terminal available in all MikroElektronika <u>compilers</u>, or any other terminal application of your choice, can be used to read the message.

#### mikroSDK

This Click board<sup>™</sup> is supported with <u>mikroSDK</u> - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant Click board<sup>™</sup> demo applications, mikroSDK should be downloaded from the <u>LibStock</u> and installed for the compiler you are using.

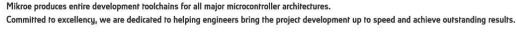





health and safety management system.



MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918
Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

Phone: + 381 | 1 /8 5 / 600 Fax: + 381 | 1 63 09 644 E-mail: omce@mikroe.com

For more information about mikroSDK, visit the official page.

#### Resources

mikroBUS™

**mikroSDK** 

Click board™ Catalog

Click boards™

## **Downloads**


MCP1541 datasheet

eFuse 3 click 2D and 3D files

eFuse 3 Click schematic

NIS6150 datasheet

eFuse 3 click example on Libstock

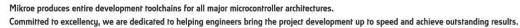







health and safety management system.

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Mikroe:

MIKROE-4630