RFid Reader

All Mikroelektronika's development systems feature a large number of peripheral modules expanding microcontroller's range of application and making the process of program testing easier. In addition to these modules, it is also possible to use numerous additional modules linked to the development system through the I/O port connectors. Some of these additional modules can operate as stand-alone devices without being connected to the microcontroller.

Manual

Additional Board

kroElektronika SOFTWARE AND HARDWARE SOLUTIONS FOR EMBEDDED WORLD ... making it simple

RFid Reader

2x5 male connector enables the additional board to be connected

Transceiver EM4095 is used for

AM modulation/demodulation or

to a microcontroller on the development system

as a driver for the antenna

The *RFid Reader* additional board is used to read identification cards (*RFid Cards*) using radio waves. This additional board features a receiver/transmitter module with antenna and a 2x5 male connector that enables connection with development systems. The operation of the *RFid Reader* board is based on amplitude modulation of radio waves and electromagnetic induction. The *RFid* card is not provided with the *RFid Reader*, but you can buy it separately.



Antenna provided on the additional board is used to receive data stored on the identification card (RFid Card)

Figure 1: RFid Reader

RFid Reader is powered via a development system it is connected to. The presence of the power supply is indicated by a LED marked POWER. When the *RFid Reader* is turned on, a 125kHz voltage is supplied on its antenna. As a result, the anntena starts emitting an electromagnetic field necessary for reading the *RFid* identification card. As passive *RFid* card doesn't have its own power supply, it features a coil where the voltage is automatically induced by approaching the card to the *RFid Reader*'s antenna. This voltage is necessary for the chip featured on the *RFid* card to work. The memory chip on the *RFid* card contains a unique identification code. This code is sent by the card when it is placed close to the *RFid Reader*'s antenna. The code is received via this anntena. Then, it is sent to the microcontroller for further processing.



Figure 2: Identification card (RFid Card)



Figure 3: The principle of RFid Reader's operation

RFid Reader



Figure 4: RFid Reader connection schematic

The function of pins provided on the 2x5 male connector CN1:

- OUT Output signal from the EM4095 circuit (the code read from the identification card)
- RDY/CLK Clock frequency pin and flag
- SHD High voltage on this pin causes the RFid Reader to enter sleep mode
- MOD High voltage on this pin causes signal modulation on the antenna to start



Figure 5: RFid Reader connected to a development system

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Mikroe: MIKROE-262