




For more information,
visit [freescale.com/
sensortoolbox](http://freescale.com/sensortoolbox)

Freescale and the Freescale logo are
trademarks of Freescale Semiconductor, Inc.,
Reg. U.S. Pat. & Tm. Off. All other
product or service names are the
property of their respective owners.
© 2015 Freescale Semiconductor, Inc.
FRDMK22FSA9500QRC REV 1
920-28990 REV A

FRDM-
K22F-
SA9500

FRDM-K22F-SA9500

FRDM-
K22F-
SA9500

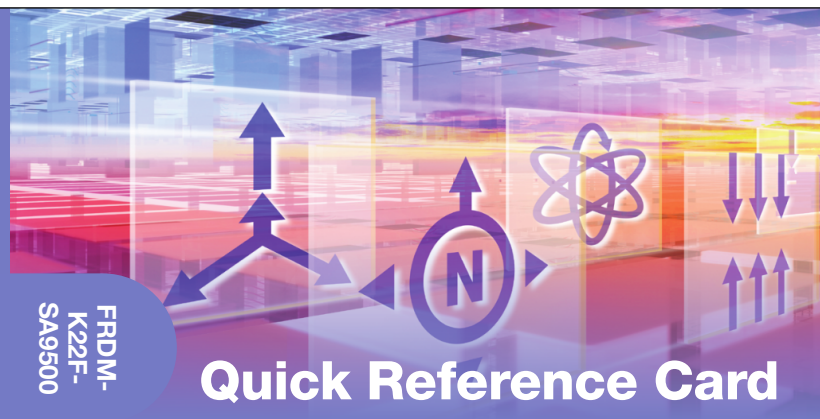

Quick Reference Card

3-Axis Sensor Toolbox Demonstration Kit

Freescale FRDM-STBC-SA9500 and FRDM-K22F
demonstration and development kit



Get Started


Download tools and
documentation under
Jump Start Your Design
at [freescale.com/
sensortoolbox](http://freescale.com/sensortoolbox)



FREESCALE FREEDOM PLATFORM

- 1 Verify package contents:
 - FRDM-K22F/FRDM-STBC-SA9500 assembly
 - USB cable
- 2 Download the mbed Windows serial port driver: developer.mbed.org/handbook/Windows-serial-configuration
- 3 Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
- 4 Download and install the latest Sensor Toolbox software at: freescale.com/sensortoolbox
- 5 Start the Sensor Toolbox software.

FXLC95000CL motion-sensing platform integrating a 3-axis MEMS accelerometer and a 32-bit MCU
24 LGA (3 mm x 5 mm x 1 mm)

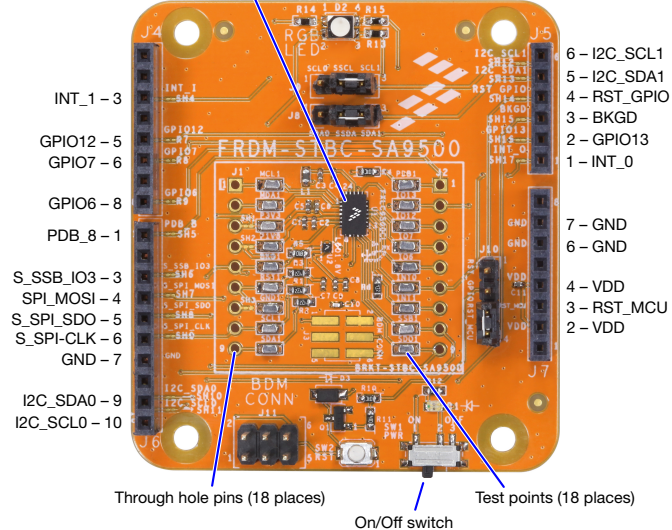

Get to Know the FRDM-K22F-SA9500



Learn more at freescale.com/sensortoolbox

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

NXP:

[FRDM-K22F-SA9500](#)