

# Switch Mode Power Supply S8JX (15/35/50/100/150/300/600-W Models)

## S8JX-G Series

**Easy-to-use, Widely range from 15 W to 600 W (Output Voltage: 5 V to 48 V)**

- Easy Mounting:  
Front-mounted type, DIN rail-mounted type are available.  
Screw-mount at the top. (except 300-/600-W models)
- Safety standards:  
UL 508/60950-1  
cUL CSA C22.2 No. 107.1  
cUR CSA C22.2 No. 60950-1  
EN 50178 (= VDE 0160) Over voltage category III  
EN 60950-1 (= VDE 0805 Teil 1)
- EMC: Conforms to EN 61204-3.  
(EMI:EN55011 ClassA)
- Input conditions:  
The input voltage range of 15-W, 35-W, 50-W, 100-W, and 150-W models has been increased to 80 to 370 VDC (EC Directives and safety standards do not apply.).



## S8JX-P Series

**S8JX-P Series with EMI ClassB and Power Factor Correction is newly added to S8JX Series.**

- (Applicable to all capacities from 50 W to 600 W)
- Limits for harmonic current emissions (conforms to EN61000-3-2)
  - Conforms to EMI EN55011 Class B
  - Applicable to input free voltage: 100 to 240 VAC
  - Extended DC input voltage range: 80 to 370 VAC  
\* DC input is not subject to EC directives and safety standards.
  - Easy mounting: Front-mounting bracket type and DIN-Rail mounting type are included as standard with the product.  
Screw-mount at the top.  
(except 300-/600-W models)
  - Safety standards
    - UL508/60950-1, cUL CSA C22.2 No.107.1, cUR CSA C22.2 No.60950-1
    - EN50178 (=VDE0160) Over voltage category III \*
    - EN60950-1 (=VDE0805 Teil1) \*
  - \* Scheduled to be obtained in June, 2012  
(5V, 12V, and 48V types of 300-W/600-W models).
- <Applicable only for 300 W and 600 W>
- High capacity application-covered functions are included as standard with the product.
  - Alarm detection function, Remote control function, Remote sensing function



Refer to *Safety Precautions* on page 53.

S8JX

Model Number Structure

Model Number Legend

**Note:** Not all combinations are possible. Refer to *List of Models* in *Ordering Information* on page 3.

15-/35-/50-/100-/150-W Models

S8JX-G        
1 2 3 4

1. Power Ratings

- 015: 15 W
- 035: 35 W
- 050: 50 W
- 100: 100 W
- 150: 150 W

2. Output Voltage

- 05: 5 V
- 12: 12 V
- 15: 15 V
- 24: 24 V
- 48: 48 V

3. Configuration (15/35/50/100/150 W model)

- None: Open-frame
- C: Covered

4. Configuration/mounting

- None: Front-mounting
- D: DIN Rail-mounting

300-/600-W Models

S8JX-G       
1 2 3

1. Power Ratings

- 300: 300 W
- 600: 600 W

2. Output Voltage

- 05: 5V
- 12: 12 V
- 24: 24 V
- 48: 48 V

3. Configuration/mounting (covered type)

- C: Front-mounting
- CD: DIN Rail-mounting

**Note:** Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.

## Ordering Information

### List of Models

**Note:** For details on normal stock models, contact your nearest OMRON representative.

Configuration	Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
Open-frame Power Supplies	Front-mounting *1	15 W	5 V	3 A	No	S8JX-G01505
			12 V	1.3 A		S8JX-G01512
			15 V	1 A		S8JX-G01515
			24 V	0.65 A		S8JX-G01524
			48 V	0.35 A		S8JX-G01548
		35 W	5 V	7 A		S8JX-G03505
			12 V	3 A		S8JX-G03512
			15 V	2.4 A		S8JX-G03515
			24 V	1.5 A		S8JX-G03524
			48 V	0.75 A		S8JX-G03548
		50 W	5 V	10 A		S8JX-G05005
			12 V	4.2 A		S8JX-G05012
			24 V	2.1 A		S8JX-G05024
			48 V	1.1 A		S8JX-G05048
		100 W	5 V	20 A		S8JX-G10005
			12 V	8.5 A		S8JX-G10012
			24 V	4.5 A		S8JX-G10024
			48 V	2.1 A		S8JX-G10048
		150 W	5 V	30 A		S8JX-G15005
			12 V	13 A		S8JX-G15012
			24 V	6.5 A		S8JX-G15024
			48 V	3.3 A		S8JX-G15048
	DIN Rail-mounting *2	15 W	5 V	3 A		S8JX-G01505D
			12 V	1.3 A		S8JX-G01512D
			15 V	1 A		S8JX-G01515D
			24 V	0.65 A		S8JX-G01524D
			48 V	0.35 A		S8JX-G01548D
		35 W	5 V	7 A		S8JX-G03505D
			12 V	3 A		S8JX-G03512D
			15 V	2.4 A		S8JX-G03515D
			24 V	1.5 A		S8JX-G03524D
			48 V	0.75 A		S8JX-G03548D
		50 W	5 V	10 A		S8JX-G05005D
			12 V	4.2 A		S8JX-G05012D
			24 V	2.1 A		S8JX-G05024D
			48 V	1.1 A		S8JX-G05048D
		100 W	5 V	20 A		S8JX-G10005D
			12 V	8.5 A		S8JX-G10012D
			24 V	4.5 A		S8JX-G10024D
			48 V	2.1 A		S8JX-G10048D
		150 W	5 V	30 A		S8JX-G15005D
			12 V	13 A		S8JX-G15012D
			24 V	6.5 A		S8JX-G15024D
			48 V	3.3 A		S8JX-G15048D

\*1. The front-mounting bracket is included as standard with the product.

\*2. A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Configuration		Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model	
Covered Power Supplies	Front-mounting *1	100 to 240 VAC (free) (80 to 370 VDC *3) S8JX-G15005□□: Switchable between 100 to 120 VAC and 200 to 240 VAC. (DC power cannot be input.)	15 W	5 V	3 A	No	S8JX-G01505C	
				12 V	1.3 A		S8JX-G01512C	
				15 V	1 A		S8JX-G01515C	
				24 V	0.65 A		S8JX-G01524C	
				48 V	0.35 A		S8JX-G01548C	
			35 W	5 V	7 A		S8JX-G03505C	
				12 V	3 A		S8JX-G03512C	
				15 V	2.4 A		S8JX-G03515C	
				24 V	1.5 A		S8JX-G03524C	
				48 V	0.75 A		S8JX-G03548C	
			50 W	5 V	10 A		S8JX-G05005C	
				12 V	4.2 A		S8JX-G05012C	
				24 V	2.1 A		S8JX-G05024C	
				48 V	1.1 A		S8JX-G05048C	
			100 W	5 V	20 A		S8JX-G10005C	
				12 V	8.5 A		S8JX-G10012C	
				24 V	4.5 A		S8JX-G10024C	
				48 V	2.1 A		S8JX-G10048C	
			150 W	5 V	30 A		S8JX-G15005C	
				12 V	13 A		S8JX-G15012C	
				24 V	6.5 A		S8JX-G15024C	
				48 V	3.3 A		S8JX-G15048C	
			DIN Rail-mounting *2	15 W	5 V		3 A	S8JX-G01505CD
					12 V		1.3 A	S8JX-G01512CD
					15 V		1 A	S8JX-G01515CD
					24 V		0.65 A	S8JX-G01524CD
					48 V		0.35 A	S8JX-G01548CD
				35 W	5 V		7 A	S8JX-G03505CD
	12 V	3 A			S8JX-G03512CD			
	15 V	2.4 A			S8JX-G03515CD			
	24 V	1.5 A			S8JX-G03524CD			
	48 V	0.75 A			S8JX-G03548CD			
	50 W	5 V		10 A	S8JX-G05005CD			
		12 V		4.2 A	S8JX-G05012CD			
		24 V		2.1 A	S8JX-G05024CD			
		48 V		1.1 A	S8JX-G05048CD			
	100 W	5 V		20 A	S8JX-G10005CD			
		12 V		8.5 A	S8JX-G10012CD			
		24 V		4.5 A	S8JX-G10024CD			
		48 V		2.1 A	S8JX-G10048CD			
	150 W	5 V		30 A	S8JX-G15005CD			
		12 V		13 A	S8JX-G15012CD			
		24 V		6.5 A	S8JX-G15024CD			
		48 V		3.3 A	S8JX-G15048CD			
	Front-mounting *1	100 to 120 VAC 200 to 240 VAC (Switchable)		300 W	5 V	60 A	Yes	S8JX-G30005C
					12 V	27 A	No	S8JX-G30012C
					24 V	14A		S8JX-G30024C
					48 V	7A	S8JX-G30048C	
				600 W	5 V	120A	Yes	S8JX-G60005C
					12 V	53A		S8JX-G60012C
			24 V		27A	S8JX-G60024C		
			48 V		13A	S8JX-G60048C		
	DIN Rail-mounting *2		300 W	5 V	60 A	No	S8JX-G30005CD	
				12 V	27 A		S8JX-G30012CD	
				24 V	14A		S8JX-G30024CD	
				48 V	7A		S8JX-G30048CD	

\*1. The front-mounting bracket is included as standard with the product.

\*2. A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).



## Ratings, Characteristics, and Functions

Item			Input specification	100 to 240 V input		
			Power ratings *1	15 W	35 W	
Efficiency			68% min.		73% min.	
Input	Voltage *2		100 to 240 VAC (allowable range: 85 to 264 VAC, 80 to 370 VDC *9)			
	Frequency *2		50/60 Hz (47 to 450 Hz)			
	Current *3	100 V input	0.4 A max.		1 A max.	
		200 V input	0.25 A max.		0.6 A max.	
	Harmonic current emissions		---			
	Leakage current *3	100 V input	0.5 mA max.			
		200 V input	1 mA max.			
	Inrush current (for a cold start at 25°C) *3	100 V input	20 A max.			
200 V input		40 A max.				
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (48-V models: ±10%)			
	Ripple *3		2% (p-p) max.			
	Input variation influence		0.4% max. with AC input voltage			
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)			
	Temperature variation influence		0.05%/°C max. (at rated input and output)			
	Startup time		500 ms max. (up to 90% of output voltage at rated input and output)			
	Hold time *3		20 ms min.			
Additional functions	Overload protection *6		105% to 175% of rated load current, voltage drop, intermittent, automatic reset			
	Overvoltage protection *7		Yes			
	Overheat protection		No			
	Parallel operation		No (However, backup operation is possible; external diodes required.)			
	Series operation		Yes (For up to two Power Supplies; external diodes required.)			
	Protective circuit operation indicator		No			
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).			
	Storage temperature		-25 to 65°C (with no icing or condensation)			
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)			
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)			
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC			
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions			
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions			
	Output indicator		Yes (Color: Green)			
	EMI	Conducted Emissions		Conforms to EN 55011 Group 1 Class A and based on FCC Class A *9		
		Radiated Emissions		Conforms to EN 55011 Group 1 Class A *9		
	EMS	Electrostatic Discharge		Conforms to EN61000-4-2		
		Radiated Electromagnetic Field		Conforms to EN61000-4-3		
		Electrical Fast Transient/Burst		Conforms to EN61000-4-4		
		Surge		Conforms to EN61000-4-5		
		Conducted Disturbance		Conforms to EN61000-4-6		
		Voltage Dips/Short Interruptions		Conforms to EN61000-4-11		
	Approved standards *9			UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition)		
cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1						
EN/VDE: EN50178 (= VDE 0160) Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))						
SEMI			SEMI F47-0200 (200-VAC input)			
Weight *8			250 g max.			

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to *Overload Protection* on page 19.

\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

\*8. The weight indicated is for Front-mounting, Open-frame Power Supply.

\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Item		Input specification Power ratings *1	100 to 240 V input	
			50 W	100 W
Efficiency		5 V Models	76% min.	76% min.
		12 V Models	81% min.	81% min.
		24 V Models	83% min.	83% min.
		48 V Models	82% min.	83% min.
Input	Voltage *2		100 to 240 VAC (allowable range: 85 to 264 VAC, 80 to 370 VDC *9)	
	Frequency *2		50/60 Hz (47 to 450 Hz)	
	Current *3	100 V input	1.4 A max.	2.5 A max.
		200 V input	0.8 A max.	1.5 A max.
	Harmonic current emissions		---	
	Leakage current *3	100 V input	0.5 mA max.	
		200 V input	1 mA max.	
	Inrush current (for a cold start at 25°C) *3	100 V input	20 A max.	
		200 V input	40 A max.	
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (48-V models: ±10%)	
	Ripple *3		2% (p-p) max.	
	Input variation influence		0.4% max. (with AC input voltage)	
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)	
	Temperature variation influence		0.05%/°C max. (at rated input and output)	
	Startup time		500 ms max. (up to 90% of output voltage at rated input and output)	
Additional functions	Hold time *3		20 ms min.	
	Overload protection *6		105% to 175% of rated load current, voltage drop, intermittent, automatic reset	
	Overvoltage protection *7		Yes	
	Overheat protection		No	
	Parallel operation		No (However, backup operation is possible; external diodes required.)	
	Series operation		Yes (For up to two Power Supplies; external diodes required.)	
Other	Protective circuit operation indicator		No	
	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).	
	Storage temperature		-25 to 65°C (with no icing or condensation)	
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)	
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)	
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC	
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions	
	Shock resistance		150 m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions	
	Output indicator		Yes (Color: Green)	
	EMI	Conducted Emissions	Conforms to EN 55011 Group 1 Class A and based on FCC Class A *9	
		Radiated Emissions	Conforms to EN 55011 Group 1 Class A *9	
	EMS	Electrostatic Discharge	Conforms to EN61000-4-2	
		Radiated Electromagnetic Field	Conforms to EN61000-4-3	
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4	
		Surge	Conforms to EN61000-4-5	
		Conducted Disturbance	Conforms to EN61000-4-6	
		Voltage Dips/Short Interruptions	Conforms to EN61000-4-11	
	Approved standards *9		UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition)	
			cUL Listed: CSA C22.2 No.107.1	
			cUR: CSA C22.2 No. 60950-1	
			EN/VDE: EN50178 (= VDE 0160) Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))	
	SEMI		SEMI F47-0200 (200-VAC input)	
	Weight *8		300 g max.	550 g max.

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to *Overload Protection* on page 19.

\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

\*8. The weight indicated is for Front-mounting, Open-frame Power Supply.

\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Input specification			100/200 V switchable	100 to 240 V input	
Item	Power ratings *1		150 W at 5 V	150 W at 12 V	150 W at 24 or 48 V
Efficiency	5 V Models		78% min.	---	---
	12 V Models		---	79% min.	---
	24 V Models		---	---	86% min.
	48 V Models		---	---	85% min.
Input	Voltage *2		Switchable between 100 to 120 VAC (allowable range: 85 to 132 VAC) and 200 to 240 VAC (allowable range: 170 to 264 VAC).		
	Frequency *2		100 to 240 VAC (allowable range: 85 to 264 VAC, 80 to 370 VDC *9)		
	Current *3	100 V input	3.5 A max.	3.6 A max.	3.5 A max.
		200 V input	2.1 A max.	2.2 A max.	2.1 A max.
	Harmonic current emissions		---		
	Leakage current *3	100 V input	0.5 mA max.		
		200 V input	1 mA max.		
Inrush current (for a cold start at 25°C) *3	100 V input	20 A max.			
	200 V input	40 A max.			
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (48-V models: ±10%)		
	Ripple *3		2% (p-p) max.		
	Input variation influence		0.4% max. (with AC input voltage)		
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)		
	Temperature variation influence		0.05%/°C max. (at rated input and output)		
	Startup time		500 ms max. (up to 90% of output voltage at rated input and output)		
	Hold time *3		20 ms min.		
Additional functions	Overload protection *6		105% to 175% of rated load current, voltage drop, automatic reset	105% to 175% of rated load current, voltage drop, intermittent, automatic reset	
	Overvoltage protection *7		Yes		
	Overheat protection		No		
	Parallel operation		No (However, backup operation is possible; external diodes required.)		
	Series operation		Yes (For up to two Power Supplies; external diodes required.)		
Protective circuit operation indicator		No			
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).		
	Storage temperature		-25 to 65°C (with no icing or condensation)		
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)		
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC		
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions		
	Shock resistance		150 m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions		
	Output indicator		Yes (Color: Green)		
	EMI	Conducted Emissions	Conforms to EN 55011 Group 1 Class A and based on FCC Class A *9		
		Radiated Emissions	Conforms to EN 55011 Group 1 Class A *9		
EMS	Electrostatic Discharge	Conforms to EN61000-4-2			
	Radiated Electromagnetic Field	Conforms to EN61000-4-3			
	Electrical Fast Transient/Burst	Conforms to EN61000-4-4			
	Surge	Conforms to EN61000-4-5			
	Conducted Disturbance	Conforms to EN61000-4-6			
	Voltage Dips/Short Interruptions	Conforms to EN61000-4-11			
Approved standards *9		UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition) cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1 EN/VDE: EN50178 (= VDE 0160), Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))			
SEMI		---	SEMI F47-0200 (200-VAC input)		
Weight *8		800 g max.	700 g max.	600 g max.	

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to *Overload Protection* on page 19.

\*7. To reset the protection, turn OFF the input power for seven minutes or longer and then turn it back ON.

\*8. The weight indicated is for Front-mounting, Open-frame Power Supply.

\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Input specification			100/200 V (Selected)	
Item	Power ratings *1		300 W	600 W
Efficiency	5 V models		71% min.	72% min.
	12 V models		75% min.	78% min.
	24 V models		82% min.	80% min.
	48 V models		82% min.	80% min.
Input	Voltage *2		100 to 120 VAC (allowable range: 85 to 132 VAC) 200 to 240 VAC (allowable range: 170 to 264 VAC) (Switchable)	
	Frequency *2		50/60 Hz (47 to 450 Hz)	
	Current *3	100 V input	8 A max.	16 A max.(5V, 12V, 48V) 14 A max.(24V)
		200 V input	4.5 A max.	9 A max.(5V, 12V, 48V) 8 A max.(24V)
	Harmonic current emissions		---	
	Leakage current *3	100 V input	0.5 mA max.	
		200 V input	1 mA max.	
	Inrush current (for a cold start at 25°C) *3	100 V input	25 A max.	30 A max.
		200 V input	50 A max.	60 A max.
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (48-V models: ±10%)	
	Ripple *3		2.8% (p-p) max.(5V) *6 2% (p-p) max.(12V, 24V, 48V)	3.8% (p-p) max.(5V) *6 2% (p-p) max.(12V) *6 2% (p-p) max.(24V, 48V)
	Input variation influence		0.4% max.	
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)	
	Temperature variation influence		0.05%/°C max.	
	Startup time		650 ms max.	500 ms max.
	Hold time *3		20 ms min.	
Additional functions	Overload protection *7		105% to 175% of rated load current, Inverted L voltage drop, the circuit will be shut OFF when the overload exceeds 5 s.(5V, 12V) *10 voltage drop, intermittent, automatic reset. (24V, 48V)	105% to 175% of rated load current, Inverted L voltage drop, the circuit will be shut OFF when the overload exceeds 5 s. *10
	Overvoltage protection *8		Yes (5V, 12V) *10 Yes (24V, 48V) *10	Yes *10
	Overheat protection		Yes (5V, 12V) *10 NO (24V, 48V) *10	Yes *10
	Parallel operation		Yes (up to 5 units)	
	Series operation		Yes (For up to two Power Supplies; external diodes required.)	
	Protective circuit operation indicator		Yes (color: red) (5V, 12V) No (24V, 48V)	Yes (color: red)
	Output indicator		Yes (Color: Green)	
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 16 (with no icing or condensation).	
	Storage temperature		-25 to 65°C (with no icing or condensation)	
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)	
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 25 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 25 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 25 mA)	
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC	
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions	
	Shock resistance		150 m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions	
	EMI		Yes (Color: Green)	
	EMS	Conducted Emissions *3	Conforms to EN 55011 Group 1 Class A and based on FCC Class A *11	
		Radiated Emissions	Conforms to EN 55011 Group 1 Class A *11 *12	
		Electrostatic Discharge	Conforms to EN61000-4-2	
		Radiated Electromagnetic Field	Conforms to EN61000-4-3	
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4	
		Surge	Conforms to EN61000-4-5	
		Conducted Disturbance	Conforms to EN61000-4-6	
		Voltage Dips/Short Interruptions	Conforms to EN61000-4-11	
	Approved standards *13		UL UR: UL 508 (Recognition), UL 60950-1 (Recognition)	
			cUR: CSA C22.2 No. 60950-1	
			EN/VDE: EN50178 (= VDE 0160), Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))	
	Weight *9		1,800 g max. (5V, 12V) 1,600 g max. (24V, 48V)	2,500 g max.

- \*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 19.
- \*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
- \*3. Rated input voltage: 100 or 200 VAC at 100% load.
- \*4. Output characteristics: Specified at power supply output terminals.
- \*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
- \*6. Measurement methods are based on JEITA standard RC-9131A. Refer to *Ripple Noise Voltage* on page 55.
- \*7. For details, refer to *Overload Protection* on page 19.
- \*8. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.
- \*9. The weight indicated is for Front-mounting Power Supply.
- \*10. The protection-ON alarm indicator will light as soon as the output is interrupted. For resetting, turn OFF the input power, leave for more than three minutes, and then turn it back ON again.
- \*11. Noise values depend on the wiring methods and other factors. Insert noise filters and cores in the input and output lines.
  - 300 W, 5 V: Two E04SR401938 (manufactured by SEIWA) on the output line.
  - 300 W, 12 V: One E04SR401938 (manufactured by SEIWA) on the output line.
  - 600 W, 5 V or 12 V: One FN2450G-16-61 (manufactured by Schaffner) on the input line.  
One E04RC613620 (manufactured by SEIWA) on the output line.
- \*12. For the 600-W, 5-V and 12-V models, class A compliance was met with an aluminum plate placed under the Power Supply.
- \*13. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).


## Block Diagrams

S8JX-G01505 (15 W)


S8JX-G01512 (15 W)

S8JX-G01515 (15 W)

S8JX-G01524 (15 W)

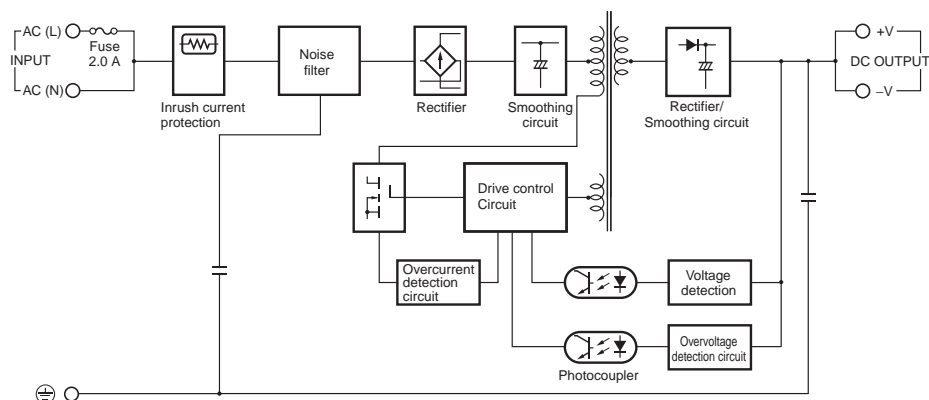

S8JX-G01548 (15 W)

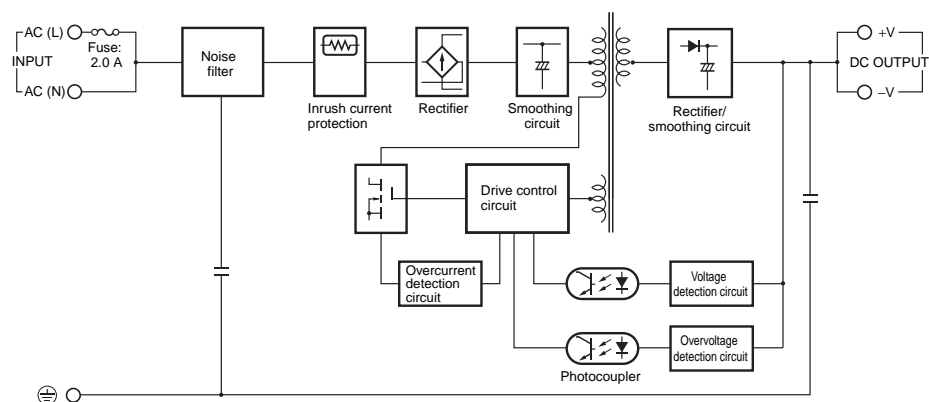


S8JX-G03505 (35 W)


S8JX-G03512 (35 W)

S8JX-G03515 (35 W)

S8JX-G03524 (35 W)

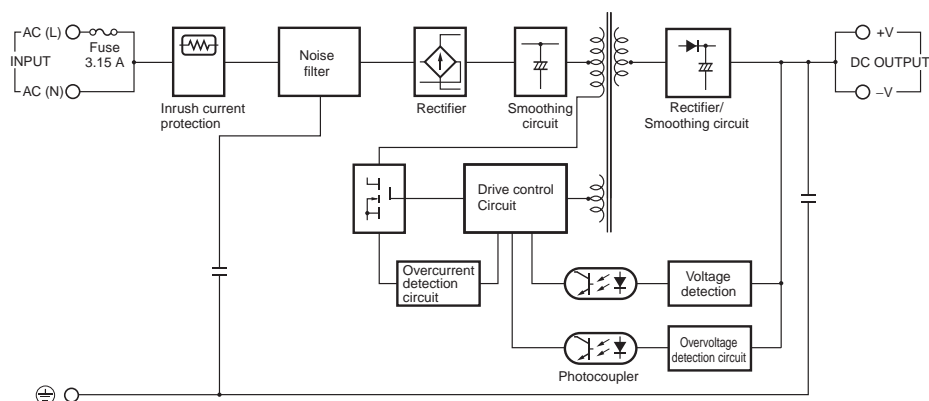


S8JX-G03548 (35 W)

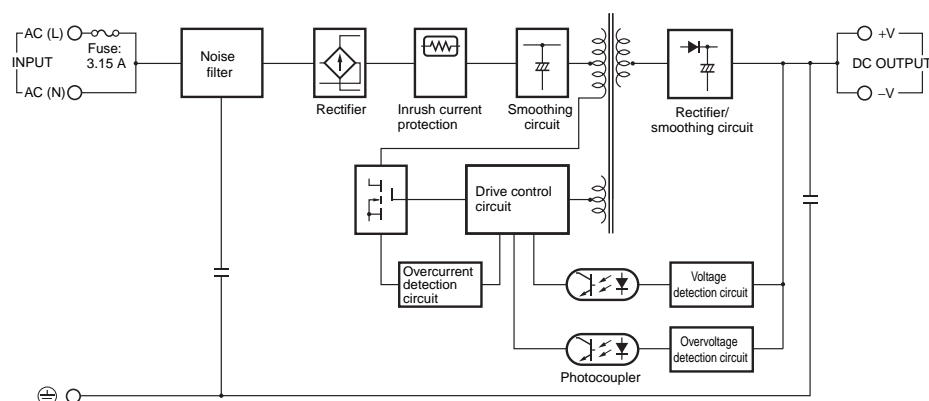


S8JX-G05005 (50 W)

S8JX-G05012 (50 W)


S8JX-G05024 (50 W)

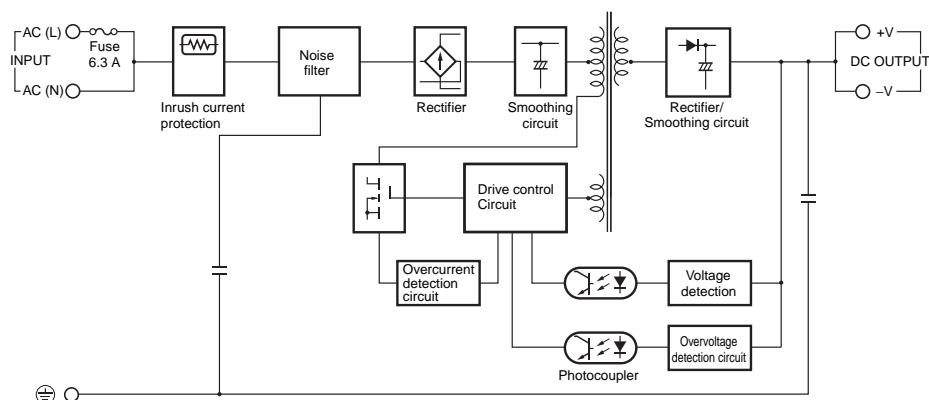

S8JX-G05048 (50 W)

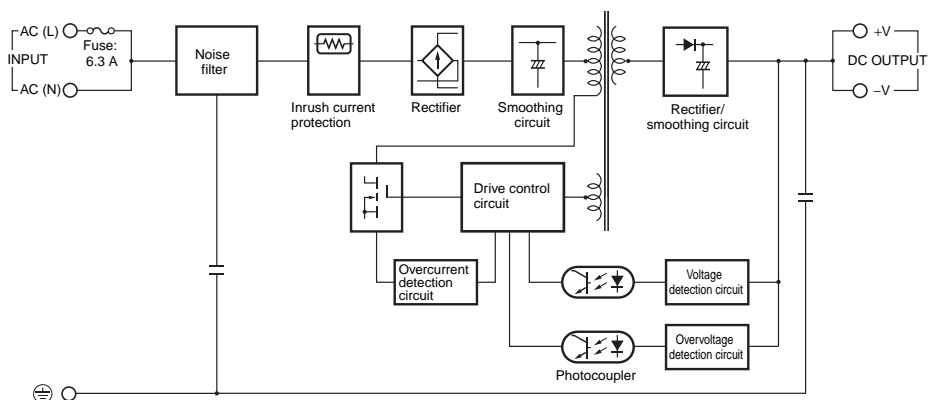

S8JX-G100 (100 W)

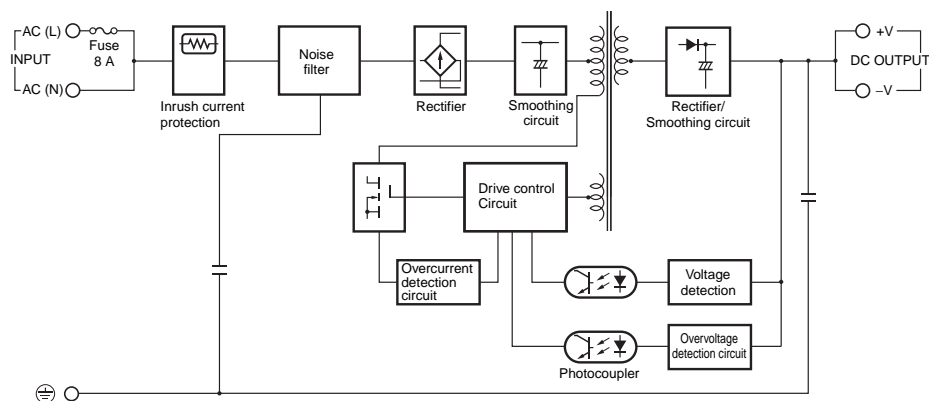


S8JX-G

S8JX-P

Common Precautions



## S8JX-G15005□□ (150 W)

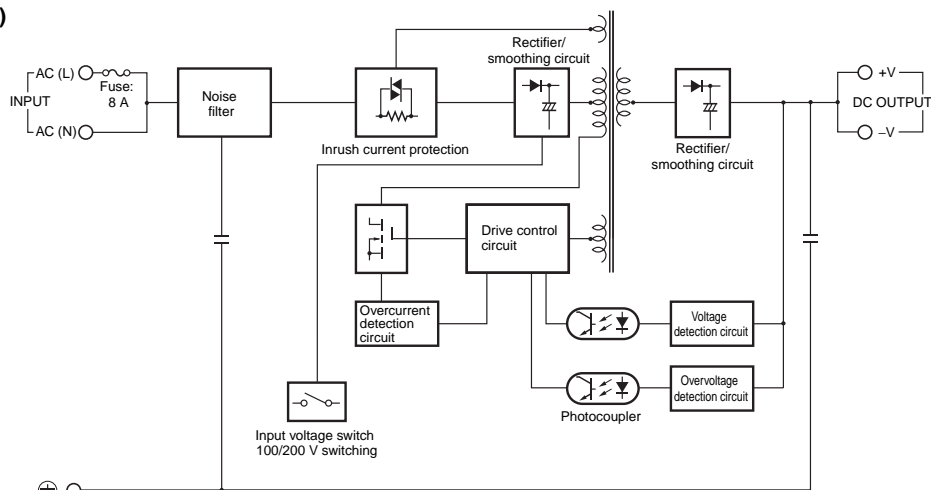


**Note:** Set the input voltage switch to "115V" for 100 to 120 VAC and to "230V" for 200 to 240 VAC.

## S8JX-G15012□□ (150 W)


## S8JX-G15024□□ (150 W)

## S8JX-G15048□□ (150 W)

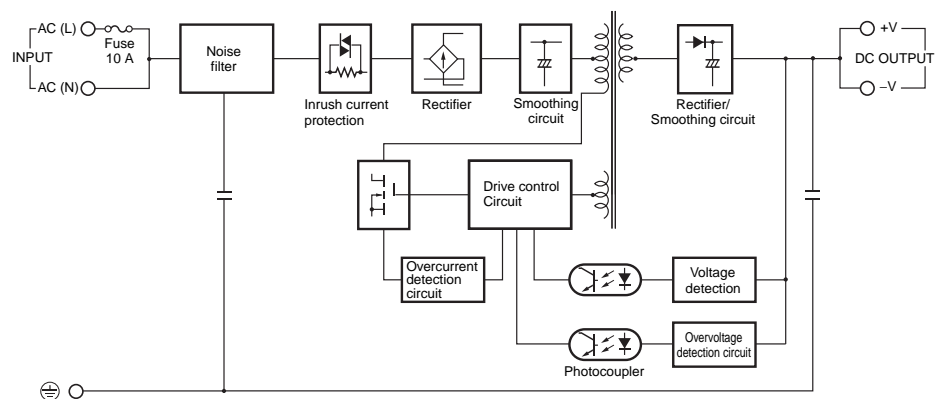

## S8JX-G30005□□ (300 W)


## S8JX-G30012□□ (300 W)

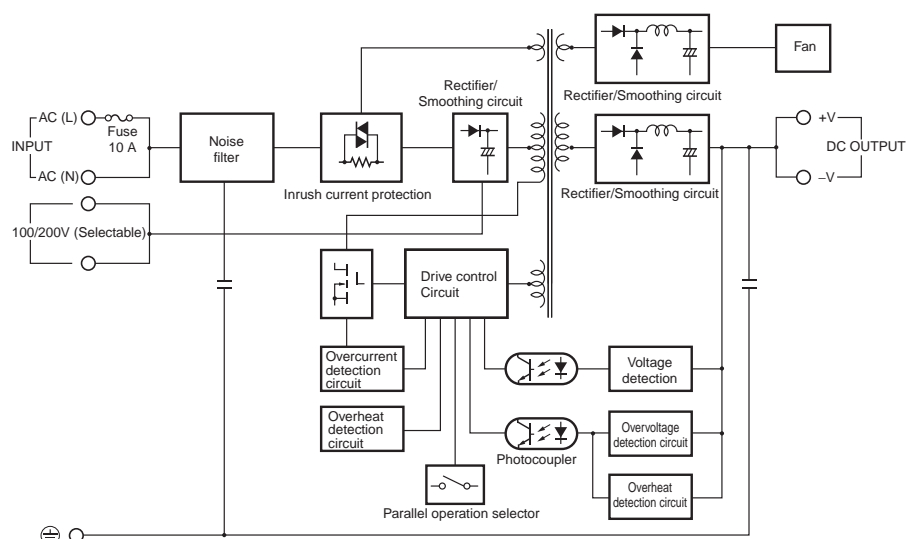

**Note:** Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC. Keep the terminals open if the input is 200 to 240 VAC.

S8JX-G30024 (300 W)

S8JX-G30048 (300 W)

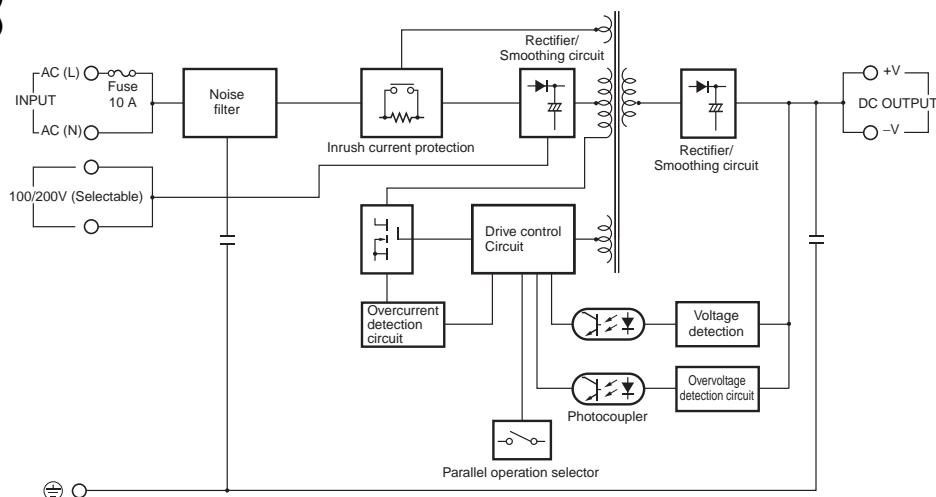


**Note:** Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC.  
Keep the terminals open if the input is 200 to 240 VAC.

S8JX-G60005 (600 W)


S8JX-G60012 (600 W)

S8JX-G60048 (600 W)

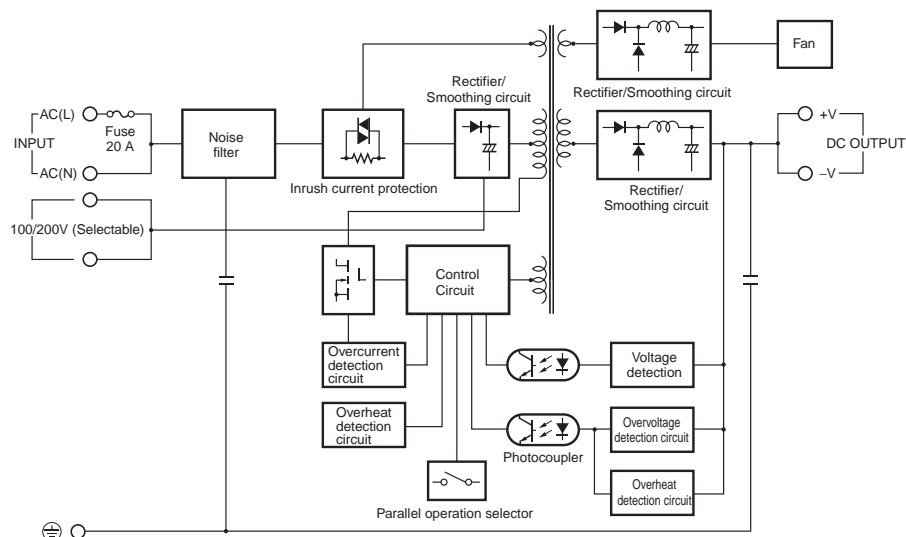

**Note:** Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC.  
Keep the terminals open if the input is 200 to 240 VAC.

S8JX-G60024 (600 W)

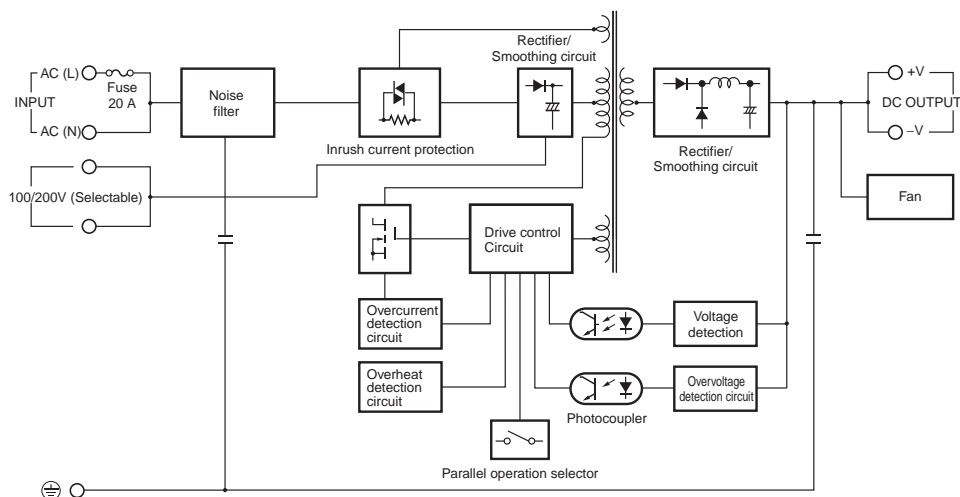

**Note:** Short-circuit the input voltage selector terminals if the input is 100 to 120 VAC.  
Keep the terminals open if the input is 200 to 240 VAC.

S8JX-G

S8JX-P


Common Precautions

## S8JX

## Construction and Nomenclature

## Nomenclature

## 15-/35-/50-/100-/150-W Models

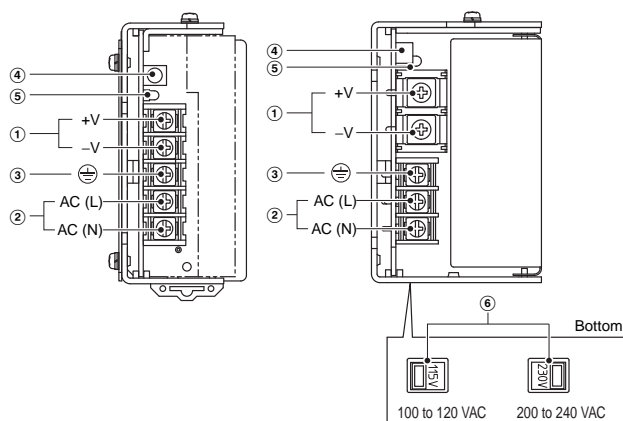

**Note:** The S8JX-G05024CD is shown above.


**Note:** The S8JX-G15005C is shown above.

No.	Name	Function
1	DC Output Terminals (-V), (+V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) (⊕)	Connect the ground line to these terminals. *2
4	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
6	Input voltage switch	Switches the internal circuits according to the input voltage. "115V": 100 to 120 VAC "230V": 200 to 240 VAC

\*1. The fuse is located on the (L) side. It is NOT user-replaceable. For a DC power input, connect the low side to the positive (+) terminal.

\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

## 300-W 5V, 12V Model

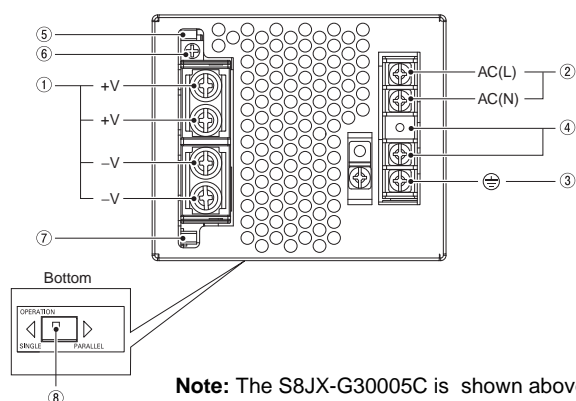

**Note:** The S8JX-G30005C is shown above.

## 300-W Model


No.	Name	Function
1	DC Output Terminals (+V), (-V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) (⊕)	Connect the ground line to these terminals. *2
4	Input Voltage Selector Terminals	Short-circuit the terminals if the input is 100 to 120 VAC and open the terminals if the input is 200 to 240 VAC.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
6	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
7	Protection-ON Alarm Indicator (ALM: Red)	The red indicator will be lit if the overvoltage or overheat protection circuit is triggered. This indicator will also be lit when overload is detected. *3
8	Selector of Parallel Operation	Set the selector to PARALLEL if the Units are in parallel operation.

\*1. The fuse is located on the (L) side. It is NOT user-replaceable.



\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.

\*3. This is not applicable to 24-V and 48-V models.

## 300-W 24V, 48V Model

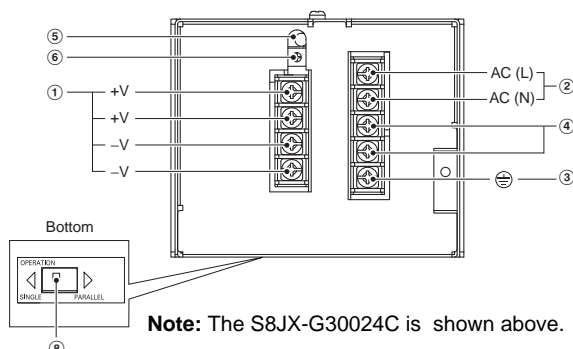

**Note:** The S8JX-G30024C is shown above.

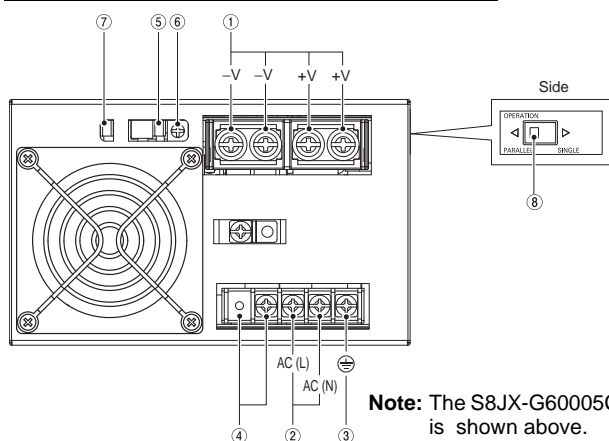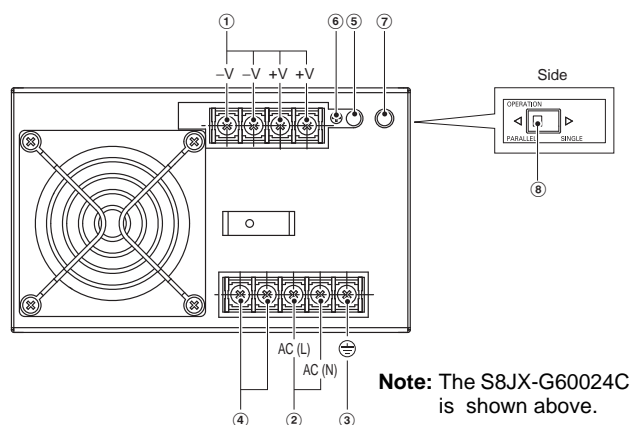**600-W 5V, 12V Model****600-W 24V, 48V Model****600-W Model**

No.	Name	Function
1	DC Output Terminals (+V), (-V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) (⊕)	Connect the ground line to these terminals. *2
4	Input Voltage Selector Terminals	Short-circuit the terminals if the input is 100 to 120 VAC and open the terminals if the input is 200 to 240 VAC.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
6	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
7	Protection-ON Alarm Indicator (ALM: Red)	The red indicator will be lit if the overvoltage or overheat protection circuit is triggered. This indicator will also be lit when overload is detected.
8	Selector of Parallel Operation	Set the selector to PARALLEL if the Units are in parallel operation.

\*1. The fuse is located on the (L) side. It is NOT user-replaceable.

\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.


**Reference Values**

Reliability (MTBF)	S8JX-G15012□□ and S8JX-G15005□□	S8JX-G30005□□ and S8JX-G300012□□	S8JX-G6000□□□	Other models
	240,000 hrs	200,000 hrs	170,000 hrs	250,000 hrs
Definition	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices. Therefore, it does not necessarily represent a life of the product.			
Life expectancy	10 yrs. min.			
Definition	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.			


## Derating Curves (Standard Mounting)

## 15-/35-/50-/100-/150-W Models

## Open-frame Power Supplies

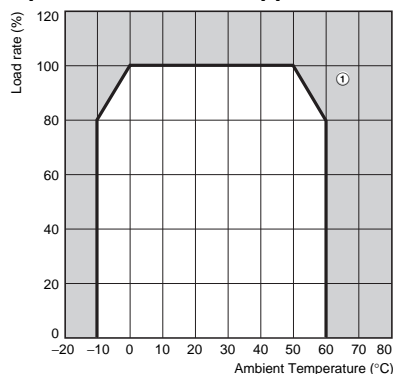

## Covered Power Supplies

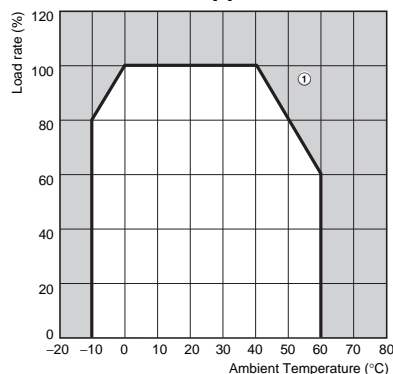

**Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).

**2.** If there is a derating problem, use forced air-cooling.

**3.** For Customers Using a DC Input

When using an input voltage of less than 100 VDC, reduce the load calculated with the above derating curve by at least the following coefficients.

35-W and 100-W (5-V or 12-V output) models: 0.8

50-W/150-W models:


0.85 (DC power cannot be input only to the S8JX-G15005□□.)

15-W and 100-W (24-V or 48-V output):


0.9

## 300-/600-W 24V, 48V Models

## Single Unit Operation

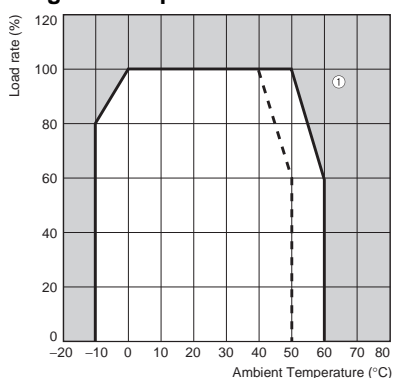

## Parallel Operation

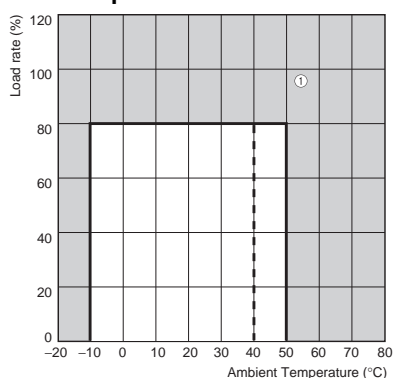

— Solid line Front-mounting,  
Bottom-mounting,  
DIN Rail mounting,  
Side mounting  
(300W 5V, 12V/  
600W 24V, 48V Models)


- - - Dotted line Side mounting  
(300W 24V, 48V Models)

**Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).


**2.** If there is a derating problem, use forced air-cooling.

## 600-W 5V, 12V Models

## Single Unit Operation

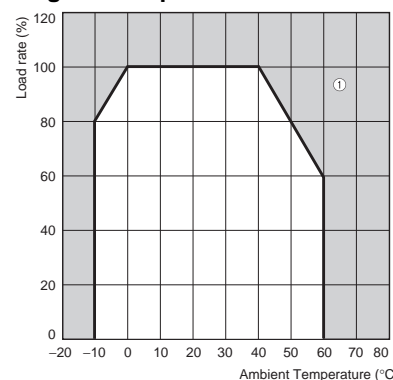

## Parallel Operation

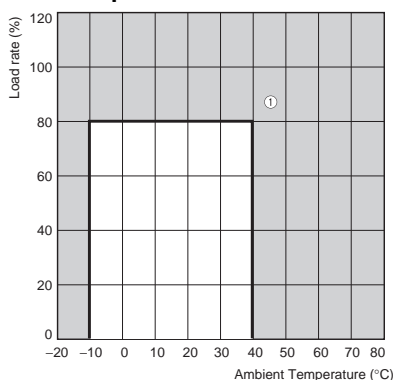

**Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).

## Mounting

### 15-/35-/50-/100-/150-W Models


The following three mounting methods are possible.

Ⓐ. Front-mounting: Refer to *Mounting Bracket Provided with Front-mounting Power Supplies* Ⓐ on page 25.

Ⓑ. Bottom-mounting

Ⓒ. Side-mounting


**Note:** Additional mounting methods are also available using DIN Rail-mounting models.

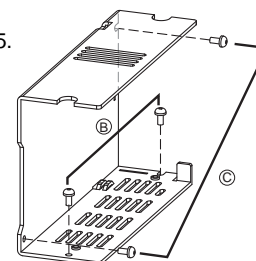


## Standard Mounting

### 15-/35-/50-/100-/150-W Models


Front-mounting

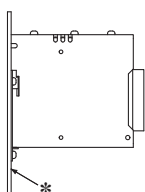


DIN Rail-mounting

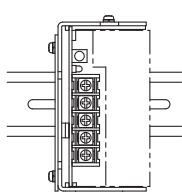


Bottom-mounting

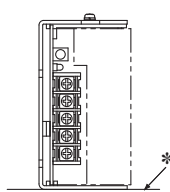

Vertical Side-mounting

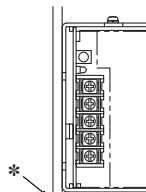


Horizontal Side-mounting

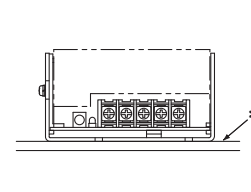


- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

### 300-W 5V, 12V Model


Front-mounting

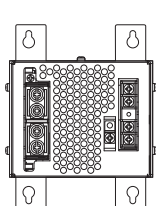


Bottom-mounting

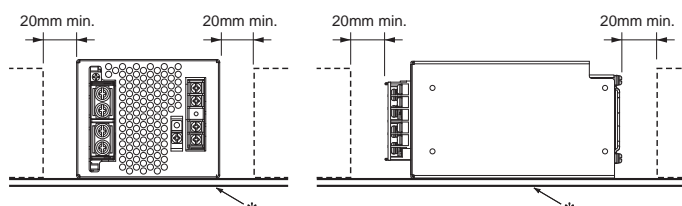

Side-mounting

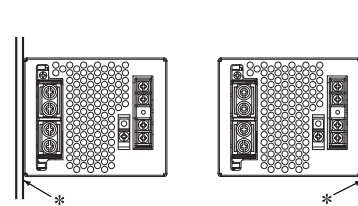


DIN Rail mounting

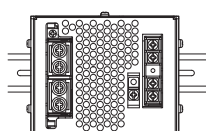


- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.

### 300-W 24V, 48V Model


Front-mounting

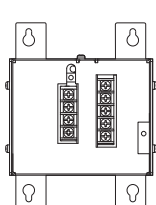


Bottom-mounting

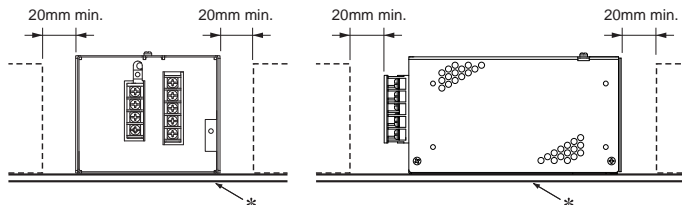

Side-mounting

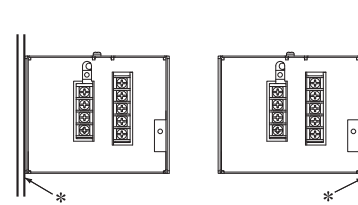


DIN Rail mounting

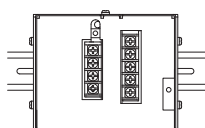


- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

## 600-W Model


Front-mounting

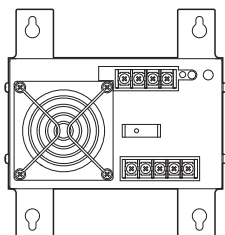

Bottom-mounting

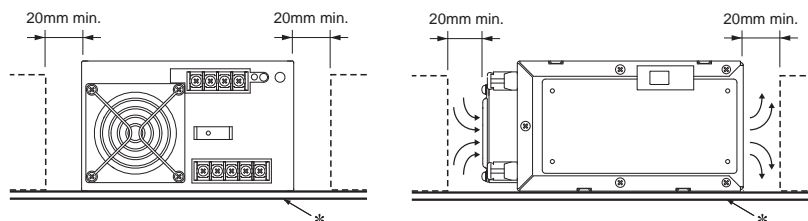

Side-mounting

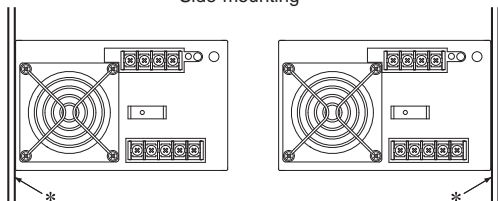

- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.



## Overload Protection

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% to 175% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


**Note:** 1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.

2. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.


3. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

### (Reference value)

#### 15-/35-/50-/100-/150-W (12-/24-/48-V) Models

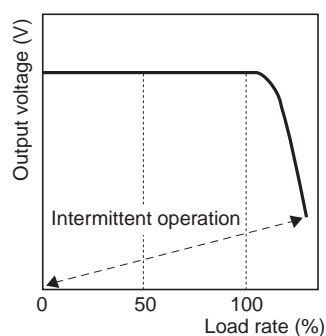


#### 300-W 5V, 12V/600-W Model

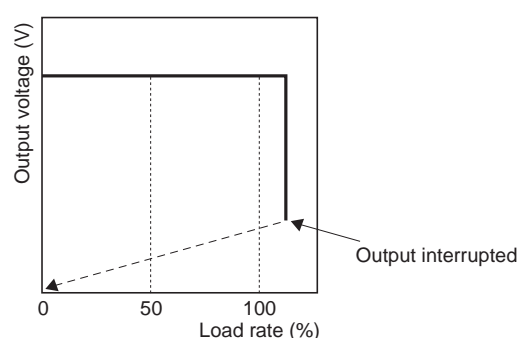


If an excessive current flows for 5 s or more, the output will be turned OFF and simultaneously the protection-ON alarm indicator will be lit. To reset the S8JX, turn OFF the power, leave the S8JX for at least three minutes, and then turn it ON again.

#### 150-W, 5-V Models

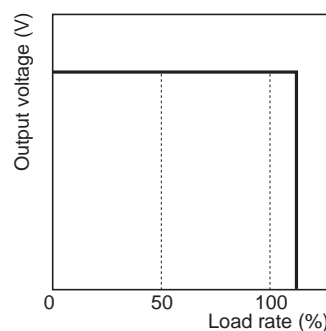

#### 300-W 24V, 48V Model

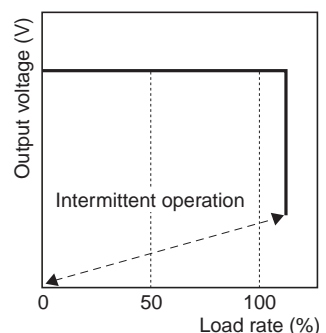

## Overvoltage Protection


### 15-/35-/50-/100-/150-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least seven minutes and then turning it back ON again.

### 300-/600-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 120% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage (Except 300-W 24V, 48V models ). Reset the input power by turning it OFF for at least three minute and then turning it back ON again.

#### (Reference value)

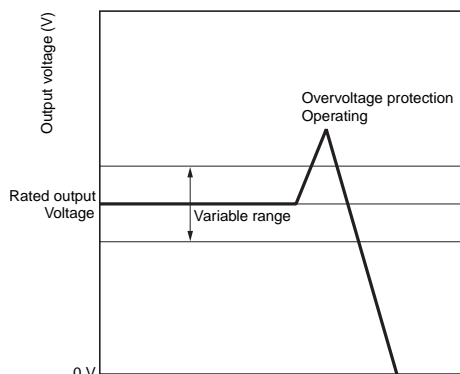


**Note:** Do not turn ON the power again until the cause of the overvoltage has been removed.

## Overheat Protection

### 300-W 5V, 12V/600-W Model

If the internal temperature rises excessively as a result of fan failure or any other reason, the overheat protection circuit will be triggered to shut OFF the output voltage and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

## Inrush Current, Startup Time, Output Hold Time

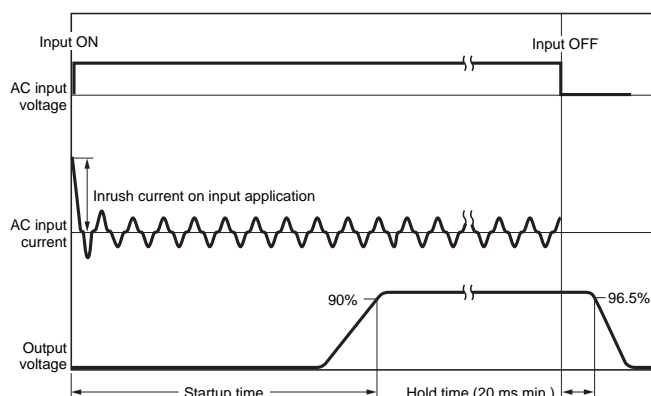

**Note:** A maximum startup time of 500 ms is required (650 ms for 300 W). Construct a system configuration that considers the startup time of other devices.

# Dimensions


## Front-mounting Models

S8JX-G015□□ (15 W)

S8JX-G015□□C (15 W)

S8JX-G035□□ (35 W)

S8JX-G035□□C (35 W)

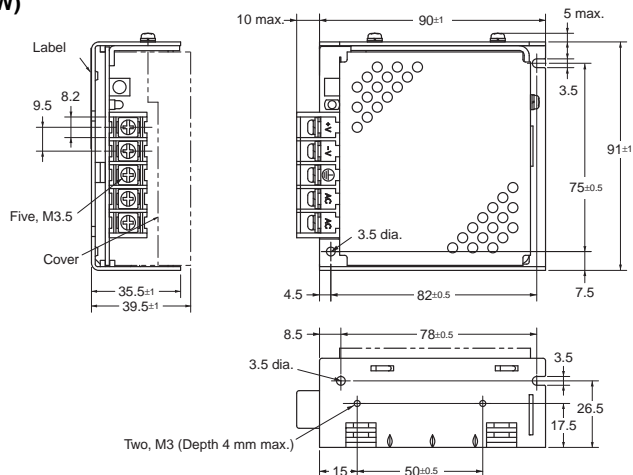


Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5 82±0.5
Bottom Mounting	Two, M3 78±0.5

S8JX-G050□□ (50 W)

S8JX-G050□□C (50 W)

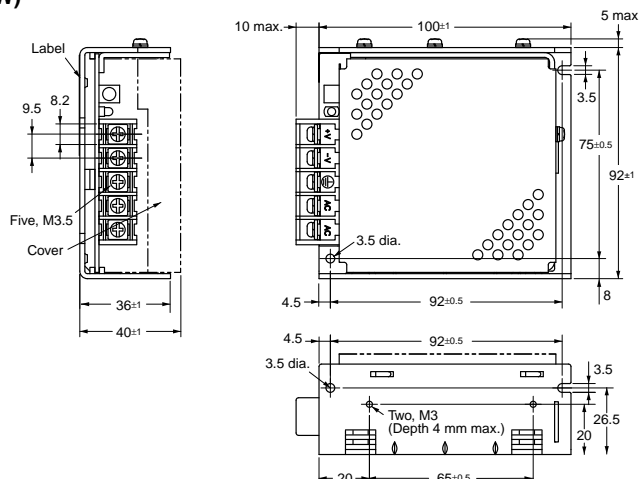

Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 75±0.5 92±0.5
Bottom Mounting	Two, M3 92±0.5

S8JX-G100□□ (100 W)


S8JX-G100□□C (100 W)

S8JX-G15024 (150 W)

S8JX-G15024C (150 W)

S8JX-G15048 (150 W)



S8JX-G15048C (150 W)

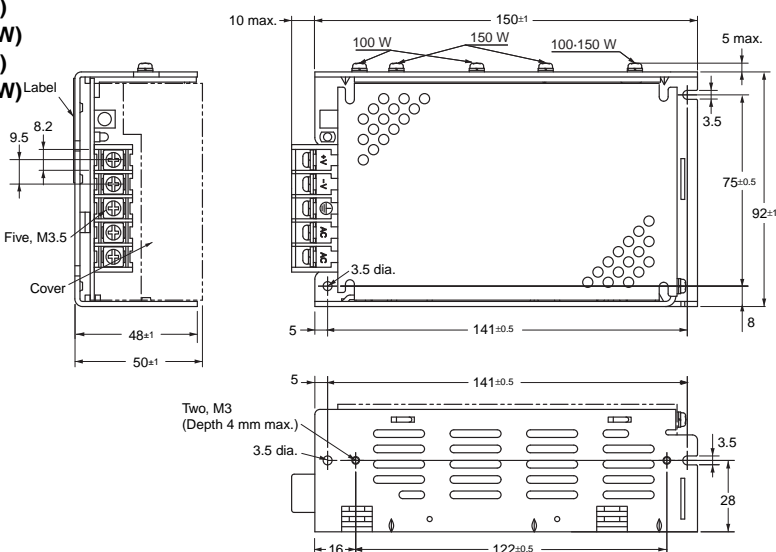

Panel mounting holes dimensions


	Surface screw mounting
Side Mounting	Two, M3 75±0.5 141±0.5
Bottom Mounting	Two, M3 141±0.5

S8JX-G15005 (150 W)  
S8JX-G15005C (150 W)

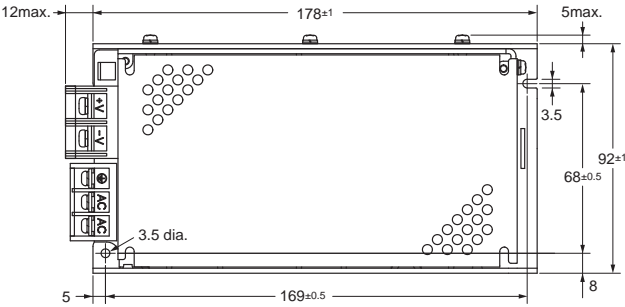
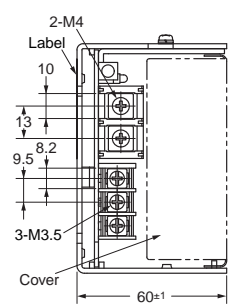


Panel mounting holes dimensions

Surface screw mounting	
Side Mounting	Two, M3 68±0.5 169±0.5
Bottom Mounting	Two, M3 169±0.5

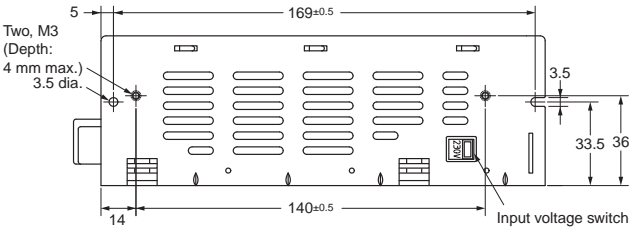



S8JX-G15012 (150 W)  
S8JX-G15012C (150 W)

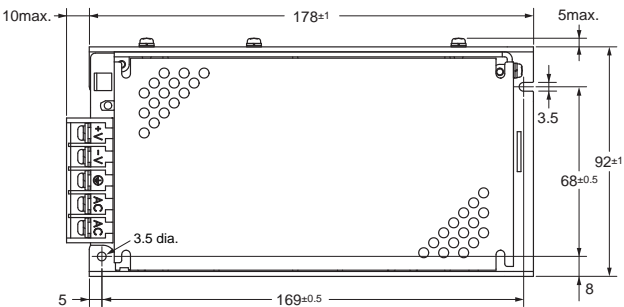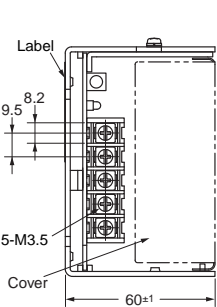


Panel mounting holes dimensions

Surface screw mounting	
Side Mounting	Two, M3 68±0.5 169±0.5
Bottom Mounting	Two, M3 169±0.5

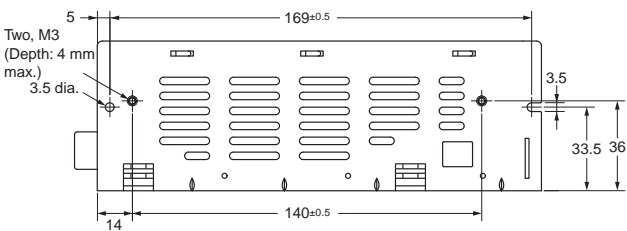

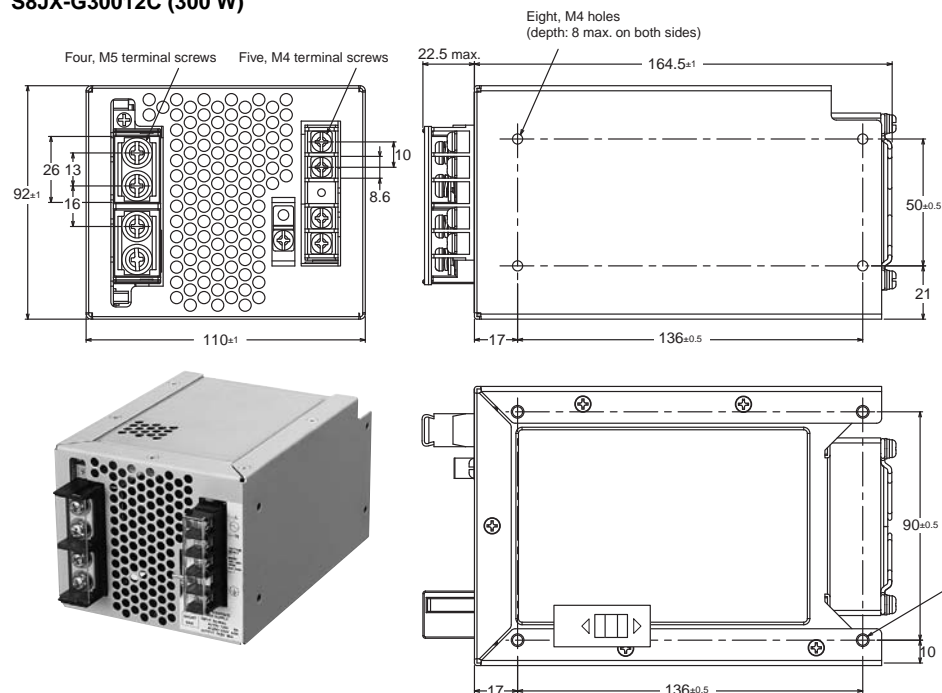**S8JX-G30005C (300 W)****S8JX-G30012C (300 W)****Panel mounting holes dimensions**

	Surface screw mounting
<b>Side Mounting</b>	<p>Four, 4.5 dia.</p> <p>50±0.5</p> <p>136±0.5</p>
<b>Bottom Mounting</b>	<p>Four, 4.5 dia.</p> <p>90±0.5</p> <p>136±0.5</p>

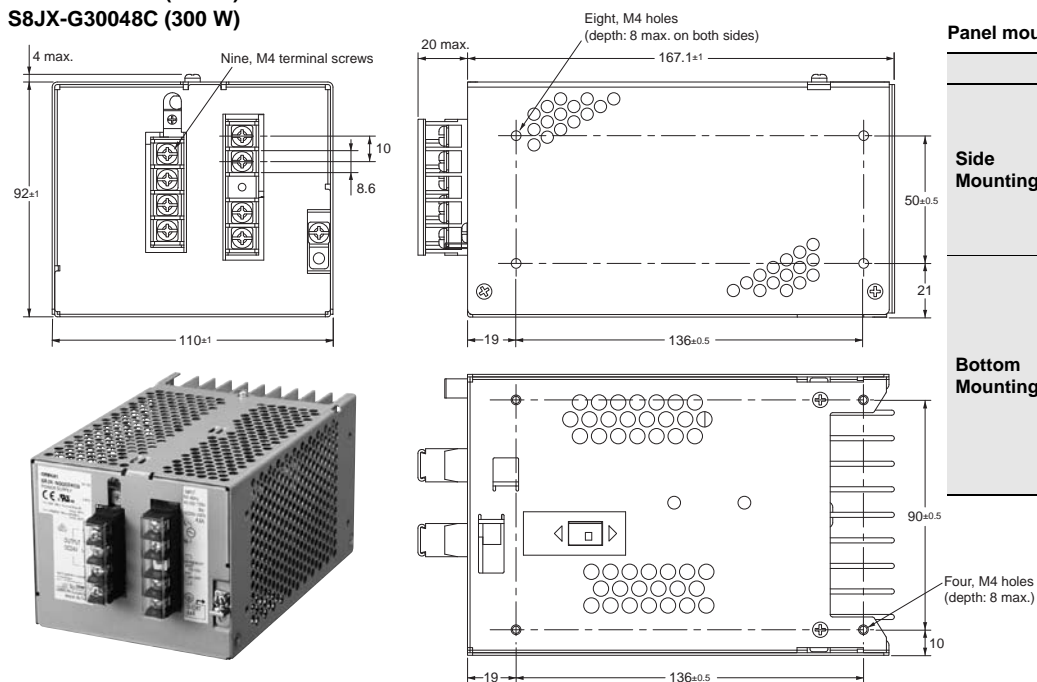**S8JX-G30024C (300 W)****S8JX-G30048C (300 W)****Panel mounting holes dimensions**




	Surface screw mounting
<b>Side Mounting</b>	<p>Four, 4.5 dia.</p> <p>50±0.5</p> <p>136±0.5</p>
<b>Bottom Mounting</b>	<p>Four, 4.5 dia.</p> <p>90±0.5</p> <p>136±0.5</p>

S8JX-G

S8JX-P

Common Precautions




S8JX-G60005 (600 W)  
S8JX-G60012 (600 W)

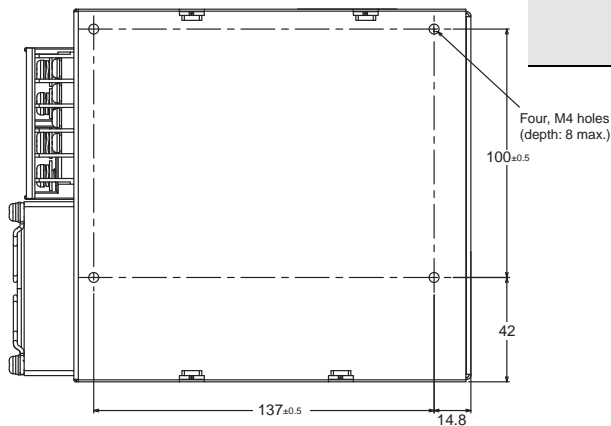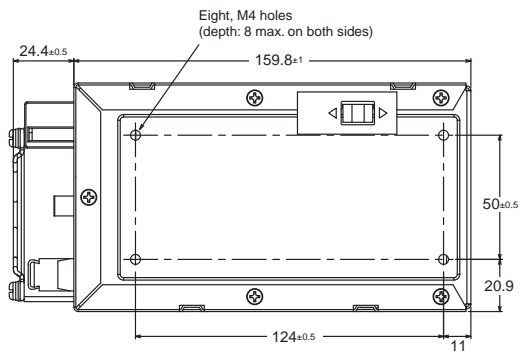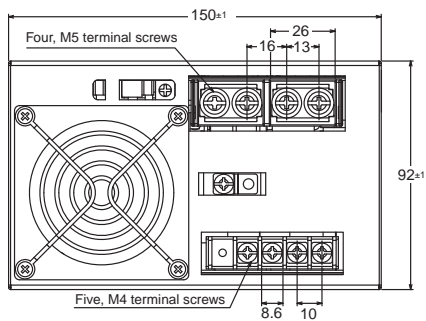

Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	
Bottom Mounting	

S8JX-G60024C (600 W)  
S8JX-G60048C (600 W)

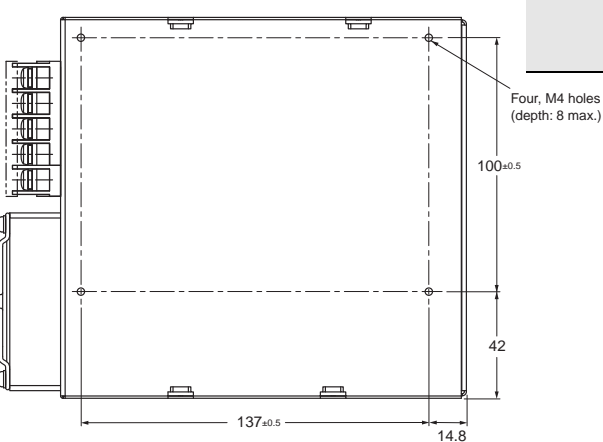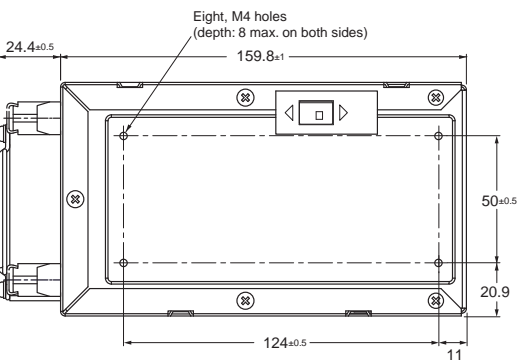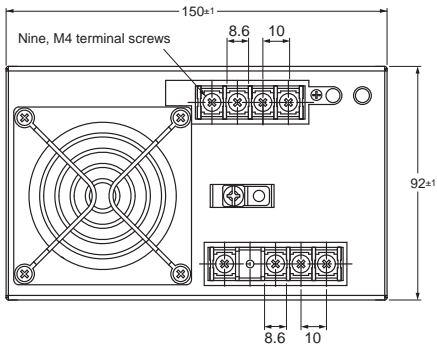

Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	
Bottom Mounting	

S8JX-G

S8JX-P

Common Precautions

# Mounting Bracket Provided with Front-mounting Power Supplies ①


15-/35-/50-/100-/150-W Models

## S82Y-J00F Front-mounting Bracket

Dimensions	Mounting dimensions
<p>t = 1.0 Material: Stainless steel</p>	<p>Two, M3 60 20</p>


## Front-mounting Method

Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

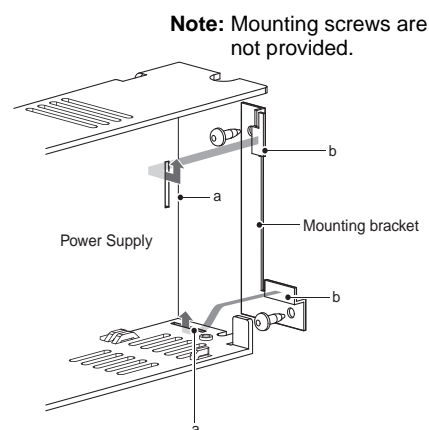

300-/600-W Models


## Front-mounting Bracket (S82Y-J30F)

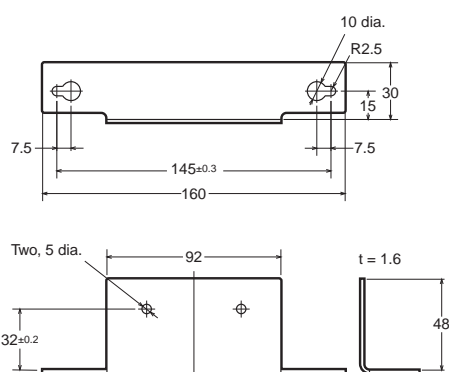


**Note:** Mounting Brackets are provided in a set, one for the right side and one for the left side.

## Dimensions with Mounting Brackets

### 300-W Model

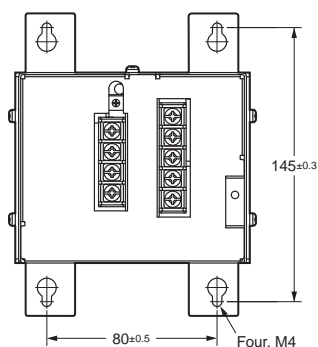


### 600-W Model

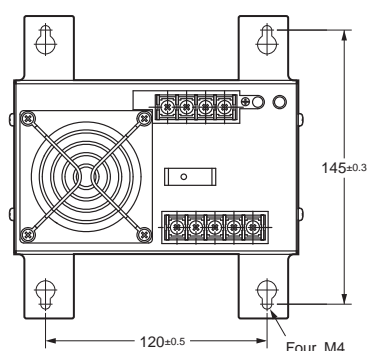


## Attaching the Mounting Brackets

### 300-W Model

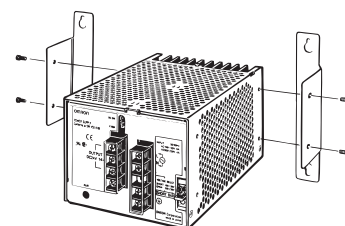

**Note:** To provide ventilation space, the body will shift forward by 21.6 mm from the mounting surface.

### 600-W Model

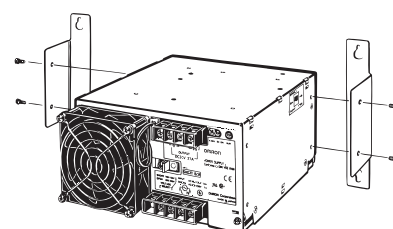

**Note:** To provide ventilation space, the body will shift forward by 23.6 mm from the mounting surface.

S8JX-G

S8JX-P

Common Precautions



# S8JX

**Separately purchasable mounting brackets** (Please ask your dealer for details of delivery.)

**For 15-W/30-W/50-W/100-W/150-W/300-W/600-W models (separately purchasable)**

## Bracket for changeover from S82J-series

The mounting-hole pitch of mounting brackets A - I below is identical to that of our product S82J. These brackets can be used for switchover with the S82J-series.



Models compatible with the S82J-series	Mounting Orientation	Products names	Model
50-W models	Underside mounting	Mounting bracket A (For S8JX-G-series 50-W models)	<b>S82Y-JX05B</b>
100-W 24 V models		Mounting bracket B (For S8JX-G-series 100-W 24 V models)	<b>S82Y-JX10B</b>
100-W 5 V, 12 V, 150-W 24 V models		Mounting bracket C (For S8JX-G-series 100-W 5 V, 12V, 150 W models)	<b>S82Y-JX15B</b>
100-W 5 V, 12 V, 150-W 24 V models	Front mounting	Mounting bracket D (For S8JX-G-series 100-W 5 V, 12 V, 150 W models)	<b>S82Y-JX15F</b>
25-W models	Underside mounting	Mounting bracket E (For S8JX-G-series 30-W models)	<b>S82Y-JX03B</b>
300-W models	Underside mounting	Mounting bracket F (For S8JX-G-series 300-W models)	<b>S82Y-JX30B</b>
	Front mounting	Mounting bracket G (For S8JX-G-series 300-W models)	<b>S82Y-JX30F</b>
600-W models	Underside mounting	Mounting bracket H (For S8JX-G-series 600-W models)	<b>S82Y-JX60B</b>
	Front mounting	Mounting bracket I (For S8JX-G-series 600-W models)	<b>S82Y-JX60F</b>

**Note:** Mounting brackets (A, B, C, D, E, F, G, H, I) are compatible with S82J mounting holes.

## Mounting Bracket A

**S82Y-JX05B**

### Method of Mounting

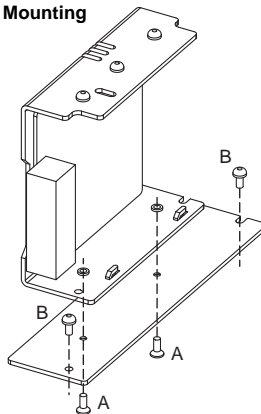
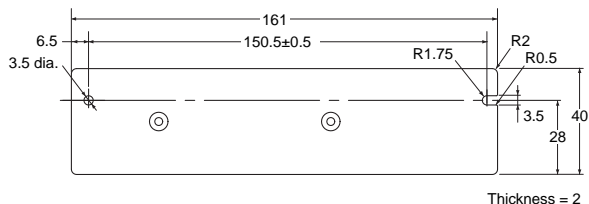


**Screws used**  
**A:** Accessories (2 locations)  
 Be sure to use the accessory screws.  
 Mounting screw tightening torque  
 (recommended): 0.49 N · m  
**B:** M3 (2 locations)

## Mounting Bracket B

**S82Y-JX10B**


### Method of Mounting

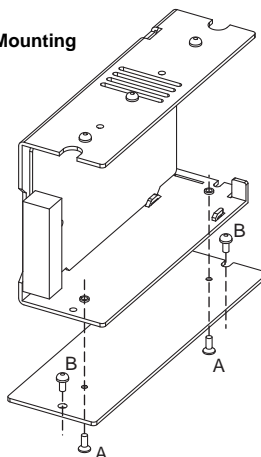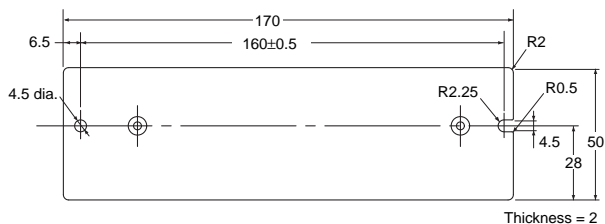


**Screws used**  
**A:** Accessories (2 locations)  
 Be sure to use the accessory screws.  
 Mounting screw tightening torque  
 (recommended): 0.49 N · m  
**B:** M4 (2 locations)

## Mounting Bracket C

### S82Y-JX15B

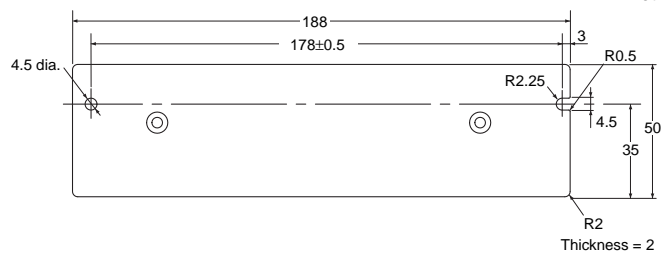


#### Method of Mounting

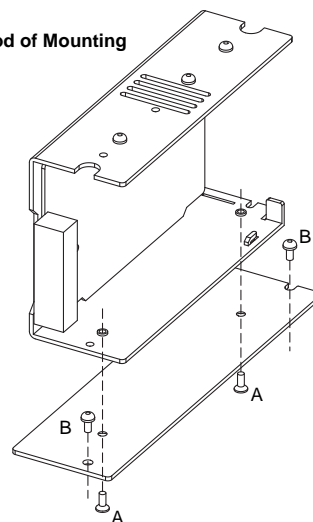


**Screws used**  
**A: Accessories (2 locations)**  
 Be sure to use the accessory screws.  
 Mounting screw tightening torque  
 (recommended): 0.49 N · m  
**B: M4 (2 locations)**

## Mounting Bracket D

### S82Y-JX15F

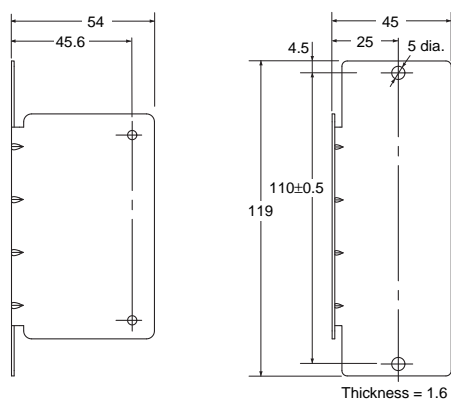


#### Method of Mounting

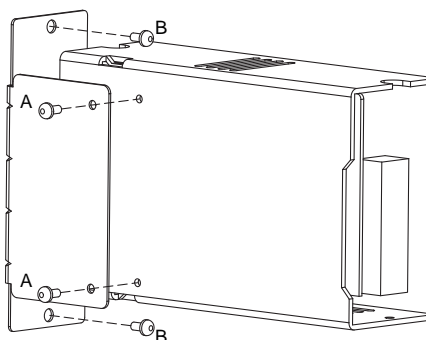


**Screws used**  
**A: Accessories (2 locations)**  
 Be sure to use the accessory screws  
 Mounting screw tightening torque  
 (recommended): 0.49 N · m  
**B: M4 (2 locations)**

## Mounting Bracket E

### S82Y-JX03B

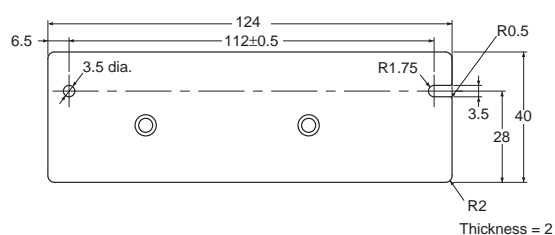

#### Method of Mounting

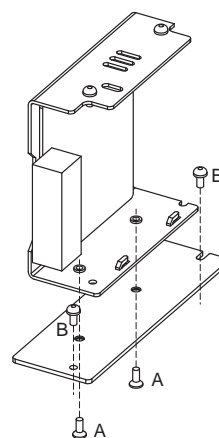

**Screws used**  
**A: Accessories (2 locations)**  
 Be sure to use the accessory screws.  
 Mounting screw tightening torque  
 (recommended): 0.49 N · m  
**B: M3 (2 locations)**


S8JX-G

S8JX-P


Common Precautions

## Mounting Bracket F

S82Y-JX30B

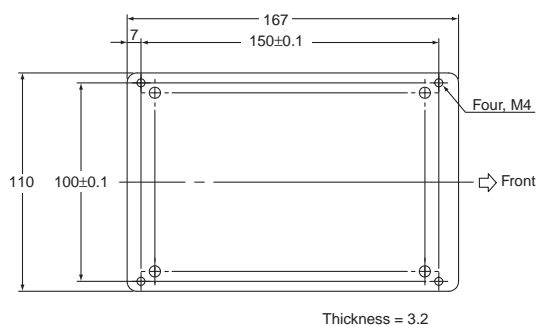

## Method of Mounting

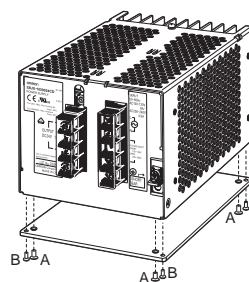

## Screws used

A: Accessories (4 locations)


Be sure to use the accessory screws.

B: M4 (4 locations)


Screws of a length that will not project beyond the fixture (thickness: 3.2 mm) should be selected.

## Mounting Bracket G

S82Y-JX30F

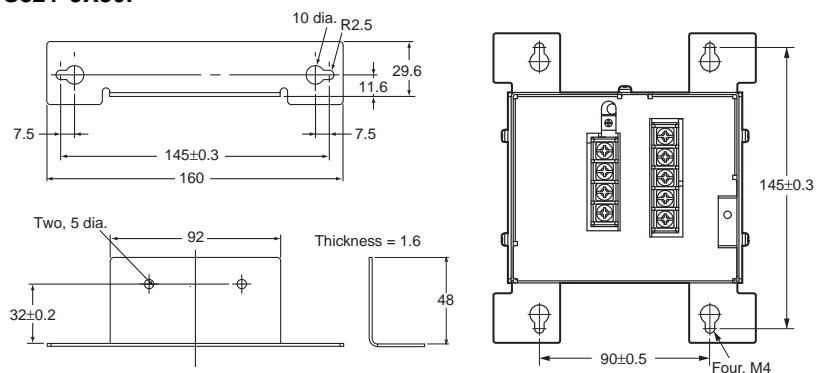

## Method of Mounting

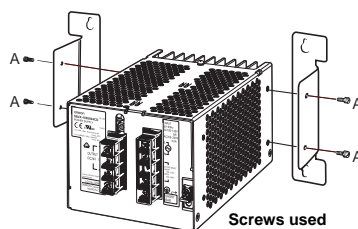

## Screws used


A: Accessories (4 locations)

Be sure to use the accessory screws.


**Note:** For ventilation of the back surface, the body should be placed 21.6 mm in front of the mounting side.

## Mounting Bracket H

S82Y-JX60B

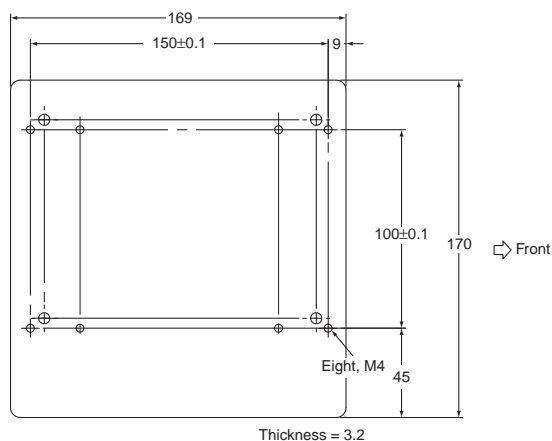

## Method of Mounting

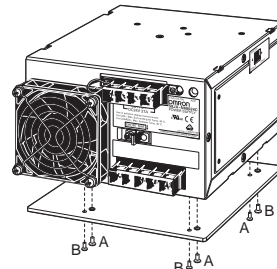

## Screws used

A: Accessories (4 locations)


Be sure to use the accessory screws.

B: M4 (4 locations)


Screws of a length that will not project beyond the fixture (thickness: 3.2 mm) should be selected. (Although there are 8 holes in the bracket body, only 4 of these are used.)

## Mounting Bracket I

S82Y-JX60F

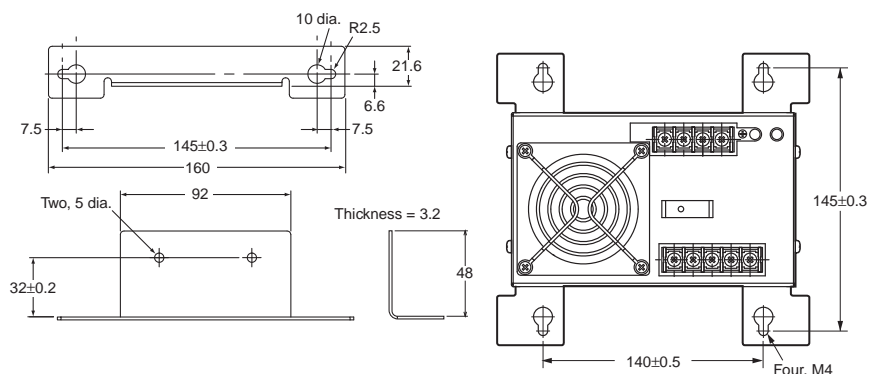

## Method of Mounting

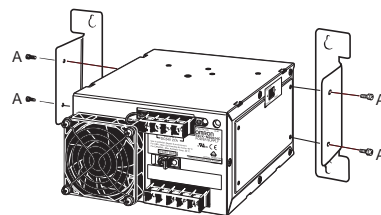

## Screws used


A: Accessories (4 locations)

Be sure to use the accessory screws.


**Note:** For ventilation of the back surface, the body should be placed 23.6 mm in front of the mounting side.

## DIN Rail-mounting Models


S8JX-G015□□D (15 W)  
 S8JX-G015□□CD (15 W)  
 S8JX-G030□□D (35 W)  
 S8JX-G030□□CD (35 W)

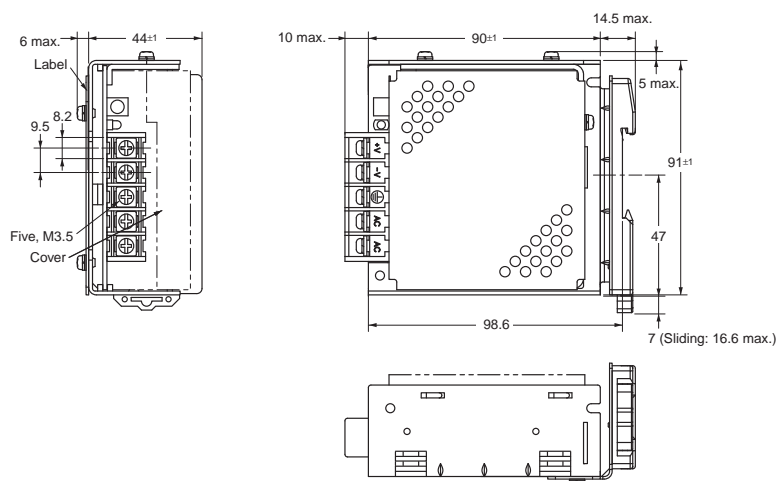

S8JX-G050□□D (50 W)  
 S8JX-G050□□CD (50 W)

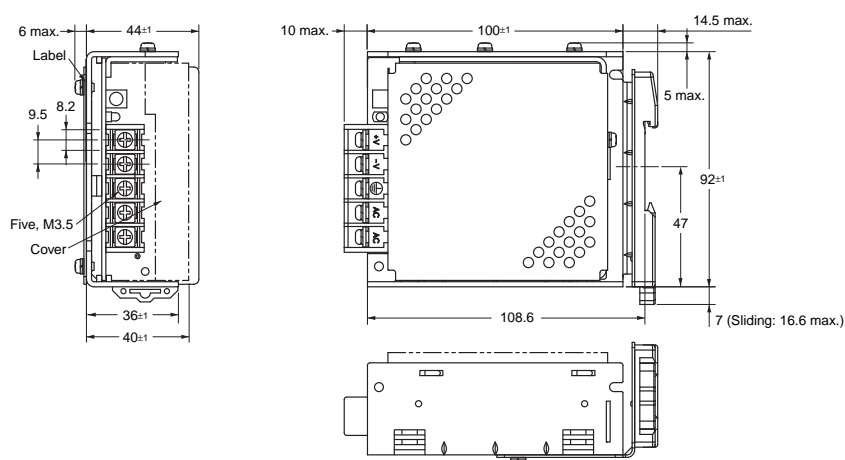




S8JX-G100□□D (100 W)  
 S8JX-G100□□CD (100 W)  
 S8JX-G15024D (150 W)  
 S8JX-G15024CD (150 W)  
 S8JX-G15048D (150 W)  
 S8JX-G15048CD (150 W)

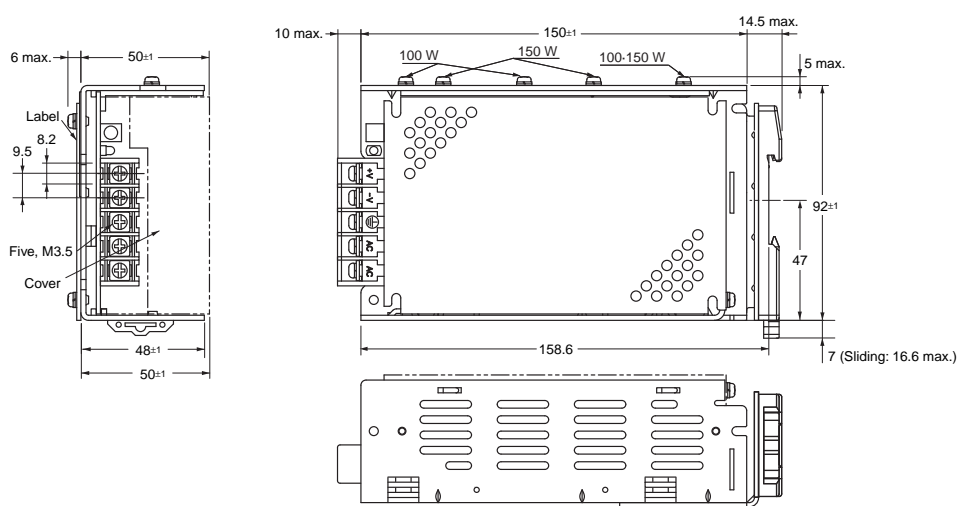

# S8JX




S8JX-G

**S8JX-G15005D (150 W)**  
**S8JX-G15005CD (150 W)**

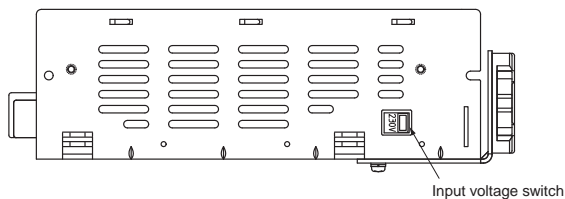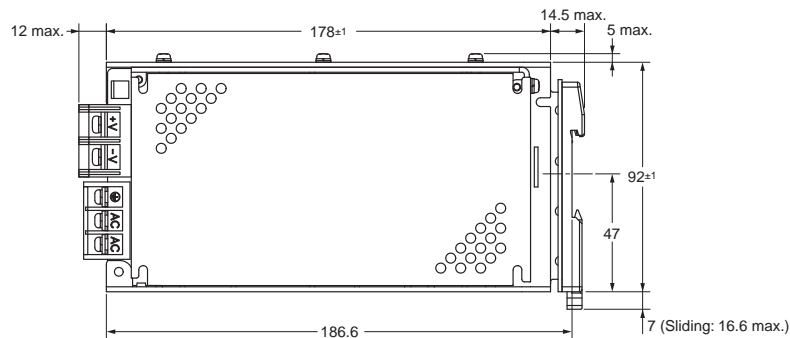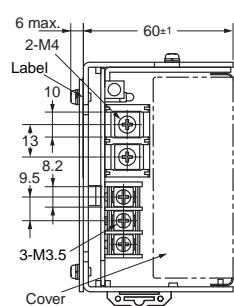


S8JX-P

**S8JX-G15012D (150 W)**  
**S8JX-G15012CD (150 W)**

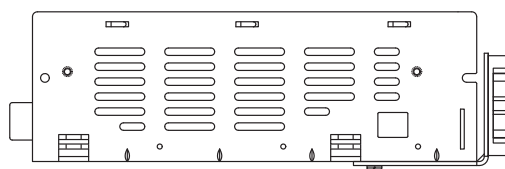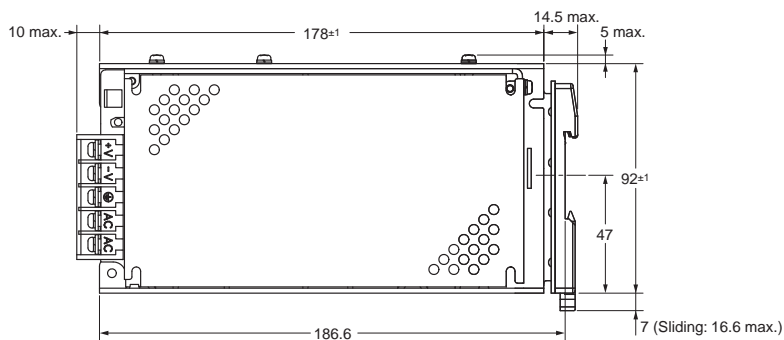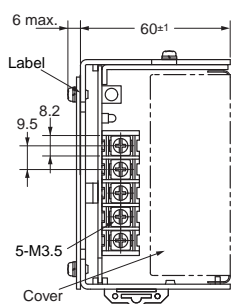




Common Precautions

**S8JX-G30005CD (300W)**  
**S8JX-G30012CD (300W)**

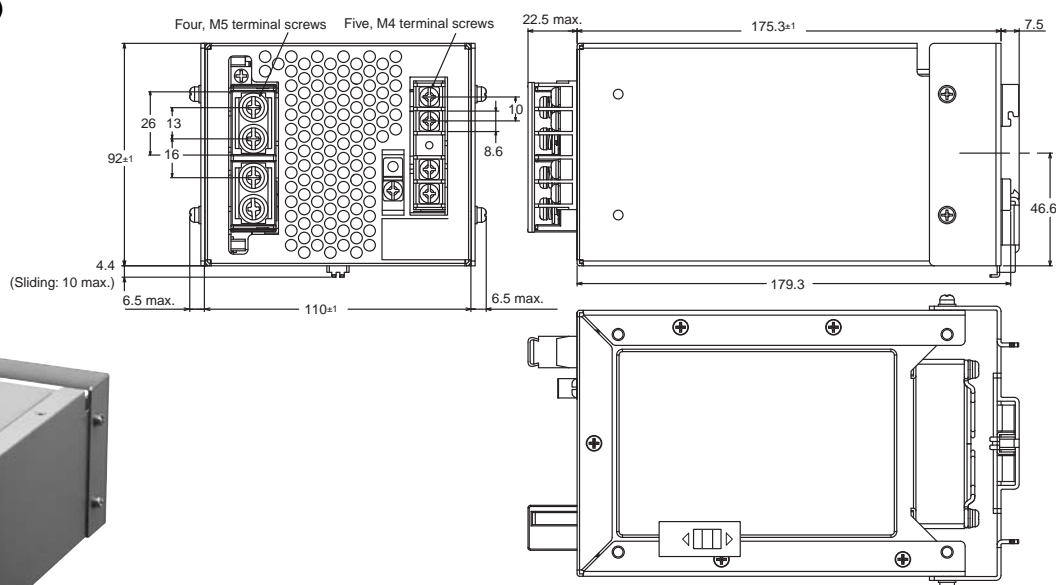

**Note:** Use a metal DIN Rail when mounting a 300-W model to a DIN Rail.

**S8JX-G30024CD (300 W)**  
**S8JX-G30048CD (300 W)**

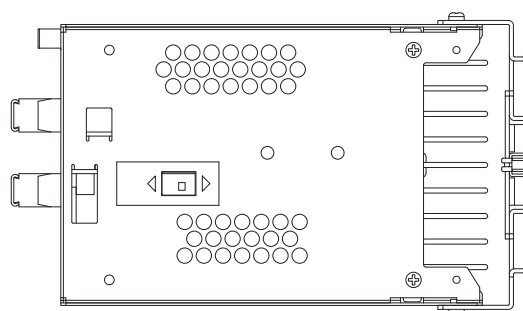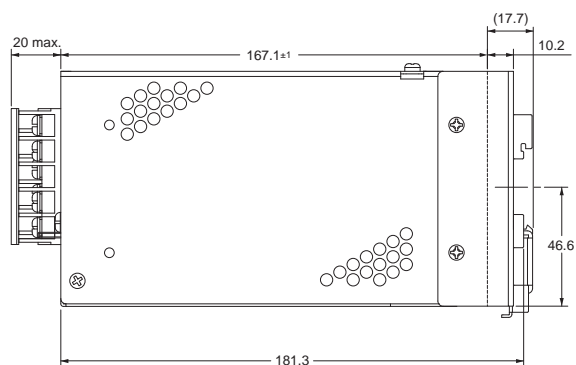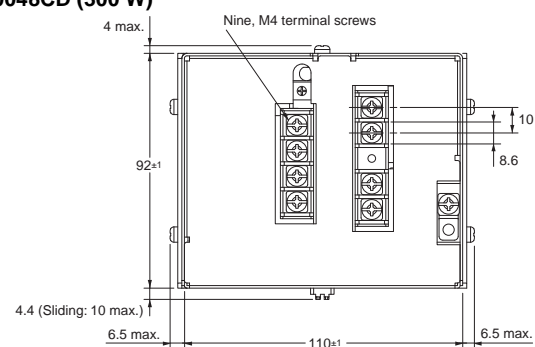

**Note:** Use a metal DIN Rail when mounting a 300-W model to a DIN Rail.



S8JX-G

S8JX-P

Common Precautions



## DIN Rail (Order Separately)

### Mounting Rail (Material: Aluminum)

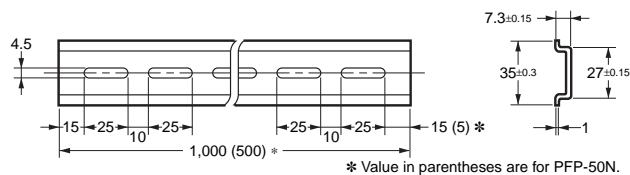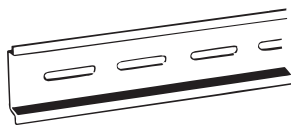



Model
PFP-100N
PFP-50N

### Mounting Rail (Material: Aluminum)

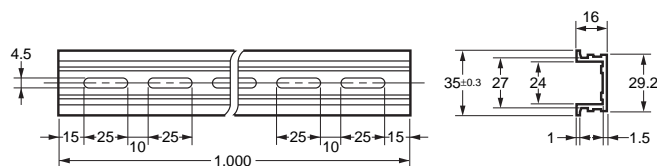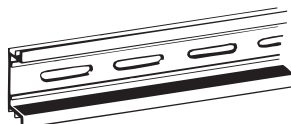

Model
PFP-100N2

### End Plate

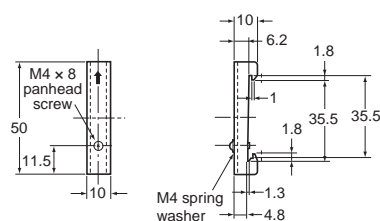 

Model
PFP-M

- Note:** 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.  
 2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

## Terminal Cover (Order Separately)

Terminal Cover model	Applicable Power Supply and applicable location
S82Y-JX-C4P	S8JX-G-300W, 24-V or 48-V output
	S8JX-G-600W, 24-V or 48-V output
S82Y-JX-C5P	S8JX-G-300W, input
	S8JX-G-600W, input
S82Y-JTC1	S8JX-G-15W
	S8JX-G-30W
	S8JX-G-50W
	S8JX-G-100W
	S8JX-G-150W, 12-V, 24-V or 48-V model

## Replacement Fan (sold separately)

Model
S82Y-JXFAN

Model Number Structure

Model Number Legend

**Note:** Not all combinations are possible. Refer to *List of Models* in *Ordering Information* on page 34.

50-/100-/150-W Models

S8JX-P 1 2 3 4

1. Power Ratings

- 050: 50 W
- 100: 100 W
- 150: 150 W

2. Output Voltage

- 05: 5 V
- 12: 12 V
- 24: 24 V
- 48: 48 V

3. Configuration (50/100/150 W model)

- None: Open-frame
- C: Covered

4. Configuration/mounting

- None: Front-mounting
- D: DIN Rail-mounting

300-/600-W Models

S8JX-P 1 2 3

1. Power Ratings

- 300: 300 W
- 600: 600 W

2. Output Voltage

- 05: 5V
- 12: 12 V
- 24: 24 V
- 48: 48 V

3. Configuration/mounting (covered type)

- C: Front-mounting
- CD: DIN Rail-mounting
- N: Without mounting bracket

**Note:** Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.



## Ordering Information

## List of Models

**Note:** For details on normal stock models, contact your nearest OMRON representative.

Configuration		Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
Open-frame Power Supplies	Front-mounting *1	100 to 240 VAC (free) (80 to 370 VDC *3)	50 W	5 V	10 A	No	S8JX-P05005
				12 V	4.2 A		S8JX-P05012
				24 V	2.1 A		S8JX-P05024
				48 V	1.1 A		S8JX-P05048
			100 W	5 V	20 A		S8JX-P10005
				12 V	8.5 A		S8JX-P10012
				24 V	4.5 A		S8JX-P10024
				48 V	2.1 A		S8JX-P10048
			150 W	5 V	30 A		S8JX-P15005
				12 V	13 A		S8JX-P15012
				24 V	6.5 A		S8JX-P15024
				48 V	3.3 A		S8JX-P15048
	DIN Rail-mounting *2		50 W	5 V	10 A		S8JX-P05005D
				12 V	4.2 A		S8JX-P05012D
				24 V	2.1 A		S8JX-P05024D
				48 V	1.1 A		S8JX-P05048D
			100 W	5 V	20 A		S8JX-P10005D
				12 V	8.5 A		S8JX-P10012D
				24 V	4.5 A		S8JX-P10024D
				48 V	2.1 A		S8JX-P10048D
			150 W	5 V	30 A		S8JX-P15005D
				12 V	13 A		S8JX-P15012D
				24 V	6.5 A		S8JX-P15024D
				48 V	3.3 A		S8JX-P15048D
Covered Power Supplies	Front-mounting *1	50 W	5 V	10 A	S8JX-P05005C		
			12 V	4.2 A	S8JX-P05012C		
			24 V	2.1 A	S8JX-P05024C		
			48 V	1.1 A	S8JX-P05048C		
		100 W	5 V	20 A	S8JX-P10005C		
			12 V	8.5 A	S8JX-P10012C		
			24 V	4.5 A	S8JX-P10024C		
			48 V	2.1 A	S8JX-P10048C		
		150 W	5 V	30 A	S8JX-P15005C		
			12 V	13 A	S8JX-P15012C		
			24 V	6.5 A	S8JX-P15024C		
			48 V	3.3 A	S8JX-P15048C		
	DIN Rail-mounting *2	50 W	5 V	10 A	S8JX-P05005CD		
			12 V	4.2 A	S8JX-P05012CD		
			24 V	2.1 A	S8JX-P05024CD		
			48 V	1.1 A	S8JX-P05048CD		
		100 W	5 V	20 A	S8JX-P10005CD		
			12 V	8.5 A	S8JX-P10012CD		
			24 V	4.5 A	S8JX-P10024CD		
			48 V	2.1 A	S8JX-P10048CD		
		150 W	5 V	30 A	S8JX-P15005CD		
			12 V	13 A	S8JX-P15012CD		
			24 V	6.5 A	S8JX-P15024CD		
			48 V	3.3 A	S8JX-P15048CD		

\*1. The front-mounting bracket is included as standard with the product.

\*2. A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

Configuration		Input voltage	Power ratings	Output voltage (VDC)	Output current	Built-in fan	Model
Covered Power Supplies	Front-mounting *1	100 to 240 VAC (free) (80 to 370 VDC *3)	300 W	5 V	60 A	Yes	S8JX-P30005C
				12 V	27 A		S8JX-P30012C
				24 V	14 A peak current 16.5 A (200 VAC)		S8JX-P30024C
				48 V	7 A		S8JX-P30048C
			600 W	5 V	120 A		S8JX-P60005C
				12 V	53 A		S8JX-P60012C
				24 V	27 A peak current 31 A (200 VAC)		S8JX-P60024C
				48 V	13 A		S8JX-P60048C
	DIN Rail-mounting *2		300 W	5 V	60 A		S8JX-P30005CD
				12 V	27 A		S8JX-P30012CD
				24 V	14 A peak current 16.5 A (200 VAC)		S8JX-P30024CD
				48 V	7 A		S8JX-P30048CD
			600 W	5 V	120 A		S8JX-P60005CD
				12 V	53 A		S8JX-P60012CD
				24 V	27 A peak current 31 A (200 VAC)		S8JX-P60024CD
				48 V	13 A		S8JX-P60048CD
	Without mounting brackets *2		300 W	5 V	60 A		S8JX-P30005N
				12 V	27 A		S8JX-P30012N
				24 V	14 A peak current 16.5 A (200 VAC)		S8JX-P30024N
				48 V	7 A		S8JX-P30048N
			600 W	5 V	120 A		S8JX-P60005N
				12 V	53 A		S8JX-P60012N
				24 V	27 A peak current 31 A (200 VAC)		S8JX-P60024N
				48 V	13 A		S8JX-P60048N

\*1. The front-mounting bracket is included as standard with the product.

\*2. A front-mounting bracket is not included with the product.

\*3. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).

## Ratings, Characteristics, and Functions

Input specification			100 to 240 V input		
Item	Power ratings *1		50 W	100 W	150 W
Efficiency	5 V Models		73% min.	78% min.	79% min.
	12 V Models		76% min.	78% min.	78% min.
	24 V Models		77% min.	81% min.	81% min.
	48 V Models		80% min.	81% min.	82% min.
Input	Voltage *2		100 to 240 VAC (allowable range: 85 to 264 VAC, 80 to 370 VDC *9)		
	Frequency *2		50/60 Hz (47 to 63 Hz)		
	Current *3	100 V input	0.75 A max.	1.4 A max.	2.1 A max.
		200 V input	0.4 A max.	0.75 A max.	1.1 A max.
	Power factor		0.9 min.		
	Harmonic current emissions		Conforms to EN61000-3-2		
	Leakage current *3	100 V input	0.5 mA max.		
		200 V input	1 mA max.		
	Inrush current (for a cold start at 25°C) *3	100 V input	17.5 A max.		
200 V input		35 A max.			
Output *4	Voltage adjustment range *5		−10% to 15% (with V. ADJ) (48-V models: ±10%)		
	Ripple *3		2% (p-p) max. This shall be 3% (p-p) or less when the ambient temperature is less than 0°C (for only 5 V type).		
	Input variation influence		0.4% max. with AC input voltage		
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)		
	Temperature variation influence		0.05%/°C max. (at rated input and output)		
	Startup time		1,000 ms max.		
	Hold time *3		20 ms min.		
	Additional functions	Overload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset	
Overvoltage protection *7		Yes			
Overheat protection		No			
Parallel operation		No (However, backup operation is possible; external diodes required.)			
Series operation		Yes (For up to two Power Supplies; external diodes required.)			
Protective circuit operation indicator		No			
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 42 (with no icing or condensation).		
	Storage temperature		−25 to 75°C (with no icing or condensation)		
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)		
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA) 2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA) 1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 20 mA)		
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC		
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions		
	Shock resistance		150 m/s², 3 times each in ±X, ±Y, ±Z directions		
	Output indicator		Yes (Color: Green)		
	EMI	Conducted Emissions	Conforms to EN 55011 Group 1 Class B and based on FCC Class B *9		
		Radiated Emissions	Conforms to EN 55011 Group 1 Class B *9		
	EMS	Electrostatic Discharge	Conforms to EN61000-4-2		
		Radiated Electromagnetic Field	Conforms to EN61000-4-3		
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4		
		Surge	Conforms to EN61000-4-5		
		Conducted Disturbance	Conforms to EN61000-4-6		
		Voltage Dips/Short Interruptions	Conforms to EN61000-4-11		
		Approved standards *9		UL Listed: UL 508 (Listing), UL UR: UL 60950-1 (Recognition) cUL Listed: CSA C22.2 No.107.1 cUR: CSA C22.2 No. 60950-1 EN/VDE: EN50178 (= VDE 0160) Over voltage category III, EN 60950-1 (= VDE 0805 Teil 1) (Terminal block: Based on DIN 50274 (VDE 0660-514))	
	SEMI		SEMI F47-0706 (200-VAC input)		
	Weight *8		370 g max.	550 g max.	590 g max.

\*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 44.

\*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.

\*3. Rated input voltage: 100 or 200 VAC at 100% load.

\*4. Output characteristics: Specified at power supply output terminals.

\*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.

\*6. For details, refer to *Overload Protection* on page 44.

\*7. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.

\*8. The weight indicated is for Front-mounting, Open-frame Power Supply.

\*9. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).


Input specification			100 to 240 V input	
Item	Power ratings *1		300 W	600 W
Efficiency	5 V models		75% min.	76% min.
	12 V models		77% min.	76% min.
	24 V models		79% min.	78% min.
	48 V models		78% min.	79% min.
Input	Voltage *2		100 to 240 VAC (allowable range: 85 to 264 VAC, 80 to 370 VDC *8)	
	Frequency *2		50/60 Hz (47 to 63 Hz)	
	Current *3	100 V input	4.5 A max.	8.7 A max.
		200 V input	2.2 A max.	4.3 A max.
	Power factor		0.9 min.	
	Harmonic current emissions		Conforms to EN61000-3-2	
	Leakage current *3	100 V input	0.5 mA max.	
		200 V input	1 mA max.	
	Inrush current (for a cold start at 25°C) *3	100 V input	17.5 A max.	
		200 V input	35 A max.	
Output *4	Voltage adjustment range *5		-10% to 15% (with V. ADJ) (5 V, 48 V models: ±10%)	
	Ripple *3		2% (p-p) max. 3% (p-p) max. (for only 5 V type) *13	
	Input variation influence		0.4% max.	
	Load variation influence		0.8% max. (0 to 100% load, rated input voltage)	
	Temperature variation influence		0.05%/°C max.	
	Startup time		1,000 ms max.	
	Hold time *3		20 ms min.	
Additional functions	Overload protection *6		105% to 160% of rated load current, voltage drop, intermittent, automatic reset.	
	Overvoltage protection *7		Yes	
	Overheat protection		Yes	
	Parallel operation		Yes (up to 5 Power Supplies)	
	Series operation		Yes (For up to two Power Supplies; external diodes required.)	
	Protective circuit operation indicator		Yes (color: red)	
Other	Ambient operating temperature		Refer to the derating curve in <i>Engineering Data</i> on page 42 (with no icing or condensation).	
	Storage temperature		-25 to 75°C (with no icing or condensation)	
	Ambient operating humidity		25% to 85% (Storage humidity: 25% to 90%)	
	Dielectric strength		3.0 kVAC for 1 min. (between all inputs and outputs; detection current: 20 mA)	
			2.0 kVAC for 1 min. (between all inputs and PE terminals; detection current: 20 mA)	
			1.0 kVAC for 1 min. (between all outputs and PE terminals; detection current: 100 mA)	
			100 VAC for 1 min. (between all outputs and RC terminals; detection current: 100 mA)	
			500 VAC for 1 min. (between all outputs and ALM terminals; detection current: 20 mA)	
	Insulation resistance		100 MΩ min. (between all outputs and all inputs/PE terminals) at 500 VDC	
	Vibration resistance		10 to 55 Hz, 0.375-mm single amplitude for 2 h each in X, Y, and Z directions	
	Shock resistance		150 m/s <sup>2</sup> , 3 times each in ±X, ±Y, ±Z directions *11	
	Output indicator		Yes (Color: Green)	
	EMI	Conducted Emissions *3	Conforms to EN 55011 Group 1 Class B and based on FCC Class B *12	
		Radiated Emissions	Conforms to EN 55011 Group 1 Class B *12	
	EMS	Electrostatic Discharge	Conforms to EN61000-4-2	
		Radiated Electromagnetic Field	Conforms to EN61000-4-3	
		Electrical Fast Transient/Burst	Conforms to EN61000-4-4	
		Surge	Conforms to EN61000-4-5	
		Conducted Disturbance	Conforms to EN61000-4-6	
		Voltage Dips/Short Interruptions	Conforms to EN61000-4-11	
	Approved standards *8		UL UR: UL 508 (Recognition), UL 60950-1 (Recognition)	
			cUR: CSA C22.2 No.107.1, CSA C22.2 No. 60950-1	
			EN/VDE: EN50178 (= VDE 0160) Over voltage category III *9, EN 60950-1 (= VDE 0805 Teil 1) *9 (Terminal block: Based on DIN 50274 (VDE 0660-514))	
	SEMI		SEMI F47-0706 (200-VAC input)	
	Weight		1,200 g max. *10	1,800 g max. *10

- 
- \*1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the Power Supply may not start. Refer to *Overload Protection* on page 44.
  - \*2. Do not use an Inverter output for the Power Supply. Inverters with an output frequency of 50/60 Hz are available, but the rise in the internal temperature of the Power Supply may result in ignition or burning.
  - \*3. Rated input voltage: 100 or 200 VAC at 100% load.
  - \*4. Output characteristics: Specified at power supply output terminals.
  - \*5. If the output voltage adjuster (V. ADJ) is turned, the voltage will increase by more than the allowable voltage range. When adjusting the output voltage, confirm the actual output voltage from the Power Supply and be sure that load is not damaged.
  - \*6. For details, refer to *Overload Protection* on page 44.
  - \*7. To reset the protection, turn OFF the input power for three minutes or longer and then turn it back ON.
  - \*8. The range for compliance with EC Directives and safety standards (UL, EN, etc.) is 100 to 240 VAC (85 to 264 VAC).
  - \*9. Certification for 5V, 12V, and 48V of the 300-W model, and 5V, 12V, and 48V of the 600-W model, is scheduled to be obtained in June, 2012.
  - \*10. The weight is of the type without a mounting bracket.
  - \*11. S8JX-P600□□CD: 100 m/s<sup>2</sup>
  - \*12. The noise value will vary depending on wiring methods and other characteristics.  
300-W/600-W models conform to Class B with an aluminum plate set under the product.  
For the 300-W 5V and 600-W 5V and 12V models, insert a noise filter (TDK-Lambda RSEN-2016) in the input line.
  - \*13. Measurement method conform to RC-9131A of the JEITA standards. For details, refer to "Ripple Noise Voltage" on page 55.

## Connections


### Block Diagrams

S8JX-P050 (50 W)

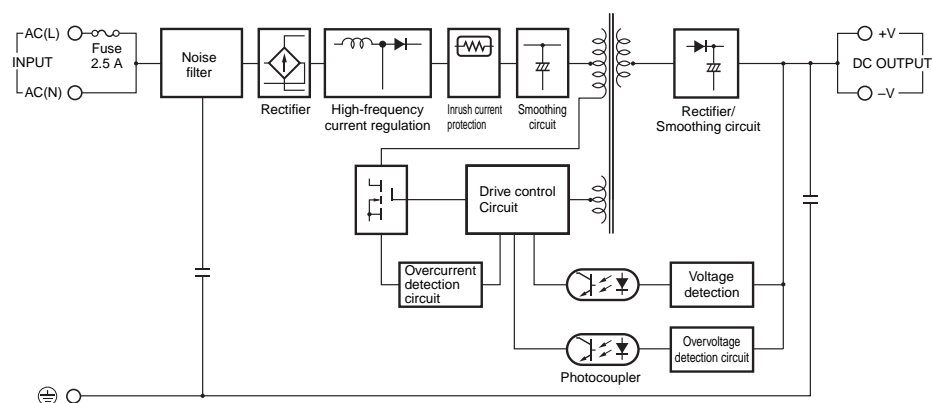

S8JX-P100 (100 W)

S8JX-P150 (150 W)

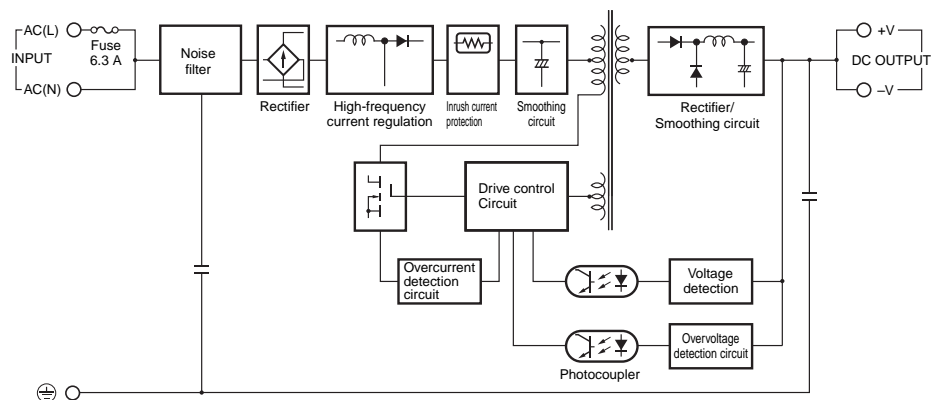


S8JX-G


S8JX-P

Common Precautions

## S8JX-P300 (300 W)

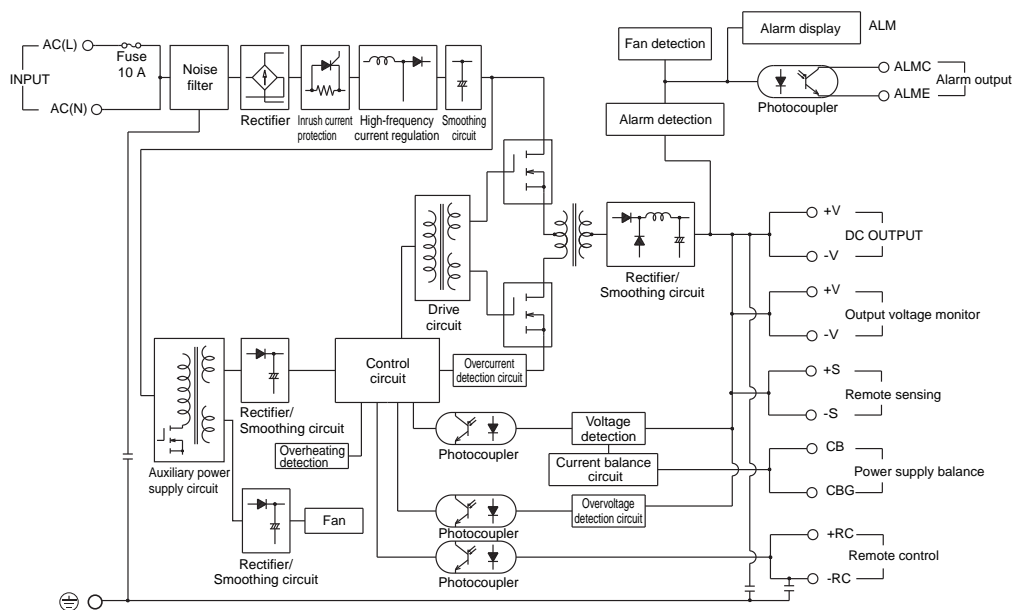


## S8JX-P600 (600 W)

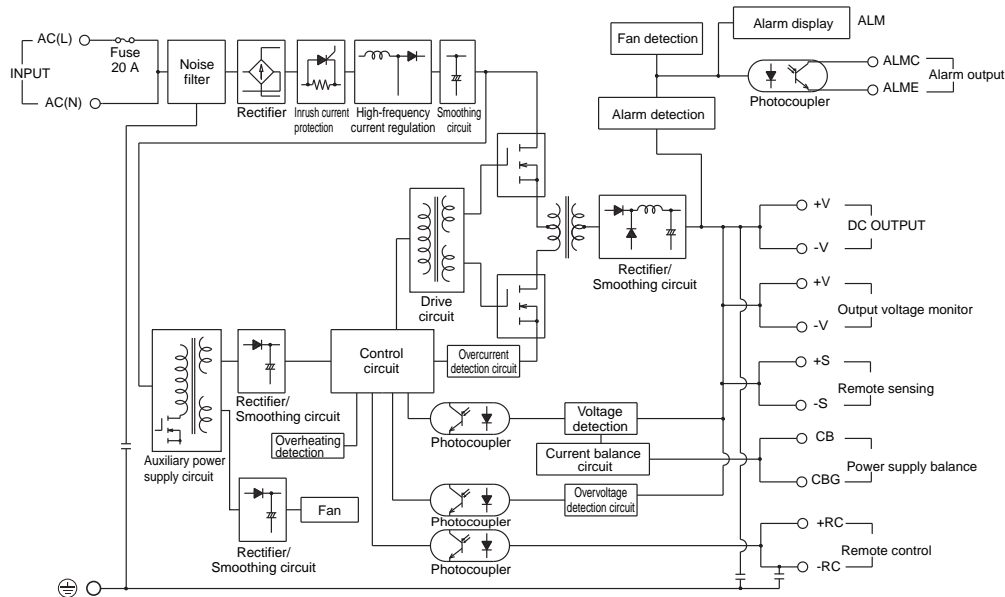

# Construction and Nomenclature

## Nomenclature

### 50-/100-/150-W Models

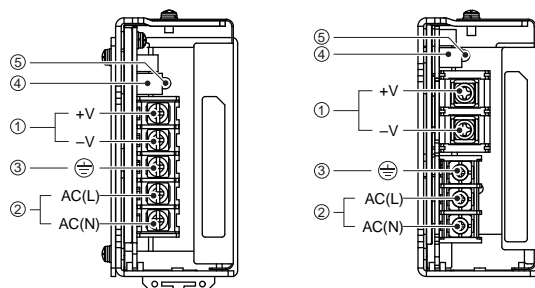

**Note:** The S8JX-P05005CD is shown above.


**Note:** The S8JX-P15005C is shown above.

No.	Name	Function
1	DC Output Terminals (-V), (+V)	Connect the load lines to these terminals.
2	AC Input Terminals (L), (N)	Connect the input lines to these terminals. *1
3	Protective Earth Terminal (PE) (⊕)	Connect the ground line to these terminals. *2
4	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
5	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.

\*1. The fuse is located on the (L) side. It is NOT user-replaceable. For a DC power input, connect the low side to the positive (+) terminal.

\*2. This is the protective earth terminal specified in the safety standards. Always ground this terminal.


### 300-W Models

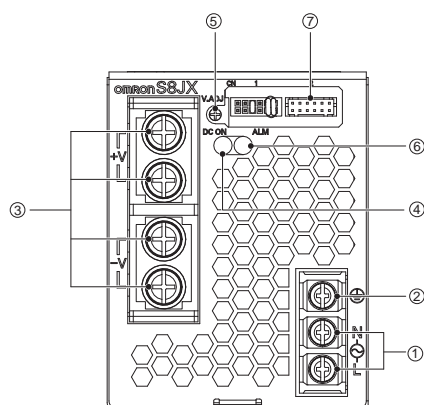

**Note:** The S8JX-P30024N is shown above.

No.	Name	Function
1	Input Terminals (L), (N)	Connect the input lines to these terminals. *1
2	Protective Earth Terminal (PE) (⊕)	Connect the ground line to these terminals. *2
3	DC Output Terminals (-V), (+V)	Connect the load lines to these terminals.
4	Output Indicator (DC ON: Green)	Lights green while a direct current (DC) output is ON.
5	Output Voltage Adjuster (V. ADJ)	It is possible to increase or decrease the output voltage.
6	Alarm indicator (ALM: Red)	This lamp lights up at the time of output voltage deterioration or fan stoppage, and in standby mode by remote control function.

Signal output connector \*3

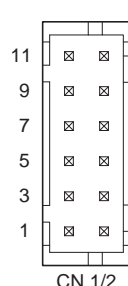

- 1: Output voltage monitor terminal (+V)
- 2: Remote sensing terminal (+S)
- 3: Output voltage monitor terminal (-V)
- 4: Remote sensing terminal (-S)
- 5: Current balance terminal (CB)
- 6: Current balance ground terminal (CBG)
- 7: Remote control terminal (+RC)
- 8: Remote control terminal (-RC)
- 9: (Not connected)
- 10: (Not connected)
- 11: Alarm detection output terminal (ALMC) (Collector side)
- 12: Alarm detection output terminal (ALME) (Emitter side)

\*1. The fuse is located on the (L) side. Ensure that the (L) side is set to (+).


\*2. This is a PE (Protective Earth) terminal defined in safety standards and must be grounded.

\*3. Signal input/output connectors are included as standard and implemented in the CN1 before shipment.

In this connector, the circuits of 1-2, 3-4, and 7-8 are shorted. Removal of the connector may deteriorate the output stability and accuracy, so be sure to perform the connection of +S and -S terminals.

Never connect a load to the output voltage monitor terminal (+V, -V).

### 600-W Models

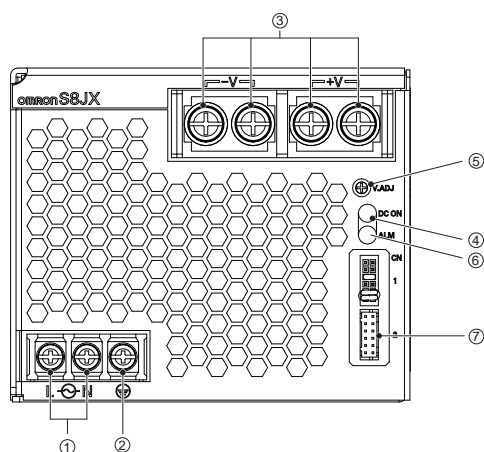

**Note:** The S8JX-P60024N is shown above.

## Reference Values

<b>Reliability (MTBF)</b>	50 W: 190,000 hrs 100 W: 160,000 hrs 150 W: 160,000 hrs 300 W: 160,000 hrs 600 W: 150,000 hrs
<b>Definition</b>	MTBF stands for Mean Time Between Failures, which is calculated according to the probability of accidental device failures, and indicates reliability of devices. Therefore, it does not necessarily represent a life of the product.
<b>Life expectancy</b>	10 yrs. min.
<b>Definition</b>	The life expectancy indicates average operating hours under the ambient temperature of 40°C and a load rate of 50%. Normally this is determined by the life expectancy of the built-in aluminum electrolytic capacitor.




## Engineering Data

## Derating Curves (Standard Mounting)


## 50-/100-W Models

Front-mounting, DIN Rail mounting, Bottom-mounting, Side-mounting

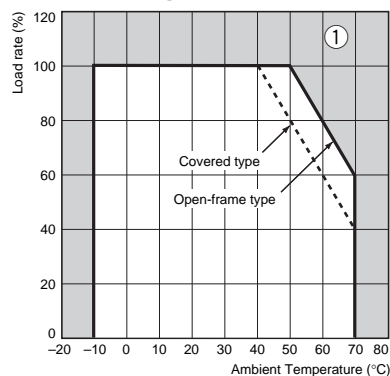


- Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
- 2.** If there is a derating problem, use forced air-cooling.
- 3.** (For Customers using 100-W type for a DC Input)  
When using an input voltage of less than 100 VDC, reduce the load calculated with the above derating curve by at least the following coefficients.  
When using a voltage exceeding 340 VDC, the ambient temperature should be 60°C or less.

## S8JX-P 100-W Models

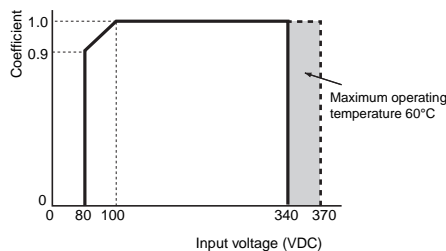


## 300-/600-W Models

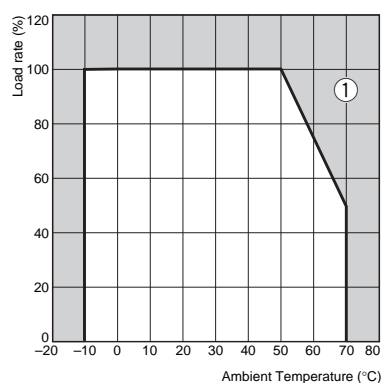


- Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
- 2.** The ambient temperature is defined at a location 50 mm forward from the center of the front surface of the product.
- 3.** (For Customers using 300-/600-W type for a DC Input)  
Reduce the load calculated with the above derating curve by at least the following coefficients.

## S8JX-P 300-/600-W Models

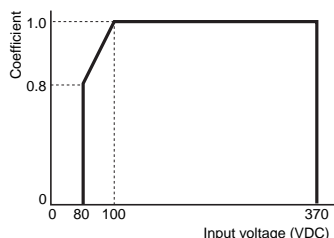


## 150-W Models

Front-mounting, DIN Rail mounting, Bottom-mounting

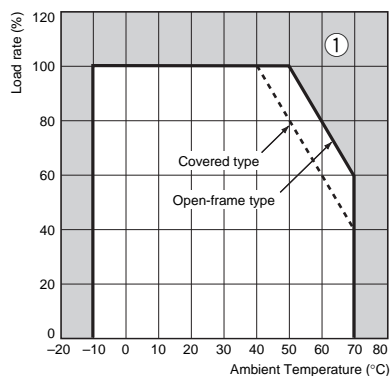


## Horizontal-side-mounting

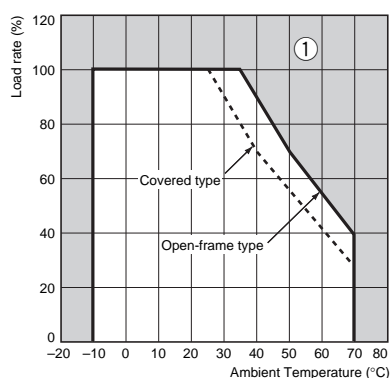

- Note: 1.** Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply in areas outside the derating curve (i.e., the area shown by shading ① in the above graph).
- 2.** If there is a derating problem, use forced air-cooling.
- 3.** (For customers using 150-W type for a DC Input)  
When using an input voltage of less than 100 VDC, reduce the load calculated with the above derating curve by at least the following coefficients.  
When using a voltage exceeding 340 VDC, the ambient temperature should be 60°C or less.

## S8JX-P 150-W Models

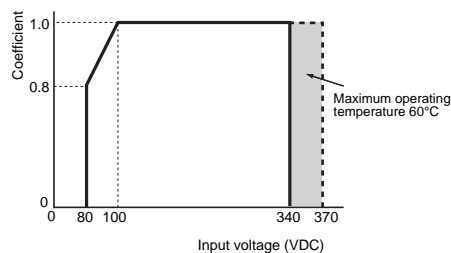


## Mounting

### 50-/100-/150-W Models

The following three mounting methods are possible.


- Ⓐ. Front-mounting: Refer to *Mounting Bracket Provided with Front-mounting Power Supplies* Ⓐ on page 52.
- Ⓑ. Bottom-mounting
- Ⓒ. Side-mounting

**Note:** Additional mounting methods are also available using DIN Rail-mounting models.

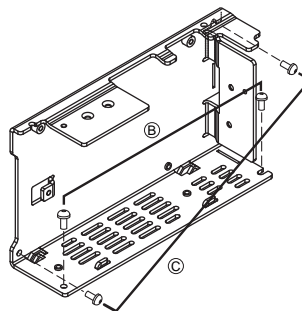


## Standard Mounting

### 50-/100-/150-W Models

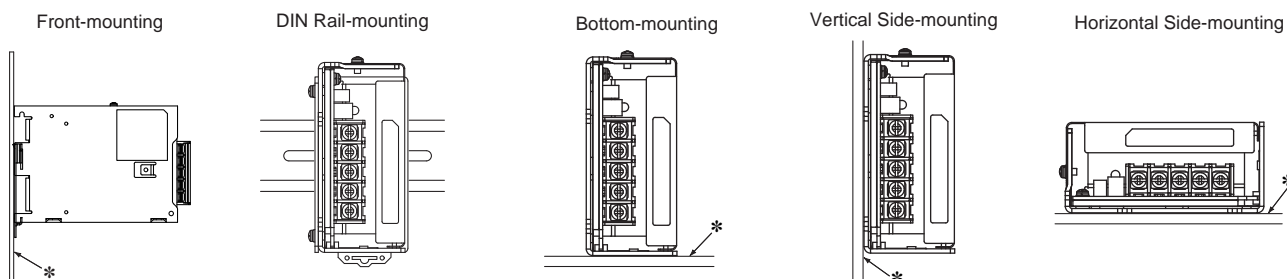

- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Install the Power Supply so that the air flow circulates around the Power Supply, as the Power Supply is designed to radiate heat by means of natural air flow.

### 300-/600-W Models

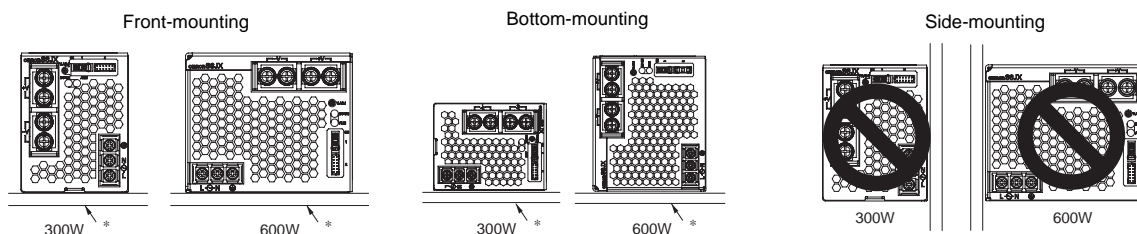

- Note:**
1. Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
  2. When mounting the Power Supply, mounting it to a metal plate (\*) is recommended.
  3. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.


# S8JX

## Remote sensing function

Use this function when it is desirable to automatically compensate for voltage drops in the load line.

The remote sensing function is operated by connecting +S terminal (2 pin on CN) to +side of the load terminal and -S terminal (4 pin on CN) to -side of the load terminal.

When the remote sensing function is not used, using a connector provided as standard enables the connection between +S and +V terminals (1 pin on CN) and between -S and -V terminals (3 pin on CN) respectively.

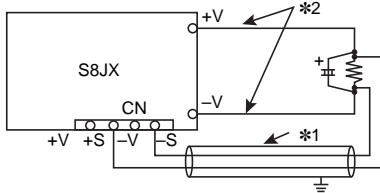


- Note:**
1. Use a two-core shield wire for connection line (\*1).
  2. If the voltage drop on a load line (\*2) is large, the output voltage of the power supply may rise by the voltage drop amount and activate the overvoltage protection. Therefore, be sure to use as thick a wire as possible.
  3. The voltage drop in the load line must be 0.3 V or less.
  4. If the load line is long, be sure to use an electrolytic capacitor between the load terminals. As the used electrolytic capacitor may be heated by ripple current due to the connected load, be sure to use an electrolytic capacitor having an allowable ripple current exceeding the used ripple current.
  5. Opening status of +S and -S terminals may deteriorate the output stability and accuracy. Therefore, be sure to connect +S and -S terminals.
  6. Remove a connector provided as standard and prepare a harness separately.

## Remote control function

This function is to turn ON/OFF the output by an external signal using +RC terminal (7 pin on CN) and -RC terminal (8 pin on CN) while input voltage remains applied. To use this function, connect a switch or a transistor to +RC and -RC terminals.

When not in use, use the standard supplied connector to short-circuit +RC and -RC terminals.

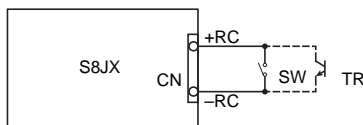

Level	Output voltage	Built-in fan
Short or L (0-0.8 V)	ON	Rotation
Open or H (2.4-12 V)	OFF	Stop

**Max. applied voltage: 12 V max., Counter voltage: -1 V max., Sink current: 3.5 mA**

- Note:**
1. If counter voltage is applied to remote control terminals, output voltage cannot be turned ON/OFF. Please remember this when wiring.
  2. Use a twist wire or a two-core shield wire for connection line.
  3. Remote control circuit is disconnected from input and output circuits.
  4. Remove a connector provided as standard and prepare a harness separately.

## Alarm detection function

 
When output voltage drops due to overcurrent protection, overvoltage protection, or overheat protection in operation or input voltage drop, when the built-in fan stops, or when the Power Supply goes standby by remote control, the alarm indicator (LED: red) lights up to indicate the output voltage trouble. In addition, the transistor outputs that outside.

Transistor output: 30 VDC max., 50 mA max.

Residual voltage when the function is ON: 2 V max., leakage current when the function is OFF: 0.1 mA max.

Detection voltage: approximately 80% of the output voltage setting value

When trouble is detected, the transistor output is turned OFF (nonconductive pins 11-12 on CN) and the LED (red) lights up.



- Note:**
1. The alarm detection function monitors the voltage at the Power Supply output end. To check an accurate voltage, measure a voltage at the load end.
  2. Remove the standard supplied connector and prepare a connector separately.


## Overload Protection

The Power Supply is provided with an overload protection function that protects the power supply from possible damage by overcurrent. When the output current rises above 105% to 160% min. of the rated current, the protection function is triggered, decreasing the output voltage. When the output current falls within the rated range, the overload protection function is automatically cleared.


- Note:**
1. When a load is connected that has a built-in DC-DC converter, the overload protection may operate at startup and the power supply may not start.
  2. Internal parts may occasionally deteriorate or be damaged if a short-circuited or overcurrent state continues during operation.
  3. Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

### (Reference value)


#### 50-W Models

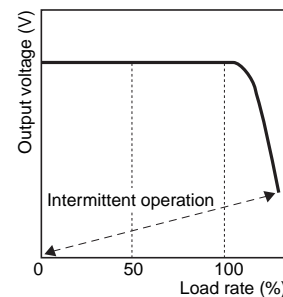

#### 100-/150-W Models

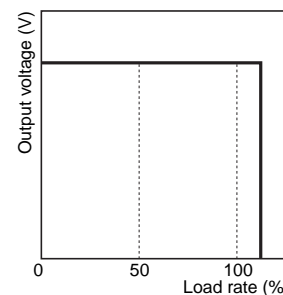

#### 300-/600-W Models

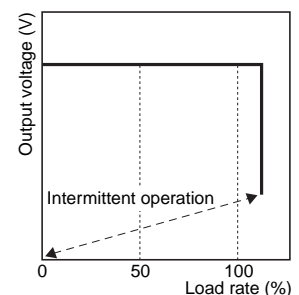

## Overvoltage Protection


### 50-/100-/150-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the power supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

### 300-/600-W Models

Consider the possibility of an overvoltage and design the system so that the load will not be subjected to an excessive voltage even if the feedback circuit in the Power Supply fails. When an excessive voltage that is approximately 130% of the rated voltage or more is output, the output voltage is shut OFF, preventing damage to the load due to overvoltage and simultaneously the alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

#### (Reference value)

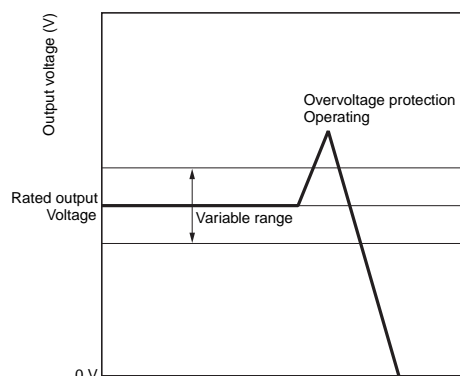


**Note:** Do not turn ON the power again until the cause of the overvoltage has been removed.

## Output peak current (300-W 24V, 600-W 24V Models)

The following conditions should be satisfied for the peak current value.

- $t_1 \leq 10 \text{ s}$
- $I_p \leq \text{rated peak current}$
- $I_{ave} \leq \text{rated current}$

$$\text{Duty} = \frac{t_1}{t_1 + t_2} \times 100 [\%] \leq 35\% \text{ (180 to 240 VAC)}$$

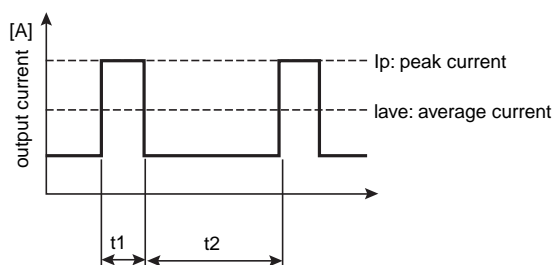


- Note:**
1. Do not hold peak load current over 10 seconds.  
In addition, you should not use duty cycle under conditions beyond above figure.  
It may cause damage in its power supply.
  2. Please derate peak load current depending on ambient temperature and mounting orientation.
  3. Please keep the average current of peak load cycle from becoming more than the rated value.

## Overheat Protection

### 300-/600-W Models

If the internal temperature rises excessively as a result of fan failure or any other reason, the overheat protection circuit will be triggered to shut OFF the output voltage and simultaneously the protection-ON alarm indicator will be lit. Reset the input power by turning it OFF for at least three minutes and then turning it back ON again.

## Inrush Current, Startup Time, Output Hold Time

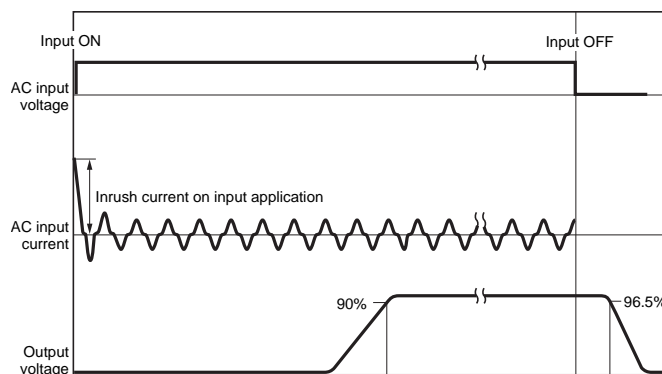

**Note:** A maximum startup time of 1,000 ms is required. Construct a system configuration that considers the startup time of other devices.

## S8JX




## Dimensions

(Unit: mm)

## Front-mounting Models

S8JX-P050□□ (50 W)

S8JX-P050□□C (50 W)

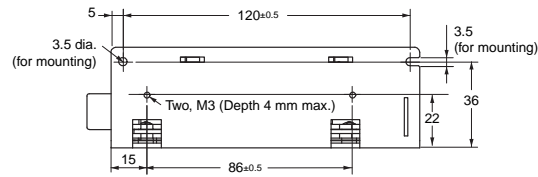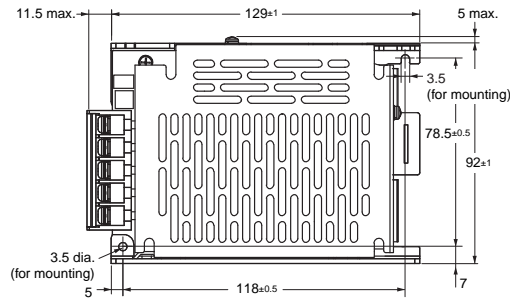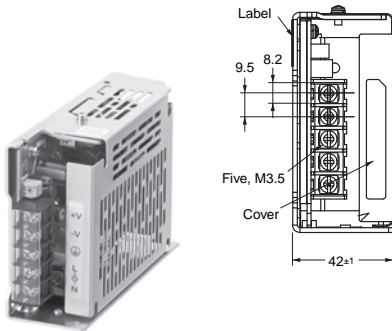

## Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 78.5±0.5 118±0.5
Bottom Mounting	Two, M3 120±0.5

S8JX-P100□□ (100 W)

S8JX-P100□□C (100 W)

S8JX-P15012 (150 W)




S8JX-P15012C (150 W)

S8JX-P15024 (150 W)

S8JX-P15024C (150 W)

S8JX-P15048 (150 W)


S8JX-P15048C (150 W)

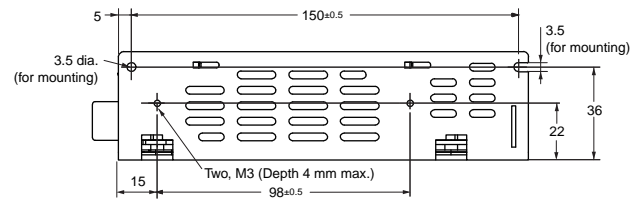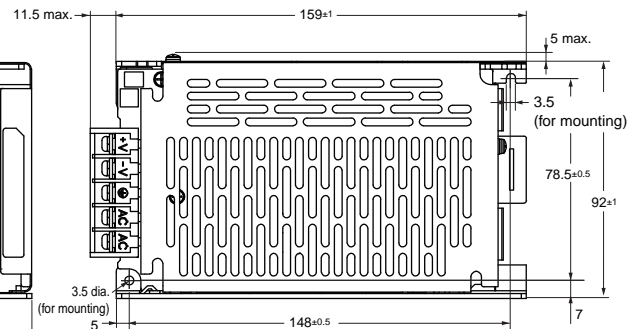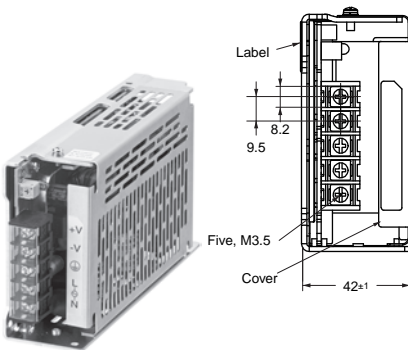

## Panel mounting holes dimensions

	Surface screw mounting
Side Mounting	Two, M3 78.5±0.5 148±0.5
Bottom Mounting	Two, M3 150±0.5

S8JX-P15005 (150 W)  
S8JX-P15005C (150 W)

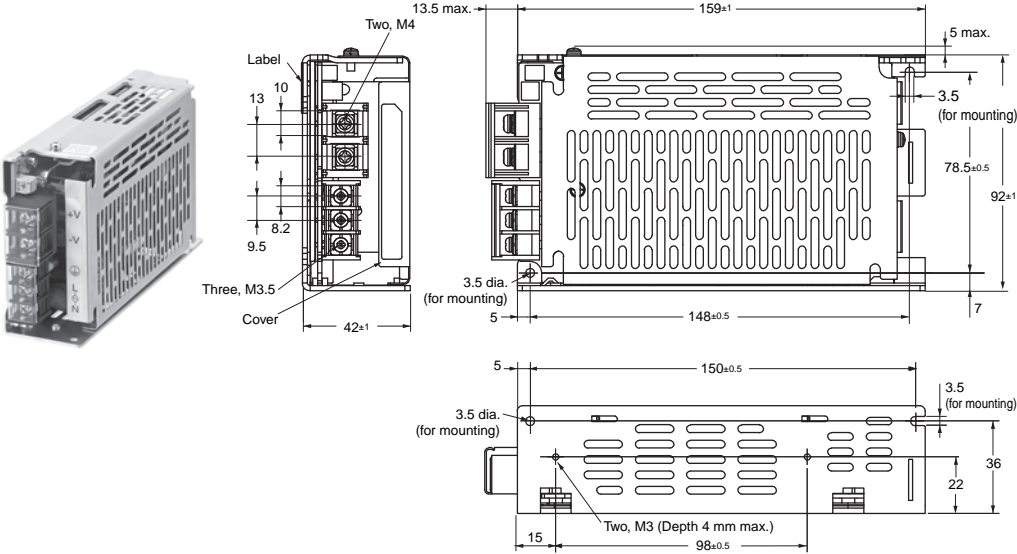


Panel mounting holes dimensions	
Surface screw mounting	
Side Mounting	
Bottom Mounting	

S8JX-G


S8JX-P

Common Precautions



S8JX-P300□□C (300 W)

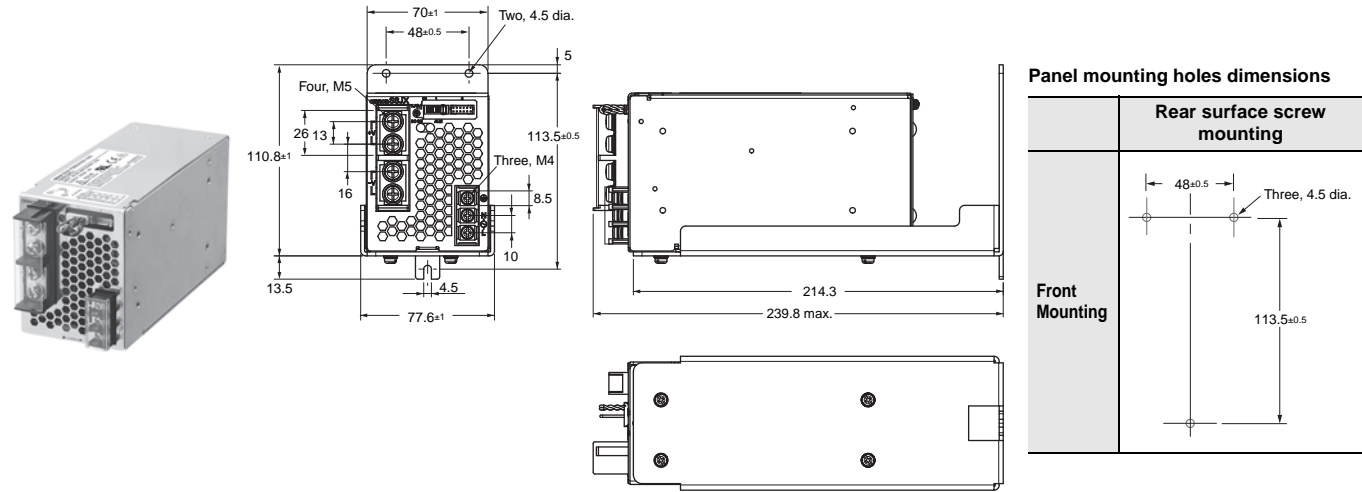

S8JX-P300□□N (300 W)

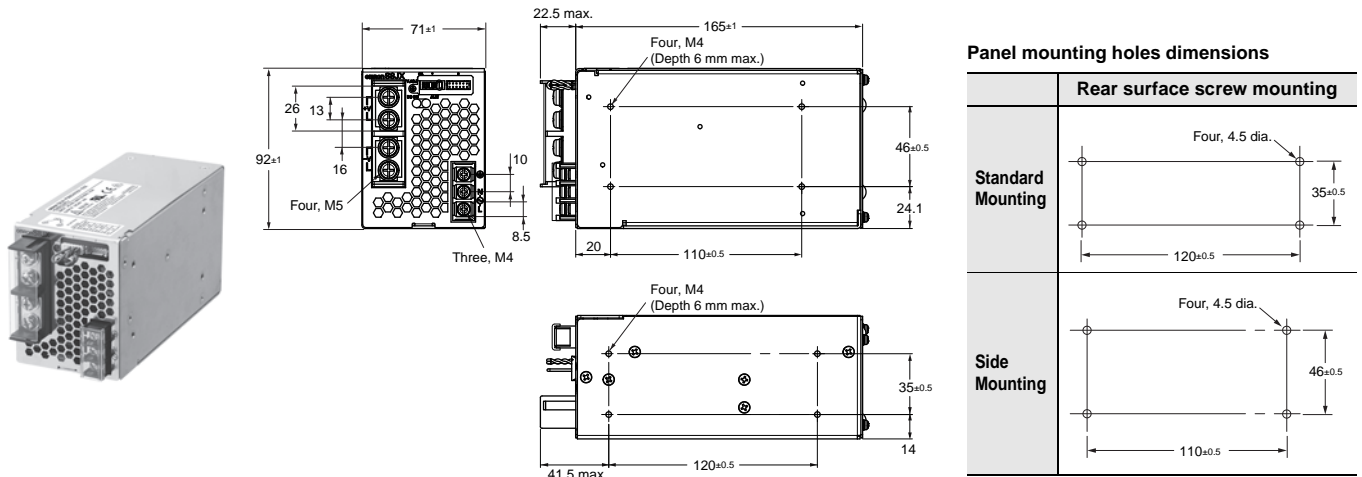


S8JX-P600□□C (600 W)

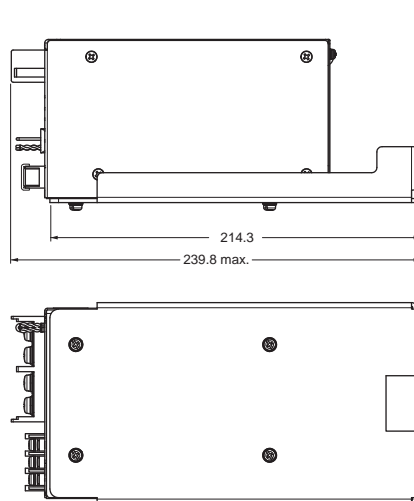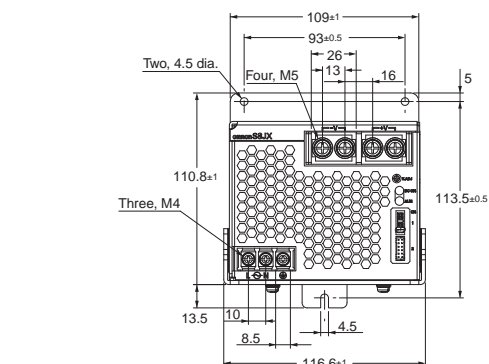

Panel mounting holes dimensions

	Rear surface screw mounting
Front Mounting	<p>Front mounting hole dimensions diagram showing three 4.5 dia. holes with a center-to-center distance of <math>93 \pm 0.5</math> and a total width of <math>113.5 \pm 0.5</math>.</p>

S8JX-P600□□N (600 W)

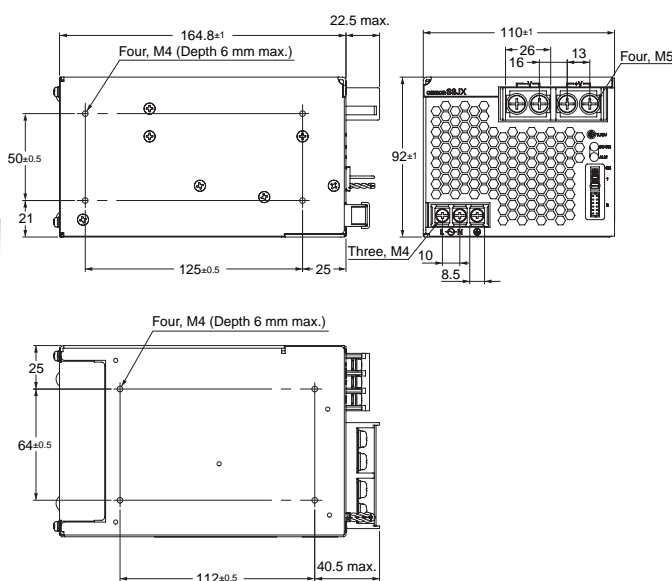

Panel mounting holes dimensions

	Rear surface screw mounting
Standard Mounting	<p>Standard mounting hole dimensions diagram showing four 4.5 dia. holes with a center-to-center distance of <math>112 \pm 0.5</math> and a total width of <math>125 \pm 0.5</math>.</p>
Side Mounting	<p>Side mounting hole dimensions diagram showing four 4.5 dia. holes with a center-to-center distance of <math>125 \pm 0.5</math> and a total height of <math>50 \pm 0.5</math>.</p>

S8JX-G


S8JX-P

Common Precautions




## DIN Rail-mounting Models


S8JX-P050□□D (50 W)  
S8JX-P050□□CD (50 W)

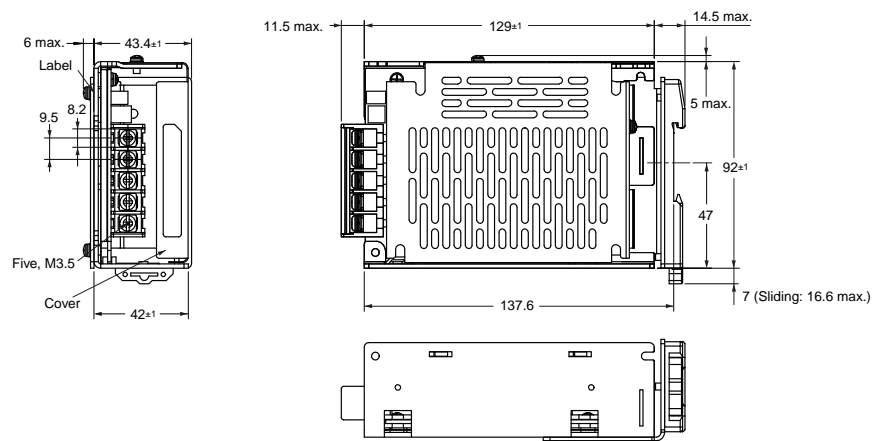


S8JX-P100□□D (100 W)  
S8JX-P100□□CD (100 W)  
S8JX-P15012D (150 W)  
S8JX-P15012CD (150 W)  
S8JX-P15024D (150 W)  
S8JX-P15024CD (150 W)  
S8JX-P15048D (150 W)  
S8JX-P15048CD (150 W)

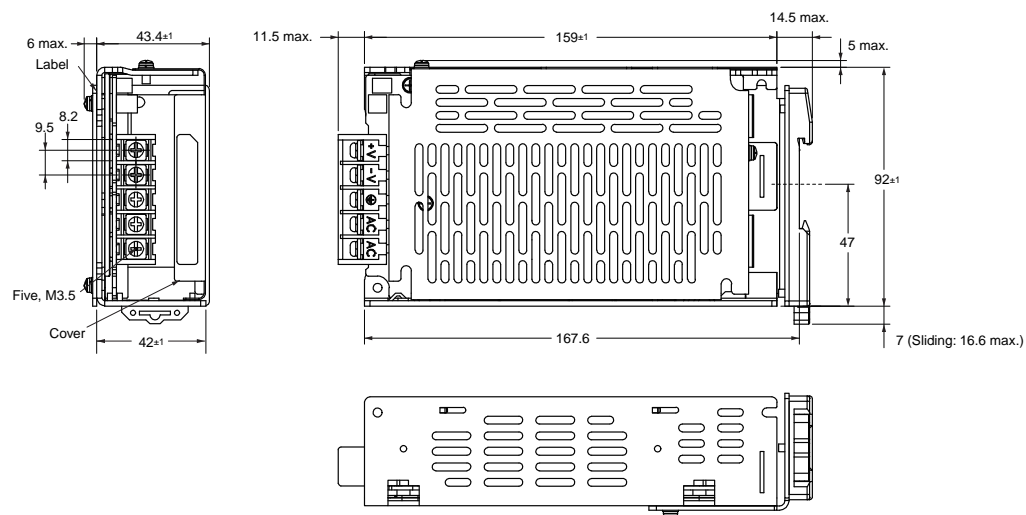

S8JX-P15005D (150 W)  
S8JX-P15005CD (150 W)

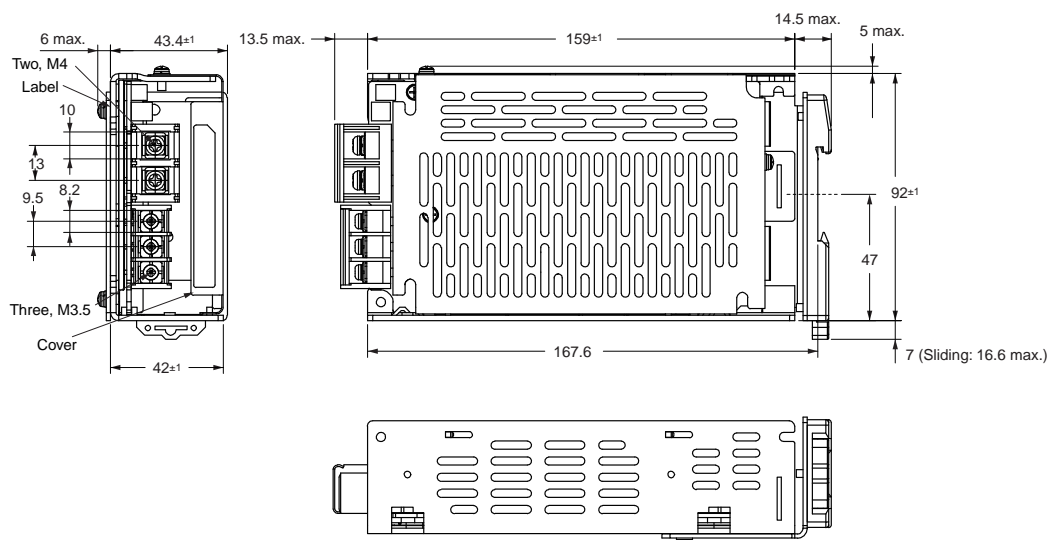


## S8JX-P300□□CD (300 W)

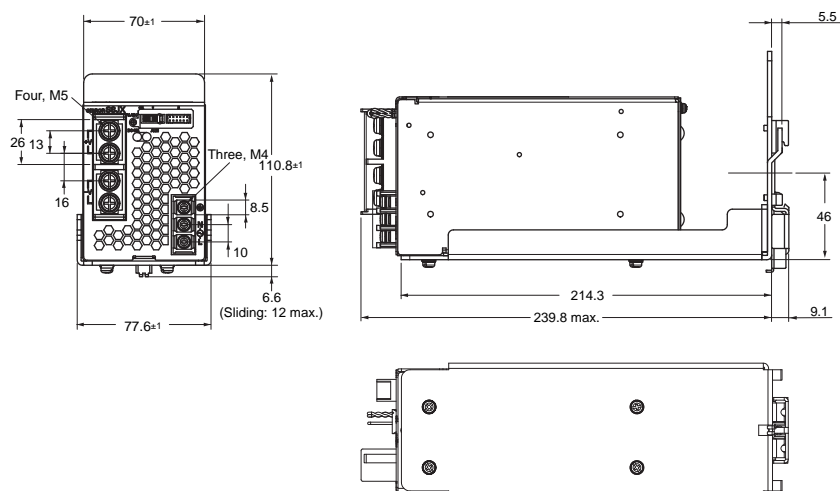

**Note:** Use a metal DIN Rail when mounting a 300-W model to a DIN Rail.


## S8JX-P600□□CD (600 W)

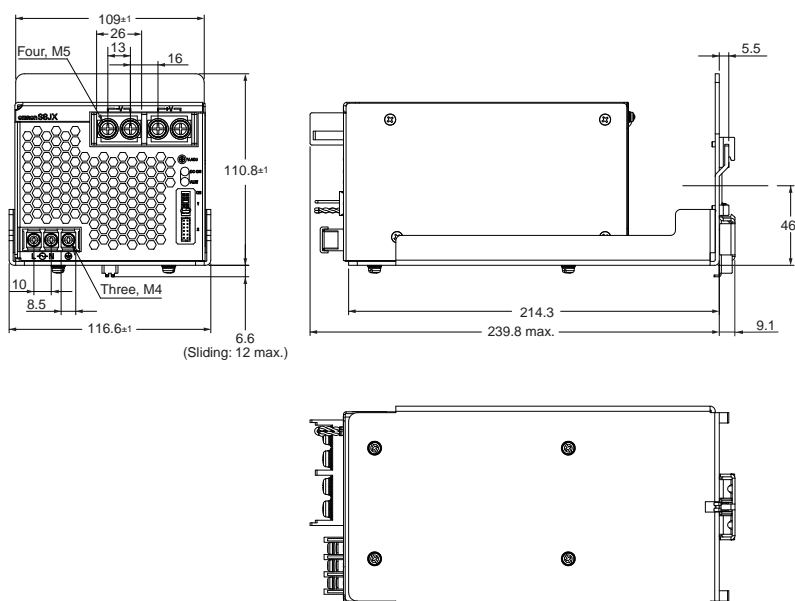

**Note:** Use a metal DIN Rail when mounting a 600-W model to a DIN Rail.

## Mounting Bracket Provided with Front-mounting Power Supplies ①


### S82Y-J00F Front-mounting Bracket

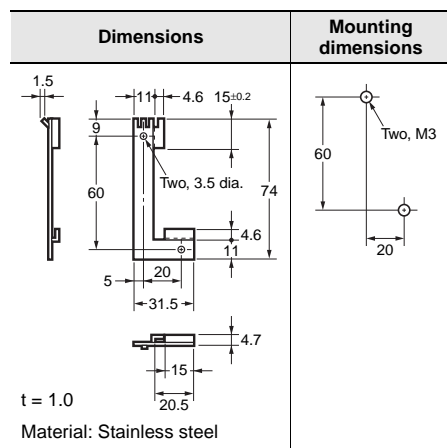

### Front-mounting Method



Temporarily attach the enclosed mounting bracket as shown in the illustration on the right, hook the holes (parts a) in the Power Supply on hooks on the mounting bracket (parts b), and secure the Power Supply with two mounting screws.

**Note:** Mounting screws are not provided.

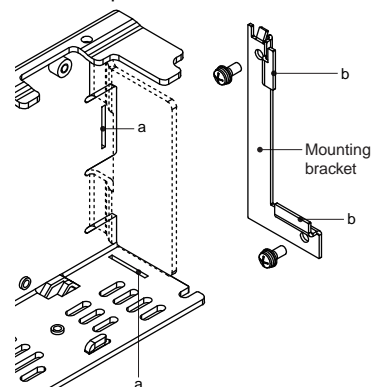


## DIN Rail (Order Separately)

### Mounting Rail (Material: Aluminum)

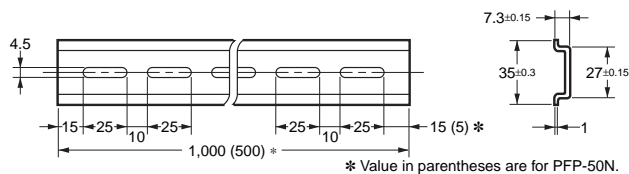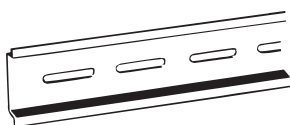



Model
PFP-100N
PFP-50N

### Mounting Rail (Material: Aluminum)

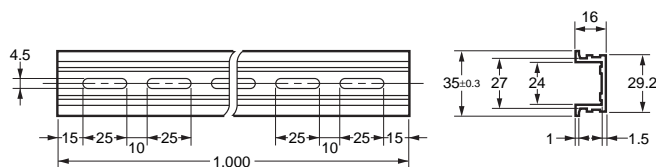

Model
PFP-100N2

### End Plate

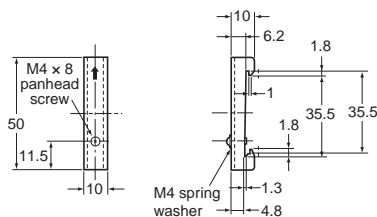 

Model
PFP-M

- Note:** 1. If there is a possibility that the Unit will be subject to vibration or shock, use a steel DIN Rail. Otherwise, metallic filings may result from aluminum abrasion.  
2. If the Unit may be subjected to sliding to either side, attach an End Plate (model PFP-M) on each side of the Unit.

## Terminal Cover (Order Separately)

Terminal Cover model	Applicable Power Supply and applicable location
S82Y-JTC1	S8JX-P50W
	S8JX-P100W
	S8JX-P150W 12-V, 24-V or 48-V output

## Replacement Fan (sold separately)

Product	Model
Replacement fan unit for 300-W models	S82Y-JXP30FAN
Replacement fan unit for 600-W models	S82Y-JXP60FAN

## Safety Precautions

Refer to *Safety Precautions for All Power Supplies*.

### CAUTION

Minor electric shock, fire, or Product failure may occasionally occur. Do not disassemble, modify, or repair the Product to touch the interior of the Product.



Minor burns may occasionally occur. Do not touch the Product while power is being supplied or immediately after power is turned OFF.



Fire may occasionally occur. Tighten terminal screws to the specified torque.

M3.5, M4:1.13 N·m.

(The DC output terminal of S8JX-G15005□□ and S8JX-P15005:1.56 N·m.)

M5:2.25 N·m.



Minor injury due to electric shock may occasionally occur. Do not touch the terminals while power is being supplied. Always close the terminal cover after wiring.



Minor electric shock, fire, or Product failure may occasionally occur. Do not allow any pieces of metal or conductors or any clippings or cuttings resulting from installation work to enter the Product.




### Precautions for Safe Use

#### Mounting


- Take adequate measures to ensure proper heat dissipation to increase the long-term reliability of the Product.
- The 300 W 24V, 48V models of S8JX-G series are designed to radiate heat by means of natural air-flow. Be sure to allow convection in the atmosphere around devices when mounting. Do not use in locations where the ambient temperature exceeds the range of the derating curve.
- The 300 W 5V, 12V, 600 W models of S8JX-G series, and 600 W models of S8JX-P series are designed to radiate heat by means of forced air-flow. Do not cover the air holes (provided at fan mounted side and the opposite side) to have enough air-cooling.
- The screws must not protrude beyond the following values inside the Power Supply when screw holes provided on the chassis are used.  
15 W, 35 W, 50 W, 100 W, or 150 W: 4 mm  
300 W or 600 W of S8JX-P series: 6 mm  
300 W or 600 W of S8JX-G series: 8 mm  
Mounting screw tightening torque (recommended value) : 0.54 N·m.
- Front mounting is possible using provided mounting bracket.
- When cutting out holes for mounting, make sure that cuttings do not enter the interior of the Products.
- Improper mounting will interfere with heat dissipation and may occasionally result in deterioration or damage of internal parts. Use the standard mounting method only.
- The internal parts may occasionally deteriorate and be broken due to adverse heat radiation. Do not loosen the screw on the side face of the main body.
- When mounting two or more Power Supplies side-by-side, allow at least 20 mm for S8JX-G series and 15 mm for S8JX-P series spacing between them.
- Provide a space of at least 20 mm back and forth for S8JX-G series, and 50 mm back and forth for S8JX-P series when mounting 300-W and 600-W models as well.
- Use the metal plate as the mounting panel.
- Minor fire may occasionally occur. Set the input voltage switch to the input voltage that is to be used (150-W, 5-V models of S8JX-G series only).

#### 15-/35-/50-/100-/150-W Models


Standard Mounting  
(Front-mounting and DIN Rail-mounting)

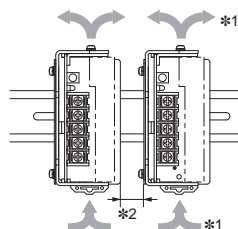


Standard Mounting  
(Bottom-mounting)

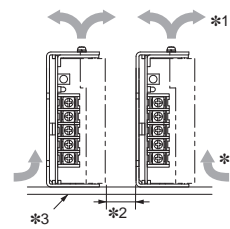

Standard Mounting  
(Horizontal Mounting)

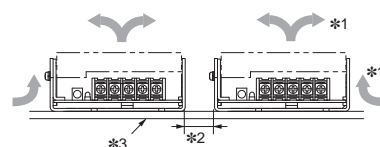


#### S8JX-G Series 300-W 5V, 12V Model

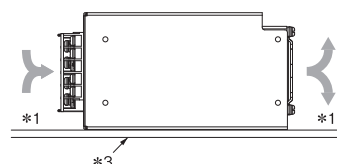


#### S8JX-G Series 300-W 24V, 48V Model

Standard Mounting  
(Front-mounting and DIN Rail-mounting)

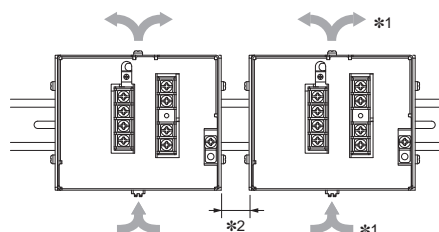

Standard Mounting  
(Bottom-mounting)

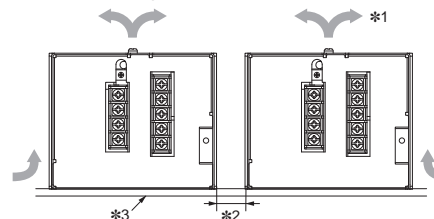

\*1. Convection of air

\*2. 20 mm min. (15 mm min. for S8JX-P series)

\*3. Use a metal plate as the mounting surface.


S8JX-G

S8JX-P


Common Precautions

# S8JX


## S8JX-P Series 300-W Models

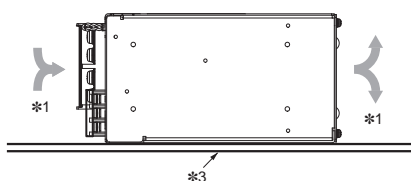

## S8JX-G Series 600-W Models

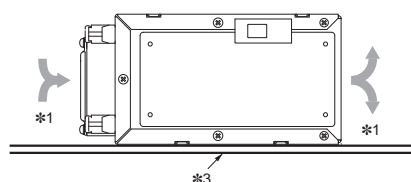

## S8JX-P Series 600-W Models

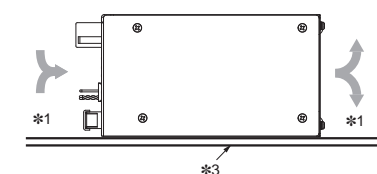

- \*1. Convection of air  
\*3. Use a metal plate as the mounting surface.

### Wiring

- Connect the ground completely. A protective earthing terminal stipulated in safety standards is used. Electric shock or malfunction may occur if the ground is not connected completely.
- Minor fire may possibly occur. Ensure that input and output terminals are wired correctly.
- Do not apply more than 75 N force to the terminal block when tightening it.
- Be sure to remove the sheet covering the Product for machining before power-ON so that it does not interfere with heat dissipation.
- Use the following material for the wires to be connected to the S8JX to prevent smoking or ignition caused by abnormal loads.

### Recommended Wire Type

15 W, 35 W		AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm <sup>2</sup> ) UL-certified temperature of at least 75°C
50W, 100W, 150 W (except for 5 V)		AWG12 to AWG16 (a cross section of 1.309 to 3.309 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C
150 W at 5 V	Input side	AWG12 to AWG16 (a cross-section of 1.309 to 3.309 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C
	Output side	AWG8 to AWG14 (a cross-section of 2.081 to 8.368 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C
S8JX-G series 300W 5V, 12V 600W 5V, 12V S8JX-P series 300 W, 600 W	Input side	AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C
	Output side	AWG6 to AWG20 (a cross section of 0.517 to 13.30 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C
S8JX-G series 300 W 24V, 48V, 600 W 24V, 48V		AWG12 to AWG20 (a cross section of 0.517 to 3.309 mm <sup>2</sup> ) UL-certified temperature of at least 60°C or 60/75°C

\* The rated current for the output terminals on the S8JX-G30005□□, S8JX-G30012□□, S8JX-G60005□, S8JX-G60012□, S8JX-P300□□ and S8JX-P600□□ is 60A for each terminal. The rated current for the output terminals on the S8JX-G30024□□, S8JX-G30048□□, S8JX-G60024□, and S8JX-G60048□ is 20 A for each terminal. Use two terminals together if the current flow is higher than the rated terminal current.

## Method of Manufacturing Connector Harness for Signal I/O

For S8JX-P Series 300-/600-W models, PHD connectors manufactured by JST Mfg. Co., Ltd. should be used.

Connector used	S12B-PHDSS	Manufactured by JST Mfg. Co., Ltd.
Housing	PHDR-12VS	
Terminal	SPHD-001T-P0.5 or BPHD-001T-P0.5	

To ensure correct wiring, the following points should be borne in mind when manufacturing the connector. It is recommended that the JST Mfg. Co., Ltd. catalog be read for further details.

- Electric cable size AWG26 to AWG22 should be used.
- The electric cable sheath stripping length should be approximately 2.3 mm.
- Dedicated tool YC (Manufactured by JST Mfg. Co., Ltd.) should be used for crimping of terminals and wiring.
- Although UL12007 (Twisted wire) and other equivalent twisted wires can be used for electric cables, UL1061 with a small outer sheath shape and equivalent twisted wires should be used for AWG22.
- When accommodating crimped terminal wiring in the housing, insert the wiring as far as possible to the back of the housing in a single movement and check for an audible click. In addition, check that wiring inserted in the housing is properly locked in place.

### Installation Environment

- Do not use the Power Supply in locations subject to shocks or vibrations. In particular, install the Power Supply as far away as possible from contactors or other devices that are a vibration source.
- Install the Power Supply well away from any sources of strong, high-frequency noise and surge.

### Ambient Operating and Storage Environments

- Store the Power Supply at a temperature of -25 to 65°C (-25 to 75°C for S8JX-P series) and a humidity of 25% to 90%.
- The Internal parts may occasionally deteriorate or be damaged. Do not use the Power Supply outside the derating range (i.e., the area shown by shading ① in the derating curve diagram on page 42.)
- Use the Power Supply at a humidity of 25% to 85%.
- Do not use the Power Supply in locations subject to direct sunlight.
- Do not use locations where liquids, foreign matter, or corrosive gases may enter the interior of the Product.

### Overload Protection

- Internal parts may possibly deteriorate or be damaged if a short-circuited, overload or peak load state continues during operation.
- Internal parts may possibly deteriorate or be damaged if the Power Supply is used for applications with frequent inrush current or overloading at the load end. Do not use the Power Supply for such applications.

### Charging a Battery

When connecting a battery at the load, connect an overcurrent limiting circuit and overvoltage protection circuit.


## Output Voltage Adjuster (V.ADJ)

- The output voltage adjuster (V.ADJ) may possibly be damaged if it is turned with unnecessary force. Do not turn the adjuster with excessive force.
- After completing output voltage adjustment, be sure that the output capacity or output current does not exceed the rated output capacity or rated output current.

## Ripple Noise Voltage


### (S8JX-G Series 300 W 5 V and 600 W 5 V or 12 V Models)

The specified standard for the ripple voltage noise was measured with a measurement circuit that is based on JEITA standard RC-9131A.

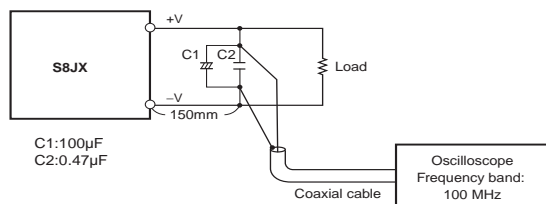

## DIN Rail-mounting

To mount the Power Supply to a DIN Rail, pull down the rail stopper until you hear it clicks open, hook portion (A) of the Power Supply onto the DIN Rail, press the Power Supply in direction (B), and then push up the rail stopper to lock the Power Supply in place.

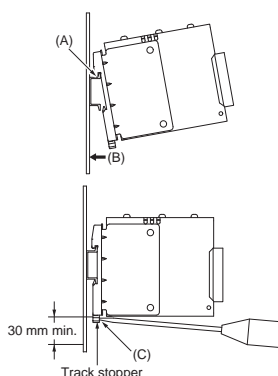


To dismount the Power Supply, pull down portion (C) with a flat-blade screwdriver and pull out the Power Supply.


## Series Operation

Two power supplies can be connected in series. The ( $\pm$ ) voltage output can be accomplished with two Power Supplies.

### Series Operation Correct

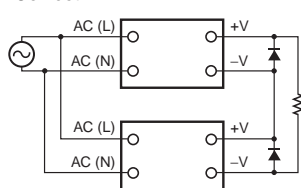

### Output Voltage ( $\pm$ ) Correct

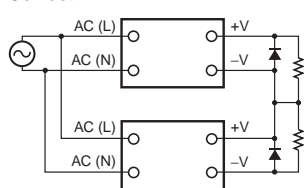

**Note: 1.** If the load is short-circuited, a reverse voltage will be generated inside the Power Supply. If this occurs the Power Supply may possibly deteriorate or be damaged. Always connect a diode as shown in the figure. Select a diode having the following ratings.

Type	Schottky Barrier diode
Dielectric strength (VRRM)	Twice the rated output voltage or above
Forward current (IF)	Twice the rated output current or above


**2.** Although Products having different specifications can be connected in series, the current flowing through the load must not exceed the smaller rated output current.

## Parallel Operation


### 15-/35-/50-/100-/150-W Models

The Product is not designed for parallel operation.

### Parallel Operation Incorrect

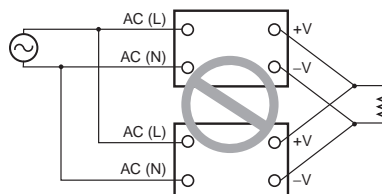

However, the following backup operation is possible. (Requires a mounting diode)

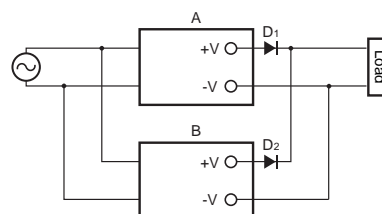

The same model should be used for power supplies A and B.

- Type: Schottky Barrier diode
- Withstand voltage (VRRM): Equivalent to or higher than the rated power supply output voltage
- Forward current (IF): Double the rated power supply output current or higher


- The output voltages of power supplies A and B output should be set higher only by a value equivalent to the drop in diode  $D_1$  and  $D_2$  forward voltages ( $V_F$ ). In addition, since power loss occurs resulting from power supply output current ( $I_{OUT}$ )  $\times$  diode forward voltage ( $V_F$ ), the diode should be cooled to ensure that its temperature is kept at the value indicated in the catalog or lower.
- Since power loss occurs due to load power and the diode, care should be exercised to ensure that the rated power (Rated output voltage  $\times$  rated output current) for one power supply is not exceeded.

### S8JX-G Series 300-/600-W Models

Parallel operation is possible under 80% of the rated value.

- To operate in parallel, set the switch to the "PARALLEL" side.
- The length and thickness of each wire connected to the load must be the same so that there is no difference in voltage drop value between the load and the output terminals of each Power Supply.
- It is desirable to set the same value on the voltage adjuster of each Power Supply.

### Parallel Operation Correct

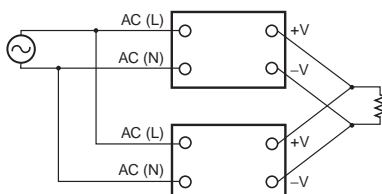




**S8JX-P Series 300-/600-W Models**

Connecting CB terminal (5 pin on CN) and CBG terminal (6 pin on CN) enables the current balancing function and that allows the parallel operation at 80% or less of the total output capacity.

Up to five Power Supplies can be connected.

- Use 2-conductor shielded cable as a connection wire (\*1).
  - Adjust the output voltage difference of each Power Supply to 100 mV or less or 1% or less of the rated output voltage, whichever is smaller, using the output voltage adjuster (V. ADJ).
- During parallel operation, load current may be biased to one side, resulting in damage to internal components.
- Parallel operation is used to increase static capacity. The output voltage may drop with sudden load fluctuations.
  - There may be steps in the rising waveform of the output voltage during parallel operation.
  - Remove the standard supplied connector and prepare a connector separately.

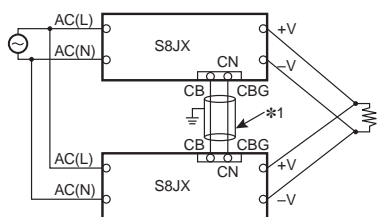**In Case There Is No Output Voltage****S8JX-G Series  
S8JX-P Series 50-/100-/150-W Models**

The possible cause for no output voltage may be that the overcurrent or overvoltage protection has operated. The internal protection may operate if a large amount of surge voltage such as a lightning surge occurs while turning ON the Power Supply.

In case there is no output voltage, please check the following points before contacting us:

- Checking overcurrent protected status:  
Check whether the load is in overcurrent status or is short-circuited. Remove wires to load when checking.
- Checking overvoltage or internal protection:  
Turn the power supply OFF once, and leave it OFF for at least 7 minutes for S8JX-G series and 3 minutes for S8JX-P series. Then turn it ON again to see if this clears the condition.

**S8JX-P Series 300-/600-W Models**

There is a possibility that functions such as over-current protection, over-voltage protection or overheating protection are functioning. In addition, other possible causes include stoppage of the built-in fan and the remote control function (OFF). Please check the following 5 points and, if there is still no output voltage, contact your OMRON sales representative.

**Method of Checking Over-current Protection**

- Check (after removing load line) whether or not the load is in over-current status (including short circuits).

**Method of Checking Over-voltage Protection**

- Switch off the input power supply, and switch back on after at least 3 minutes have elapsed.
- Check whether or not the +S and -S terminals are open.

**Method of Check Overheating Protection**

- Switch off the input power supply and switch back on after allowing sufficient time for cooling.

**Checking for Built-in Fan Stoppage**


- Check whether or not the built-in fan has stopped. The fan is a replaceable component.

**Checking the Remote Control Function**


- Check whether or not the +RC and -RC terminals are in open status. Carry out the regulated connections.

**Switching the AC Input Voltage between 100 and 200 VAC****S8JX-G Series 150-W, 5-V Models**

The input voltage can be switched between 100 V and 200 V by using the input voltage switch. Make the setting shown in the following figure for the voltage that will be used. (The input voltage is factory-set to 200 V.)

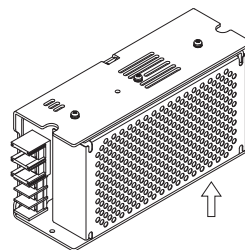

The input voltage switch is at the back on the bottom of the Power Supply.

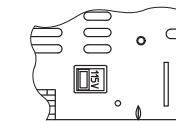


"115V": 100 to 120 VAC



"230V": 200 to 240 VAC

**S8JX-G Series 300-/600-W Models**

The input voltage can be switched between 100 and 200 V by shorting or opening the input voltage selection terminals. Set the required voltage as shown below. (The voltage is factory-set to 200 V.)

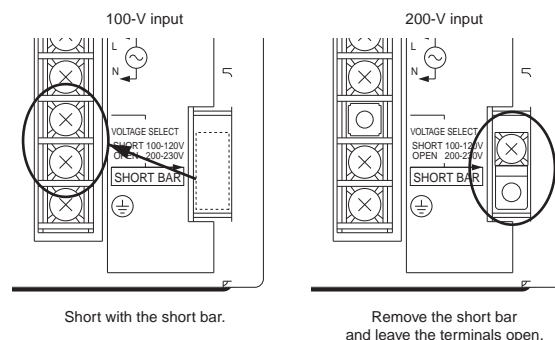


**Note:** A 300-W model is shown above.

## Fan Replacement

### S8JX-G Series 300-W 5V, 12V/600-W Model


The service life of the fan is approximately 50,000 hours (at 25°C). The service life varies, however, depending on the ambient temperature or other surrounding environmental conditions such as dust. As a preventive maintenance measure, replace the fan within approx. two years if it is used at an ambient temperature of 40°C. Purchase the S82Y-JX FAN Replacement Fan (sold separately) to replace the fan.

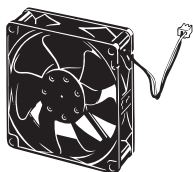

Fan Set:

Fan (above), instruction sheet


Replace the fan as shown in the following illustration.

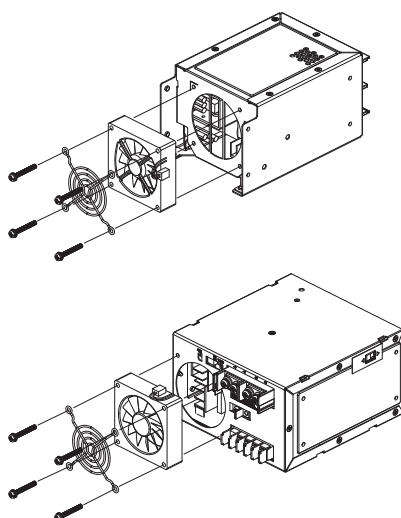

### S8JX-P Series 300-/600-W Models

- Please contact your OMRON sales representative regarding fan replacement. Fans will be replaced at cost. In addition, a replacement fan unit (Model S82Y-JXP□□FAN) is available. Please use the curve below as a guideline for the timing of fan replacement.
- Fan replacements made by the customer fall outside the scope of safety standards.

Replacement should be implemented as shown below.

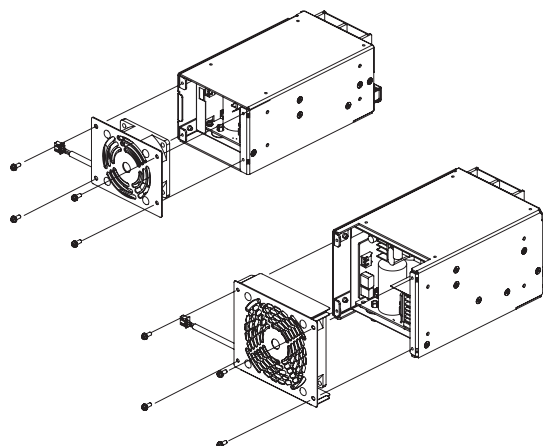

S8JX-G

S8JX-P

Common Precautions

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

In the interest of product improvement, specifications are subject to change without notice.



# Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices; Payment Terms.** All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.
4. **Interest.** Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Orders.** Omron will accept no order less than \$200 net billing.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.
10. **Force Majeure.** Omron shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Omron:
  - a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship except in "break down" situations.
  - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
  - c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
  - d. Delivery and shipping dates are estimates only; and
  - e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
13. **Warranties.** (a) **Exclusive Warranty.** Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied. (b) **Limitations.** OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) **Buyer Remedy.** Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See <http://www.omron247.com> or contact your Omron representative for published information.
14. **Limitation on Liability; Etc.** OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Export Controls.** Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (ii) sale of products to "forbidden" or other proscribed persons; and (iii) disclosure to non-citizens of regulated technology or information.
18. **Miscellaneous.** (a) **Waiver.** No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) **Assignment.** Buyer may not assign its rights hereunder without Omron's written consent. (c) **Law.** These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) **Amendment.** These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) **Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) **Setoff.** Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) **Definitions.** As used herein, "including" means "including without limitation"; and "Omron Companies" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

## Certain Precautions on Specifications and Use

1. **Suitability of Use.** Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:
  - (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
  - (ii) Use in consumer products or any use in significant quantities.
  - (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
  - (iv) Systems, machines and equipment that could present a risk to life or property. Please know and observe all prohibitions of use applicable to this Product.
 NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
2. **Programmable Products.** Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.
3. **Performance Data.** Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.
4. **Change in Specifications.** Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.
5. **Errors and Omissions.** Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



**OMRON INDUSTRIAL AUTOMATION • THE AMERICAS HEADQUARTERS**

Schaumburg, IL USA • 847.843.7900 • 800.556.6766 • [www.omron247.com](http://www.omron247.com)

**OMRON CANADA, INC. • HEAD OFFICE**

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • [www.omron247.com](http://www.omron247.com)

**OMRON ELECTRONICS DE MEXICO • HEAD OFFICE**

México DF • 52.55.59.01.43.00 • 001.800.556.6766 • [mela@omron.com](mailto:mela@omron.com)

**OMRON ELECTRONICS DE MEXICO • SALES OFFICE**

Apodaca, N.L. • 52.81.11.56.99.20 • 001.800.556.6766 • [mela@omron.com](mailto:mela@omron.com)

**OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE**

São Paulo, SP, Brasil • 55.11.2101.6300 • [www.omron.com.br](http://www.omron.com.br)

**OMRON ARGENTINA • SALES OFFICE**

Cono Sur • 54.11.4783.5300

**OMRON CHILE • SALES OFFICE**

Santiago • 56.9.9917.3920

**OTHER OMRON LATIN AMERICA SALES**

54.11.4783.5300

**OMRON EUROPE B.V. •** Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • Tel: +31 (0) 23 568 13 00

Fax: +31 (0) 23 568 13 88 • [www.industrial.omron.eu](http://www.industrial.omron.eu)

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Omron:

[S8JX-G10024CD](#) [S8JX-G15024C](#) [S8JX-G15024CD](#) [S8JX-G03512CD](#) [S8JX-G05024CD](#) [S8JX-G05005CD](#) [S8JX-G05012](#) [S8JX-G60024C](#) [S8JX-P05048D](#) [S8JX-P10005C](#) [S8JX-P10012C](#) [S8JX-G03548CD](#) [S8JX-G15005CD](#) [S8JX-G10048](#) [S8JX-G15012](#) [S8JX-G10048D](#) [S8JX-P05024D](#) [S8JX-P15005CD](#) [S8JX-P05024](#) [S8JX-P05048C](#) [S8JX-P05048CD](#) [S8JX-P10048](#) [S8JX-P10048D](#) [S8JX-P05012CD](#) [S8JX-P10048C](#) [S8JX-P05012D](#) [S8JX-P15005C](#) [S8JX-G15005](#) [S8JX-G05048D](#) [S8JX-G15012CD](#) [S8JX-P05005](#) [S8JX-P15005D](#) [S8JX-P05012C](#) [S8JX-P10005](#) [S8JX-P10005D](#) [S8JX-P10048CD](#) [S8JX-P15012D](#) [S8JX-G03548](#) [S8JX-P15012C](#) [S8JX-G03524CD](#) [S8JX-G15012C](#) [S8JX-P05005D](#) [S8JX-P10024CD](#) [S8JX-G05048](#) [S8JX-P05024CD](#) [S8JX-P05048](#) [S8JX-P10012CD](#) [S8JX-P15005](#) [S8JX-P15024C](#) [S8JX-P15048C](#) [S8JX-G01512CD](#) [S8JX-G15048D](#) [S8JX-G05048C](#) [S8JX-G10048C](#) [S8JX-G01548D](#) [S8JX-P10024D](#) [S8JX-G15005C](#) [S8JX-G05012CD](#) [S8JX-P10024](#) [S8JX-P05005CD](#) [S8JX-P10024C](#) [S8JX-G03548D](#) [S8JX-P05005C](#) [S8JX-P05012](#) [S8JX-P10005CD](#) [S8JX-P10012D](#) [S8JX-P15048](#) [S8JX-P10012](#) [S8JX-P15012](#) [S8JX-P15024D](#) [S8JX-G15048CD](#) [S8JX-P05024C](#) [S8JX-P15024](#) [S8JX-G01548](#) [S8JX-G15048C](#) [S8JX-G01548CD](#) [S8JX-G01505CD](#) [S8JX-G01548C](#) [S8JX-G15048](#) [S8JX-G15012D](#) [S8JX-G10048CD](#) [S8JX-G03548C](#) [S8JX-P15024CD](#) [S8JX-P15048D](#) [S8JX-G15005D](#) [S8JX-G30024CD](#) [S8JX-G05048CD](#) [S8JX-P15048CD](#) [S8JX-P15012CD](#) [S8JX-P30024CD](#) [S8JX-P30024C](#) [S8JX-P60024C](#) [S8JX-G30012C](#) [S8JX-G30048CD](#) [S8JX-G30012CD](#)