

Seal - VC-T2-PR-D1 - 1607835

Please be informed that the data shown in this PDF Document is generated from our Online Catalog. Please find the complete data in the user's documentation. Our General Terms of Use for Downloads are valid (http://phoenixcontact.com/download)



Replacement seal for size 2 sleeve

Your advantages

For a variety of applications



Key Commercial Data

Packing unit	50 pc
GTIN	4 017918 954802
GTIN	4017918954802

Technical data

Dimensions

Length	3.1 mm
Height	31 mm
Width	71.5 mm

General

Color	black
Туре	VC2

Standards and Regulations

Safety note	WARNING: The connectors may not be plugged in or disconnected under load. Ignoring the warning or improper use may damage persons and/or property.
	WARNING: Commission properly functioning products only. The products must be regularly inspected for damage. Decommission defective products immediately. Replace damaged products. Repairs are not possible.
	WARNING: Only electrically qualified personnel may install and operate the product. They must observe the following safety notes.

09/11/2020 Page 1 / 3



Seal - VC-T2-PR-D1 - 1607835

Technical data

Standards and Regulations

The qualified personnel must be familiar with the basics of electrical engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar with electrical engineering are allowed to install and operate the product. 1 The products are suitable for applications in plant, controller, and electrical device engineering. 1 When operating the connectors in outdoor applications, they must be separately protected against environmental influences. 2 Assembled products may not be manipulated or improperly opened. 3 Only use mating connectors that are specified in the technical data of the standards itseld (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). 4 When using the product in direct connection with third-party manufacturers, the user is responsible. 5 For operating voltages > 50 V AC, conductive connector housings must be grounded 5 Ensure that the protective or functional ground has been properly connected. 1 VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.88 § 14.1.3 are applicable when combining several circuits in a cable and/or connector. 2 Observe the corresponding technical data. You will find information: 3 On the packing label on the supplied documentation on Online at phoenixcontact.com/products under the product. 4 Only use tools recommended by Phoenix Contact. 4 The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. 4 Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products. 4 Operate the connector only when it is fully plugged in. 5 Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. 4 Observe the minimum bending radius of the cable. Lay the cable without twisting it.	
electrical device engineering. When operating the connectors in outdoor applications, they must be separately protected against environmental influences. Assembled products may not be manipulated or improperly opened. Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded Ensure that the protective or functional ground has been properly connected. VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector Observe the corresponding technical data. You will find information: o On the product o On the packing label o In the supplied documentation o Online at phoenixcontact.com/products under the product Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products. Operate the connector only when it is fully plugged in. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards.	engineering. They must be able to recognize and prevent danger. The relevant symbol on the packaging indicates that only personnel familiar
separately protected against environmental influences. • Assembled products may not be manipulated or improperly opened. • Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: o On the product • On the product • On the packing label • In the supplied documentation • Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards.	
Only use mating connectors that are specified in the technical data of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). When using the product in direct connection with third-party manufacturers, the user is responsible. For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: • On the product • On the packing label • In the supplied documentation • Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards.	
of the standards listed (e.g. the ones listed in the product accessories online at phoenixcontact.com/products). • When using the product in direct connection with third-party manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: • On the product • On the parking label • In the supplied documentation • Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards.	Assembled products may not be manipulated or improperly opened.
manufacturers, the user is responsible. • For operating voltages > 50 V AC, conductive connector housings must be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: • On the packing label • In the supplied documentation • Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards.	of the standards listed (e.g. the ones listed in the product accessories
be grounded • Ensure that the protective or functional ground has been properly connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: o On the product o On the packing label o In the supplied documentation o Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable	
connected. • VDE 0100/1.97 § 411.1.3.2 and DIN EN 60 204/11.98 § 14.1.3 are applicable when combining several circuits in a cable and/or connector • Observe the corresponding technical data. You will find information: o On the product o On the packing label o In the supplied documentation o Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable	, , , , , , , , , , , , , , , , , , , ,
applicable when combining several circuits in a cable and/or connector Observe the corresponding technical data. You will find information: On the product On the packing label In the supplied documentation Online at phoenixcontact.com/products under the product Only use tools recommended by Phoenix Contact The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products Operate the connector only when it is fully plugged in. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable	
o On the product o On the packing label o In the supplied documentation o Online at phoenixcontact.com/products under the product • Only use tools recommended by Phoenix Contact • The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable	
The installation notes/Design In documents online on the download page at phoenixcontact.com/products must be observed for this product. Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products Operate the connector only when it is fully plugged in. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable	o On the product o On the packing label o In the supplied documentation
page at phoenixcontact.com/products must be observed for this product. • Use a protective cap to protect connectors that are not in use. The suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products • Operate the connector only when it is fully plugged in. • Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable	Only use tools recommended by Phoenix Contact
suitable accessories are available online in the accessory section of the product at phoenixcontact.com/products Operate the connector only when it is fully plugged in. Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable	
Ensure that when laying the cable, the tensile load on the connectors does not exceed the upper limit specified in the standards. Observe the minimum bending radius of the cable. Lay the cable	suitable accessories are available online in the accessory section of the
does not exceed the upper limit specified in the standards. • Observe the minimum bending radius of the cable. Lay the cable	Operate the connector only when it is fully plugged in.

Environmental Product Compliance

China RoHS	Environmentally friendly use period: unlimited = EFUP-e
	No hazardous substances above threshold values

Classifications

eCl@ss

eCl@ss 10.0.1	27430319
eCl@ss 4.0	27260700
eCl@ss 4.1	27260700
eCl@ss 5.0	27260700



Seal - VC-T2-PR-D1 - 1607835

Classifications

eCl@ss

eCl@ss 5.1	27260700
eCl@ss 6.0	27260700
eCI@ss 7.0	27439218
eCl@ss 8.0	27439218
eCl@ss 9.0	27430319

ETIM

ETIM 2.0	EC001121
ETIM 3.0	EC001121
ETIM 4.0	EC001121
ETIM 5.0	EC001181
ETIM 6.0	EC001181
ETIM 7.0	EC001181

UNSPSC

UNSPSC 6.01	30211824
UNSPSC 7.0901	39121421
UNSPSC 11	39121421
UNSPSC 12.01	39121421
UNSPSC 13.2	39131608
UNSPSC 18.0	39131608
UNSPSC 19.0	39131608
UNSPSC 20.0	39131608
UNSPSC 21.0	39131608

Phoenix Contact 2020 © - all rights reserved http://www.phoenixcontact.com

PHOENIX CONTACT GmbH & Co. KG Flachsmarktstr. 8 32825 Blomberg Germany

Tel. +49 5235 300 Fax +49 5235 3 41200

http://www.phoenixcontact.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Phoenix Contact: 1607835