

BLE113 DEVELOPMENT KIT 2.0

DATASHEET

Wednesday, 08 May 2013

Version 1.0



VERSION HISTORY

Version	Comment
1.0	Release

Not Recommended for New Designs

TABLE OF CONTENTS

1	Design Overview	5
2	Interfaces	8
2.1	Powering the Development Board	8
2.2	On-Board Debugger	8
2.2.1	Using the On-Board Debugger to Update the FW of the Embedded BLE113 Module	8
2.2.2	Using the On-Board Debugger to Update External Devices	8
2.3	Indicator LED	9
2.4	UART	9
2.5	Accelerometer and Altimeter	9
2.6	Display	9
2.7	Pin Header and Buttons	10
3	Measuring Current Consumption	11
4	Schematics And Assembly Drawing	12
5	WEEE Compliance	19
6	Contact Information	20

1 Design Overview

BLE113 Development Kit is targeted for engineers evaluating BLE113 *Bluetooth 4.0* single mode modules and developing or prototyping *Bluetooth 4.0* systems utilizing BLE113 module(s). BLE113 Development Kit features:

Evaluation board for BLE113 module containing

- On-Board debugger
- Switchable powering either from a coin cell battery or USB
- UART interface through USB to UART converter
- programming interface for upgrading the firmware and parameters
- Display connected to SPI
- Accelerometer connected to I2C
- Altimeter connected to I2C
- Potentiometer for ADC input
- Push buttons for 4 PIOs and reset
- All the PIOs available at a pin header
- Current measurement points for measuring peak currents of the module, DC current of the module and DC current of the whole board.

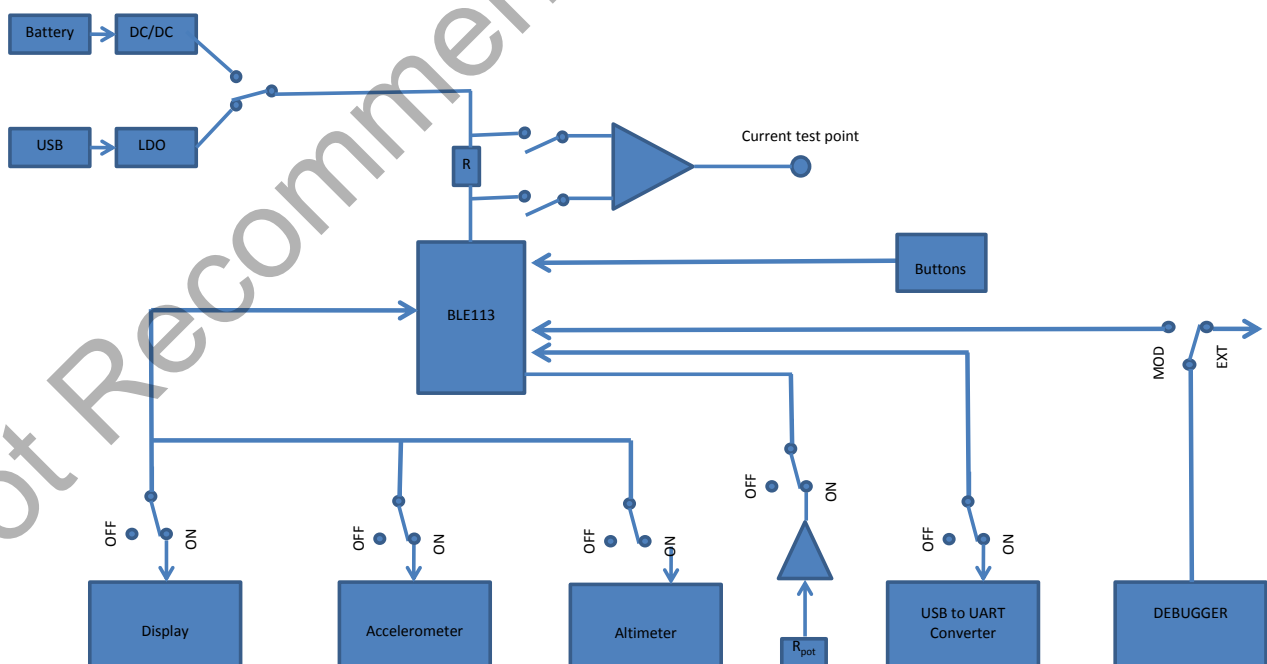


Figure 1: Block diagram of BLE113 evaluation board

Please, refer to the latest BLE113 data sheet for information about BLE113 *Bluetooth* 4.0 single mode module. The physical outlook, schematics, assembly and the PIN configurations of the interfaces of BLE113 Development Kit are described in this document.

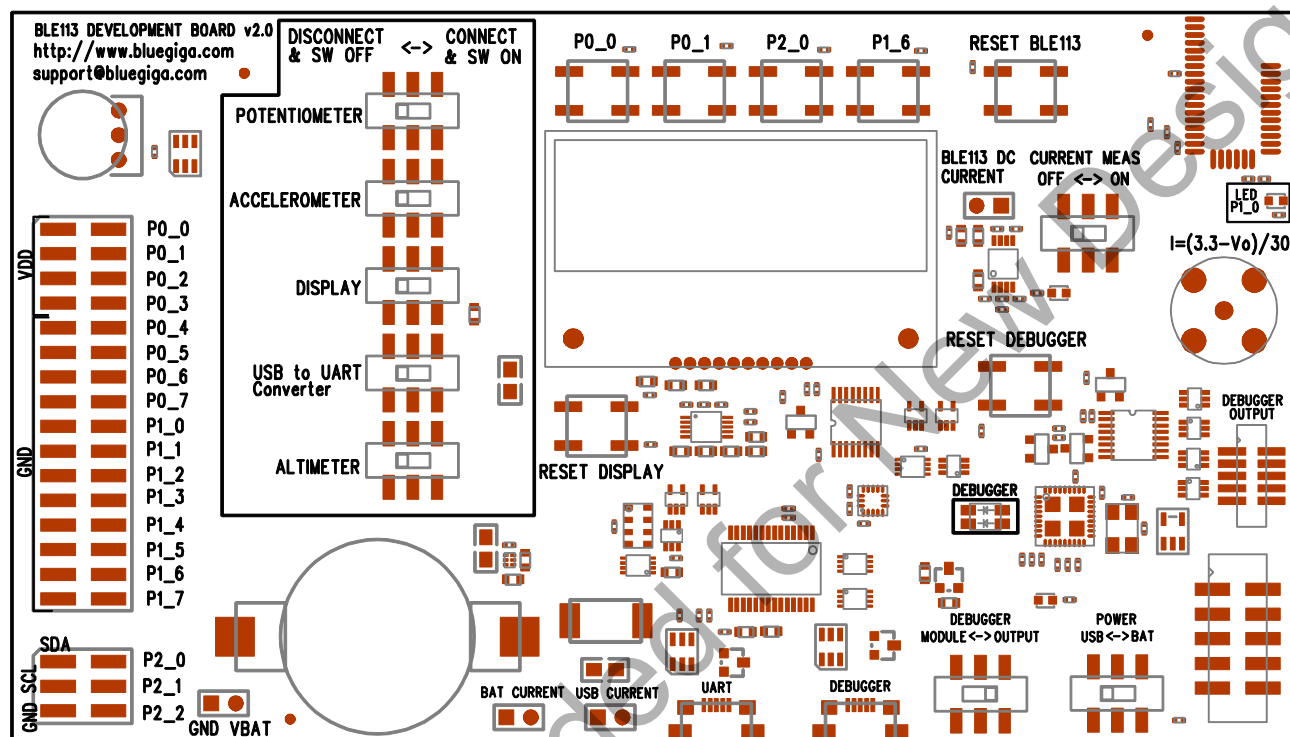


Figure 2: BLE113 Development Kit

1.1 Sensors, display and USB to UART converter

- USB to UART converter (U3)
 - Manufacturer: Prolific
 - Manufacturer part number: PL2303HX rev.D
 - Datasheet: http://www.prolific.com.tw/US/ShowProduct.aspx?p_id=156&pcid=41
- Display
 - Manufacturer: Newhaven Display Intl
 - Manufacturer part number: NHD-C0216CZ-FSW-FBW-3V3
 - Datasheet: <http://www.newhavendisplay.com/specs/NHD-C0216CZ-FSW-FBW-3V3.pdf>
- Altimeter (U11)
 - Manufacturer: Freescale
 - Manufacturer part number: MPL3115A2
 - Datasheet: http://www.freescale.com/files/sensors/doc/data_sheet/MPL3115A2.pdf

- 3-axis accelerometer (U9)
 - Manufacturer: Freescale
 - Manufacturer part number: MMA8451QT
 - Datasheet: http://www.freescale.com/files/sensors/doc/data_sheet/MMA8451Q.pdf

Not Recommended for New Designs

2 Interfaces

2.1 Powering the Development Board

The board can be powered either from USB or from a coin cell battery. Absolute maximum battery voltage is 3.6V. USB or battery can be chosen with SW1. When using battery, the current measurement should also be switched off to avoid excessive leakage current to the instrumentation amplifier U2. To minimize the leakage currents the display, accelerometer, altimeter and the potentiometer can be turned off and disconnected from the module by SW2, SW5, SW6 and SW13.

2.2 On-Board Debugger

The debugger can be used for SW updates and debugging of the embedded BLE113 module. Using SW14 the debugger output can be routed to the pin header J11 to debug external CC2540 or CC2541 based devices.

2.2.1 Using the On-Board Debugger to Update the FW of the Embedded BLE113 Module

To update the FW for the embedded BLE113 module connect USB cable from PC to the USB connector named “DEBUGGER”. Set the switches as shown in the figure 3. When pressing “RESET DEBUGGER” button the debugger LED should turn green. Launch BLE Update Tool and follow the instruction in the Profile Toolkit Developer Guide available in <http://www.bluegiga.com/support>.

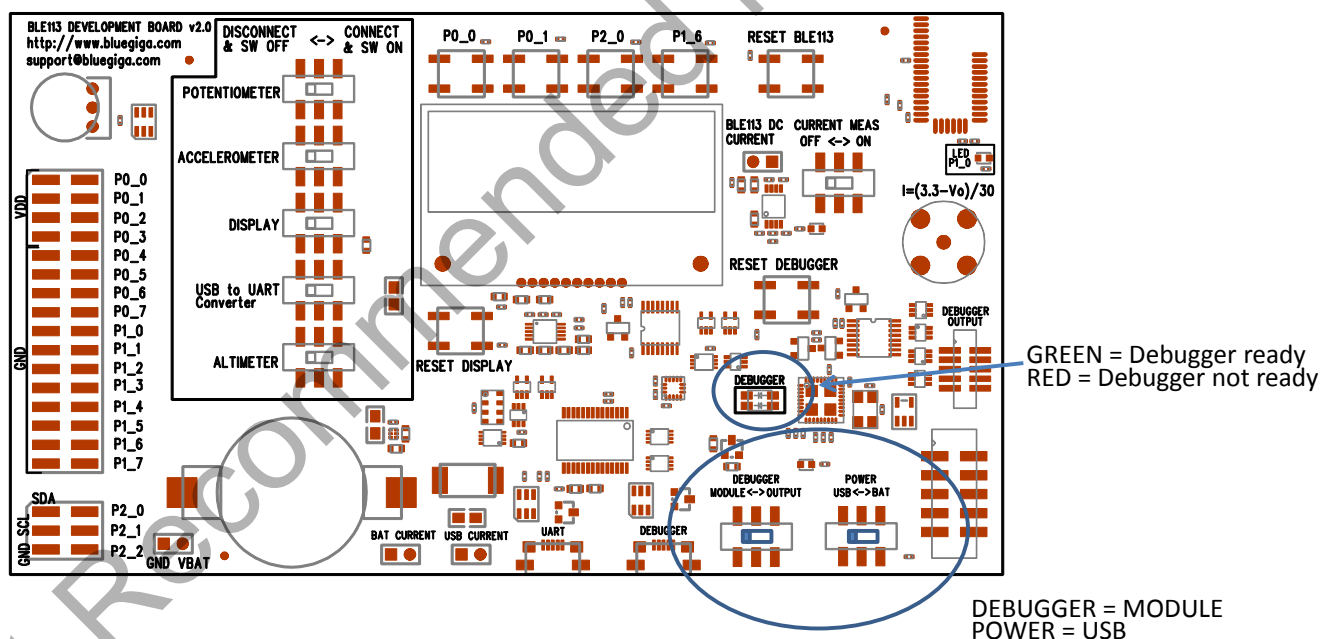


Figure 3: Using the debugger for the embedded BLE113

2.2.2 Using the On-Board Debugger to Update External Devices

To update the FW for the embedded BLE113 module connect USB cable from PC to the USB connector named “DEBUGGER”. Set the switches as shown in the figure 4. When pressing “RESET DEBUGGER” button the debugger LED should turn green.

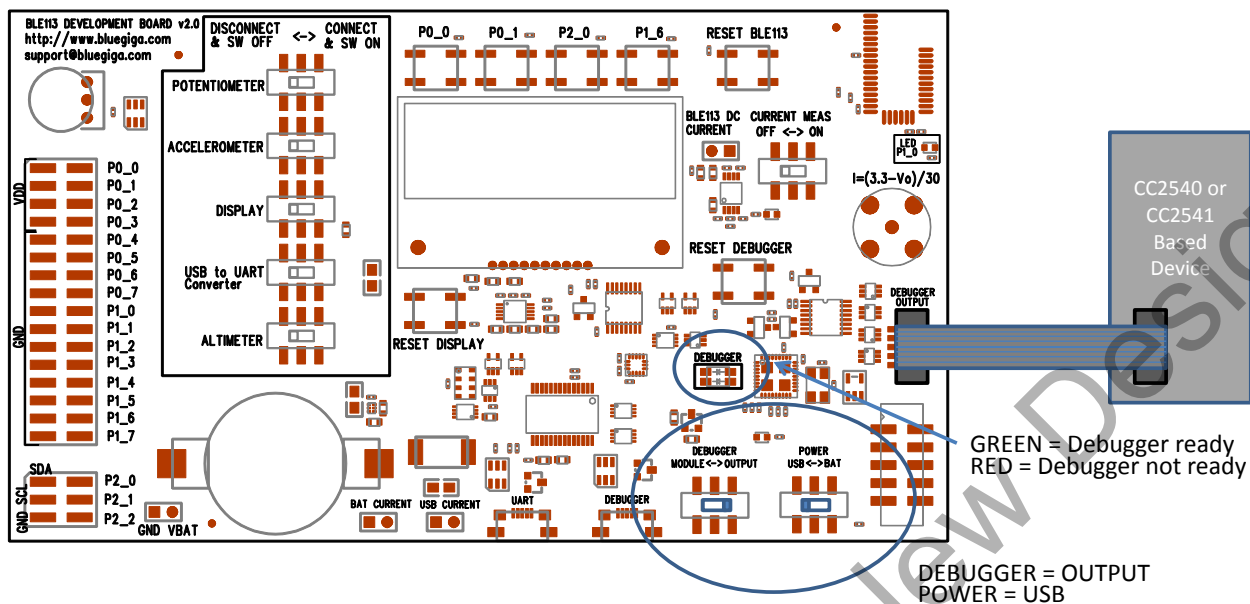


Figure 4: Using the debugger for external devices

2.3 Indicator LED

There is a LED connected to the pin P1_0. The LED is powered directly from the battery so the brightness of it does not depend on if the DCDC is in use or not. However, if the module is not powered but the battery is in place, i.e. when USB not connected and the power switch is in USB position, there will be leakage through the LED and the LED is weakly lit. To prevent the LED draining the battery one should make sure either that the power switch is in BAT position and the module is in deep sleep, or that the battery is not connected when the power switch is in USB position.

2.4 UART

USB to UART converter creates a virtual COM port for accessing UART interface of the module. USB to UART converter is Prolific PL2303HX rev.D. Windows driver can be downloaded from Prolific web site:

(http://www.prolific.com.tw/US/ShowProduct.aspx?p_id=156&pcid=41).

Note: Because the board is using the regulator of the Prolific chip, it will be recognized by the USB as a virtual COM port even if the power switch is in BAT position. Switching the power switch to BAT position, or disconnecting the USB converter using SW3, does not turn off the USB top UART converter.

2.5 Accelerometer and Altimeter

The accelerometer and the altimeter share the same I2C bus.

2.6 Display

The display is connected to the SPI interface. Charge pump is generating 3.3V supply for the display.

2.7 Pin Header and Buttons

All the PIOs are available and permanently connected in the pin header J2. In order to use certain PIOs through the pin header, that particular PIO must be disconnected from the device to which it is connected so that it is not actively driven by two devices. Following table shows the PIO connections in the evaluation board.

PIO number	Connection in the evaluation board
P0_0	Button 1
P0_1	Button 2
P0_2	UART CTS
P0_3	UART RTS
P0_4	UART TX
P0_5	UART RX
P0_6	Potentiometer
P0_7	Button 3
P1_0	LED
P1_1	Display RS
P1_2	Accelerometer interrupt
P1_3	SPI clock for the display
P1_4	-
P1_5	SPI MOSI for the display
P1_6	Button 3
P1_7	DCDC on/bypass control
P2_0	Button 4
P2_1	-
P2_2	-

Table 1: PIO connections in the development board

3 Measuring Current Consumption

The DC current consumption of the whole board can be measured from the headers J3 and J9. The DC current consumption of the module alone can be measured from the header J5. The peak current consumption of the module can only be measured when powering the module from USB. When powering from a battery, the current measurement amplifier should be disconnected with SW12. The peak current consumption of BLE113 is measured over 3 ohm resistor using an instrumentation amplifier with a gain of 10. The instrumentation amplifier is powered from USB 5V line and the DC bias is from the 3V3 LDO. Because the amplifier is powered from the USB VBUS, it can't be used unless USB is connected. If USB is not connected then the instrumentation amplifier must be disconnected by SW12 to avoid excessive leakage current into the input of the amplifier.

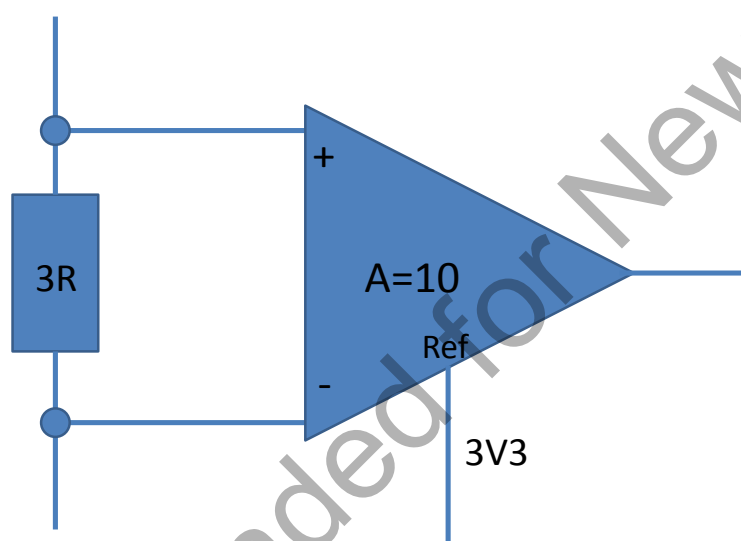


Figure 5: TX current measurement amplifier

To measure the peak TX current consumption of the module, connect a coaxial cable to the BNC connector in the board and to an oscilloscope. Set the oscilloscope

- Coupling: DC
- Vertical scale 500 mV/DIV
- Horizontal scale: 200 μ s/DIV
- Level: 2.5 V
- Offset: -2.0 V
- Trigger: Normal, falling edge

The instrumentation amplifier inverts the signal. The current consumption is calculated by

$$I = \frac{3.3V - V_o}{30\Omega}$$

6

5

4

3

2

1

LTR DATE: ECO NO: APPROVED:

4 Schematics And Assembly Drawing

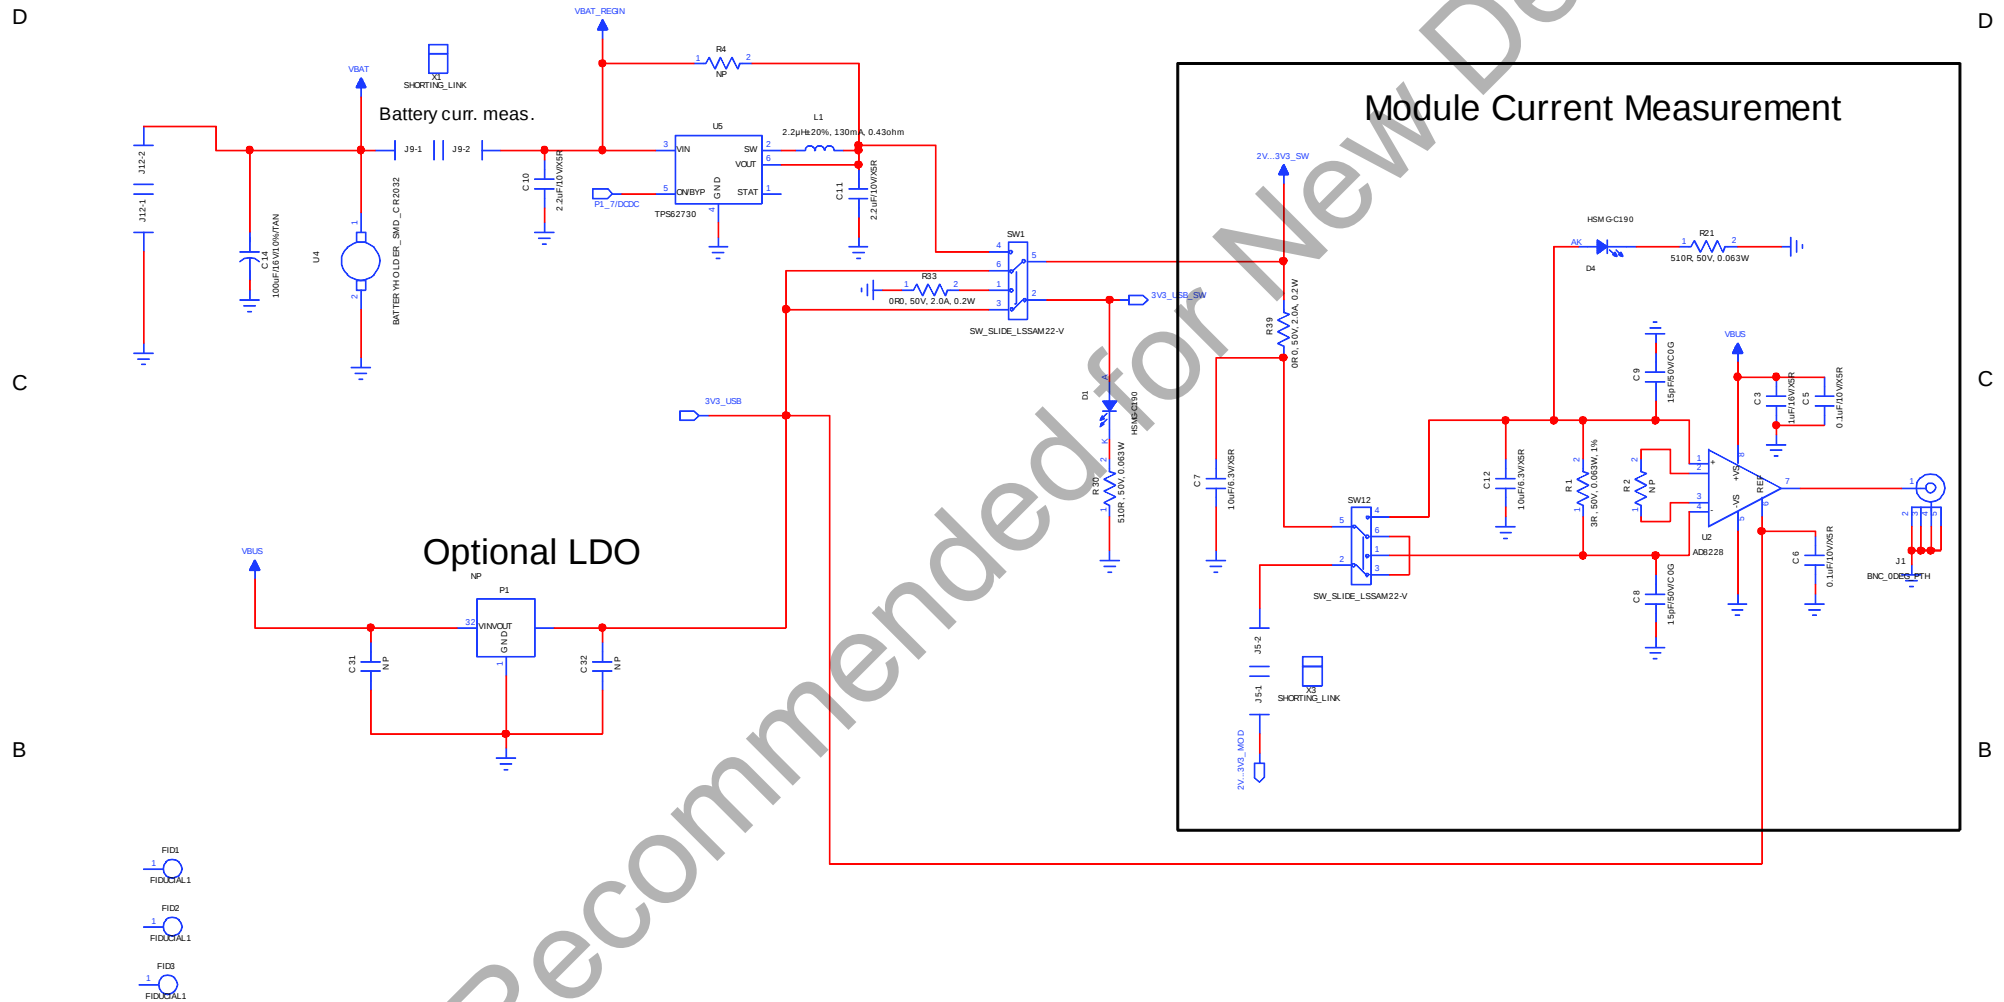


Figure 6: BLE113 Evaluation Board Schematic (1/6)

Silicon Labs

COMPANY: Bluegiga Technologies Oy

TITLE: BLE113 Evaluation Board

DRAWN/DATED: PRA 2012-08-03

CHECKED: DATED:

QUALITY CONTROL DATED:

CODE: SIZE: DRAWING NO: REV:

-C1.2

A

A

D

C



B

D


C

B

Push Buttons

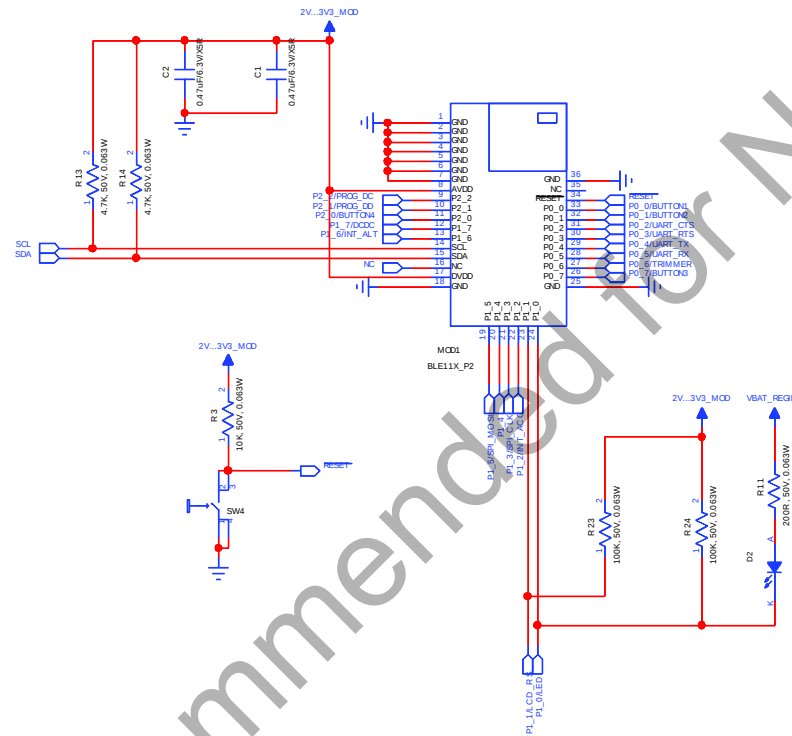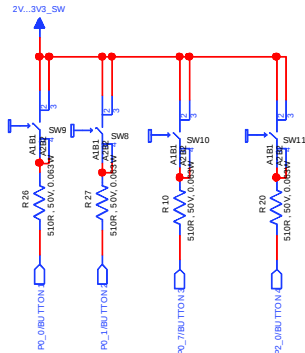

Header

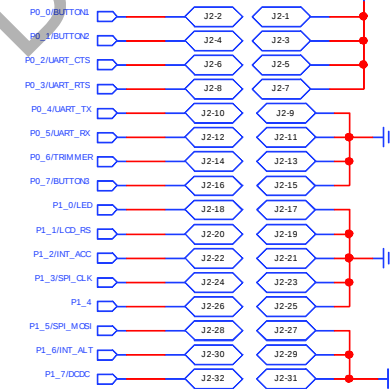

Header



Figure 7: BLE113 Evaluation Board Schematic (2/6)

Bluegiga Technologies Oy

DRAWN/DATED: PRA 2012-08-03
 CHECKED: DATED: -
 QUALITY CONTROL/DATED: -
 RELEASED: DATED: -

COMPANY: Bluegiga Technologies Oy

TITLE: BLE113 Evaluation Board

CODE: SIZE: DRAWING NO: REV:

-C-

1.2

SCALE: SHEET: 26

Page 13 of 20

Disconnet USB To UART Converter

USB To UART Converter

Figure 8: BLE113 Development Board Schematic (3/6)

Bluegiga Technologies Oy

Page 1

Figure 8: BLE113 Development Board Schematic (3/6)

Bluegiga Technologies Oy

Page 1

Bluegiga Technologies Oy

A

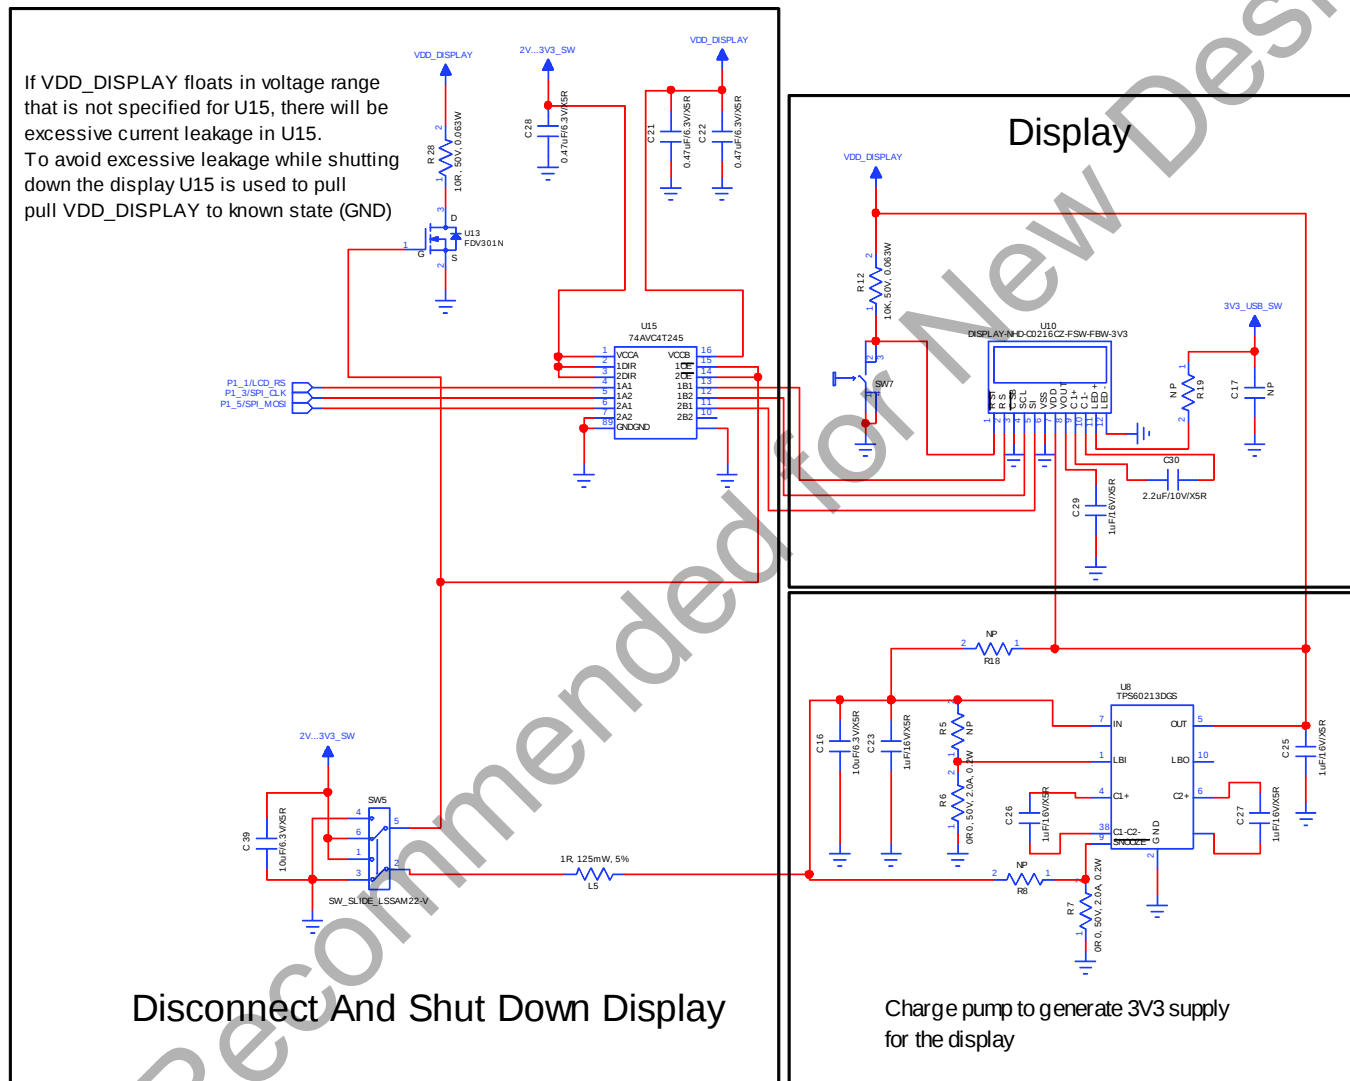


Figure 10: BLE113 Development Board Schematic (5/6)

Silicon Labs

COMPANY:

Bluegiga Technologies Oy

TITLE:

BLE113 Evaluation Board

DRAWN DATED: PRA 2012-08-03

CHECKED: DATED:

QUALITY CONTROL DATED:

RELEASED: DATED:

CODE: SIZE:

DRAWING NO. REV:

-C-1.2

SCALE:

SHEET: 56

D

C

B

A

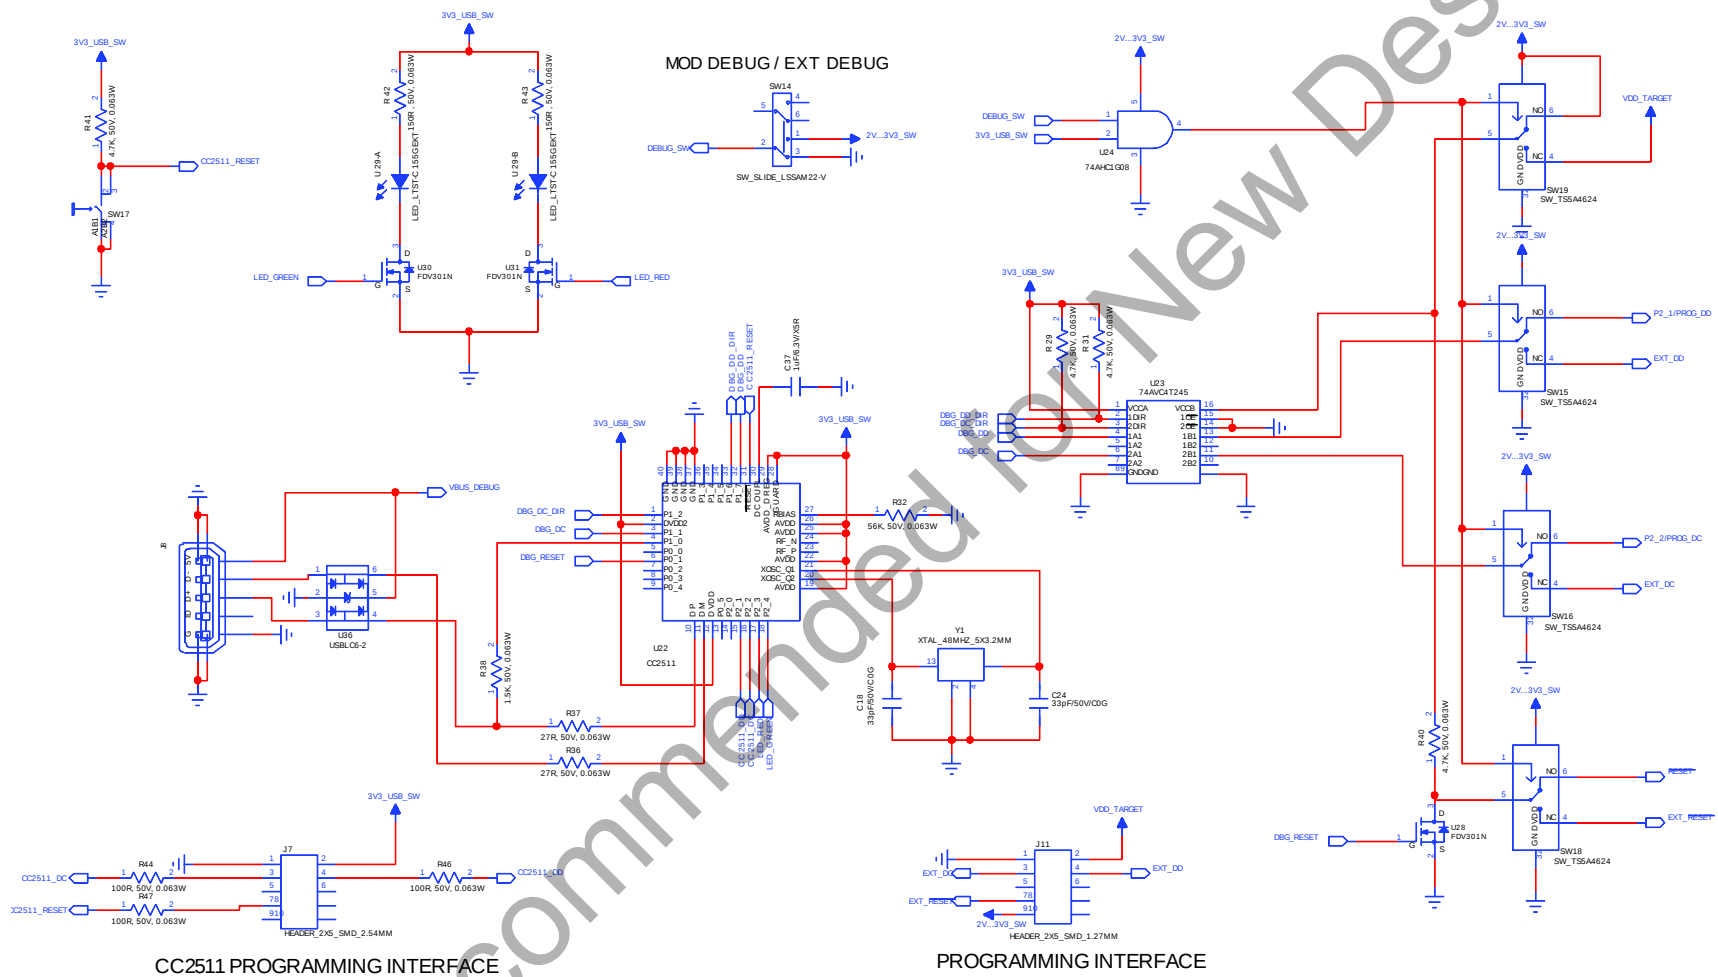



Figure 11: BLE113 Development Board Schematic (6/6)

5 WEEE Compliance



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

Not Recommended for New Designs

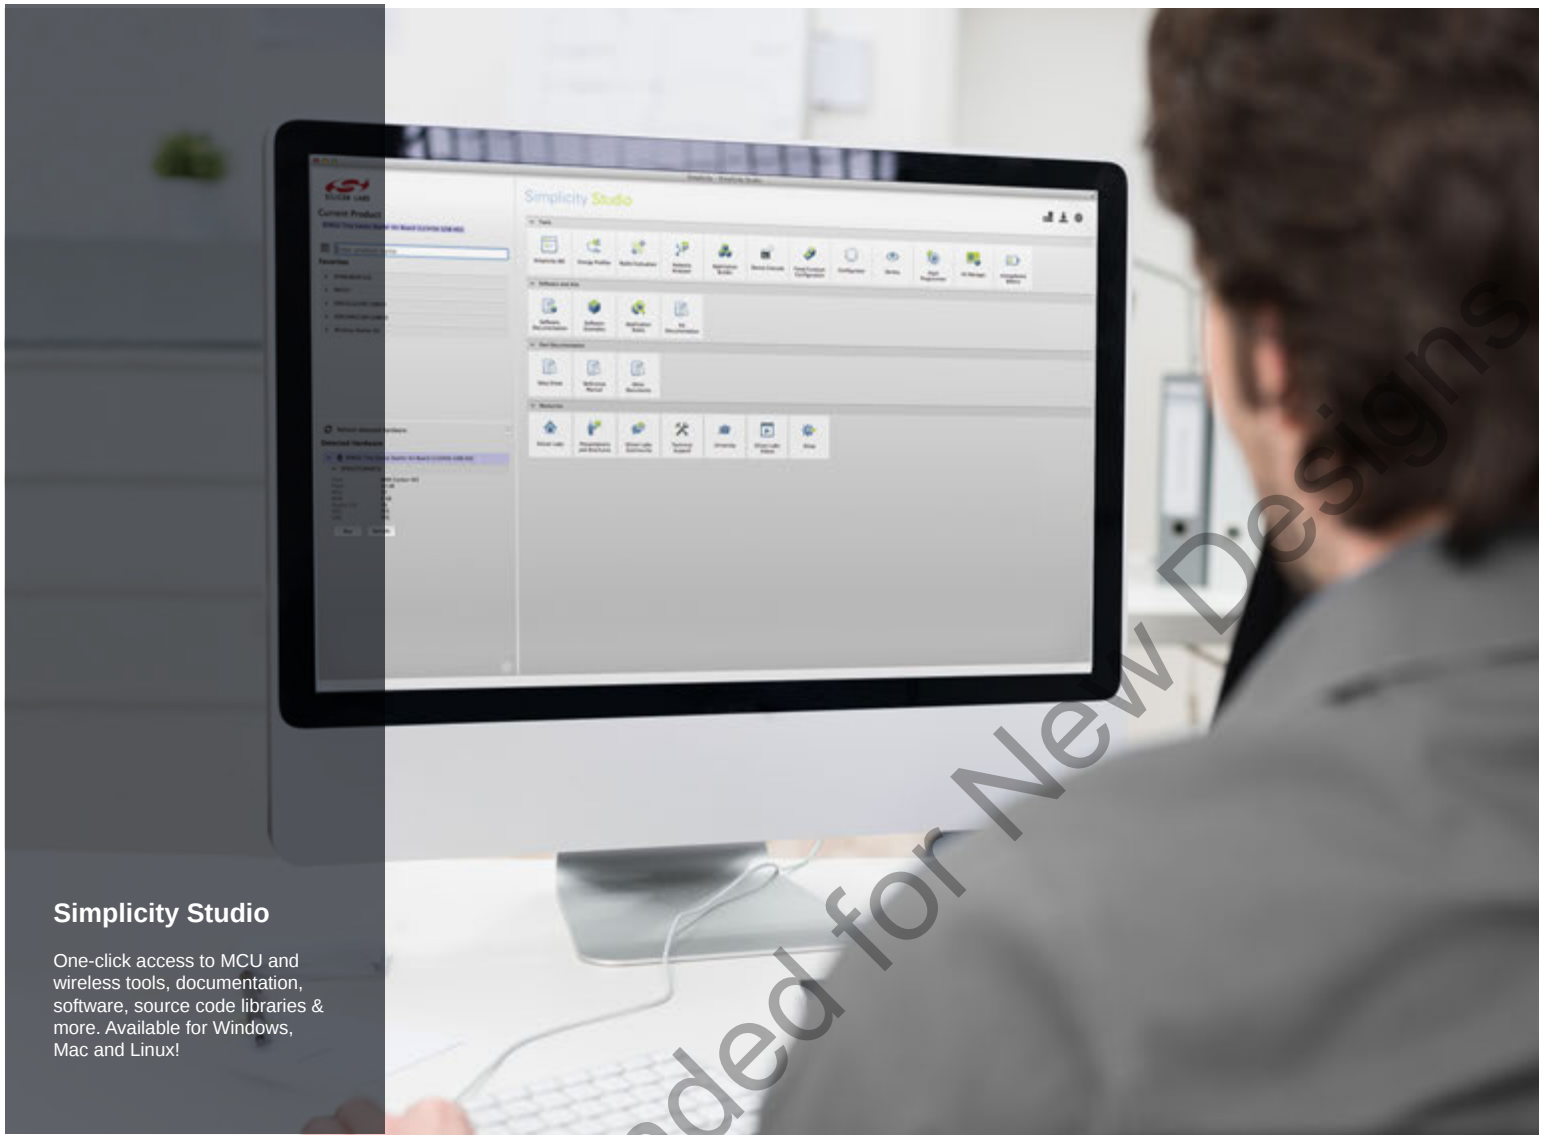

Simplicity Studio

One-click access to MCU and wireless tools, documentation, software, source code libraries & more. Available for Windows, Mac and Linux!



IoT Portfolio
www.silabs.com/IoT



SW/HW
www.silabs.com/simplicity



Quality
www.silabs.com/quality



Support and Community
community.silabs.com

Disclaimer

Silicon Laboratories intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Laboratories products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Laboratories reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Laboratories shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any Life Support System without the specific written consent of Silicon Laboratories. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Laboratories products are not designed or authorized for military applications. Silicon Laboratories products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

Trademark Information

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR®, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, ISOModem®, Precision32®, ProSLIC®, Simplicity Studio®, SIPHY®, Telegesis, the Telegesis Logo®, USBXpress® and others are trademarks or registered trademarks of Silicon Laboratories Inc. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc.
400 West Cesar Chavez
Austin, TX 78701
USA

<http://www.silabs.com>

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Silicon Laboratories:

[BLE113-A-V1](#) [BLE113-A-M256K](#) [BLE113-A-V1C](#)