APPLICATOR PARTS LIST					HINGE BAR MAR	AMP INCORPORATED HARRISBURG, PENNA.						
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	CRIMPING DATA				TERMINALS
$\Box$	- WIDE COLUDED	+,-	465407-1	42	FRONT STABILIZER BAK	<del>1</del> 7	8/1006-1	TO APPLY TERMINAL		60274		
	■ WIRE CRIMPER ■ INS, CRIMPER		472122	43	7 2011 STILLIGER CHR	1						
	<del></del>	1/	388623	44	HINGE BLOCK & STAB.	17	811444-1	WIRE SIZE	CRIMP H	EIGHT		
	ANVIL INSERT		465409-1		HINGE PIN		811007-1	18	.05			
-	B SHEAR BLADE		460026-3		GUARD, FRONT STAB.	17	811040-1	16	.05	0		
	REAR SHEAR PLATE		460025-1	47	HINGE BAR ASS'Y	17	565098-1	14	.06	2		
	SHEAR BLADE SPRING		810410-1		HINGE BAR SPRING		3-23846-5	12	.07	2		
	FRONT SHEAR PLATE	17	388432-2		STRIP GUIDE STOP	2	810417					
9	REAR ANVIL SPACER PLT.		00000	50				CRIMP	SIZE	TYPE	FEED	
10	FRONT ANVIL SPACER PLT.		<del> </del>	51	SPACER COMP. SPRING	2	811070-1	WIRE	.160	T. L.		
13	TOOL SPACER		<del> </del>	52	CAM FOLLOWER HOLDER	1	810409-1	INSUL.	.180	0	.770	
-			<u> </u>		CAM FOLLOWER		24746-1	SLEEVED				
12	CRIMP SPACER	17	811566-2	-	SPRING, BRACKET		810418	INSULATIO			RANGE	
13	FRONT STRIP GUIDE	- 1/	460023-2	-	CAM FOLLOWER SPR		310408	.110	2/0	12	3- <i>12</i>	
14	REAR STRIP GUIDE		1400000		HOOK HOLDER		811442-1	EXPLODED	VIEW	- 4		
10.1	Date	17	811450-1	57	SHEAR PICK UP HOOK		811443-1	A.60	04-5	A-6	6004-6	
15	RAM	-17	11.5011-2	59	HOLD DOWN, HINGE BAR		811009-1	REMARKS:			····	
16	RAM. RET. PLATE	<del>-   /_</del>	811010-1		DEPRESSOR SCREW		810642-1	1 F	FT A	IAN	D	
17	ADJ. PLATE	<del>-   ′, ·</del>	23/4/-/		WASHER		376482		· · · ·	,,,		
18	PROTECTIVE PLUG	<del></del>	23/4/-/	1 41	FEED FINGER SPR.	ゖチ	810421-1					
19	APPLICATOR MOUNT ASSY.	<del>-   , -</del>	465408-1		DOWEL PIN	2	1-21030-5	VI TE	MC LA	ピテフ	MOUNT	
20	BASE PLATE		4034001		MICRO SHITCH	+7	23496-1				SHAFT	
21	BASE BLOCK		ļ	1 50	MICRO SW. COVER	17	22689-2		PPORT			
22	STRIP GUIDE PLATE	<del></del>	8/1445-1		MICRO SW. BRACKET	ナケ	811074-1	REEL		1601		
23			0//443-7	╫╩	MISCELLANEOUS	<del>                                     </del>	10		• •			
24	AUX. ANVIL HOLDER		<del> </del>	1 44	CONNECTOR	+,	122787-2					
25	STRIPPER	<del></del>	<del>                                     </del>		HOOK HOLDER SCREW		810413					
26	STRIPPER MOUNT		ļ	-   <del>-;;</del> -	SCR, SOC. HD. CAP 14-20 X 1.00/	+		li				ļ <del>-</del>
27	RETAINER PLATE		ļ	69	SPACER (ANVIL HOLDER	<del>\ \</del>	811223-1	- DENOT				3
28	STRIPPER MOUNT BRACKET		<del></del>	<b>∛</b> ├──	LEAD WIRE ASS'Y	47	465918-1	RECOM	MEND PUR	CHASE	REPLACEMENT	
29	STRIPPER BUSHING	<del>-   -</del> -	44 0004 1	1 70	DOWE PIN	+	465702-1	THIS APPL	ICATOR I	S TO BE	USED ON	
30	STOCK DRAG	<del>_                                     </del>	460024-1	71	DOWEL PIN	15	682131-1	AMP-O-L F			273-3	ナマナナナ
31	STOCK DRAG HANDLE			REV	TALL DESCRIPTION OF THE PARTY O	ATE	BY ECN	AMP-O-MA		7 . 7 6		DIST.
32			0/0/3/	╢╩				· · · · · · · · · · · · · · · · · · ·				4
33	STOCK DRAG SPRING	<u>   Z</u>	810135	╢╬		776	15 R 2-1847	SERIAL NO	<del></del>	DAT	E SHIPPED	DESIGNED
34	STOCK DRAG ADJ. SCREW		000131	B			रियुड	1				2 15 Bloom
35	FEED FINGER HOLDER	}-\$-	810/3/	81			R2752	CUSTOMER	NAME AN	D ADDR	ESS	CHIS.D.
36	FEED FINGER		811440-2			7 (B	3/4	1				1511
37	FEED FINGER TIP	14	011439-1	₽₽	ECN A-055688 3/1	/ 65		<del> </del>				APRICA -
38	FEED FINGER STUD		810414-1	- <del></del>				<del> </del>				11/16
39	BASE CASTING		811451-1	╢				APPLICAT	os les	7.		SHEET
42	GUARD		461100-1	<b></b>			$\longrightarrow$	NUMBER	<u> </u>	55	66257-1	1001
41	İ	Į.	l			1		Ш	HARDI		<del> </del>	

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

TE Connectivity: 566237-1