


PART NUMBER		REV	FIRST USED
566282 -1		B	1-471273-2

APPLICATOR PARTS LIST				TYPE SIDEWISE .248 AMPLIVAR™ BLADE							
NO.	DESCRIPTION	REQ.	PART NO.	NO.	DESCRIPTION	REQ.	PART NO.	CRIMPING DATA			TERMINALS
1	WIRE CRINPER	1	1-453902-4	42	BLOCK, LEFT SHEAR	1	458281-1	TO APPLY TERMINAL			505073
2	INSULATION CRIMPER	1	2-473533-2	43	BLOCK, RIGHT GUIDE	1	386372	MAGNET			505074
3	ANVIL	1	458272-2	44	-	-	-	CRIMP HEIGHT	WIRE SIZE	-	-
4	ANVIL SPACER	1	810070-1	45	PLATE, FRONT RET	1	811714-2	.046	21	-	-
5	SHEAR, FLOATING	1	465406	46	PLATE, REAR RET	1	810822-1	NOT	USED	-	-
6	REAR SHEAR PLATE	-	-	47	SPRING, SHEAR RETURN	1	374322	NOT	USED	-	-
7	SHEAR BLADE SPACER	-	-	48	DEPRESSOR, SHEAR	1	457097-1	NOT	USED	-	-
8	FRONT SHEAR [PLATE	-	-	49	KEY, SHEAR RET	1	386358	-	-	-	-
9	REAR ANVIL SPACER PLATE	-	-	50	-	-	-	CRIMP	SIZE	TYPE	FEED
10	FRONT STRIP HOLD	1	453350-1	51	-	-	-	WIRE	.070	F	-
12	A, SPACER, CRIMPER	1	370592	52	-	-	-	INSUL	.090	0	1.040
12	B, SPACER, CRIMPER	1	371048	53	HOLD DOWN	1	461533-1	-	-	-	-
13	FRONT STRIP GUIDE	1	460807-1	54	PLATE, HOLD DOWN RET	1	458286-2	INSULATION RANGE		WIRE RANGE	
14	REAR STRIP GUIDE	1	458275-1	55	NUT, HEX (1/4-20)	1	1-21018-3	ø.070 MAX		700-1750 CMA	
15	RAM	1	471167	56	-	-	-	EXPLODED VIEW		SET UP GAGE	
16	TOOL HOLDER	1	458276-1	57	SPACER,REAR STRIP GUIDE	1	458287-2	A-6002-13 (SIM)		-	
17	ADJ CRIMP MOUNT	-	-	58	TOOL, BENDING	1	460804-1	REMARKS:			
18	ADJ BLOCK	-	-	59	MOUNT, BENDING TOOL	1	460805-1	RECOMMENDED SPARE PARTS			
19	APPLICATOR MOUNT ASSY	-	-	60	-	-	-	2. TOP TOOL MOUNTING FROM TOOL HOLDER OUTWARD 1,12A,2,12B & 48			
20	BASE PLATE	1	465100-3	61	-	-	-	-			
21	BASE BLOCK	1	465101	62	-	-	-	-			
22	STRIP GUIDE PLATE	1	460809-1	63	-	-	-	-			
23	ANVIL HOLDER	-	-	64	AIR FEED ASSY,1 IN	1	690021-1	-			
24	AUX ANVIL HOLDER	1	-	65	TENSION ADJ PLATE	1	374999	-			
25	STRIPPER	1	386361	66	REEL SPREADER ASSY	1	453596-1	-			
26	STRIPPER MOUNT	1	386362	67	GUIDE ROD (PAPER)	1	694927-1	-			
27	RETAINER PLATE	1	389078	68	RAM RET PLATE	1	465004-2	-			
28	STRIPPER MOUNT BRACKET	1	387715-1	69	WEAR PLATE	1	811010-1	-			
29	STRIPPER BUSHING	1	386368	70	PROTECTIVE PLUG	1	23141-1	-			
30	STOCK DRAG	1	386955-3	71	LUBRICATOR ASSY	1	465184-2	THIS APPLICATOR IS TO BE USED ON			
31	STOCK DRAG HANDLE	-	-	72	-	-	-	AMP-O-ELECTRIC AIR FEED			
32	STOCK DRAG STUD	1	374900	78	-	-	-	MACH PARTS LIST 1-471278-2			
33	STOCK DRAG SPRING	1	370572	79	-	-	-	-			
34	NUT S/L	1	21022-3					SERIAL NO.	DATE SHIPPED		
35	FEED FINGER ARM	1	810131					CUSTOMER NAME AND ADDRESS			
36	FEED FINGER	1	811644-2								
37	FEED FINGER TIP	1	811645-2								
38	FEED FINGER GUIDE	1	460808-1								
39	BASE CASTING	1	570238								
40	GUARD	1	458554-1								
41	-	-	-								

LOC A		DIST 4		B		0150-7729-97		CE	5-97	566282	DIMENSIONS IN INCHES. DO NOT SCALE PRINT. TOLERANCES UNLESS OTHERWISE SPECIFIED: 2 PLC DEC ±- 3 PLC DEC ±- 4 PLC DEC ±- ANGLES ±- SURF TEXTURE: ✓ REMOVE BURRS, BREAK SHARP EDGES R.015 MAX		MATL - -		HT TR - -		FIN - -			
											DR 2-17-97 D.SALTZER		APP 2-20-97 T.ELBIN		AMP AMP Incorporated Harrisburg, PA 17105-3608					
											CHK 2-20-97 C.ERISMAN		REL 3/24/97 B. MORGAN							
											NAME SIDE FEED STD APPLICATOR		MACHINE REF STD-APPL							
											SCALE -		B		DWG NO 566282		SHEET 1 of 2		REV B	
				P F LTR		REVISION RECORD		APP DATE												

.248 AMPLIVAR™ BLADE
BOLT, NUT, SCREW
WASHER, ETC.

APPLICATOR ONLY TO INCLUDE					
160	SCREW, SOC SET	1/4-28	1.00	2	4-21078-6
-	-				
161	NUT, HEX	1/4-28	-	2	1-21022-3
-	WEAR PLATE (69)			-	-
-	-			-	-
-	-			-	-

MATL		HT TR		FIN	
-		-		-	
-		-		-	
DR 2-18-97 D. SALTZER		APP 2-20-97 T. ELBIN		 AMP Incorporated Harrisburg, PA 17105-3608	
CHK 2-20-97 C. ERISMAN		REL 3/24/97 B. MORGAN			
NAME SIDE FEED STD APPLICATOR				MACHINE REF STD-APPL	
SCALE	B	DWG NO	566282		SHEET
-					2 OF 2
					REV B

LOC
A
DIST
4

SEE SHEET

5992

A

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[TE Connectivity:](#)

[566282-1](#)