




## 0940 PSL 601



#### **LioN-Link BusHead Profibus-Slave**

LioN-Link BusHead IP 67 bus coupler module for the connection between the higher level fieldbus and the fieldbus independent I/O modules, with M12 bus connection, rotary switches for addressing, M12 LioN-Link connection, M12 power supply connection.

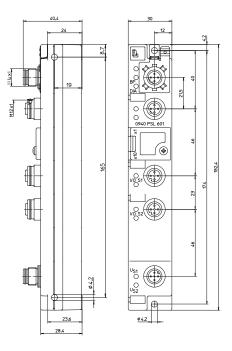

### **Diagnostic Indication**

LED	Indication	Condition
I/O Line 1, I/O Line 2	red green off	wrong configuration /module exchanged online, communication with PLC branch not in use (module not connected)
Us <sub>1</sub>	green	sensor/system power supply Line 1
Us <sub>2</sub>	green	sensor/system power supply Line 2
BF	red	bus error
DIA	red	common indication for periphery faults

## Pin Assignment

Bus connection M12, B coded	Lion-Link connection M12	Power supply M12
1 = +5 V 1 2 = Line A 3 = GND (0 V) 1 4 = Line B 5 = Earth	3 0 4 1 = Drain 2 = 24 V System 3 = 0 V System 4 = Data + 5 = Data -	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$

<sup>1 =</sup> internal signals

# Be Certain with Belden



#### **LioN-Link BusHead Profibus-Slave**

0940 PSL 601

#### **Technical Data**

**Environmental** 

Degree of protection IP 67

Operating temperature range -10°C (+14°F) to +60°C (+140°F)

Mechanical

Weight 200 g Housing material PBT

Bus systemProfibus DPID number0A36 hexGSD fileLum\_0A36.GSDTransmission ratemax. 12 MBaudAddress range1-125 decRotary address switches1-99 decDefault address99 dec

System/sensors

power supplyUs1, Us2\*Rated voltage24 V DCVoltage range19–30 V DCPower consumptiontyp. 100 mAReverse polarity protectionyesIndicationLED greenOutput current per branchmax. 3 A

Included in

delivery/accessories Dust covers M12, attachable labels

## **Diagnostic**

Diagnosis according to Profibus specification, diagnosis for communication status, module breakdown and periphery faults in the Link system

#### **Purpose**

BusHead for LioN-Link standard modules

**Part Number** 

0940 PSL 601



The application of these products in harsh environments should always be checked before use. Specifications subject to alteration.

<sup>\*</sup> Both supply points on the BusHead must always be connected.

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Lumberg Automation: 0940 PSL 601