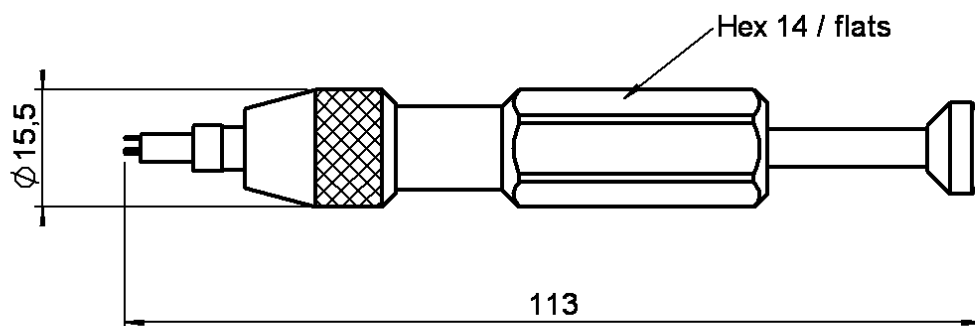


EXTRACTOR MCC2 FEMALE

R282.920.100

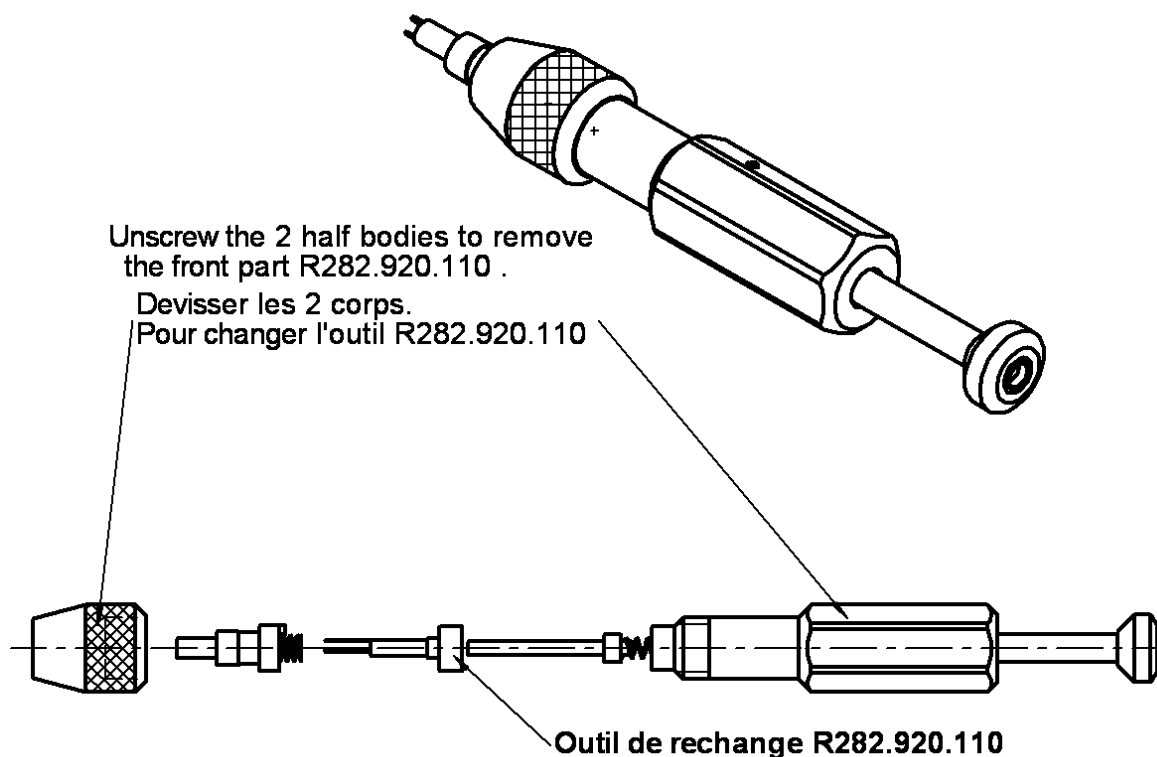
Series : **OUT**



Unscrew the 2 half bodies to remove
the front part R282.920.110 .

Devisser les 2 corps.

Pour changer l'outil R282.920.110



BODY TOOL : ALUMINIUM ALLOY + BLACK ANODISATION



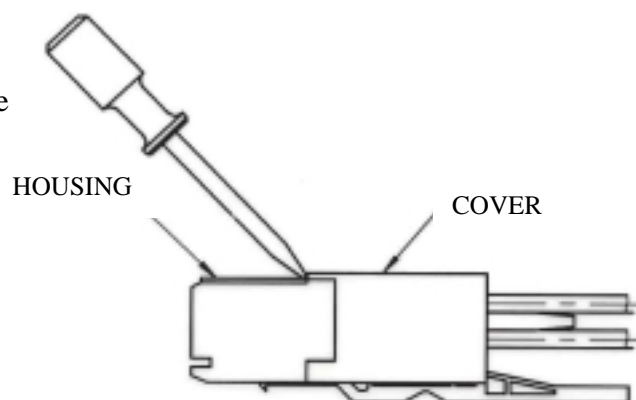
Issue : 0115 F

In the effort to improve our products, we reserve the right to make changes judged to be necessary.

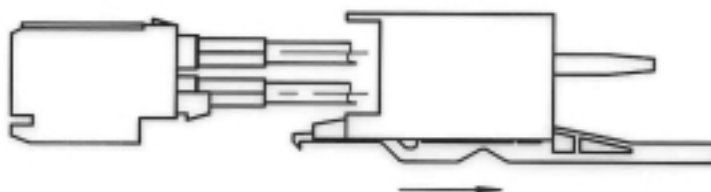


EXTRACTOR MCC2 FEMALE**R282.920.100**Series : **OUT****1**

Use a screw-driver to remove the cover from the housing as shown .

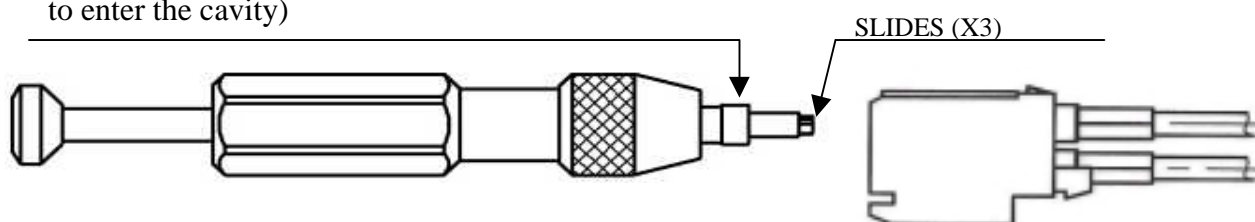
**2**

Slide the cover along the cable

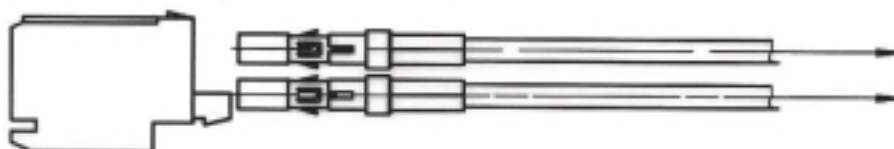
**3**

Place the extraction tool with the marker point facing up (as shown) and push in axial direction into the housing till it stops , then push gently on the black knob , this will push the contact out from the rear of the housing .

Marker point on the top (this will position the 3 slides to enter the cavity)

**4**

Remove the connectors from the housing

**Issue : 0115 F**

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Radial:

[R282920100](#)