

SMP DISENGAGEMENT TOOL

R282.918.150

Series : **OUT**

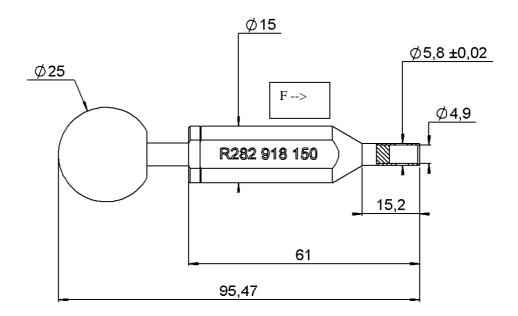

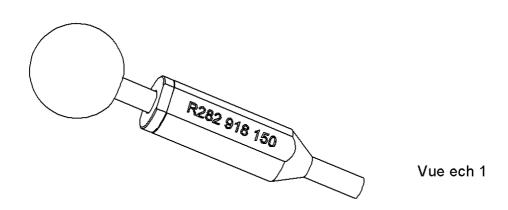

INSTRUCTION FOR USING:

- 1. Insert the tool into the connector
- 2. Make sure that the front side of the tool is flush inserted in the connector
- 3. Maintain with pressure in F direction the tool handle by the body and push by the ball side into the panel
- 4. The connector is disengage

Issue: 1321 A

In the effort to improve our products, we reserve the right to make changes judged to be necessary.



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Radiall:

R282918150