



J1 PIN1 AND 2 IS THE JTAG TOOL REFERENCE VOLTAGE USUALLY 3.3V  
 J1 PIN3 IS THE TRST ON CPU  
 J1 PIN5 IS TDI ON THE CPU  
 J1 PIN7 IS TMS ON THE CPU  
 J1 PIN9 IS THE TCLK ON THE CPU  
 J1 PIN 11 IS JTAG MOD ON THE CPU SINCE WE DO NOT HAVE RETURN CLOCK J6 WILL BE OPEN.  
 J1 PIN 13 IS JTAG TDO ON THE CPU  
 J1 PIN 15 IS JTAG nTRST ON THE CPU

Title		
SABRE LITE JTAG ADAPTOR		
Size	Document Number	Rev
Custom	BOUNDARY DEVICES	<Rev Co
Date:	Monday, September 17, 2012	Sheet 1 of 1

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Boundary Devices:

[Nit6X\\_JTAG](#)