



# MAX9590 Evaluation Kit/Evaluation System

## General Description

The MAX9590 evaluation kit (EV kit) is a fully assembled and tested circuit board that evaluates the MAX9590. The MAX9590 EV kit provides 14 programmable voltage references and 4 static voltage references for gamma correction in TFT-LCD displays. Two register banks are provided to store two sets of gamma reference values. Gamma values are programmed into the banks through the I<sup>2</sup>C interface, and the settling time for outputs is less than 0.5 $\mu$ s.

The 14 programmable reference voltages are divided evenly into seven upper and seven lower voltages for the upper and lower gamma curves of LCD column drivers. The 14 programmable buffers wake-up in a high-impedance state until the registers are programmed. This protects the LCD system from high transient currents during the startup phase.

The EV kit includes Windows® 98SE/2000/XP-compatible software that provides a graphical user interface (GUI) for exercising the features of the MAX9590.

The MAX9590 evaluation system (EV system) consists of the MAX9590EVKIT and a companion CMAXQUSB serial interface board. The CMAXQUSB interface board allows a PC to control an I<sup>2</sup>C interface using its USB port. Order the MAX9590EVCMAQU for a complete PC-based evaluation of the MAX9590. Order the MAX9590EVKIT if you already have a MAX9590 compatible serial interface.

Windows is a registered trademark of Microsoft Corp.

## Ordering Information

PART	TYPE	INTERFACE
MAX9590EVKIT	EV kit	User-supplied I <sup>2</sup> C interface
MAX9590EVCMAQU	EV system	CMAXQUSB interface board

## Features

- ◆ 14 Programmable Reference Voltages
- ◆ 4 Static Reference Voltages
- ◆ Max 16.5V Operating Voltage
- ◆ Output Swing within 150mV of Rails
- ◆ Peak Current Greater than 200mA
- ◆ Output Channels Tri-Stated During Wake-Up
- ◆ USB Powered (EV System Only)
- ◆ Proven PC Board Layout
- ◆ Free Windows 98SE/2000/XP-Compatible Evaluation Software at [www.maxim-ic.com](http://www.maxim-ic.com)
- ◆ Fully Assembled and Tested

## Component List

### MAX9590 EV Kit

DESIGNATION	QTY	DESCRIPTION
C1–C18	0	Not installed, ceramic capacitors (0603)
C19, C21, C23, C24	4	0.1 $\mu$ F $\pm$ 10%, 25V X7R ceramic capacitors (0603) TDK C1608X7R1E104K or Taiyo Yuden TMK107BJ104KA
C20, C22, C25	3	10 $\mu$ F $\pm$ 20%, 25V X5R ceramic capacitors (1210) Murata GRM32DR61E106M
J1	1	20-pin, 2 x 10 right-angle receptacle
J2	0	Not installed, 2 x 20 straight male header
JU1	1	3-pin header
JU2	1	5-pin header
R1–R18	0	Not installed, resistors (0603)
R19, R20	2	1k $\Omega$ $\pm$ 5% resistors (0603)
R21, R25	2	100 $\Omega$ $\pm$ 1% resistors (0603)
R22, R24	2	4.32k $\Omega$ $\pm$ 1% resistors (0603)
R23	1	1.21k $\Omega$ $\pm$ 1% resistor (0603)
R26, R27	0	Not installed, resistors (0603)
U1	1	LCD gamma reference voltage generator (38-pin QFN-EP, 7mm x 5mm) Maxim MAX9590ETU
—	2	Shunts
—	1	MAX9590 EV kit PC board



# MAX9590 Evaluation Kit/Evaluation System

## Component List (continued)

### MAX9590 EV System

PART	QTY	DESCRIPTION
MAX9590EVKIT	1	MAX9590 EV kit
CMAQUSB	1	CMAQUSB board

## Component Suppliers

SUPPLIER	PHONE	WEBSITE
Murata	770-436-1300	www.murata-northamerica.com
Taiyo Yuden	847-925-0888	www.t-yuden.com
TDK	847-803-6100	www.component.tdk.com

**Note:** Indicate you are using the MAX9590 when contacting these component suppliers.

## MAX9590 EV Kit Files

FILE	DESCRIPTION
INSTALL.EXE	Installs the EV kit files on your computer
MAX9590.EXE	Application program
HELPFILE.MHT	Help file
FTD2XX.INF	USB device driver file
UNINST.INI	Uninstalls the EV kit software
TROUBLESHOOTING_USB.PDF	USB driver installation help file

## Quick Start

### Required Equipment

- The Maxim MAX9590EVCMAQU evaluation system:  
MAX9590EVKIT  
CMAQUSB serial interface board (USB cable included)
- +9V to +16.5V, 3A power supply
- DC voltage measurement equipment, e.g., voltmeter or equivalent
- A user-supplied Windows 98SE/2000/XP PC with an available USB port

**Note:** In the following section(s), software-related items are identified by bolding. Text in **bold** refers to items directly from the EV kit software. Text in **bold and under-line** refers to items from the Windows 98SE/2000/XP operating system.

## Procedure

Please visit the Maxim Integrated Products website (www.maxim-ic.com) to download the most recent version of the EV kit software 9590RXX.ZIP. The MAX9590 EV kit is fully assembled and tested. Follow these steps to verify board operation. Do not turn on the power supply until all connections are completed.

- Set jumper JU1 on the CMAQUSB at 3.3V or 5V output.
- Set DIP switch SW1 on the CMAQUSB to the ON position (SCL and SDA line pullup resistors enabled).
- Set the jumpers on the MAX9590EVKIT as follows:  
JU1: pins 1-2 (EV kit powered by CMAQUSB)  
JU2: pins 1-2 (default I<sup>2</sup>C write address is 0xE8)
- Connect the MAX9590 EV kit 2 x 10-pin receptacle (J1) to the CMAQUSB 2 x 10-pin header (P3).
- Connect the 9V to 16.5V DC power supply to the AVDD and AGND pads on the EV kit and turn on the power supply.
- Install the MAX9590 evaluation software on your computer by running the INSTALL.EXE program. The program files are copied and icons are created for them in the Windows **Start** menu **| All Programs | Maxim MAX9590 Evaluation Kit** by default.
- Connect the USB cable between the PC's USB port and the CMAQUSB's USB connector (P2). A **New Hardware Found** window should pop up. If you do not see this window after about 30 seconds, try removing the USB cable from the CMAQUSB and reconnect it. Administrator privileges are required to install the USB device driver on Windows 2000 and Windows XP. Refer to the TROUBLESHOOTING\_USB.PDF file if problems are experienced during this step.
- Follow the directions of the **Add New Hardware Wizard** to install the USB device driver. Choose the **Search for the best driver for your device** option. Specify the location of the device driver to be **C:\Program Files\MAX9590** (or the directory chosen during installation) using the **Browse** button.
- Start the MAX9590 EV kit software by opening its icon in the **Start | All Programs | Maxim MAX9590 Evaluation Kit**.
- The program automatically detects the MAX9590 address and displays it on the bottom of the window. By default, the software sets the MAX9590 in Standard operation mode and selects bank A to be buffered to the output.
- Measure the voltages on the VREFU\_H, VREFU\_L, VREFL\_H, VREFL\_L pads, and type the values in

# MAX9590 Evaluation Kit/Evaluation System

the corresponding fields in the **Reference Voltages (V)** group box.

- 12) Move the slide bars or type in appropriate register values for any output channels, and click the **Load All Values To Registers** button. Using the voltage mea-

surement equipment, verify that the output voltages are close to the corresponding expected voltages.

Evaluate: MAX9590

**MAX9590 Evaluation Software**

**File Options Help**

**Reference Voltages (V)**

VREFU\_H  VREFU\_L  VREFL\_H  VREFL\_L

**Register Addressing Mode**

☒ Standard ☐ Register

**Output Bank Select**

☒ Bank A ☐ Bank B ☐ A, B Alternating

**Bank A Register Settings** **Bank B Register Settings**

**Load All Values To Registers** **Load All Reg Values From File** **Save All Reg Values To File**

**Upper DAC Channels**

Ch 1	Ch 2	Ch 3	Ch 4	Ch 5	Ch 6	Ch 7
<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<input type="text" value="9.000"/>	<input type="text" value="9.000"/>	<input type="text" value="9.000"/>	<input type="text" value="9.000"/>	<input type="text" value="9.000"/>	<input type="text" value="9.000"/>	<input type="text" value="9.000"/>
<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>

**Lower DAC Channels**

Ch 8	Ch 9	Ch 10	Ch 11	Ch 12	Ch 13	Ch 14
<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
<input type="text" value="1.000"/>	<input type="text" value="1.000"/>	<input type="text" value="1.000"/>	<input type="text" value="1.000"/>	<input type="text" value="1.000"/>	<input type="text" value="1.000"/>	<input type="text" value="1.000"/>
<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>	<input type="button" value="Load"/>

**I2C Address Setting**

☒ Auto Detect Address

**Register Mode I2C Activity**

I2C Write Address:     ...     MSB LSB

Register Address:     ...     MSB LSB

Data Transmitted:     ...     MSB LSB

**MAX9590 Information**

Device Address: 0xE8  
Manufacturer ID: 0x4D  
Revision ID: 0x01

**MAXIM**

MAX9590 EVKIT found. I2C Address is 0xE8.

Figure 1. MAX9590 Evaluation Software Main Window

# MAX9590 Evaluation Kit/Evaluation System

## Detailed Description of Software

The evaluation software's main window is shown in Figure 1.

### I<sup>2</sup>C Address Setting

If the **Auto Detect Address** checkbox is checked, the software automatically detects the I<sup>2</sup>C address of the MAX9590. The MAX9590's I<sup>2</sup>C slave address is displayed on the status bar of the software window and the address pulldown menu. If an address is manually selected in the address pulldown menu, then the software probes the designated address and displays appropriately. If no acknowledgement is received from the EV kit, a pop-up window is opened and the user is directed to properly set JU2 on the EV kit.

### Upper and Lower DAC Reference Voltages

The upper and lower DAC reference voltages are generated by either an on-board resistor-divider network or external references applied on the VREFU\_H, VREFU\_L, VREFL\_H, and VREFL\_L pads. The actual voltages on these four pads **MUST** be captured and typed in the fields within the **Reference Voltages (V)** group box for the calculated DAC output voltages shown in the **Upper DAC Channels/Lower DAC Channels** group boxes to be correct.

The transfer function for upper DAC channels is:

$$V_{OUT} = VREFU\_L + \frac{D}{255} \times (VREFU\_H - VREFU\_L)$$

The transfer function for lower DAC channels is:

$$V_{OUT} = VREFL\_L + \frac{D}{255} \times (VREFL\_H - VREFL\_L)$$

In both formulas, D is the decimal register value.

When the evaluation software is run for the first time, the reference voltage values in the **Reference Voltages (V)** group box are loaded from an initialization file (REF.INI). The user should measure the actual voltage values on the VREFU\_H, VREFU\_L, VREFL\_H, and VREFL\_L pads and type in the values in the appropriate fields on the software main window. When the program is closed, the reference voltages in the current fields are logged in the initialization file, so the next time when the program is run, the reference voltages are loaded automatically.

### Register Addressing Mode

The **Standard** and **Register** selections in the **Register Addressing Mode** box set the MAX9590 operation mode.

### Output Bank Select

The **Bank A**, **Bank B**, and **A, B Alternating** selections in the **Output Bank Select** box select the set of reference voltages buffered to the outputs, either bank A, bank B, or alternating between bank A and bank B with 1 second hold time for each bank.

### Change Register Values

Register values can be set in three different ways. First, a user can move the slide bars and monitor the register values and expected output voltages in the corresponding fields. Second, a user can type in register values directly. Last, a user can type in expected output voltages and the software calculates and displays the closest register values for the user.

When a register value is changed, the corresponding field changes its color to red. A user should synchronize the GUI fields and actual device registers by clicking either the **Load** button (in register mode) or the **Load All Values To Registers** button (in standard mode).

The **Load All Reg Values From File** button is used to load all the register values and reference voltages from a text file. The **Save All Reg Values To File** button is used to save all the register values and reference voltages on the current GUI to a text file.

Register read/write operations can take place regardless of the output bank setting; for example, the user can change bank B registers when bank A is buffered to the outputs.

### Register Power-On Reset

Click the **Register Power On Reset** button to set all the registers to the default power-on values. The MAX9590 cannot be set to high-impedance output mode by the **Register Power On Reset** button.

### Register Mode I<sup>2</sup>C Activity

The **Register Mode I<sup>2</sup>C Activity** group box is used for the convenience of debugging in register mode. When an individual register is written, the bits sent to the MAX9590 through the I<sup>2</sup>C interface are displayed.

# MAX9590 Evaluation Kit/Evaluation System

Evaluate: MAX9590

## Detailed Description of Hardware

### MAX9590 EV System

The MAX9590 EV system is a PC-controlled reference voltage generation system consisting of a MAX9590 EV kit and the Maxim CMAXQUSB serial interface board.

### CMAXQUSB Serial Interface Board

The CMAXQUSB serial interface board uses a proprietary design to provide SPI™- and I²C-compatible interfaces to demonstrate various Maxim devices. Maxim reserves the right to change the implementation of this module at any time with no advance notice.

### CMAXQUSB Power Supply

Do not plug a power adapter into the P1 power jack because power is provided from the USB port. JU1 on the CMAXQUSB board selects the digital power-supply voltage for the MAX9590 EV kit. Place the shunt on the 3.3V or 5V position for the MAX9590 to work properly.

Table 1. CMAXQUSB Jumper JU1

JUMPER	SHUNT POSITON	EV KIT DIGITAL SUPPLY VOLTAGE
JU1	3.3V marking	3.3V
	5V marking	5V

### MAX9590 EV Kit

The digital power supply for the MAX9590 EV kit comes from either the CMAXQUSB interface board or the user-supplied external power source. Set the JU1 shunt on pin 1 and pin 2 (default configuration) to use the power supply from the CMAXQUSB interface board. To evaluate the MAX9590 with a different digital power-supply voltage, set the JU1 shunt on pin 2 and pin 3 and apply an appropriate voltage on the DVDD and DGND pads.

SPI is a trademark of Motorola, Inc.

Table 2. MAX9590 EV Kit Jumper JU1

JUMPER	SHUNT POSITON	EV KIT DIGITAL SUPPLY VOLTAGE
JU1	1-2*	CMAXQUSB interface board supplied
	2-3	User supplied (from DVDD and DGND pads)

\*Default configuration.

The analog power supply for the MAX9590 EV kit comes from the AVDD and AGND pads; apply a +9V to +16.5V, 3A power supply on the AVDD and AGND pads on the EV kit.

### MAX9590 Slave Address Description


The MAX9590 I²C address can be set by JU2. See Table 3 for address configuration.

Table 3. MAX9590 EV Kit Jumper JU2


JUMPER	SHUNT POSITION	MAX9590 WRITE ADDRESS (hex)
JU2	1-2* (A0 connected to DGND)	0xE8
	1-3 (A0 connected to DVDD)	0xEA
	1-4 (A0 connected to SCL)	0xEC
	1-5 (A0 connected to SDA)	0xEE

\*Default configuration.
 
# MAX9590 Evaluation Kit/Evaluation System



## Evaluate: MAX9590

 

# MAX9590 Evaluation Kit/Evaluation System

Evaluate: MAX9590

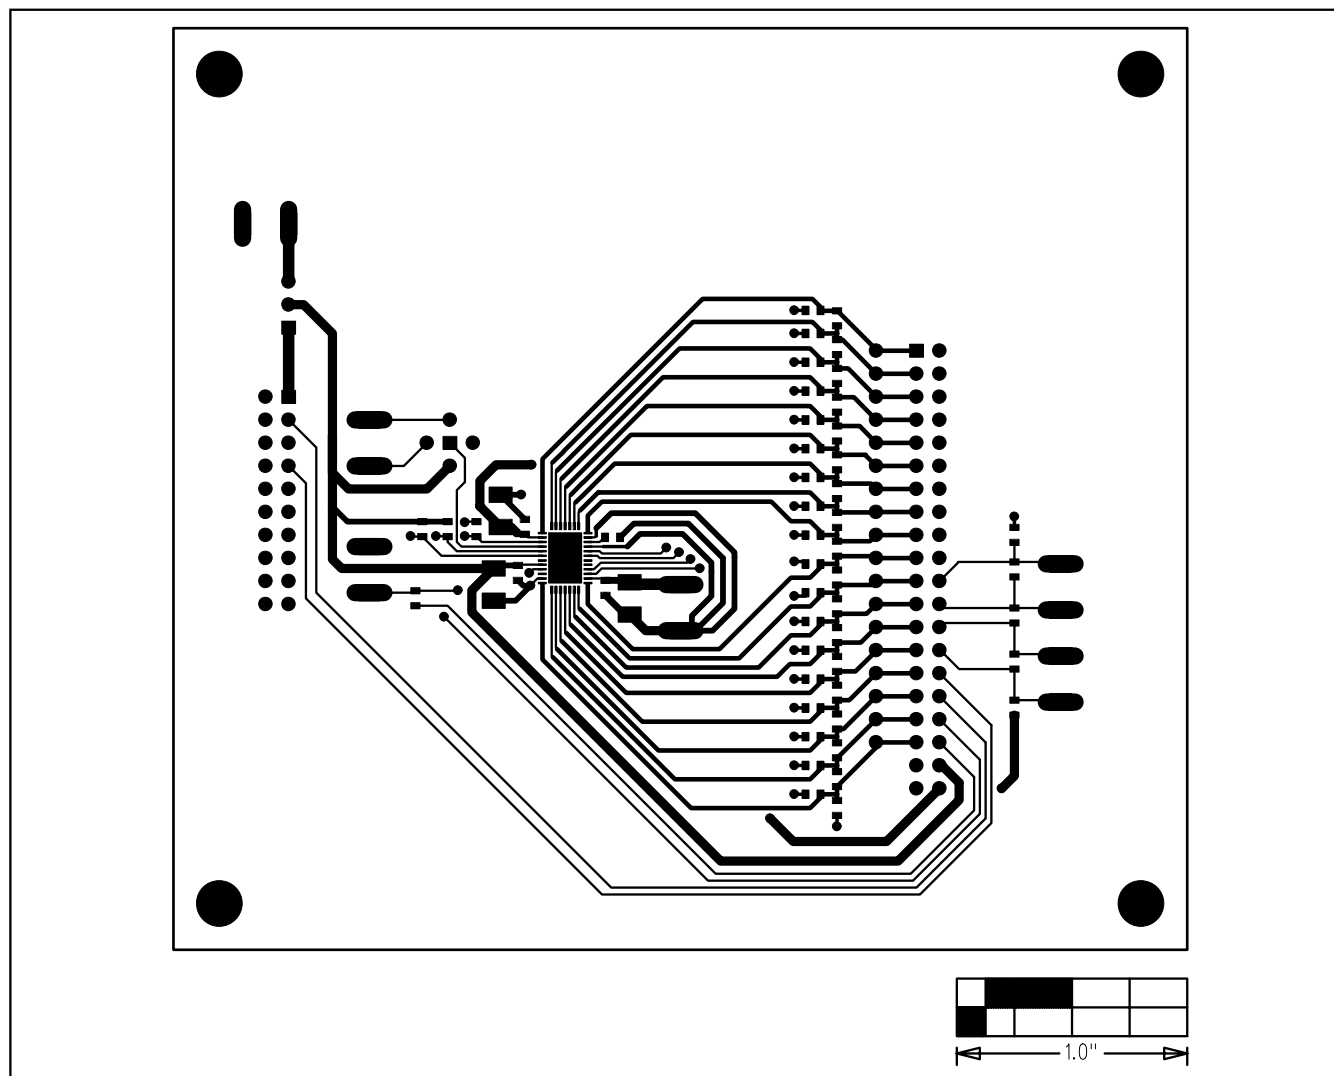


Figure 4. MAX9590 EV Kit PC Board Layout—Component Side

# MAX9590 Evaluation Kit/Evaluation System

**Evaluate: MAX9590**

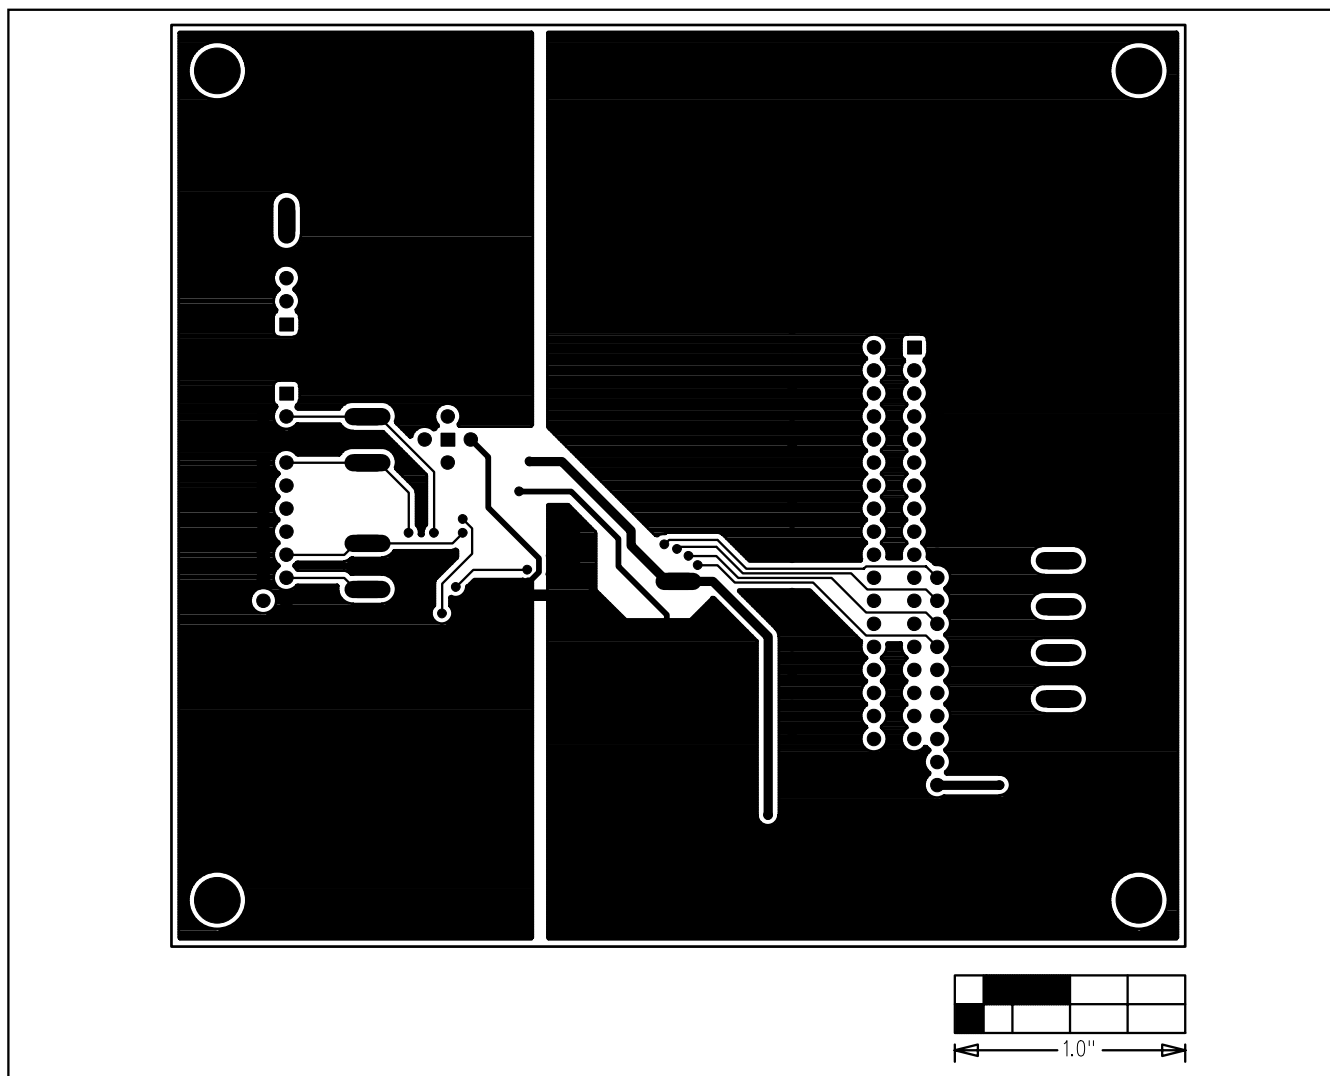


Figure 5. MAX9590 EV Kit PC Board Layout—Solder Side

Maxim cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim product. No circuit patent licenses are implied. Maxim reserves the right to change the circuitry and specifications without notice at any time.

**Maxim Integrated Products, 120 San Gabriel Drive, Sunnyvale, CA 94086 408-737-7600** \_\_\_\_\_ **9**

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Analog Devices Inc.:](#)

[MAX9590ETU+T](#)