


PCA-6194 Manual Note:

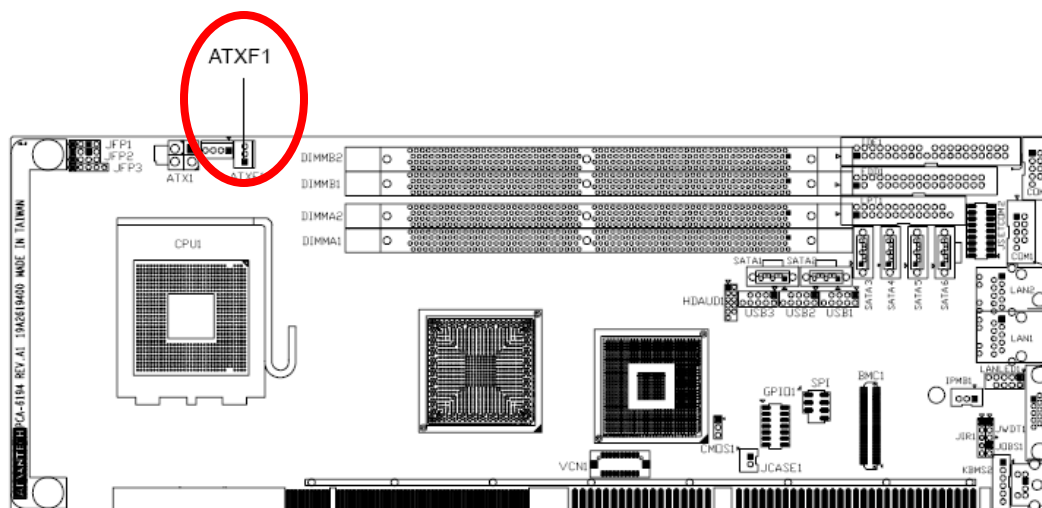

When user would like to use ATX mode, ATXF1 needs to connect to the CN1 on the Advantech backplane to enable the ATX function, 5Vsb.

When user needs to use AT mode, user has to use jumper to close ATXF1's 2-3 pin.

Note: When user wants to change ATXF1 setting (AT \leftrightarrow ATX), please turn-off PSU and un-plug ATX power cord.



Table B.18: ATX feature connector (ATXF1)

1	PS_ON#
2	VCC
3	5V standby

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Advantech:](#)

[PCA-6194G2-D0A2E](#) [PCA-6194G2-00A2E](#) [PCA-6194VG-00A2E](#) [PCA-6194G2-00A1E](#) [PCA-6194VG-00A1E](#) [PCA-6194G2-D0A1E](#)