





Quick Start Guide EK-P4

Quick Start Guide EK-P4


- 1 **Install FTDI USB driver** for the sensor cable.
(<http://www.ftdichip.com/Drivers/VCP.htm>)
- 2 **Install software** after download from: www.sensirion.com/USB-viewer
- 3 **Connect the USB sensor cable** to the sensor PCB and the PC.
- 4 **Start up the USB RS485 Sensor Viewer.**
- 5 Under COM Hardware, **select «RS485/USB Sensor cable».**

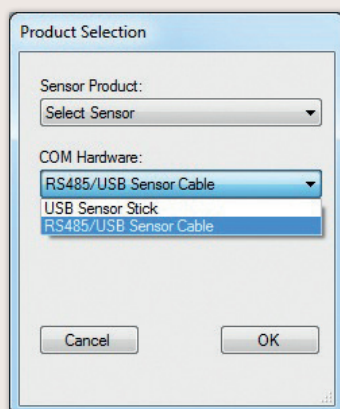


- 6 **Select the sensor product «Sensirion Flow Meters (SF06 Chip)».**

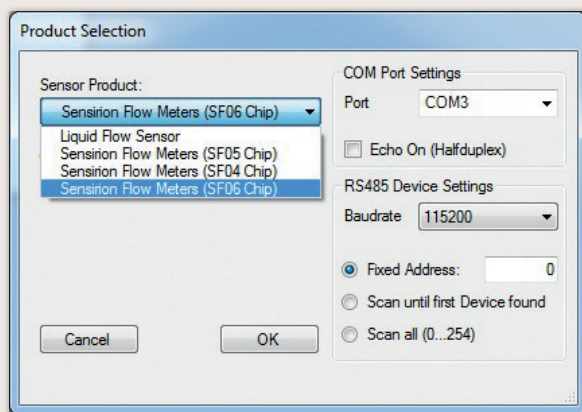

- 7 **Select COM port** and press «OK». Highest COM port is most often correct.

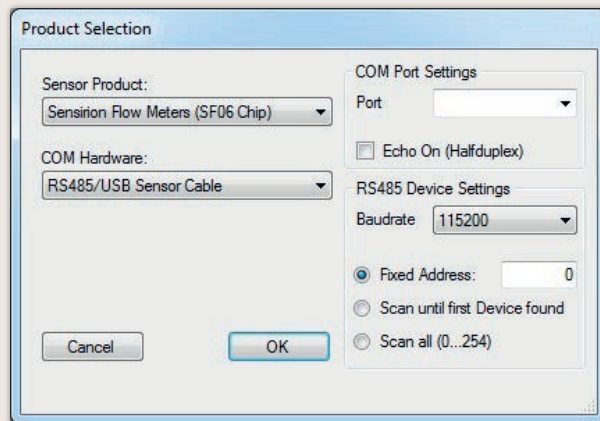

- 8 The SF06 Viewer appears. Adjust the **following settings** first:
- Change units to «Pascal».
 - Set scale factor to 60.
 - Set sampling time to 1ms or more.
 - Enter command HEX 0x3603.

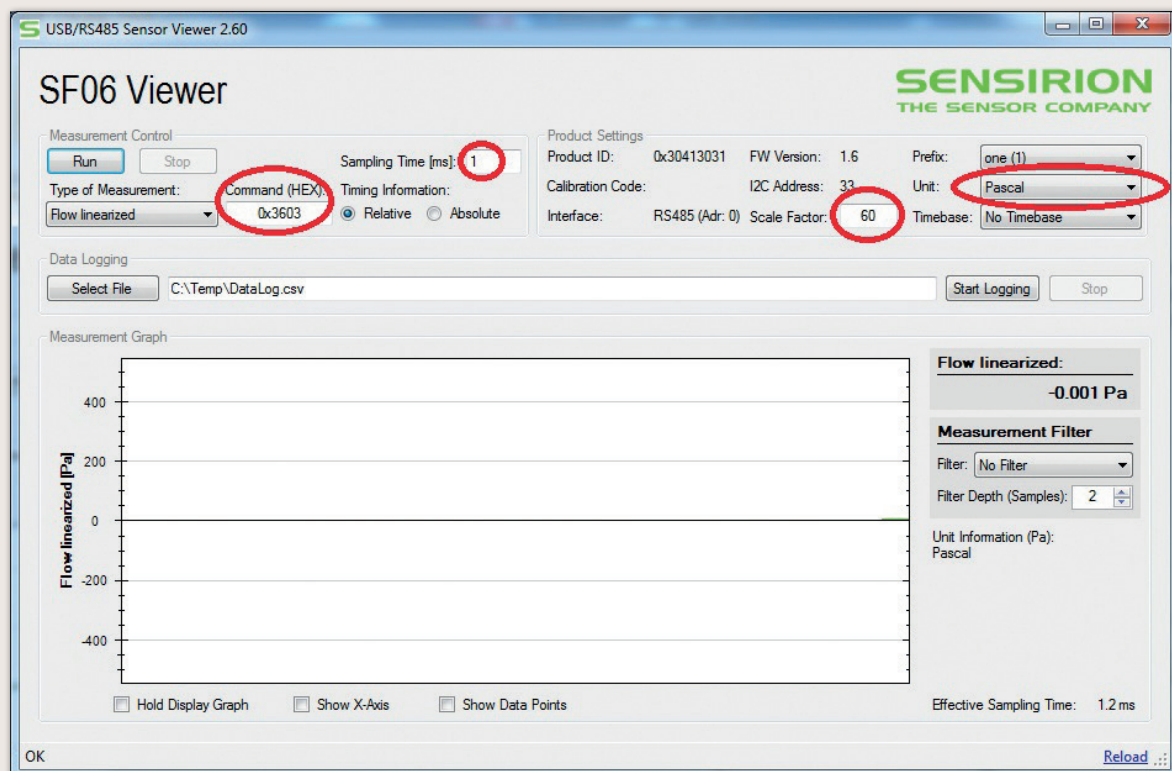

- 9 **Press «Run».**

For more information about Sensirion's differential pressure sensors of the SDP3x series, please visit www.sensirion.com/sdp3x or contact our technical customer support team:

SENSIRION AG

Laubisruetistrasse 50

8712 Staefa

Switzerland

Phone + 41 44 306 40 00

Fax + 41 44 306 40 30

info@sensirion.com

www.sensirion.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Sensirion:

EK-P4