

WSP-1630 PNEUMATIC WIRE STRIPPER

DMC DANIELS
MANUFACTURING
CORPORATION
DATASHEET

SEE PAGE 7 FOR IMPORTANT INFORMATION CONCERNING
LIMITED WARRANTY, AND LIMITATION OF LIABILITY.

The WSP-1630 Pneumatic Wire Stripper is for hand held stripping of most insulated wire from 16-30 AWG. The tool accommodates Custom Stripmaster® and Custom Steel Stripmaster® industry standard blades and pads made by Ideal Industries, Inc.

The wire stripper features a 360° rotatable head section that enables positioning of the head to the most comfortable position for left or right handed operators.

To operate the wire stripper, proceed as follows:

1. Connect the air hose to a clean, dry air supply between 80 and 120 psi (5.4-8.2 bar).
2. Hold the stripper in the hand which will be used for operation of the tool and position the control lever where it feels most comfortable for operation. With the locking screw loosened, rotate the stripping head until it is positioned in a proper location for easy viewing and placement of the wire to be stripped. Tighten the locking screw (see Figure 1). NOTE: It will be easier to rotate the head with the air supply disconnected or with the tool in the activated position.

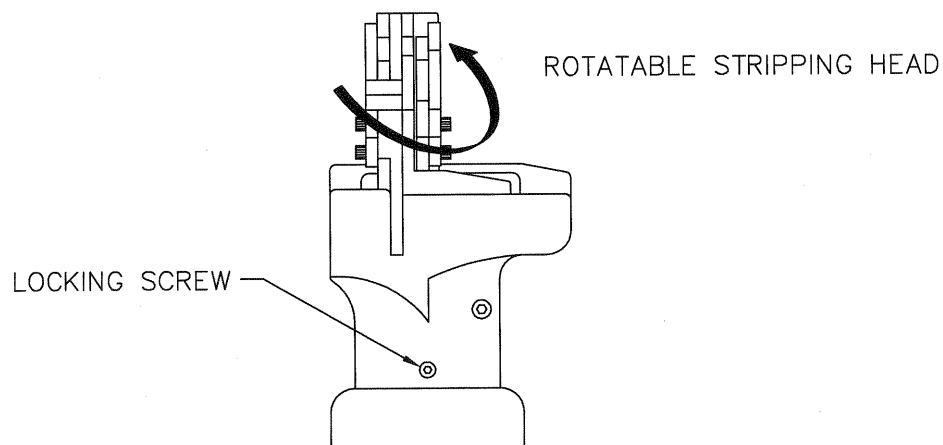


FIGURE 1

Following is the procedure for changing the stripping blades and pads. Be sure the proper blades and pads are used for the type of insulation being stripped:

Gripper Pads:

1. Disconnect the unit from the air supply.
2. Remove the two screws holding the gripper pads in place.
3. Remove the stationary gripper (see Figure 2).
4. Remove the movable gripper by rotating the gripper so the tang comes clear of the activating link (see Figure 3).
5. Replace new gripper by reversing the above steps. Do not overtighten the holding screws.
6. Reconnect the air supply and activate the tool. If the movable gripper does not completely close to the stationary pad, loosen the two screws, realign and close completely. Retighten with the two pads touching.

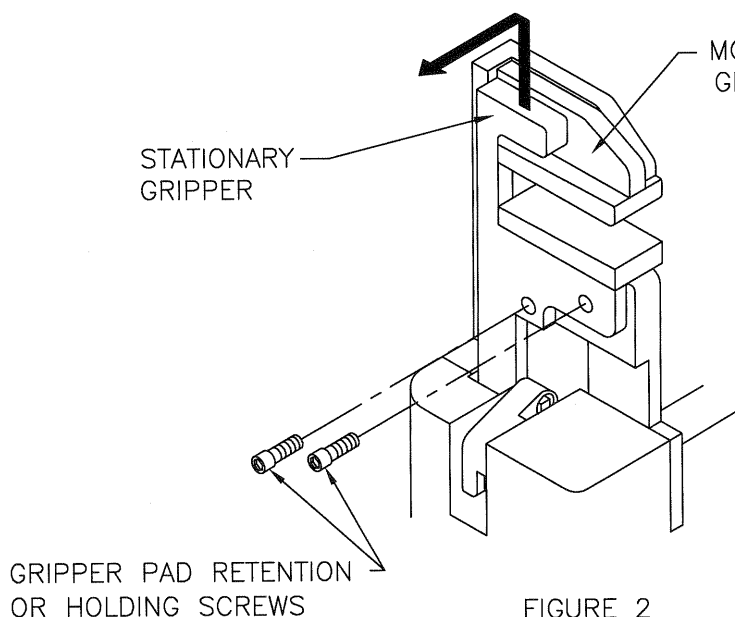


FIGURE 2

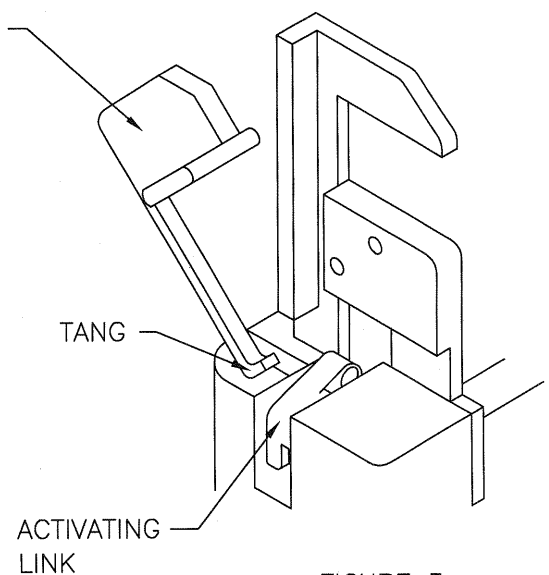


FIGURE 3

Stripper Blades:

1. Depress the control lever and with the carrier extended, disconnect the unit from the air supply.
2. Remove the two screws (or nuts) and washers holding the blades in place.
3. Remove the guide plate and the stationary blade.
4. Rotate the movable blade so the tang comes clear of the activating link, then remove (see Figure 4).
5. Reassemble the replacement blades in the reverse order.
6. Replace the washers and screws (or nuts) holding the blades in place. DO NOT OVERTIGHTEN.
7. Reconnect the air supply and activate the tool. If the movable blade does not align properly, loosen the screws and realign to close completely. Retighten the screws (or nuts).


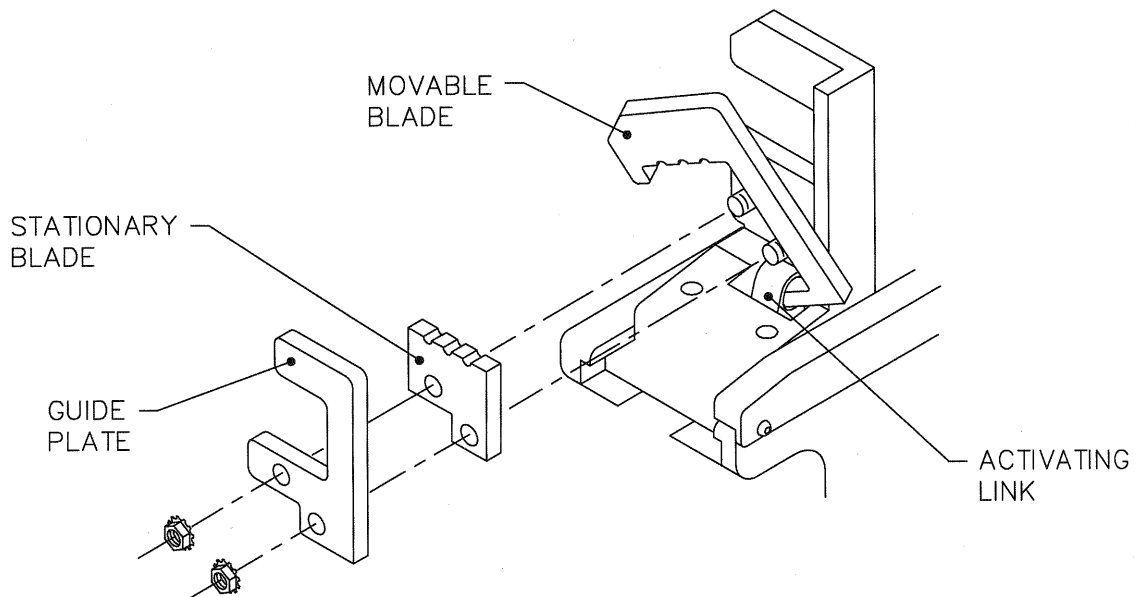


FIGURE 4

CARRIER BRAKE REPLACEMENT/ADJUSTMENT

The carrier contains two brakes which cause the holding pads and stripping dies to close before the carrier advances and strips the wire. They then delay the carrier from returning until the pads and dies are open. When this sequence does not occur properly, the carrier brakes may have worn sufficiently to require replacement or adjustment. NOTE: These brakes have been properly adjusted at the factory.

To replace brakes, remove the two screws noted below. Remove two springs and the worn brakes, install new brakes, springs and brake replacement screws. Turn screws until screw cap is flush with top of carrier. Actuate tool and visually determine if the sequence is satisfactory. If further adjustment is required, tighten screws 1/4 of a turn for each adjustment until desired effect is achieved.

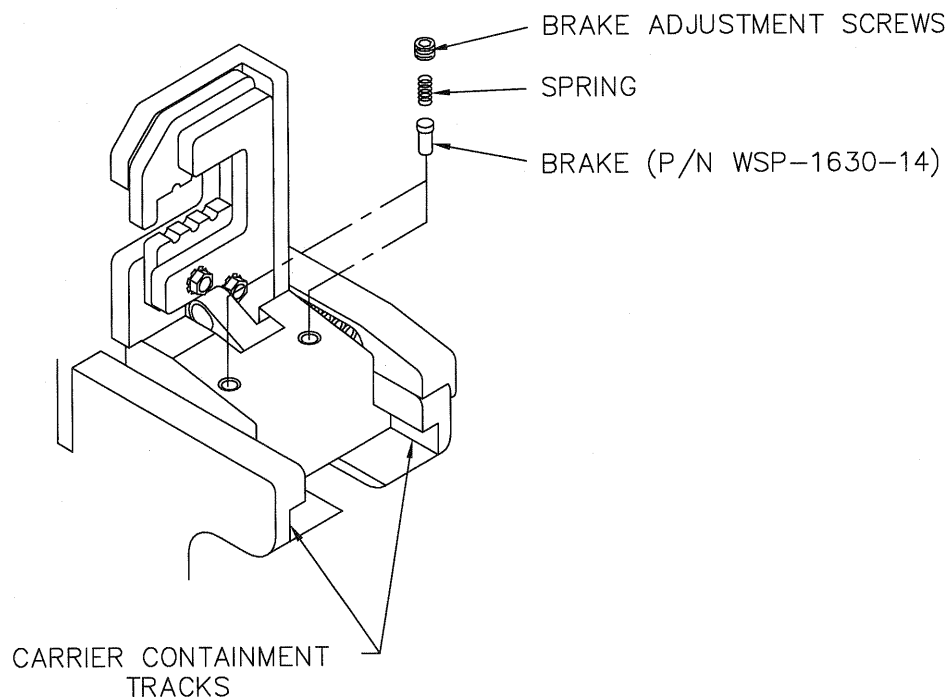

LUBRICATION

Periodic lubrication of the carrier in the containment tracks will ensure smooth operation. Use a teflon or molybdenum grease (or silicone spray lubricant) sparingly, once every 10,000 cycles.

Flow Control Valve

An in-line Flow Control Valve allows the user to adjust the speed of the stripping action of the Wire Stripper. The strip speed may be adjusted as follows:

1. Connect the Wire Stripper to a clean and dry air supply with pressure between 80–120 psi (5.4–8.2 bar).
2. Rotate the knurled body of the valve clockwise (looking at the bottom of the Wire Stripper) until it is hand tight and fully closed.
3. Activating the control lever will result in no operation or extremely slow operation of the tool. Rotate the Flow Control Valve body slowly counterclockwise, activating the control lever at the same time, until the preferred speed of operation is reached.
4. Full flow operation will be achieved in approximately one half turn.

Mounting A Wire Stop Option

The transparent adjustable wire stop can be mounted as follows:

1. Remove the screw (or nut) farthest from the upright of the carrier.
2. Install the knurled standoff. Use the supplied threaded stud, if required, and tighten with a screwdriver.
3. Slip the plastic wire stop over the standoff and tighten in place to the selected stripping length (see Figure 5).

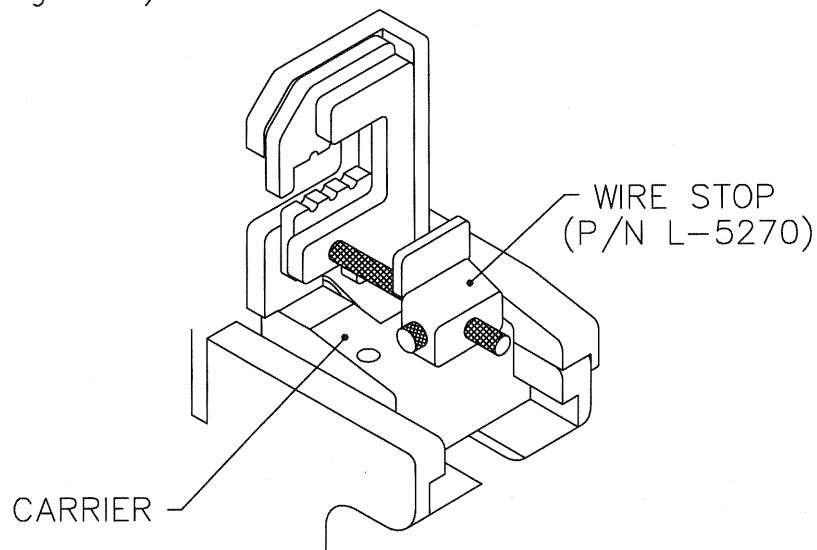


FIGURE 5

AIR HOSE WITH FLOW CONTROL VALVE

An in-line Flow Control Valve allows the user to adjust the speed of the stripping action of the Wire Stripper. The strip speed may be adjusted as follows (see Figure 7):

1. Connect the Wire Stripper to a clean and dry air supply with pressure between 80–120 psi (5.4–8.2 bar).
2. Rotate the knurled body of the valve clockwise (looking at the bottom of the Wire Stripper) until it is hand tight and fully closed.
3. Activating the control lever will result in no operation or extremely slow operation of the tool. Rotate the Flow Control Valve body slowly counterclockwise, activating the control lever at the same time, until the preferred speed of operation is reached.
4. Full flow operation will be achieved in approximately one half turn.

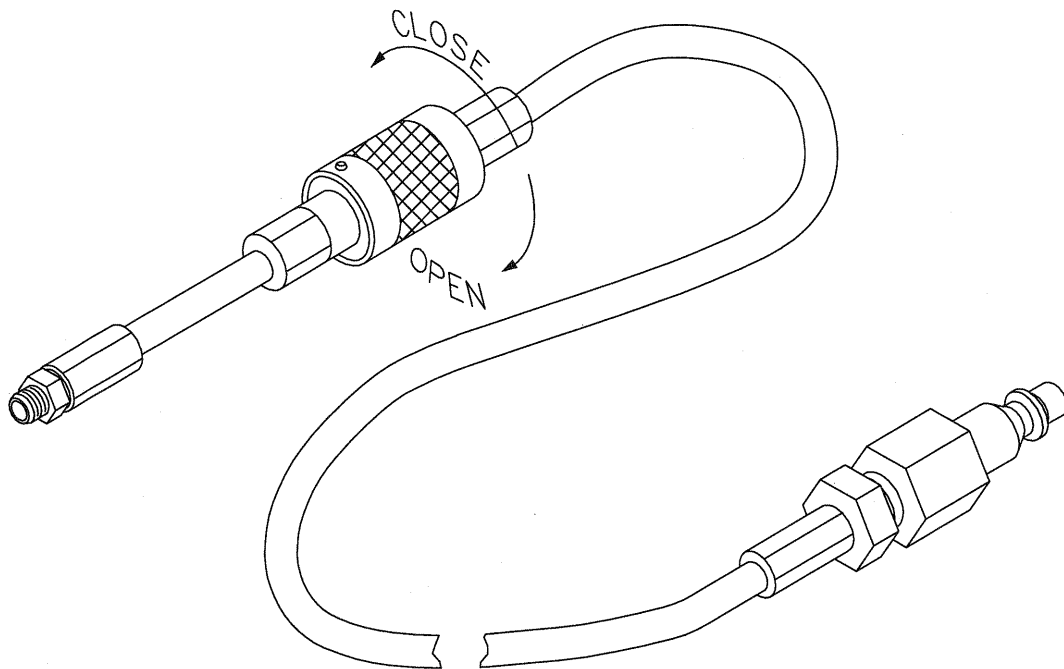


FIGURE 7

DMC offers complete refurbishing and recalibration services.

DMC specially engineers and manufactures complete tool kits to satisfy individual customer requirements, such as total aircraft support general shop maintenance or production, on board ship and vehicle service, etc.

LIMITATION OF LIABILITY

DANIELS MANUFACTURING CORPORATION IS NOT LIABLE FOR CONSEQUENTIAL OR SPECIAL DAMAGES OF ANY NATURE OR KIND RESULTING FROM THE USE, OR MISUSE, OF ANY OF ITS PRODUCTS. OWNERS AND USERS OF DMC PRODUCTS ASSUME FULL RESPONSIBILITY FOR INSTRUCTING THEIR EMPLOYEES IN THE PROPER AND SAFE USE OF SUCH PRODUCTS.

LIMITED WARRANTY

DMC (Daniels Manufacturing Corporation) warrants each new product sold by it to be free from defects in material and workmanship under normal use and service. DMC's obligation under this warranty is limited to the free correction or, at DMC's option, the refund of the purchase price of any such product which proves defective in normal service within ninety (90) days after delivery to the first user, provided that the product is returned to DMC with all transportation charges prepaid and which shall appear to DMC's satisfaction, after DMC's inspection, to have been defective in material or workmanship, it being understood that DMC products are not consumer products. This warranty shall not cover any damage to any product which, in the opinion of DMC, was caused by normal wear, misuse, improper operation, tampering, neglect or accident. This warranty is in lieu of all other warranties express or implied. No warranty, express or implied, is made or authorized to be made or assumed with respect to products of Daniels Manufacturing Corporation other than those herein set forth.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Daniels Manufacturing:

[WSP-1630NB](#) [WSP-1630](#) [WSP-1630LITE](#) [WSP-1630-19](#)