

# User Manual

## GreenPAK Advanced Development Platform

### UM-GP-002

#### Abstract

*This user manual provides basic guidelines for the developers to get familiar with the GreenPAK Advanced Development Platform. It gives an overview of the hardware, as well as the functional description of this platform, and shows the example projects using SLG46721.*

---

## Contents

<b>Abstract .....</b>	<b>1</b>
<b>Contents .....</b>	<b>2</b>
<b>Figures .....</b>	<b>3</b>
<b>Tables .....</b>	<b>3</b>
<b>1 Terms and Definitions .....</b>	<b>4</b>
<b>2 Introduction .....</b>	<b>5</b>
2.1 GreenPAK Designer .....	5
2.2 Support .....	5
<b>3 Getting Started .....</b>	<b>6</b>
3.1 Introduction .....	6
3.2 Install Hardware .....	6
3.3 Install Software .....	6
3.4 Uninstall Software .....	6
<b>4 Hardware .....</b>	<b>7</b>
4.1 Overview .....	7
4.2 Functional Description .....	7
4.2.1 Power Supply .....	7
4.2.2 USB Communication .....	8
4.2.3 GND Connections .....	8
4.2.4 Pin Test Points .....	8
4.2.5 LEDs .....	8
4.2.6 Socket Connector .....	8
4.2.7 Expansion Connector .....	8
4.2.8 Pins Connectivity .....	12
<b>5 Example Projects using SLG46721 .....</b>	<b>14</b>
5.1 Project: Counter with Clock Enable .....	14
5.2 Project: LED String with Direction .....	24
<b>6 Conclusion .....</b>	<b>30</b>
<b>Appendix A Electrical Specification .....</b>	<b>31</b>
<b>Appendix B Scematic Diagram .....</b>	<b>33</b>
<b>Appendix C BOM .....</b>	<b>37</b>
<b>Revision History .....</b>	<b>39</b>

## GreenPAK Advanced Development Platform

### Figures

Figure 1: GreenPAK Advanced Development Board, Top View .....	7
Figure 2: USB Interface .....	8
Figure 3: GreenPAK Expansion Connector Schematic.....	9
Figure 4: Expansion Connector Control in GreenPAK Designer.....	9
Figure 5: Socket and Expansion Connector Schematic.....	10
Figure 6: Internal Power Source.....	11
Figure 7: Internal Power Source for GreenPAK Chip and External Development Platform .....	11
Figure 8: Expansion Connector. Pin with Protection Resistor.....	12
Figure 9: Pin Signal Sources/Loading Schematics .....	13
Figure 10: GreenPAK Designer.....	14
Figure 11: GreenPAK Components List.....	15
Figure 12: Pin 20 Mode .....	16
Figure 13: Look Up Table Properties Configured as AND Gate .....	17
Figure 14: Look Up Table Properties Configured as NOR Gate .....	18
Figure 15: Counter Properties .....	19
Figure 16: GreenPAK Designer.....	19
Figure 17: GreenPAK Designer, Emulation Tool .....	20
Figure 18: Signal Generator Connected to V <sub>DD</sub> Pin .....	20
Figure 19: Signal Generator Settings .....	21
Figure 20: Logic Generator Properties .....	22
Figure 21: Waveform, Triggered on Button Pressed.....	22
Figure 22: Waveform, no Triggered on Button Released.....	23
Figure 23: Waveform of the Pulse Width of the Logic Generator and Count End Signal .....	23
Figure 24: Used Blocks for Current Project.....	24
Figure 25: Sine Waveform Generated with Signal Generator .....	24
Figure 26: Emulation Window, with Buffered LED and Signal Generator .....	25
Figure 27: Pin Properties.....	26
Figure 28: Pin Properties.....	27
Figure 29: Look Up Tables Properties Configured as XOR Gate .....	27
Figure 30: ACMP Properties.....	28
Figure 31: GreenPAK Designer.....	28
Figure 32: LED Output with Direction (Pin 2) Low .....	29
Figure 33: LED Output with Direction (Pin 2) High.....	29
Figure 34: MCU .....	33
Figure 35: Analog Switches, Protection Diodes and LEDs .....	34
Figure 36: Socket and Expansion Connectors .....	34
Figure 37: Signal Generator .....	35
Figure 38: Boost Converter USB Interface.....	35
Figure 39: Port Extender .....	35
Figure 40: USB Protection.....	36

### Tables

Table 1: Available Connections for Each Test Point .....	12
Table 2: Pin Configuration for Counter with Clock Enable .....	16
Table 3: Pin Configuration for LED String with Direction .....	25

---

## GreenPAK Advanced Development Platform

### 1 Terms and Definitions

ACMP	Analog Comparator
ADC	Analog-to-Digital Converter
BOM	Bill of Materials
GND	Ground
IDE	Integrated Development Environment
LED	Light Emitting Diode
LUT	Look Up Table
OTP	One-Time Programmable
PWM	Pulse-Width Modulation
RAM	Random-Access Memory
TP	Test Point
USB	Universal Serial Bus
V <sub>DD</sub>	Power Supply

## GreenPAK Advanced Development Platform

## 2 Introduction

Thank you for choosing Dialog Semiconductor products. The GreenPAK Advanced Development Platform allows you to develop your custom design using GreenPAK mixed signal ICs. You can design your own projects starting from a blank project or by altering the sample projects provided at <https://www.dialog-semiconductor.com/>.

### 2.1 GreenPAK Designer

GreenPAK Designer is an easy-to-use full-featured integrated development environment (IDE) that allows you to specify exactly how you want the device to be configured. This provides you a direct access to all GreenPAK device features and complete control over the routing and configuration of a PAK project with just one tool.

With GreenPAK Designer, you can:

- Design the configuration which corresponds to your project needs
- Verify the project using software interface to GreenPAK Advanced Development Platform hardware
- With simple-to-use and intuitive software and hardware tools you can reduce your project development time and get to market faster

To start working with GreenPAK Designer please take the following steps:

- Download and install GreenPAK Designer software
- Configure modules that you will need for your project
- Interconnect and configure modules
- Specify the pin out
- Test your design with the GreenPAK Advanced Development Platform

### 2.2 Support

Free support for GreenPAK Advanced Development Platform is available online at <https://www.dialog-semiconductor.com/>.

At **facebook** : <https://www.facebook.com/dialogsemi/>.

GreenPAK Designer will automatically notify you when a new version of software is available. For manual updates please go to <https://www.dialog-semiconductor.com/greenpak-designer-software>.

These resources are also available under the **Help** menu of GreenPAK Designer.

---

## GreenPAK Advanced Development Platform

### 3 Getting Started

#### 3.1 Introduction

This chapter describes how to install and configure the GreenPAK Advanced Development Platform. Section 4 provides the details of hardware operation. Section 5 provides instructions on how to create a simple project example.

#### 3.2 Install Hardware

No hardware installation is required for this platform.

#### 3.3 Install Software

GreenPAK Designer software is available free of charge from the Dialog website at <https://www.dialog-semiconductor.com/greenpak-designer-software> page.

#### 3.4 Uninstall Software

The software can be uninstalled in the way typical for your operating system. Please refer to your operating system support documentation if you need the specific instructions or visit Section 2.2 of this document for additional support from Dialog.

## GreenPAK Advanced Development Platform

### 4 Hardware

#### 4.1 Overview

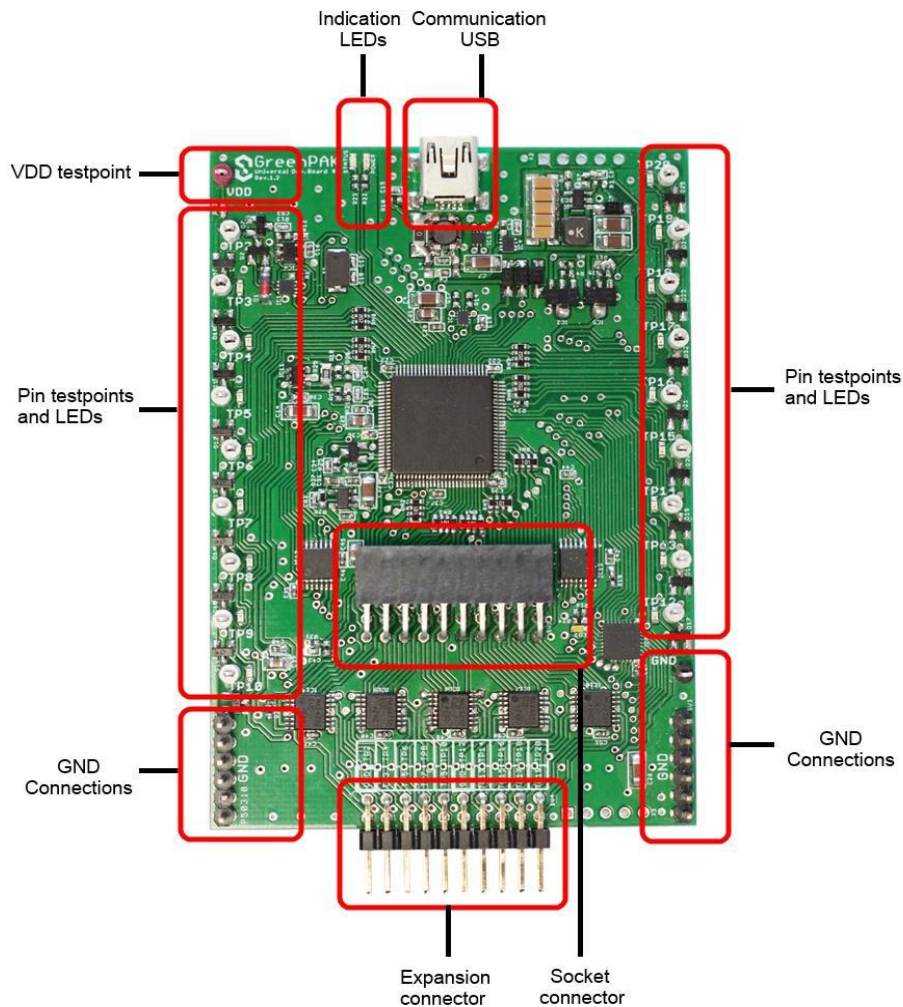


Figure 1: GreenPAK Advanced Development Board, Top View

**Note:** all test points were designed only for observation of signals on the pins. Please do not try to connect external power/signal source to test points, this will affect GreenPAK Advanced Development Board functionality and may even damage it.

#### 4.2 Functional Description

##### 4.2.1 Power Supply

The main power source of the GreenPAK Advanced Development Board is the USB power line. The Development Board can deliver power from 0 to 5.5 V. To provide this power range, the Development Board is equipped with a boost converter. A Signal generator with a buffered output controls the GreenPAK chip power rail. For more information about GreenPAK electrical specification, please refer to the datasheet.

## GreenPAK Advanced Development Platform

### 4.2.2 USB Communication

The board has the USB communications interface that uses the USB mini-B connector, as shown in [Figure 2](#). This interface provides communication with the software control tool and supplies power to the platform, as discussed in [4.2.1](#).



**Figure 2: USB Interface**

### 4.2.3 GND Connections

There are 6 GND pins on the left side, 6 pins and 1 header on the right side. These can be used for test equipment (oscilloscope, multimeter, and others) ground reference connection or to connect external test circuitry ground.

### 4.2.4 Pin Test Points

Each GreenPAK chip pin including  $V_{DD}$  has its own observation test point. These test points were designed only for observation. To connect an external signal source use a software-controlled expansion connector.

### 4.2.5 LEDs

All the pins except Pin 2 can be connected to buffered LEDs. This option allows visualization of digital levels on chip pins. There are 2 selection modes:

- Buffered LED (with high impedance input)
- Inverted Buffered LED (with high impedance input)

This option can be enabled in GreenPAK Designer.

### 4.2.6 Socket Connector

The GreenPAK Advanced Development Board should be used with a detachable socket board. Its main purpose is to connect the GreenPAK chip to the Development Board. It's easy to use the programmed chip in external circuits, or to measure current consumption of the project.

### 4.2.7 Expansion Connector

This port was designed to connect the GreenPAK Advanced Development Board to external circuits and apply external power, signal sources and loads. It can be used to apply the GreenPAK chip into your custom design with minimal additional tools. For schematic diagram refer to [Figure 3](#).



GreenPAK Advanced Development Platform

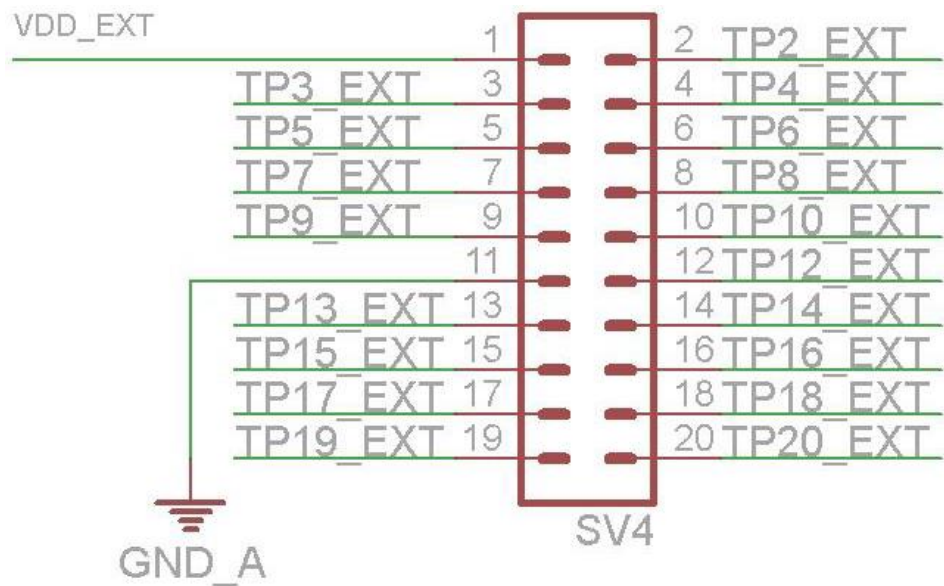


Figure 3: GreenPAK Expansion Connector Schematic

Each pin except Pin 11 (GND) is controlled through an individual analog switch. Expansion connector is a standard 0.1" double row connector. GreenPAK Designer can enable or disable external pins, as it is shown in the [Figure 4](#). The main purpose of the Expansion connector is to connect an external signal/power source safely to the GreenPAK Advanced Development Board.

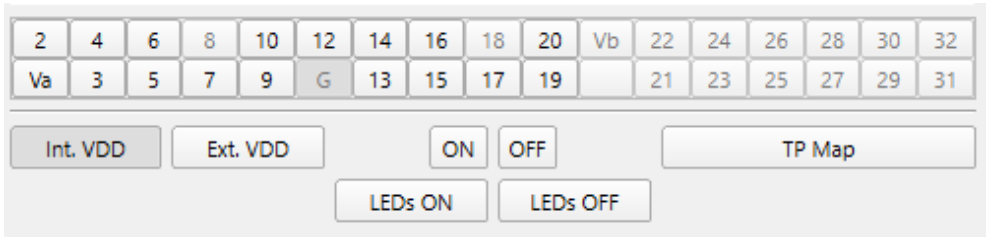


Figure 4: Expansion Connector Control in GreenPAK Designer

[Figure 5](#) demonstrates the schematic diagram of the expansion connector control.

## GreenPAK Advanced Development Platform

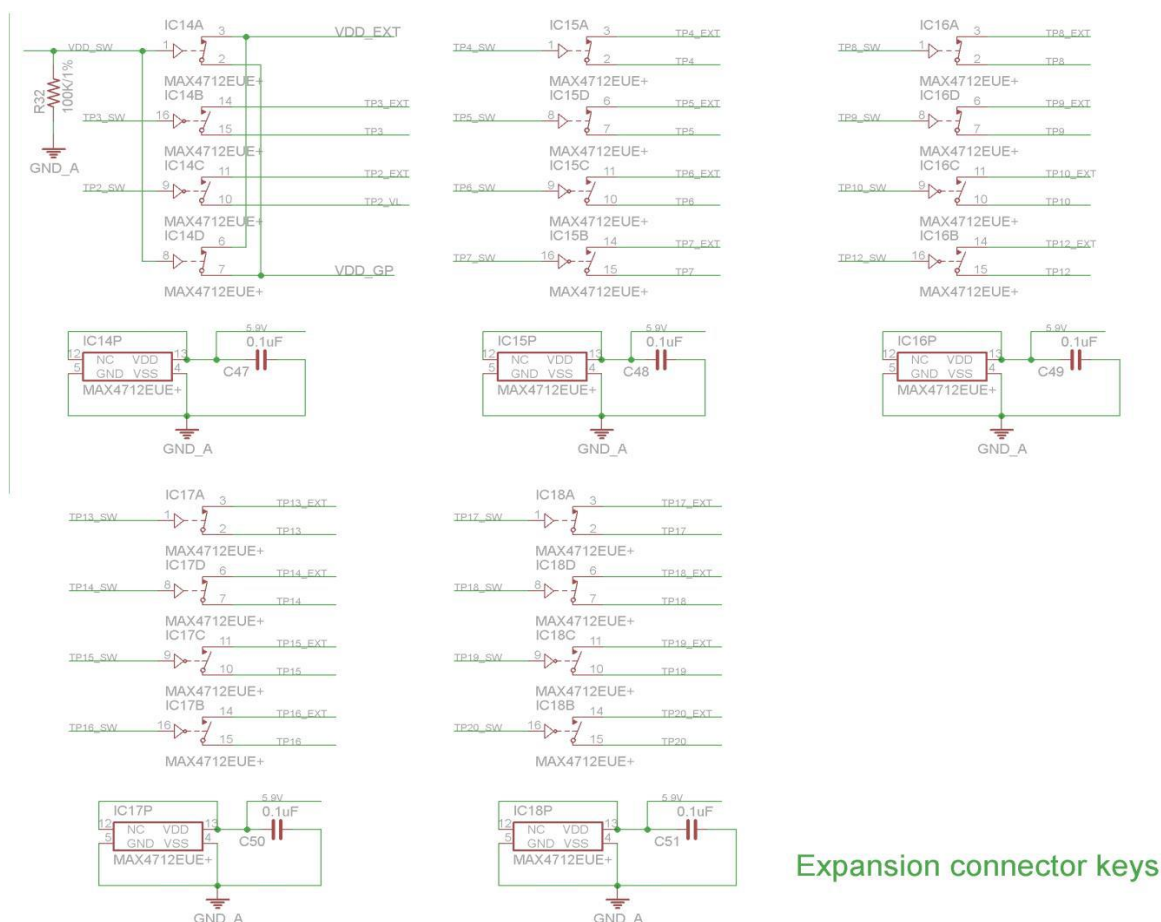


Figure 5: Socket and Expansion Connector Schematic

Expansion connector is enabled only in Emulation mode or Test mode. To enter either of these two modes the GreenPAK chip must be in the socket. When the Test mode button is pressed the software will first read the chip to verify if it was inserted and then configure the GreenPAK Advanced Development Board as set in Emulation Tool window. When the Test mode button is gray then the Development Platform is in Default state and all expansion port switches are open (disconnected). After Emulation button is pressed, the software will automatically perform the following steps:

- check chip presence
- open all expansion port switches (external signals/loads can be left connected to expansion port)
- use internal power and load configuration to the chip
- only for case #3: adjust internal power source to external power level → close external power switch → open internal power switch
- configure Development Board as set in Emulation Tool window

Parasitic effects should be also considered while using the GreenPAK Advanced Development Board in-circuit with analog signals. The entire Development Board circuitry along with the wiring have a significant amount of mutual capacitance and inductance. The detachable socket can also be used for the in-circuit development with programmed chips (the Development Board and socket connectors have the same pinout).

The GreenPAK Advanced Development Board provides three possible ways of using expansion connector:


- 1) Internal power is used to run the chip, no external power output is needed, external signal sources and loads can be connected between pins and GND.

## GreenPAK Advanced Development Platform

The configuration steps:

- close internal and open external power switch
- close all used expansion port switches in the software
- hit Emulation/Test mode button

This is the common way of using an Expansion connector.

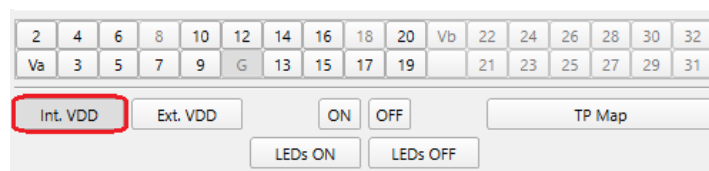


**Figure 6: Internal Power Source**

- 2) Internal power is used to run the chip and external circuit (internal power source/sink current is limited to 50 mA).

The configuration steps:

- close internal power switch
- close external power switch
- close all used expansion port switches in the software
- hit Emulation/Test mode button

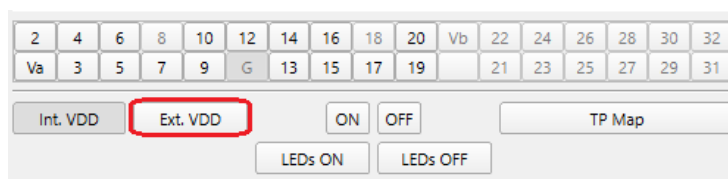

**Figure 7: Internal Power Source for GreenPAK Chip and External Development Platform**

- 3) External power is used to run the chip and external circuit (internal source output is in Hi-Z state).

The configuration steps:

- open internal power switch
- close external power switch
- close all used expansion port switches in the software
- hit Emulation/Test mode button (External power should be applied before this step)

Note that the GreenPAK chip has internal OTP memory which is normally loaded into RAM registers at initialization time. "Emulation mode" will bypass this load, and write the updated version of the project directly into the RAM register inside the GreenPAK chip many times, but after power loss all internal data will be lost. When the GreenPAK chip is already programmed the user can use Emulation mode to load another project and test it on the emulation tool in Emulation mode, in that case emulation data will be cleared. The "Emulation" mode is not necessary for checking programmed parts: in this case the "Test mode" is used.

Expansion connector can be divided by types of connections:

1.  $V_{DD}$
2. GND
3. Data connections

The  $V_{DD}$  connection enables the user to connect/disconnect external and internal power source. This connection meets next requirements:

- External power range: 1.8 - 5.5 V
- High resistance voltage dividers are not recommended

## GreenPAK Advanced Development Platform

The GND connection is connected directly to the Development Board, and cannot be controlled by GreenPAK Designer.

Data connections are the easiest way to connect external lines to the GreenPAK chip. They are software controlled switches. Every line is connected with a 100  $\Omega$  resistor.

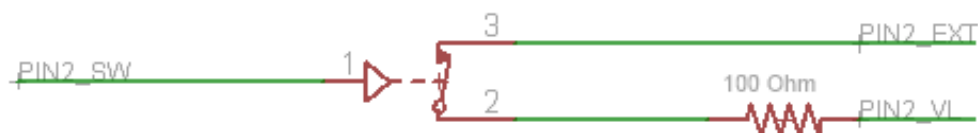


Figure 8: Expansion Connector. Pin with Protection Resistor

### 4.2.8 Pins Connectivity

The GreenPAK Advanced Development Board supports connecting eight types of loads and signal sources. Each source has its own special purpose. The List of available connections for each test point is presented in Table 1.

Table 1: Available Connections for Each Test Point

Pin	Set to V <sub>DD</sub>	Set to GND	Pull-up	Pull-down	Set Configurable Button	LED	Signal Generator	Logic Generator
#	1	2	3	4	5	6	7	8
V <sub>DD</sub>	-	-	-	-	-	-	+	-
TP2	+	+	+	+	+	-	-	+
TP3	+	+	+	+	+	+	-	+
TP4	+	+	+	+	+	+	-	+
TP5	+	+	+	+	+	+	-	+
TP6	+	+	+	+	+	+	+	+
TP7	+	+	+	+	+	+	+	+
TP8	+	+	+	+	+	+	+	+
TP9	+	+	+	+	+	+	-	+
TP10	+	+	+	+	+	+	+	+
TP12	+	+	+	+	+	+	+	+
TP13	+	+	+	+	+	+	+	+
TP14	+	+	+	+	+	+	+	+
TP15	+	+	+	+	+	+	-	+
TP16	+	+	+	+	+	+	-	+
TP17	+	+	+	+	+	+	-	+
TP18	+	+	+	+	+	+	-	+
TP19	+	+	+	+	+	+	-	+
TP20	+	+	+	+	+	+	-	+

## GreenPAK Advanced Development Platform

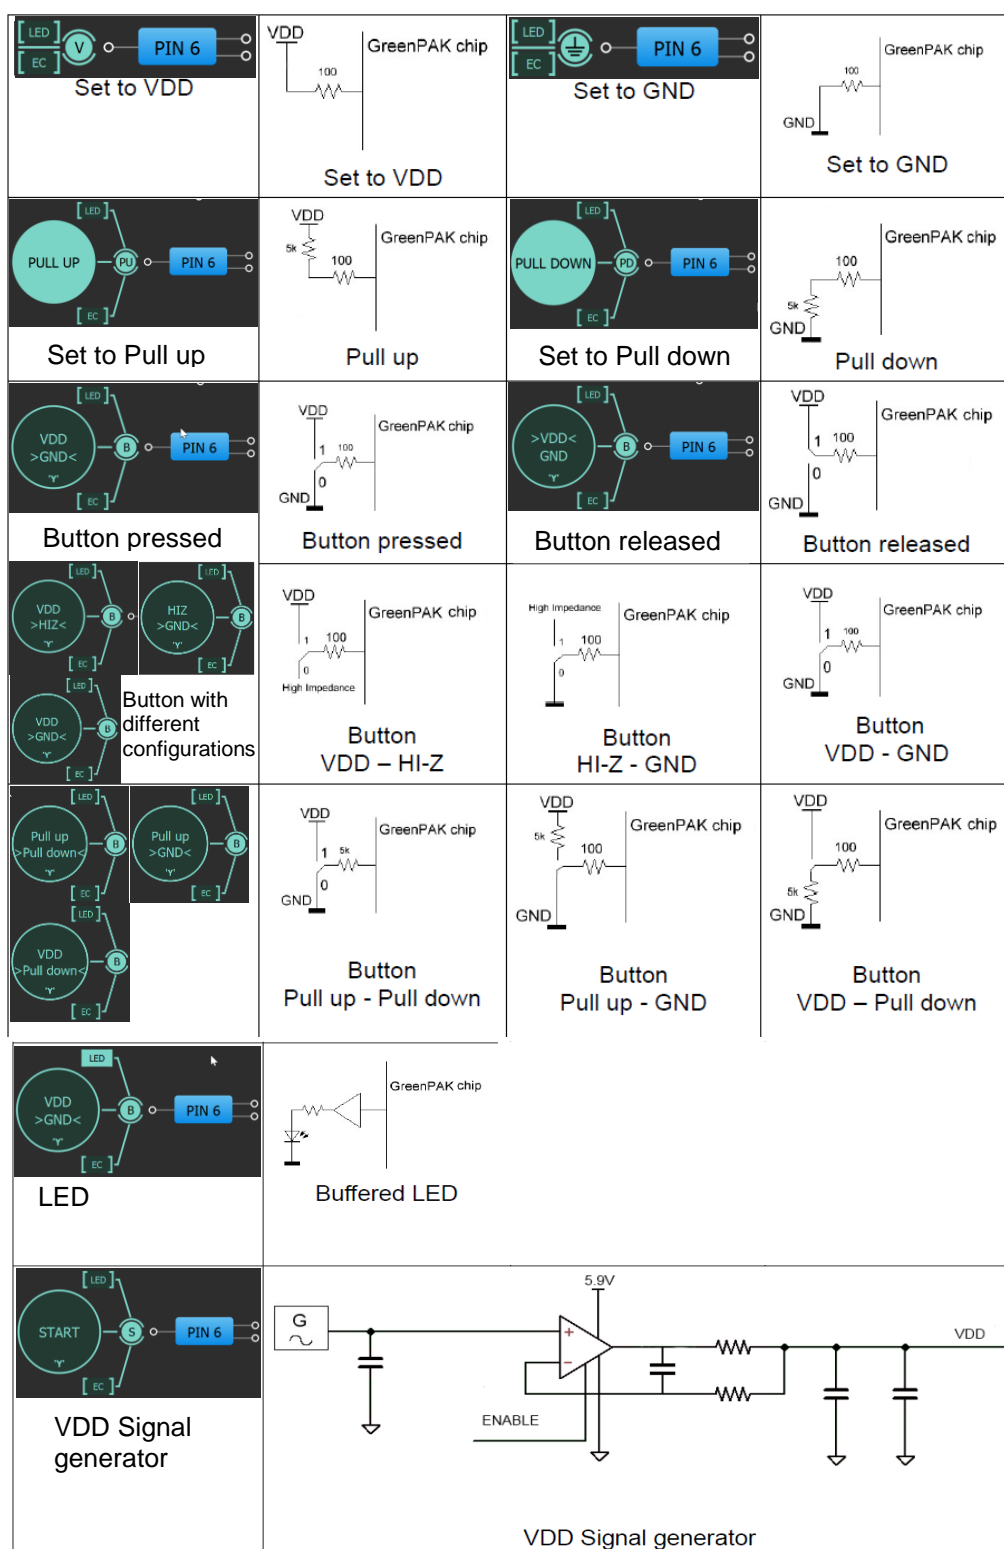


Figure 9: Pin Signal Sources/Loading Schematics

**Note:** V<sub>DD</sub> Signal generator works similar to other Signal generators but has wider output voltage range. It can provide maximum supply level of 5.5 V.

## 5 Example Projects using SLG46721

### 5.1 Project: Counter with Clock Enable

Blocks required:

- 2 digital inputs
- 1 digital output
- 1 Look Up Table with two inputs
- 1 Counter

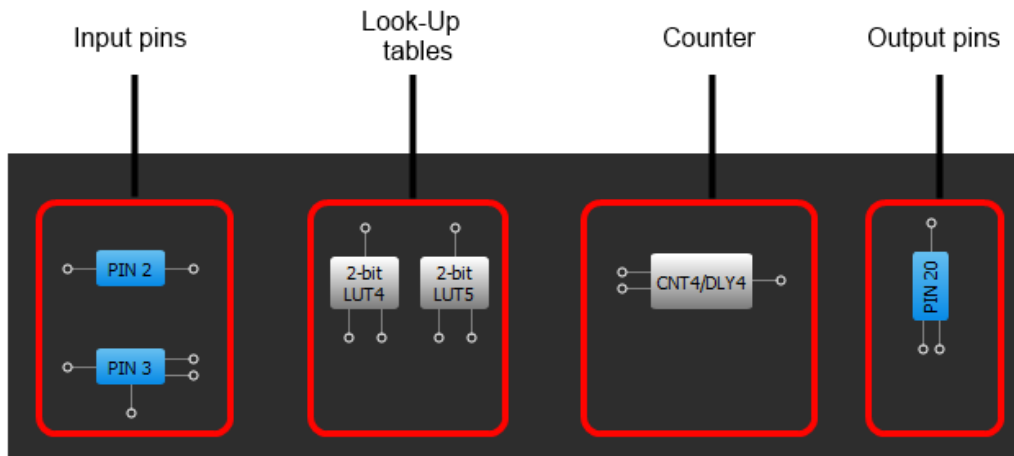


Figure 10: GreenPAK Designer

## GreenPAK Advanced Development Platform

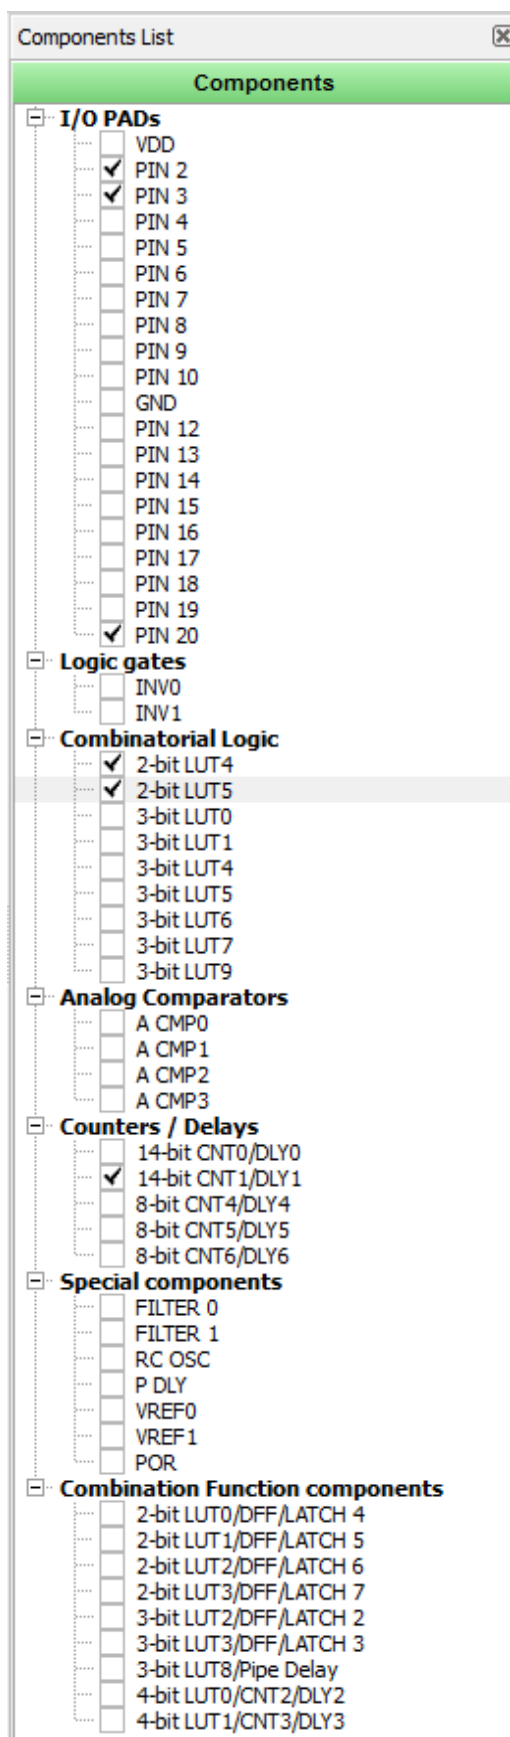


Figure 11: GreenPAK Components List


## GreenPAK Advanced Development Platform

All these components can be found in components list. If there are no components on the work area - make sure this component is enabled.

**Table 2: Pin Configuration for Counter with Clock Enable**

Pin #	Pin Name	Type	Pin Description
1	V <sub>DD</sub>	PWR	Supply Voltage
2	Clock	Digital input	Digital input
3	Enable	Digital Input	Digital Input
11	GND	GND	Ground
20	Counter Output	Push-Pull output	Digital input

All components used in the project are shown in [Figure 10](#), next step is to configure selected blocks. Double click on Pin 20 to open “Properties” panel. Select “1x push pull” from the drop-down menu in Pin 20 properties and hit “Apply” button.

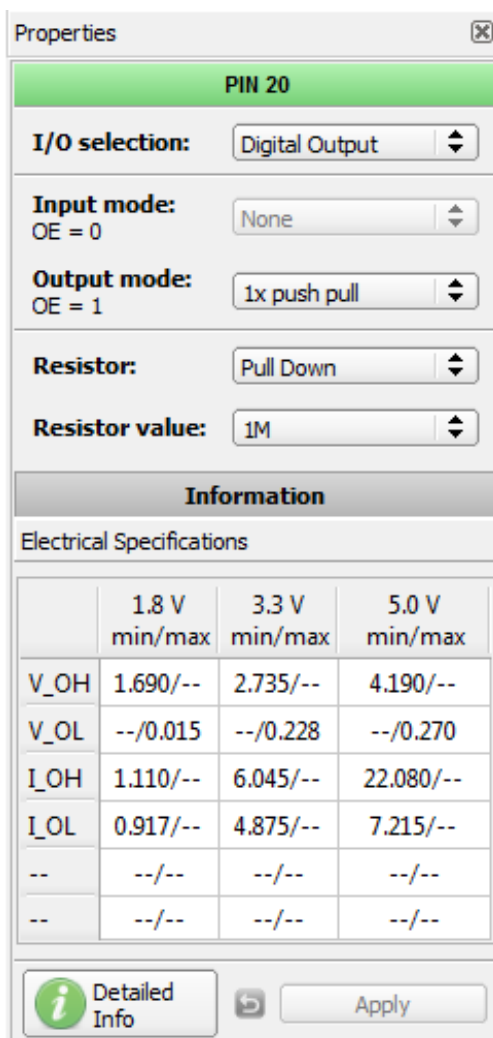

**Properties**

**PIN 20**

**I/O selection:** Digital Output

**Input mode:** None  
OE = 0

**Output mode:** 1x push pull  
OE = 1



**Resistor:** Pull Down

**Resistor value:** 1M

**Information**

Electrical Specifications

	1.8 V min/max	3.3 V min/max	5.0 V min/max
V <sub>OH</sub>	1.690/--	2.735/--	4.190/--
V <sub>OL</sub>	--/0.015	--/0.228	--/0.270
I <sub>OH</sub>	1.110/--	6.045/--	22.080/--
I <sub>OL</sub>	0.917/--	4.875/--	7.215/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--


 Detailed Info  Apply

**Figure 12: Pin 20 Mode**



## GreenPAK Advanced Development Platform

The next component in this design is the Look Up Table. First Look Up Table (LUT4) is used to generate logic “1” only when there are high logic levels on both inputs (AND gate). Select AND gate from “Standard gates” drop-down menu or set table manually. Second Look Up Table (LUT5) is configured as NOR gate. It is used to generate reset signal for counter on Pin 3 falling edge.

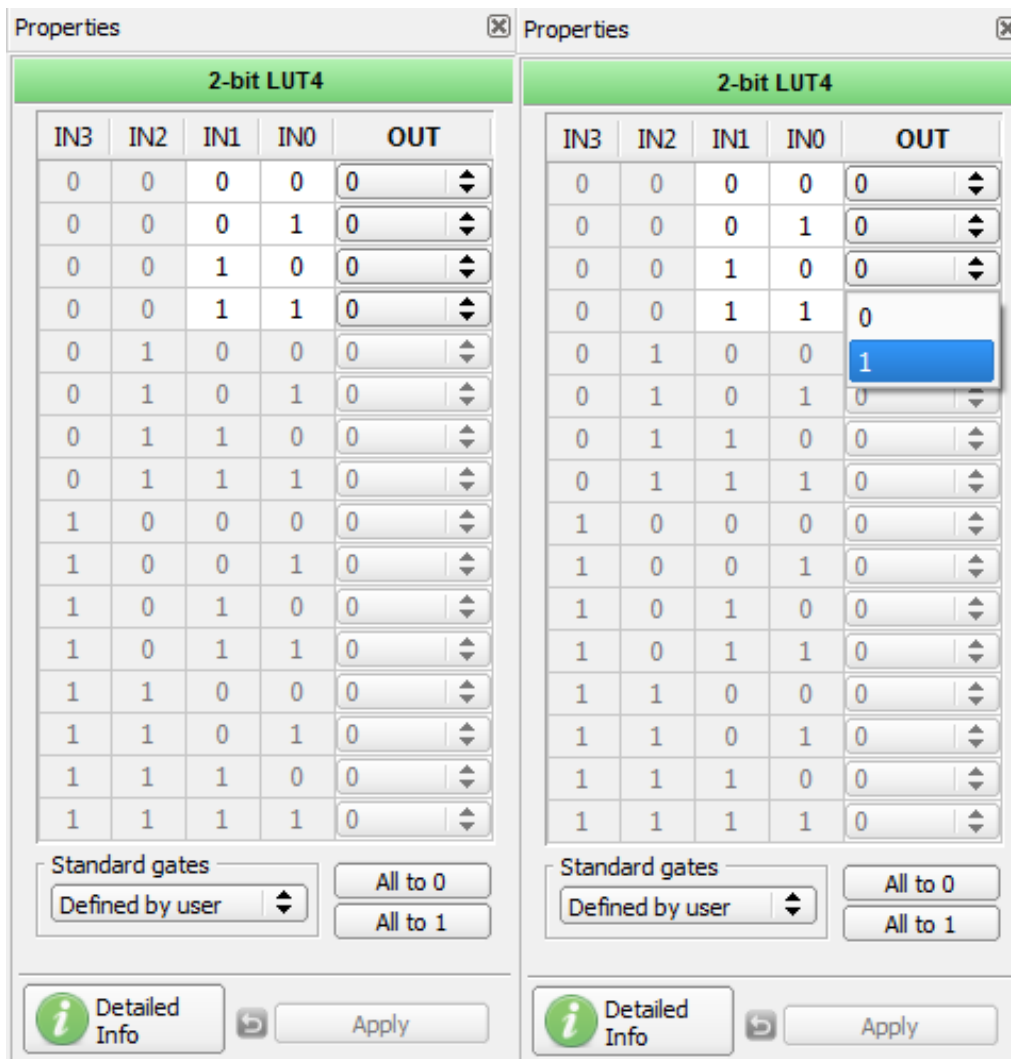

**Properties** [X] **Properties** [X]

**2-bit LUT4**

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	0
0	0	1	0	0
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates: Defined by user [v]  
 All to 0  
 All to 1

Detailed Info [i] Apply

**2-bit LUT4**

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	0
0	0	1	0	0
0	0	1	1	0
0	1	0	0	1
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates: Defined by user [v]  
 All to 0  
 All to 1

Detailed Info [i] Apply

Figure 13: Look Up Table Properties Configured as AND Gate

Properties

**2-bit LUT5**

IN3	IN2	IN1	IN0	OUT
0	0	0	0	1
0	0	0	1	0
0	0	1	0	0
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates  
 NOR

All to 0  
All to 1



 Detailed Info  Apply

Figure 14: Look Up Table Properties Configured as NOR Gate

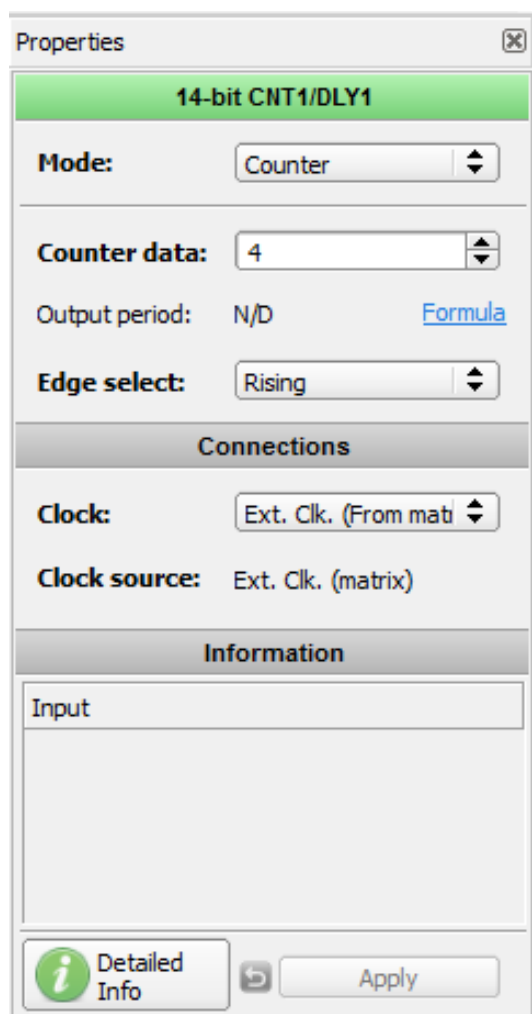



Figure 15: Counter Properties

The final step is to connect used components. Use Wire tool to perform this action. To connect two pins select “Set Wire”  and then click on the first and the second pin of the module or modules that you want to connect. The trace will be automatically routed.


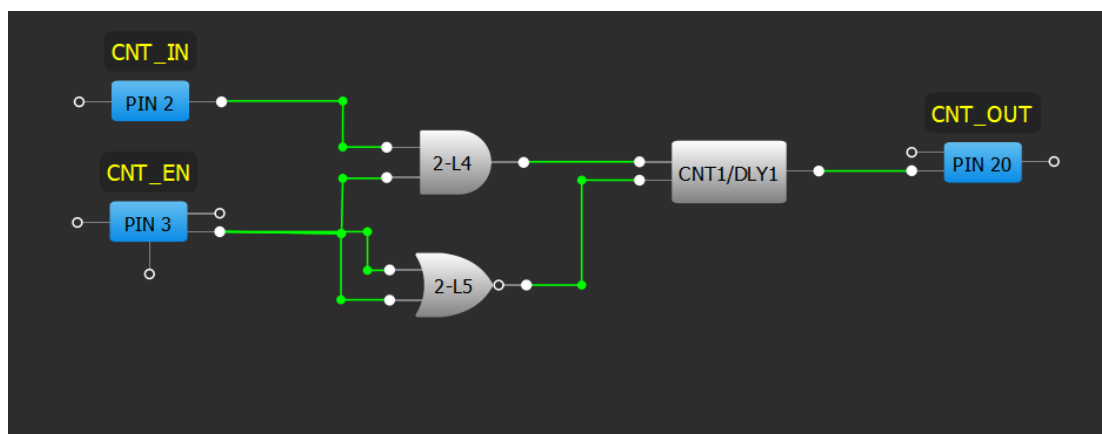


Figure 16: GreenPAK Designer

Figure 16 displays ready project with configured blocks and wire connections.

## GreenPAK Advanced Development Platform


Use the GreenPAK Advanced Development Board to test this project. Connect the GreenPAK Advanced Development Board to the PC and press “Emulation” button. This will load the code of your project to the chip and will enable Test functionality of your Development Board.

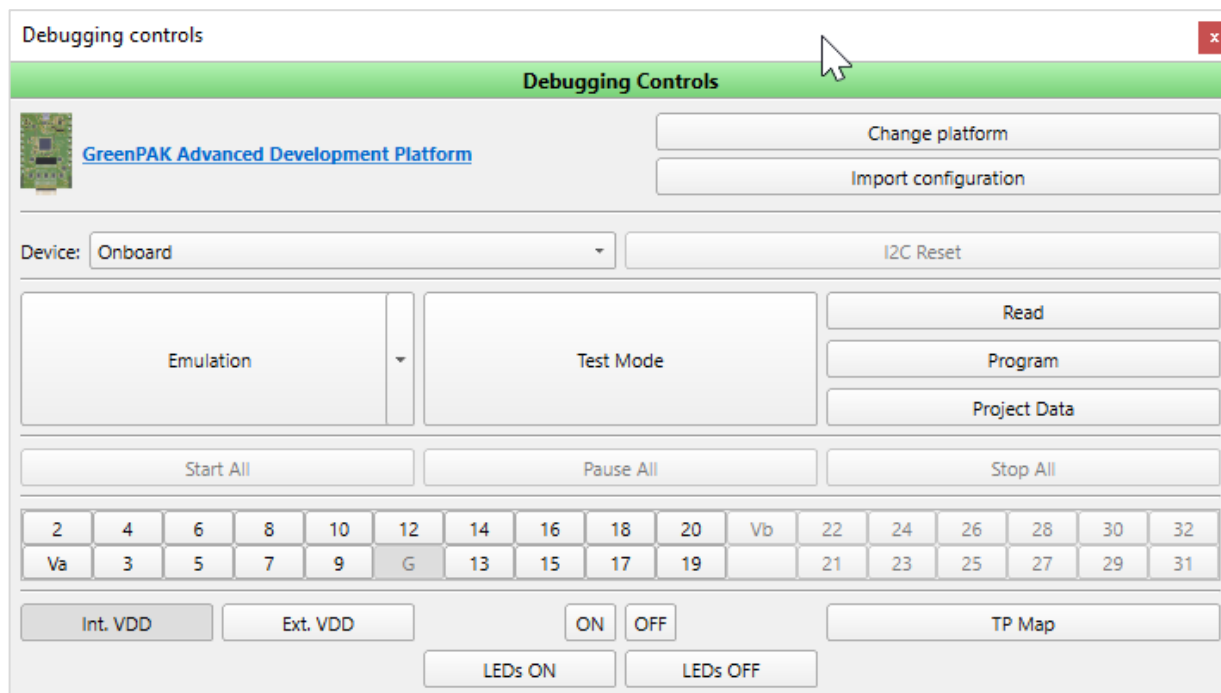

**Figure 17: GreenPAK Designer, Emulation Tool**

To test this project we will use the following tools:

- Signal generator. Signal generator is applied to  $V_{DD}$  pin to power GreenPAK chip
- Logic generator. Logic generator serves as clock source
- Button is a software simulation of the real button. It switches Pin between  $V_{DD}$  and GND signal levels
- Inverted buffered LED
- Buffered LED

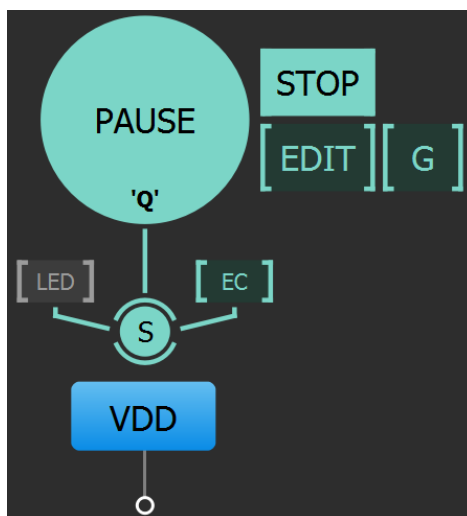

**Figure 18: Signal Generator Connected to  $V_{DD}$  Pin**

Signal generator is presented as a power source for GreenPAK chip. It's configured to output source constant 3.3 V.

Options	
<b>General</b>	
Generator:	PIN1 (VDD) - Constant Voltage L ▾
Shown period:	Auto ▾
Start point:	0.000 ▾ ms ▾
Stop point:	0.100 ▾ ms ▾
Global linkage:	Unlinked ▾
Sync Power Rails:	Disabled ▾
Repeat:	Cyclic ▾
Repeat count:	2 ▾
Pre-start state:	Start point (V0) ▾
Pre-start delay:	0.000 ▾ ms ▾
End state:	Pre-start state ▾
Output type:	High-Z ▾
Pause type:	Last state ▾
<b>Signal Generator Settings</b>	
Type:	Const. voltage ▾
U:	3.299 ▾ V ▾
Tolerance: $\pm 30$ mV	

Figure 19: Signal Generator Settings

The purpose of the logic generator is to provide clock pulses for the Counter block. It is configured for 10 Hz clock source as shown in the [Figure 20](#).

## GreenPAK Advanced Development Platform

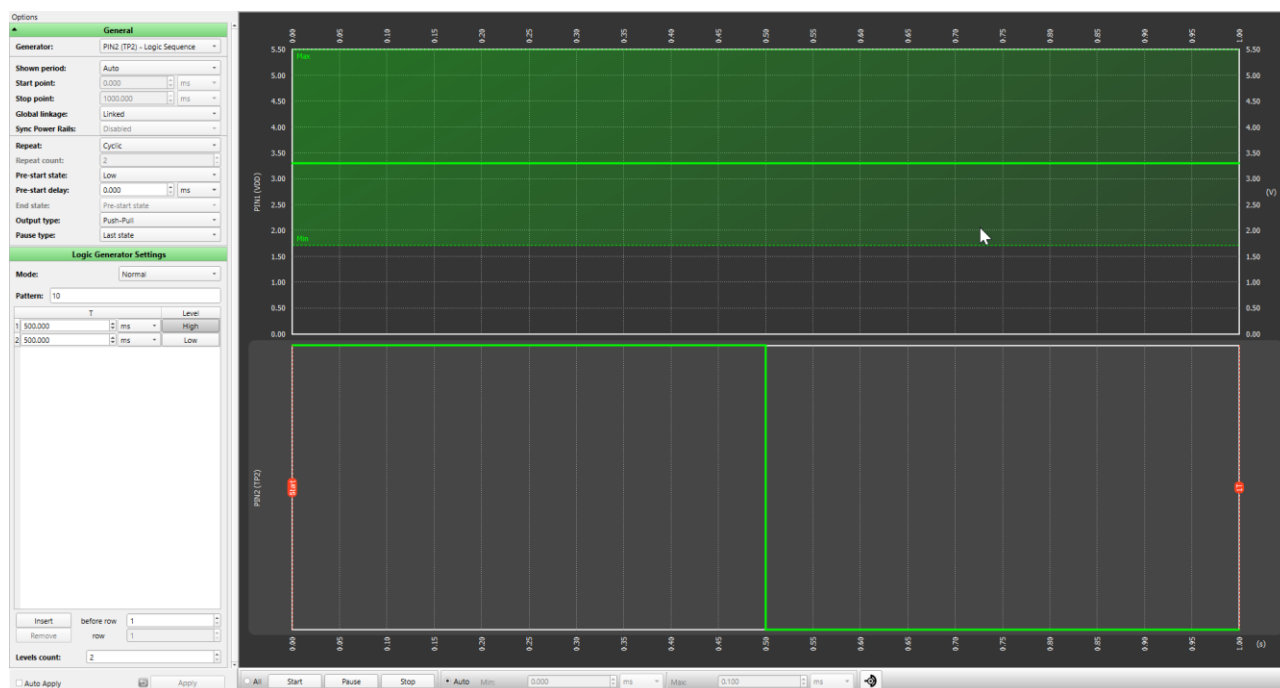


Figure 20: Logic Generator Properties

## Functionality Waveform

Channel 1 (yellow/top) – Logic generator

Channel 2 (light blue/2nd line) – Button, 1 - enable Counter; 0 - disable Counter

Channel 3 (magenta/3rd line) – Counter output

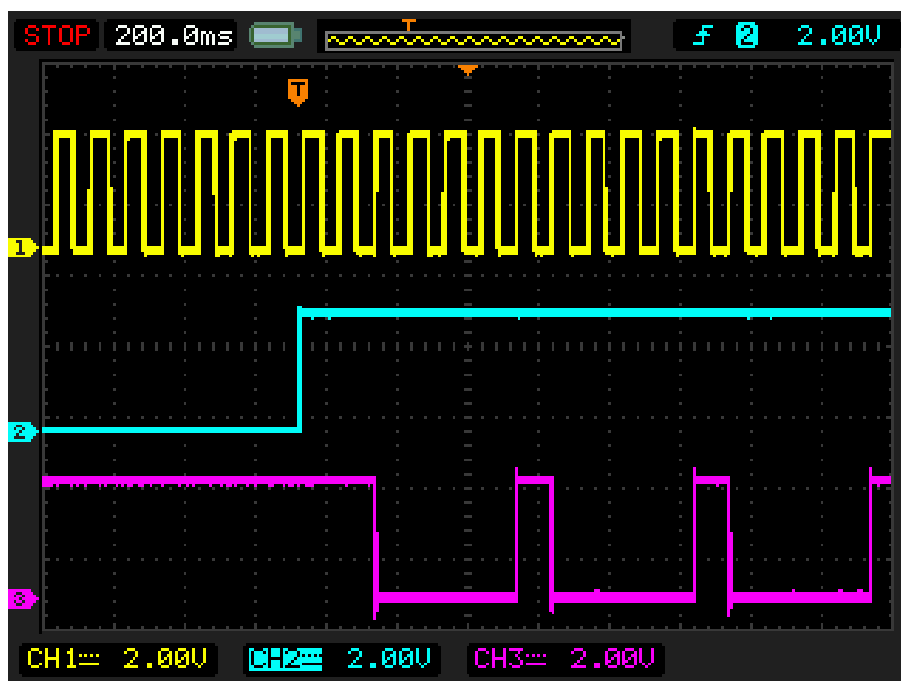


Figure 21: Waveform, Triggered on Button Pressed

Channel 1 (yellow/top) – Logic generator

Channel 2 (light blue/2nd line) – Button, 1 - enable Counter; 0 - disable Counter

Channel 3 (magenta/3rd line) – Counter output

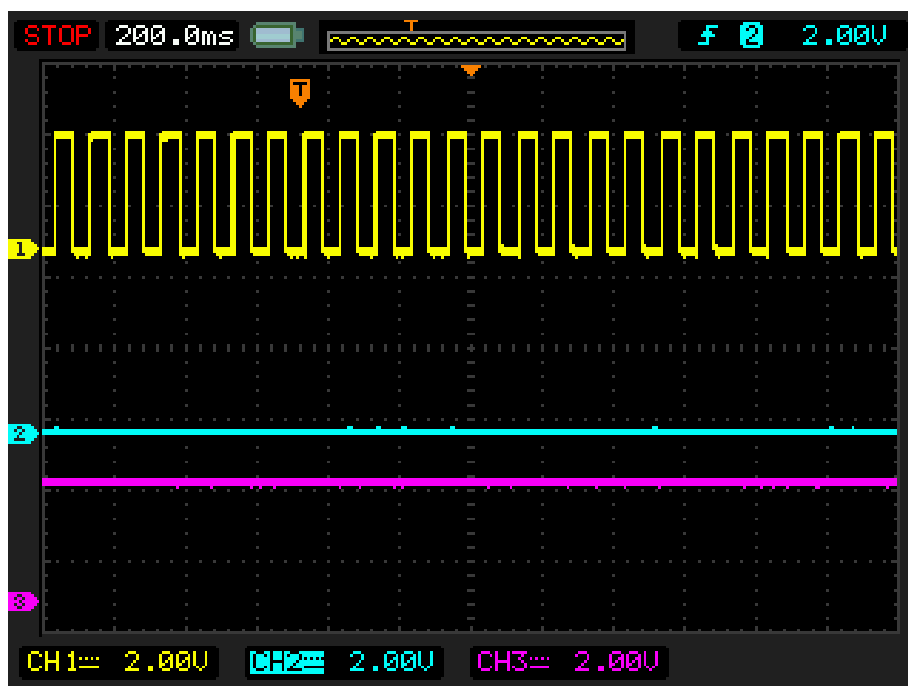


Figure 22: Waveform, no Triggered on Button Released

Channel 1 (yellow/top) – Logic generator

Channel 2 (light blue/2nd line) – Button, 1 - enable Counter; 0 - disable Counter

Channel 3 (magenta/3rd line) – Counter output

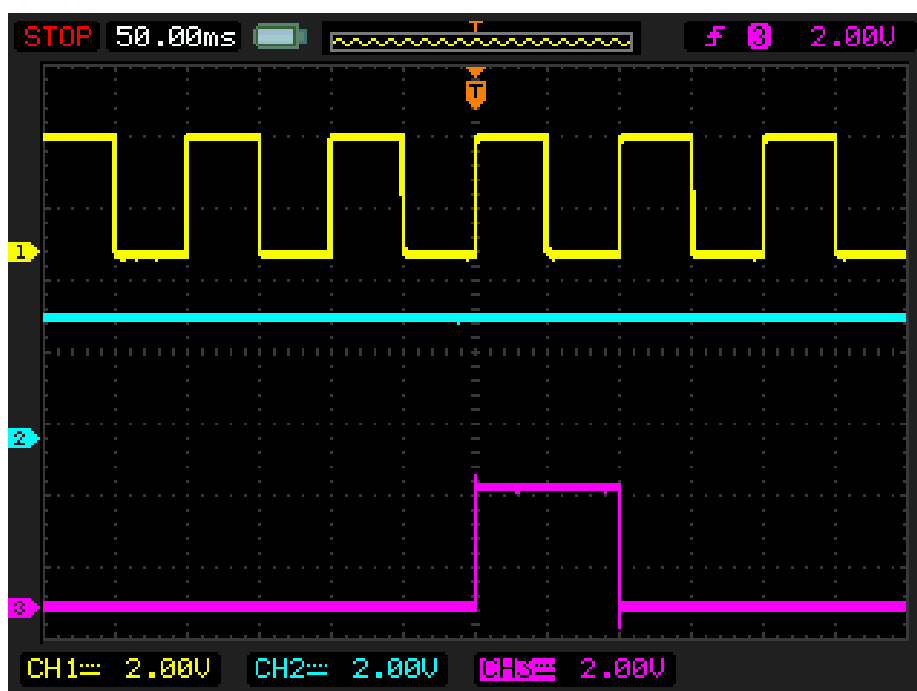


Figure 23: Waveform of the Pulse Width of the Logic Generator and Count End Signal

As shown in [Figure 22](#) and [Figure 23](#) Counter works only when the button is pressed.

## GreenPAK Advanced Development Platform

### 5.2 Project: LED String with Direction

For this project we will need:

- Analog pin for input data
- Digital pin for PWM output
- ADC block
- PWM block

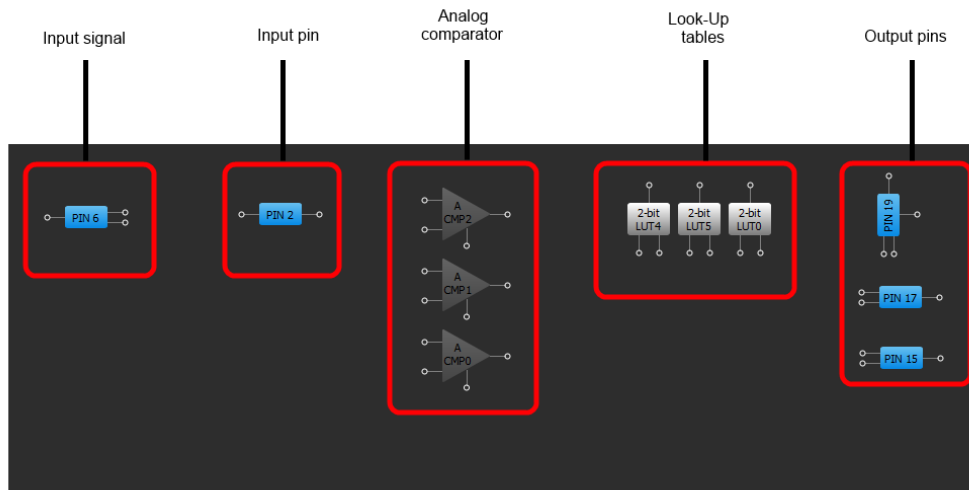


Figure 24: Used Blocks for Current Project

For testing this project, the Signal generator with sine waveform is used.

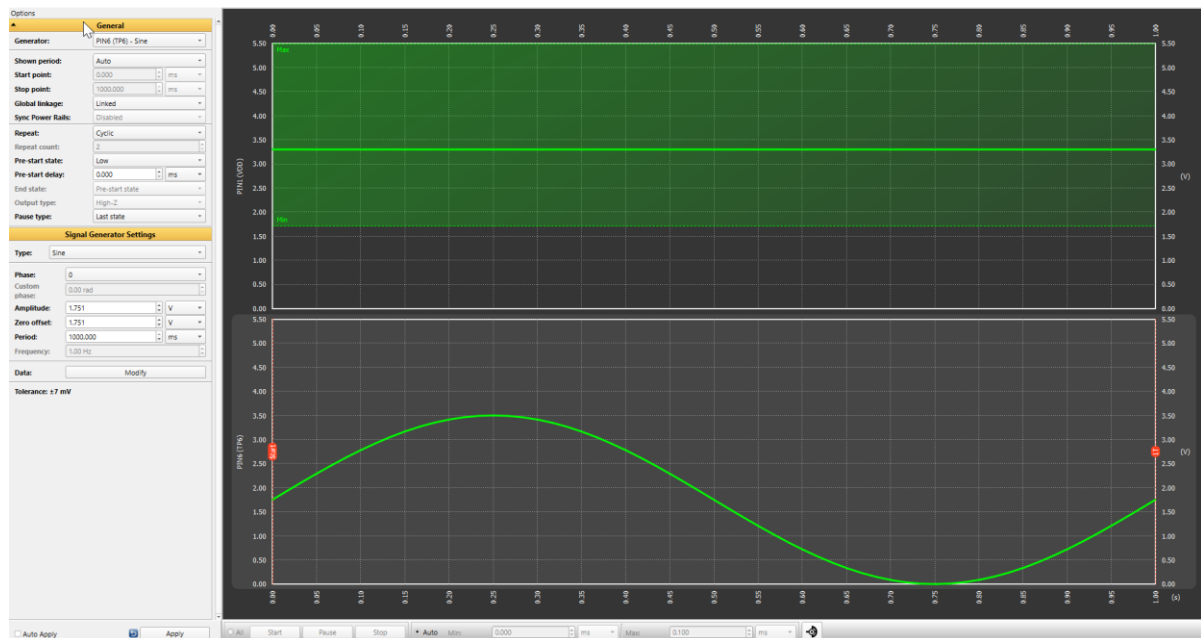


Figure 25: Sine Waveform Generated with Signal Generator



## GreenPAK Advanced Development Platform

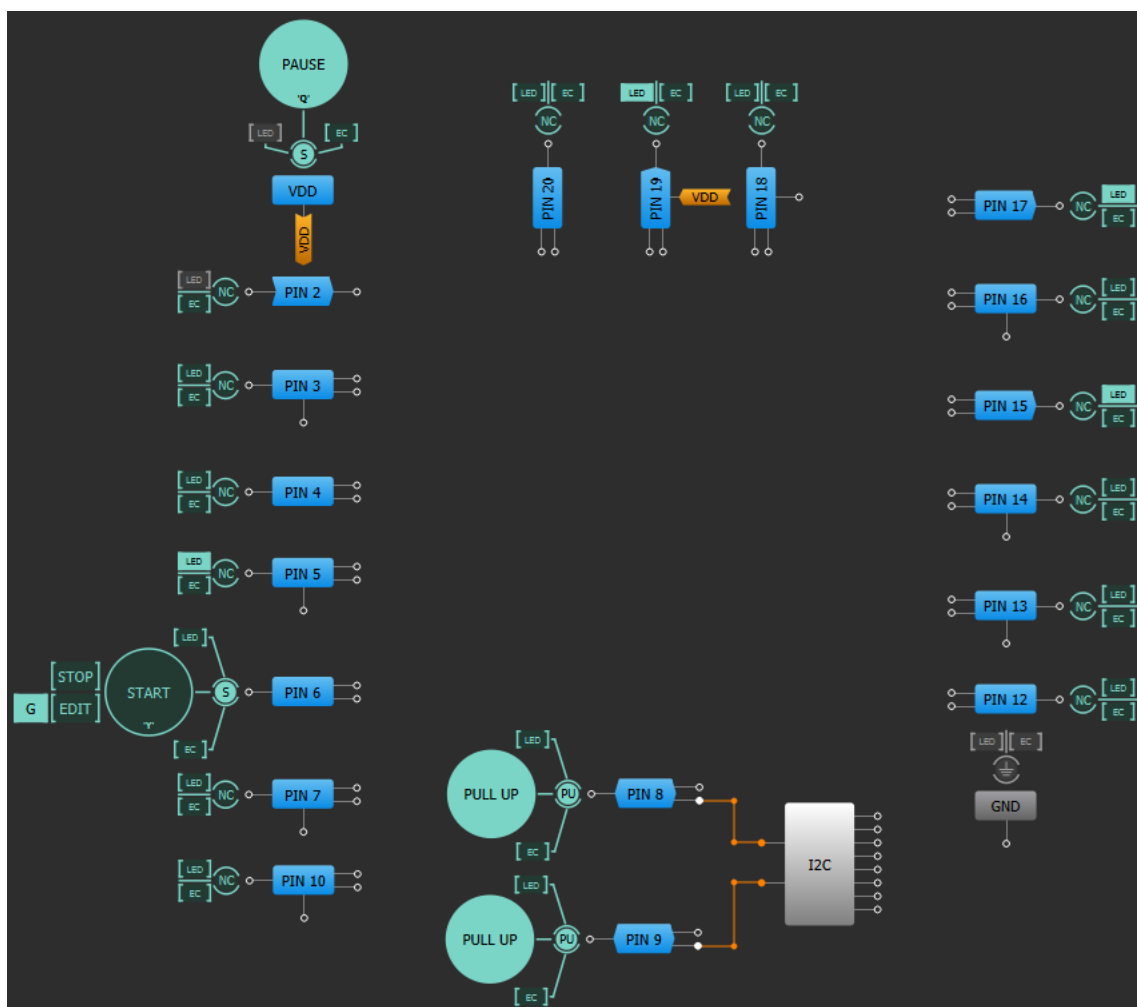


Figure 26: Emulation Window, with Buffered LED and Signal Generator

Table 3: Pin Configuration for LED String with Direction

Pin #	Pin Name	Type	Pin Description
1	V <sub>DD</sub>	PWR	Supply Voltage
2	DIRECTION	Input	Controls direction
6	SIGNAL	Input	Analog Input
11	GND	GND	Ground
15	LED_A	Output	LED
17	LED_B	Output	LED
19	LED_C	Output	LED

## GreenPAK Advanced Development Platform

Properties

PIN 2

I/O selection: Digital Input

Input mode:  
OE = 0
Digital in without Sc

Output mode:  
OE = 1
None

Resistor: Pull Down

Resistor value: 1M

Information

Electrical Specifications

	1.8 V min/max	3.3 V min/max	5.0 V min/max
V <sub>IH</sub>	1.100/--	1.780/--	2.640/--
V <sub>IL</sub>	--/0.690	--/1.210	--/1.840
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--

*i* Detailed Info

↩ Apply

Figure 27: Pin Properties

Pin 6 is configured as analog input-output. This pin is used for generating SINE waveform.

## GreenPAK Advanced Development Platform

Properties

PIN 6

I/O selection: Analog Input/Output

Input mode: Analog input  
OE = 0

Output mode: Analog output  
OE = 1

Resistor: Pull Down

Resistor value: 1M

Information

Electrical Specifications

	1.8 V min/max	3.3 V min/max	5.0 V min/max
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--

Detailed Info

Apply

Properties

PIN 19

I/O selection: Digital Output

Input mode: None  
OE = 0

Output mode: 1x push pull  
OE = 1

Resistor: Pull Down

Resistor value: 1M

Information

Electrical Specifications

	1.8 V min/max	3.3 V min/max	5.0 V min/max
V_OH	1.690/--	2.735/--	4.190/--
V_OL	--/0.015	--/0.228	--/0.270
I_OH	1.110/--	6.045/--	22.080/--
I_OL	0.917/--	4.875/--	7.215/--
--	--/--	--/--	--/--
--	--/--	--/--	--/--

Detailed Info

Apply

Figure 28: Pin Properties

Properties

2-bit LUT4

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	1
0	0	1	0	1
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates

XOR

Regular shape

All to 0

All to 1

Invert

Detailed Info

Apply

Properties

2-bit LUT5

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	1
0	0	1	0	1
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates

XOR

Regular shape

All to 0

All to 1

Invert

Detailed Info

Apply

Properties

2-bit LUT0/DF/LATCH4

Type: LUT

IN3	IN2	IN1	IN0	OUT
0	0	0	0	0
0	0	0	1	1
0	0	1	0	1
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	0
1	1	0	0	0
1	1	0	1	0
1	1	1	0	0
1	1	1	1	0

Standard gates

XOR

Regular shape

All to 0

All to 1

Invert

Detailed Info

Apply

Figure 29: Look Up Tables Properties Configured as XOR Gate

## GreenPAK Advanced Development Platform

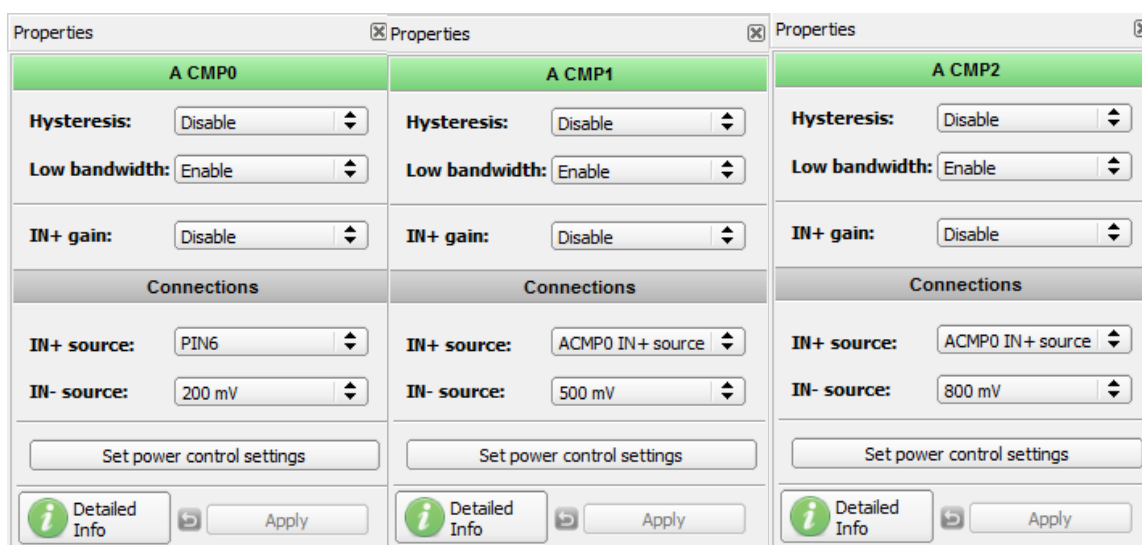


Figure 30: ACMP Properties

Pins 15, 17, 19 - configured as output with Push-Pull 1x. They are used for testing purpose.

All comparators positive inputs are connected to the Pin 6 analog input. When the voltage on the positive input is higher than the voltage on the negative input, comparator will set logic “1” on its output. ACMP0 positive input is 200 mV, ACMP1 is 500 mV, and ACMP2 is 800 mV, creating 4 states:

- All LEDs are off
- LED\_A is on
- LED\_A and LED\_B are on
- All LEDs are on

If Pin 2 logic level is set to “1”, these states will transform into:

- All LEDs are on
- LED\_A and LED\_B are on
- LED\_A is on
- All LEDs are off

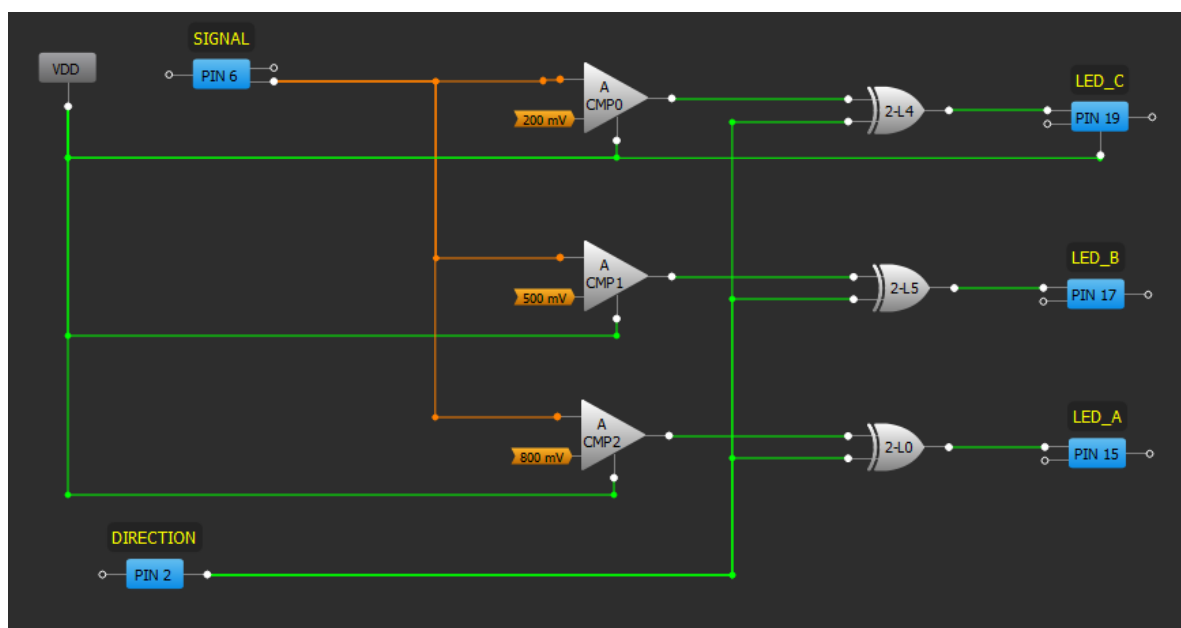


Figure 31: GreenPAK Designer

## GreenPAK Advanced Development Platform

### Functionality Waveform

Channel 1 (yellow/top) – Direction

Channel 2 (light blue /2nd line) – LED\_A

Channel 3 (magenta/3rd line) – LED\_B

Channel 4 (blue / 4th line) – LED\_C

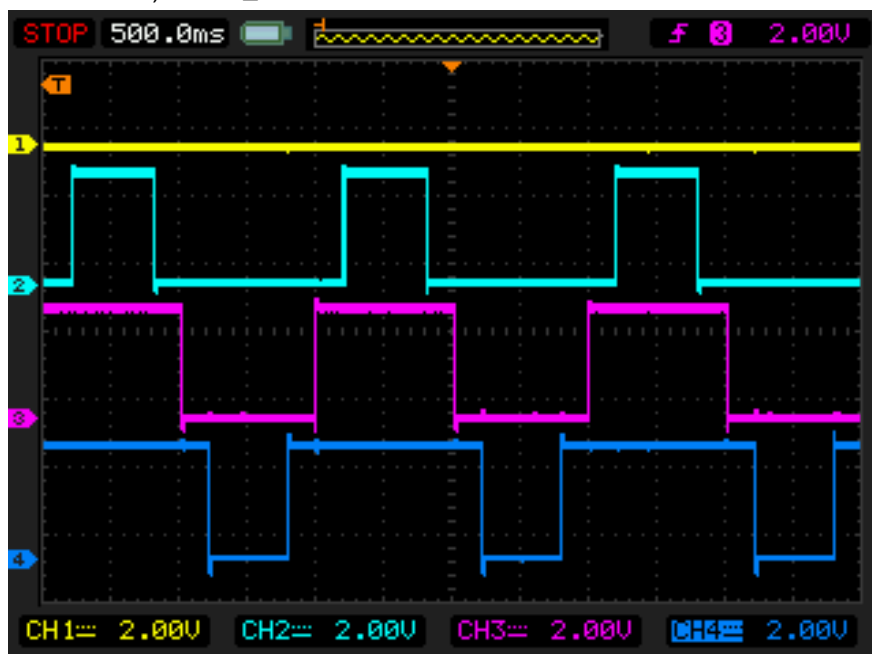


Figure 32: LED Output with Direction (Pin 2) Low

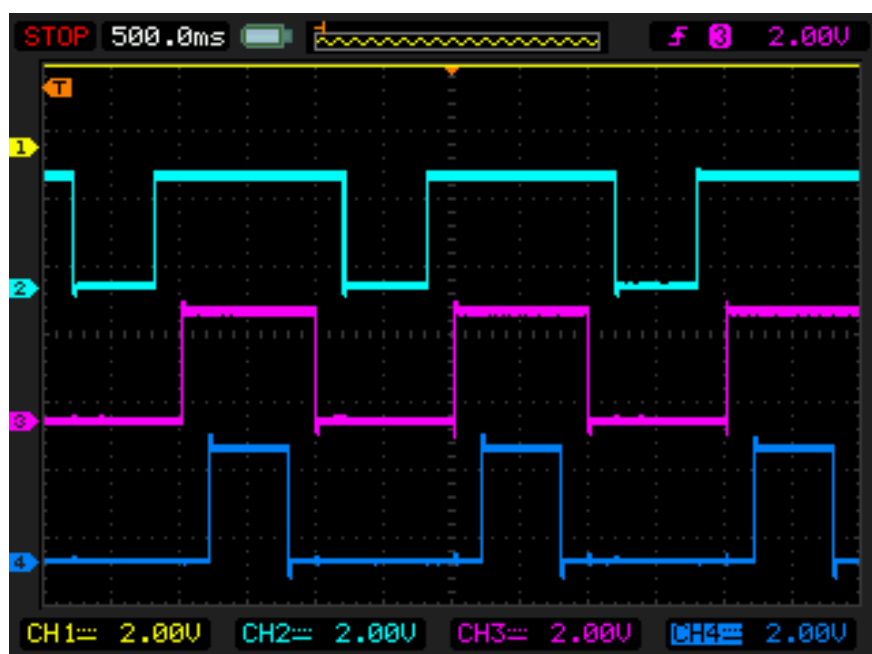


Figure 33: LED Output with Direction (Pin 2) High

The PWM duty cycle rises up to 100% when analog signal is close to 1 V.

## **6 Conclusion**

This Development Platform is a truly versatile tool. It allows the designer to create a custom project within minutes, without using additional devices (except oscilloscope).

For more information please visit our website <https://www.dialog-semiconductor.com/>.

## Appendix A Electrical Specification


Mode	Parameter	Min	Typ	Max	Units
General	Test Point Capacitance	19.5	--	--	pF
	Input Leakage Current	--	--	14	nA
	Max Current through Protection Diode to V <sub>DD</sub>	--	--	200	mA
	Ripple & Noise	20	--	40	mVp-p
V <sub>DD</sub> Power Supply Generator (V <sub>DD</sub> )	Voltage Range	1.5	--	5.5	V
	V <sub>DD</sub> Max Current	--	--	70	mA
	Voltage Output Total Error	--	±30	--	mV
Logic generator	Number of Channels (TP2 to TP10, TP12 to TP20)	--	--	18	--
	Output Voltage High	--	V <sub>DD</sub>	--	V
	Output Voltage Low	0.4	--	0.8	V
	Max Current per TP	--	--	30	mA
	Max Total Current per TPs	--	--	250	mA
	Rise Time	4	--	75	ns
	Fall Time	4	--	60	ns
	Full-Scale Settling Time (0 to 5.5 V)	30	40	75	ns
	Max Output Frequency	0.152	--	5000	Hz
	Max Number of Points	--	--	180	--
	Sample Rate	--	10	--	kSPS
Signal Generator	Number of Channels (TP3 to TP10, TP12 to TP18)	--	--	15	--
	Output Voltage Range	0	--	5.5	V
	DC Output Impedance	--	0.5	--	Ω
	Short-Circuit Current	--	--	30	mA
	Min Output Voltage	--	--	19	mV
	Output Total Error	--	--	±7	mV
	Output Frequency (SINE)	0.01	--	2500	Hz
	Max Number of Points	--	--	60	--
	Sample Rate	--	10	--	kSPS
Virtual Button, V <sub>DD</sub> /GND, Pull-Up/Down Driver	Output Level High	--	V <sub>DD</sub>	--	--
	Output Level Low	--	GND	--	--
	Strong Drive (V <sub>DD</sub> /GND) Resistance	--	100	--	Ω
	Pull-Up/Down Resistance	3.5	5.6	8.5	kΩ
Expansion Connector Switch	Max Voltage	--	--	5.5	V
	Continuous Current through Any Terminal	--	--	±30	mA
	Switch On-Resistance	--	20	40	Ω
	External V <sub>DD</sub> Switch On-Resistance	--	10	20	Ω
	On Leakage Current	-20	--	20	nA

---

**GreenPAK Advanced Development Platform**

Mode	Parameter	Min	Typ	Max	Units
Expansion Connector Switch	Off Leakage Current	-10	--	10	nA
	Bandwidth	--	--	10	MHz
	Max V <sub>DD</sub> Supply from External Source	--	--	5.66	V



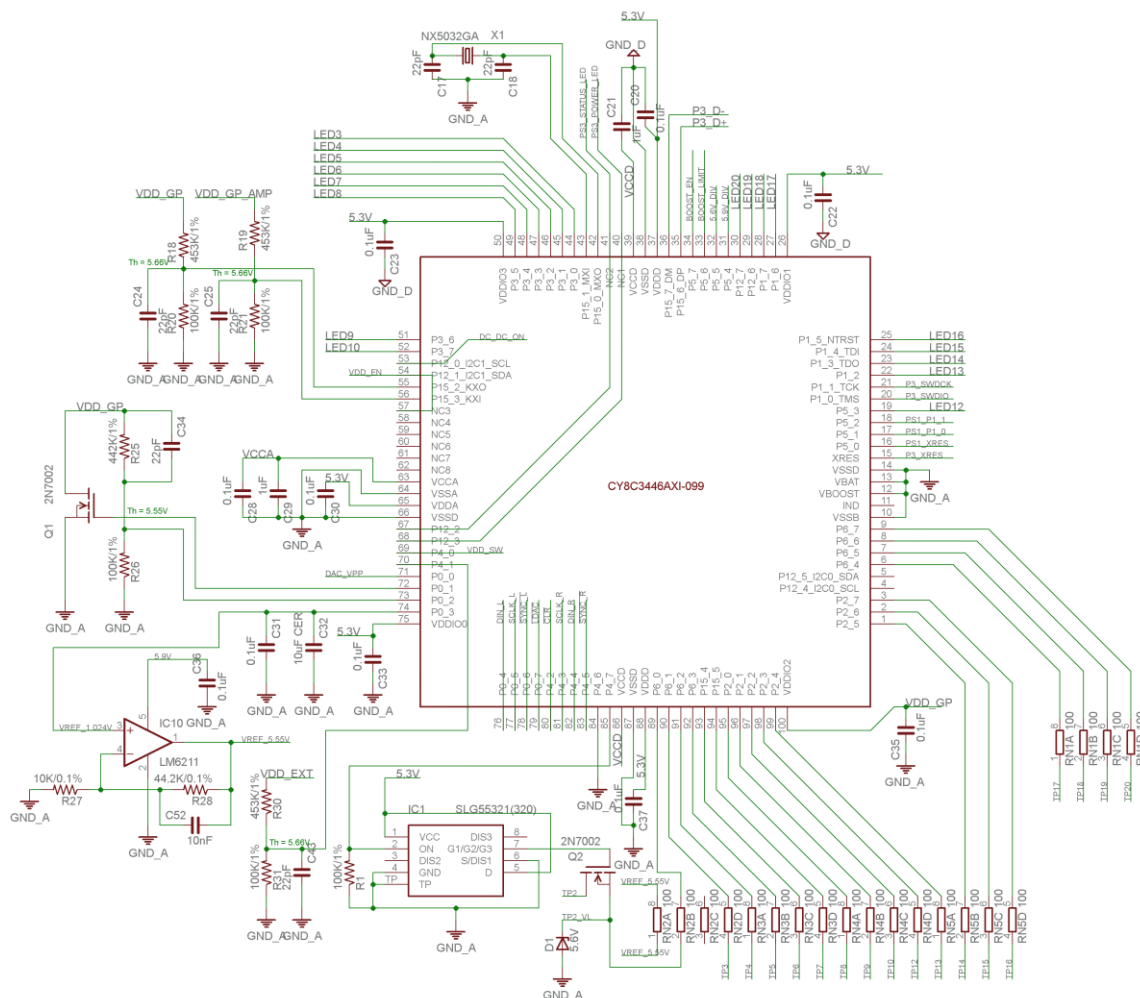

The schematic diagram illustrates the testpoints and connectors for the STM32F405RG. It shows the following connections:

- SV1:** A 20-pin connector. Pins 1-10 are connected to VDD\_GP. Pins 11-20 are connected to TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10, and TP11 respectively. Pin 20 is also connected to GND\_A.
- SV2:** A 6-pin connector. Pins 1-6 are connected to TP2, TP3, TP4, TP5, TP6, and TP7 respectively. Pin 6 is also connected to GND\_A.
- SV3:** A 6-pin connector. Pins 1-6 are connected to TP12, TP13, TP14, TP15, TP16, and TP17 respectively. Pin 6 is also connected to GND\_A.
- SV4:** A 20-pin connector. Pins 1-10 are connected to VDD\_EXT. Pins 11-20 are connected to TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10, and TP11 respectively. Pin 20 is also connected to GND\_A.

The microcontroller pins are labeled with their functions: VDD\_GP, TP2, TP3, TP4, TP5, TP6, TP7, TP8, TP9, TP10, TP12, TP13, TP14, TP15, TP16, TP17, TP18, TP19, TP20, GND\_A, VDD\_EXT, and GND\_A.

© 2020 Dialog Semiconductor

## GreenPAK Advanced Development Platform

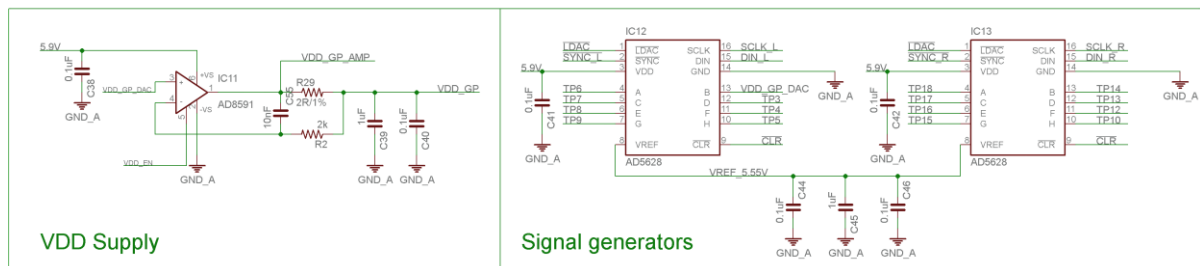


Figure 37: Signal Generator

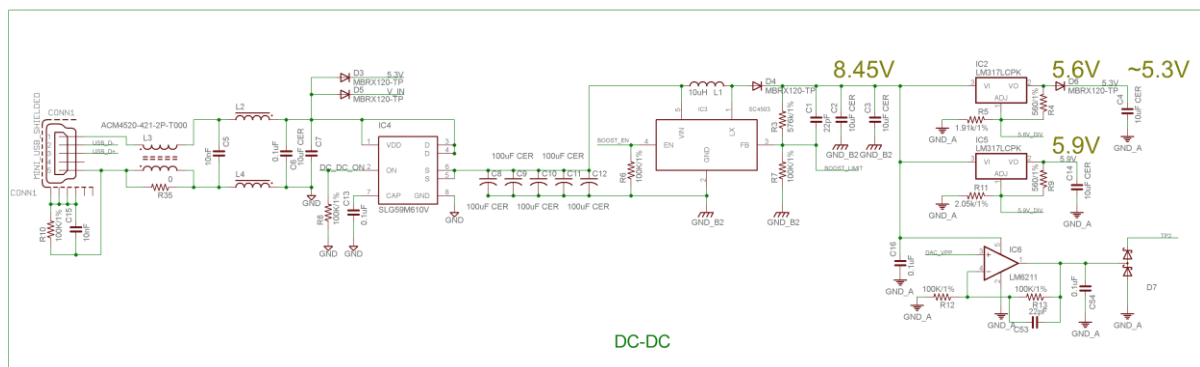


Figure 38: Boost Converter USB Interface

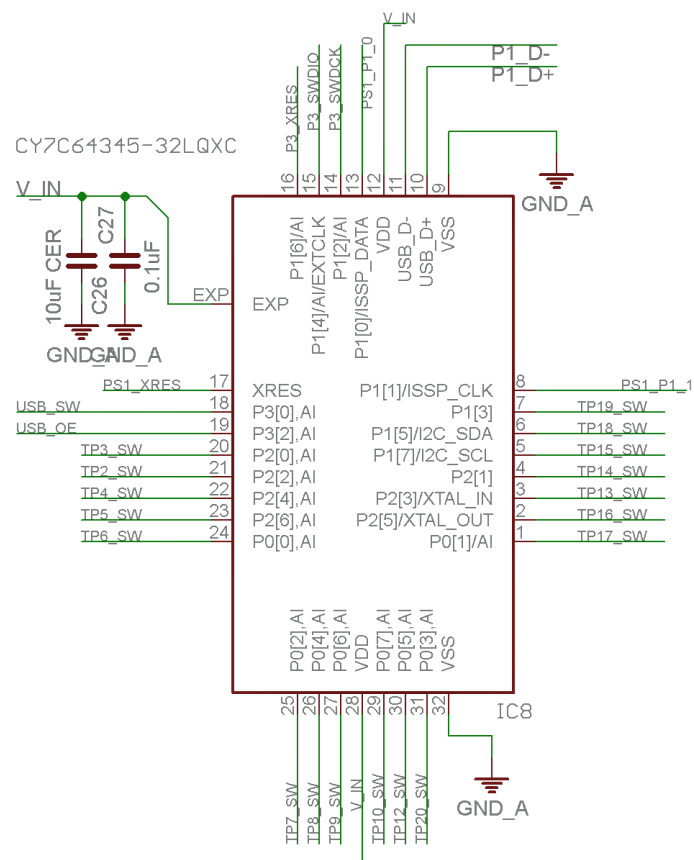


Figure 39: Port Extender

GreenPAK Advanced Development Platform

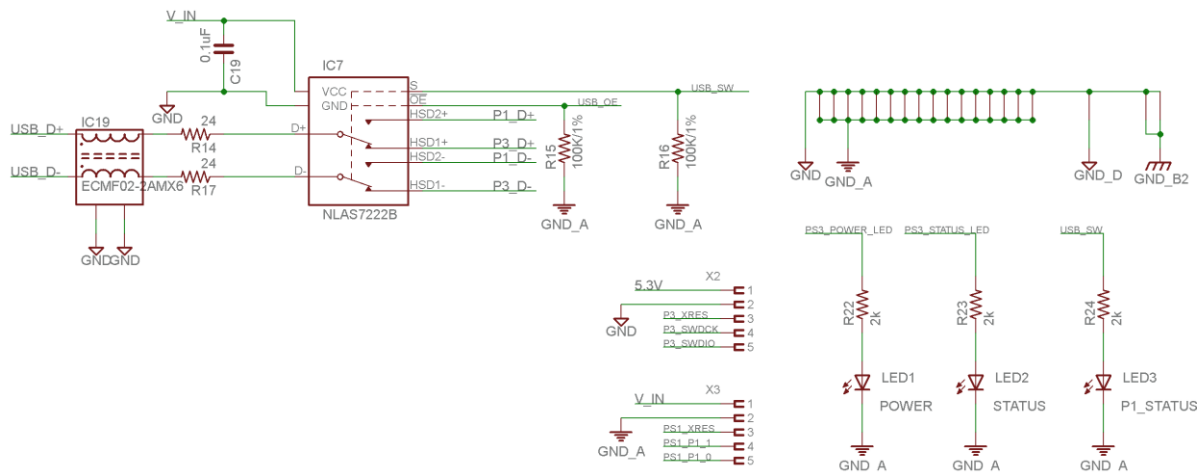


Figure 40: USB Protection

## Appendix C BOM

#	Items	Package	Quantity per Development Board	Symbol
1	N/A	TQFN20	1	
2	MCU	TQFN-100	1	IC9
3	CY7C64345-32LQXC	QFN-32	1	IC8
4	AD5628BRUZ-2	16TSSOP	2	IC12, IC13
5	NLAS7222BMUTBG	10-UFQFN	1	IC7
6	MAX4712EUE+	16TSSOP	5	IC14-IC18
7	BAS21SLT1G	SOT-23-3	19	D7-D25
8	GM1JS35200AE	0603 (1608 Metric)	1	LED1
9	LB Q39E-N1P1-35-1	0603 (1608 Metric)	1	LED2
10	LW Q38G-Q1S1-3K6L-1	0603 (1608 Metric)	1	LED3
11	LTST-C193KGKT-5A	0603 (1608 Metric)	17	LED4-LED20
12	NX5032-GA -25.0MHz-LN-CD-1	2-SMD	1	X1
13	SC4503TSKTRT	TSOT23-5	1	IC3
14	USB-M26FTR		1	CONN1
15	2N7002	SOT-23-3	2	Q1, Q2
16	MBRX120-TP	SOD-123	4	D3-D6
17	SLG59M610V	TDFN-8	1	IC4
18	AD8591	SOT-23-6	1	IC11
19	ECMF02 -2AMX6	6-UFQFN	1	IC19
20	NRS4018T100MDGJ	4.00x4.00x1.8mm	1	L1
21	BLM18KG260TN1	0603 (1608 Metric)	2	L2, L4
22	RESISTOR 10k OHM 1/10W 1%	0603 (1608 Metric)	1	R27
23	RESISTOR 44.2k OHM 1/10W 1%	0603 (1608 Metric)	1	R28
24	ACM4520-421-2P- T000	4.70x4.50mm	1	L3
25	GRM31CF50J107ZE0 1L	1206 (3216 Metric)	5	C8-C12
26	LM317LCPK	SOT89-3	2	IC2, IC5
27	LM6211MF/NOPB	SOT23-5	2	IC6, IC10
28	GRM155F51C104ZA0 1D	0402 (1005 Metric)	28	C6, C13, C16, C19, C20, C22, C23, C27, C28, C30, C31, C33, C35, C36, C37, C38, C40, C41, C42, C44, C46, C47, C48, C49, C50, C51, C54, Csoc
29	EMK316BJ106KL-T	1206 (3216 Metric)	7	C2, C3, C4, C7, C14, C26, C32

## GreenPAK Advanced Development Platform

#	Items	Package	Quantity per Development Board	Symbol
30	C2012X7R1C105K/1.25	0805 (2012 Metric)	4	C21, C29, C39, C45
31	CC0402KRX7R9BB103	0402 (1005 Metric)	4	C5, C15, C52, C55
32	CC0402JRNPO9BN220	0402 (1005 Metric)	8	C1, C17, C18, C24, C25, C34, C43, C53
33	RESISTOR 442k 1/16W 1%	0402 (1005 Metric)	1	R25
34	RESISTOR 100k 1/16W 1%	0402 (1005 Metric)	14	R1, R6, R7, R8, R10, R12, R13, R15, R16, R20, R21, R26, R31, R32
35	RESISTOR 453k 1/16W 1%	0402 (1005 Metric)	3	R18, R19, R30
36	RESISTOR 576k 1/16W 1%	0402 (1005 Metric)	1	R3
37	RESISTOR 560 1/16W 1%	0402 (1005 Metric)	2	R4, R9
38	RESISTOR 2.05 1/16W 1%	0402 (1005 Metric)	1	R11
39	RESISTOR 1.91k 1/16W 1%	0402 (1005 Metric)	1	R5
40	RESISTOR 2k 1/16W	0402 (1005 Metric)	6	R2, R22, R23, R24, R33, R34
41	RESISTOR 24 $\Omega$	0402 (1005 Metric)	2	R14, R17
42	RESISTOR 2 $\Omega$	0805 (2012 Metric)	1	R29
43	YC164-JR-072KL	1206 (3216 Metric)	4	RN6, RN7, RN8, RN9
44	YC164-JR-07100RL	1206 (3216 Metric)	5	RN1, RN2, RN3, RN4, RN5
45	5000_		1	V <sub>DD</sub>
46	5001_		1	GND
47	5002_		18	TP2-TP10, TP12-TP20
48	SJ61A6		5	
49	TSW-110-08-L-D-RA	0.100" (2.54mm)	2	SV4, SVsoc
50	SSQ-110-02-T-D-RA	0.100" (2.54mm)	1	SV1
51	961106-6404-AR	0.100" (2.54mm)	2	SV2, SV3
52	3021009-06		1	
53	RESISTOR 0 $\Omega$	1206 (3216 Metric)	1	R35
54	SLG55321	TDFN-8	1	IC1
55	BZV55C5V6-TP	SOD-80C	1	D1

## Revision History

Revision	Date	Description
2.2	21-Feb-2020	Updated according to Dialog's Writing Guideline

## GreenPAK Advanced Development Platform

### Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

### Disclaimer

Unless otherwise agreed in writing, the Dialog Semiconductor products (and any associated software) referred to in this document are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of a Dialog Semiconductor product (or associated software) can reasonably be expected to result in personal injury, death or severe property or environmental damage. Dialog Semiconductor and its suppliers accept no liability for inclusion and/or use of Dialog Semiconductor products (and any associated software) in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, express or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications. Notwithstanding the foregoing, for any automotive grade version of the device, Dialog Semiconductor reserves the right to change the information published in this document, including, without limitation, the specification and the design of the related semiconductor products, software and applications, in accordance with its standard automotive change notification process.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document is subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](http://www.dialog-semiconductor.com), available on the company website ([www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)) unless otherwise stated.

Dialog, Dialog Semiconductor and the Dialog logo are trademarks of Dialog Semiconductor Plc or its subsidiaries. All other product or service names and marks are the property of their respective owners.

© 2020 Dialog Semiconductor. All rights reserved.

### RoHS Compliance

Dialog Semiconductor's suppliers certify that its products are in compliance with the requirements of Directive 2011/65/EU of the European Parliament on the restriction of the use of certain hazardous substances in electrical and electronic equipment. RoHS certificates from our suppliers are available on request.

## Contacting Dialog Semiconductor

#### United Kingdom (Headquarters)

Dialog Semiconductor (UK) LTD  
Phone: +44 1793 757700

#### Germany

Dialog Semiconductor GmbH  
Phone: +49 7021 805-0

#### The Netherlands

Dialog Semiconductor B.V.  
Phone: +31 73 640 8822

#### Email:

[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

#### North America

Dialog Semiconductor Inc.  
Phone: +1 408 845 8500

#### Japan

Dialog Semiconductor K. K.  
Phone: +81 3 5769 5100

#### Taiwan

Dialog Semiconductor Taiwan  
Phone: +886 281 786 222

#### Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)

#### Hong Kong

Dialog Semiconductor Hong Kong  
Phone: +852 2607 4271

#### Korea

Dialog Semiconductor Korea  
Phone: +82 2 3469 8200

#### China (Shenzhen)

Dialog Semiconductor China  
Phone: +86 755 2981 3669

#### China (Shanghai)

Dialog Semiconductor China  
Phone: +86 21 5424 9058



# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Dialog Semiconductor:](#)

[SLG4DVKADV](#)