

LoRa® PicoCell Gateway V1.0

WIRELESS & SENSING PRODUCTS

User Guide to the

LoRa® PicoCell Gateway V1.0

www.semtech.com

Table of Contents

1	I	ntrod	uction	4						
2	ŀ	Hardw	vare Presentation	5						
	2.1	Ab	Absolute Maximum Ratings5							
	2.2	Ext	ernal Host Processor Connection	5						
	2.3	RF	Front-End Architecture	6						
	2.4	Pic	oCell Gateway Block Diagram	7						
	2.5	Ha	rdware Control Signals	8						
	2.6	Po	wer Consumption	9						
3	9	Softwa	are Overview	11						
4	ι	Jse w	ith Raspberry Pi	13						
	4.1	Ras	spberry Pi Connection	13						
	4.2	Ras	spberry Pi Image Software Installation	14						
	4.3	Sta	rting Raspberry Pi	15						
	4	4.3.1	Login: pi and Password: raspberry	15						
	4	4.3.2	Resize Partition / FS	16						
	4	4.3.3	Install dfu-util Tool	18						
	4	4.3.4	Load STM32F401CD MCU Binary	19						
	2	4.3.5	Compile Semtech HAL + Packet Forwarder	23						
	4	4.3.6	Semtech HAL Compilation Check	23						
	4	4.3.7	Set a Unique ID to the Gateway	24						
	2	4.3.8	Run Basic Packet Forwarder	26						
5	J	SON	file for RF Parameter Tuning	27						
6	F	Refere	nces	31						
7	F	Revisi	on History	32						
8	(Glossary								

List of Figures

Figure 1: LoRa® PicoCell Gateway V1.0	4
Figure 2: USB Port Type A for External Host Processor and Power Supply	5
Figure 3: PicoCell Gateway V1.0 RF Block Diagram	7
Figure 4: PicoCell GW V1.0 HW Control Signals	8
Figure 5: GW Software Overview	11
Figure 6: Raspberry Pi and PicoCell GW Connection	13
Figure 7: SDFormatter	14
Figure 8: Win32 Disk Imager	14
Figure 9: MobaXterm SSH Client	15
Figure 10: raspi-config Menu	16
Figure 11: raspi-config "Expand Filesystem"	16
Figure 12: Git Clones	17
Figure 13: Dfu-util Make Install	18
Figure 14: STM32 MCU Boot0 Button	19
Figure 15: Load STM32F401CD MCU Binary	19
Figure 16: "Isusb" Command Result	20
Figure 17: "dmesg" Command Result	20
Figure 18: DFU Mode	21
Figure 19: Update STM32F401CD MCU Binary	21
Figure 20: Util_com_stress	23
Figure 21: Util_chip_id	24
Figure 22: Basic Packet Forwarder	26

1 Introduction

This user guide introduces the Semtech LoRa[®] PicoCell Gateway V1.0 reference design and how to set it up with a Raspberry Pi 2.



Figure 1: LoRa[®] PicoCell Gateway V1.0

The LoRa[®] PicoCell Gateway V1.0 (called here after "PicoCell GW") is a multi-channel high performance transceiver designed to simultaneously receive several LoRa[®] packets using random spreading factors.

Three hardware reference designs are made available to address:

- Europe 868 MHz ISM band [863 MHz 870 MHz]
- USA/Australia 915 MHz ISM band [902 MHz 928 MHz]
- China 470 MHz ISM band [470 MHz 510 MHz]

For countries with a comparable regulatory framework (no LBT), choose the design corresponding to the right frequency.

2 Hardware Presentation

2.1 Absolute Maximum Ratings

ltem	Minimum	Typical	Maximum	Unit
Maximum Supply Voltage	-0.3	5.0	6.0	V
Operating Temperature	0	25	70	°C
Maximum RF Input Level			-10	dBm

Table 1: Absolute Maximum Ratings

Notice!

The PicoCell Gateway V1.0 with SX1308 chip is designed for indoor applications with a metal alloy housing. It is strongly recommended to maintain the ambient operating temperature below 40 °C, to ensure that an ambient operating temperature of 70 °C is not exceeded in the housing.

The operating temperature range can be extended to "-40 °C to 85 °C" if the PicoCell uses a SX1301 chip instead of a SX1308 chip. See *Section 2.4 LoRa® PicoCell Gateway Block Diagram 2.4*.

2.2 External Host Processor Connection

The LoRaWAN protocol can be run through an external host processor. On the PicoCell GW reference design, there is a USB port type A to interface with the external host processor. This USB port is also used to provide the main 5.0 V power supply:





2.3 RF Front-End Architecture

The RF front-end architecture of the PicoCell GW displays the following characteristics:

- Half-duplex mode i.e. can't receive and transmit simultaneously
- Simultaneously receive 8 LoRa[®] channels multi-data rates (SF7 ~ SF12 / 125 kHz) + 2 mono-data rate (LoRa[®] 250 / 500 kHz and FSK 50 kbps)
- 3 ISM bands
 - Europe 868MHz ISM band [863 MHz 870 MHz
 - o USA/Australia 915MHz ISM band [902 MHz 928 MHz]
 - o China 470MHz ISM band [470 MHz 510 MHz]
- Maximum transmit output power = +20dBm
- Typical sensitivity level:
 - o -139 dBm at SF12 BW 125 kHz
 - -125 dBm at SF7 BW 125 kHz
 - o -109 dBm at FSK 50 kbps
- Ability to work in hostile RF environments such as close to cellular mobile phones, WiFi routers,
 Bluetooth devices

2.4 PicoCell Gateway Block Diagram



Figure 3: PicoCell Gateway V1.0 RF Block Diagram

- The SX1308 digital baseband chip is a massive digital signal processing engine which integrates the LoRa[®] Concentrator IP
- The two SX1257 transceivers are highly integrated RF front-end to digital I and Q modulator and demodulator. Two transceivers are used instead of one to be able to simultaneously receive 8 LoRa[®] 200 kHz channels. To address the Chinese market (470 MHz band), SX1255 transceivers are used instead of SX1257 transceivers.

2.5 Hardware Control Signals

The control signals from/to the MCU and the SX1308 device are described below:



Figure 4: PicoCell GW V1.0 HW Control Signals

Add an on-board MCU with native USB:

- To implement a USB CDC (virtual com port) protocol to bridge commands coming from host to the SX1308 SPI interface
- SX1308 power management during downlink to meet 500 mA USB plug max power constraint

On-board MCU main requirements:

- 1 x USB
- 1 x SPI
- 1 x l2C
- 96 kbytes RAM to support future features
- 1 x 32-bits timer
- Allow 32 MHz input clock
- IRQ management
- 10 x GPIO

2.6 Power Consumption

Mode	Description	Typical Current Consumption	Unit
8 Rx channels ON Tx OFF	HAL packet_forwarder	330	mA
8 Rx channels OFF Tx ON at 20 dBm	HAL util_tx_continuous	230	mA

Table 2: Typical Current Consumption at 5.0 V

The maximum current consumption (mA) in Rx mode with 8 channels ON is displayed in the table

below:

Table 3: Maximum Current Consumption per Supply Rail in Rx Mode

Maximum current consumption (mA) in Rx mode with 8 channels ON

Part	Description	Current consumption per supply rail [mA]						
		1.8V	3.3V	3.3V	3.3V	2.0V		
		VCCDIG18	VCCDIG33	VCC_A	VCC_B	VCC_FEM		
SX1308	Baseband processor	800	10					
END4643A	133MHz oscillator		60					
END4243A	32MHz TCXO			2				
SX1257	Receiver A			25				
SX1257	Receiver B				25			
	Front-end module (PA,					7		
SE2435*	LNA, switch)					/		
STM32F401CDU6	MCU		25					
Current on individual power supply [mA]		800	95	27	25	7		
Main Voltage [V]		5	5	5	5	5		
Regulator Voltage [V]		1.8	3.3	3.3	3.3	3.3		
Regulator efficiency** [%]		85	90	-	-	-		
Current @ +5.0V [mA]		339	70	27	25	7	468	
Power @ +5.0V [mW]		1695	350	135	125	35	2340	

* Maximum estimated Current consumption with 20% margin taken on typical current value when max. not specified

** Semtech SC283 step-down regulator

The maximum current consumption (mA) in Tx mode i.e. when downlink packet is sent by the concentrator board is displayed in the table below:

Device	Description	Curren	Current consumption per supply rail [mA]						
		1.8V	3.3V	3.3V	3.3V	2.0V			
		VCCDIG18	VCCDIG33	VCC_A	VCC_B	VCC_FEM			
SX1308	Baseband processor	400	10						
END4643A	133MHz oscillator		0						
END4243A	32MHz TCXO			2					
SX1257	Receiver A			85					
SX1257	Receiver B				2				
	Front-end module (PA,								
SE2435*	LNA, switch)					150			
STM32F401CDU6	MCU		25						
Current on individual power supply [mA]		400	35	87	2	150			
Main Voltage [V]		5	5	5	5	5			
Regulator Voltage [V]		1.8	3.3	3.3	3.3	3.3			
Regulator efficiency** [%]		85	90	-	-	-			
Current @ +5.0V [mA]		169	26	87	2	150	434		
Power @ +5.0V [mW]		845	130	435	10	750	2170		

Table 4: Maximum Current Consumption per Supply Rail in Tx Mode

* Maximum estimated Current consumption with 20% margin taken on typical current value when max. not specified

** Semtech SC283 step-down regulator

3 Software Overview

The PicoCell GW software can be split in three main parts:

- The **packet forwarder** is a program running on the host of a LoRa[®] gateway that forwards RF packets received by the concentrator to a server through an IP/UDP link, and emits RF packets that are sent by the server.
- The picoGW_hal is a host driver/HAL to build a PicoCell GW which communicates through USB or UART with a concentrator board based on Semtech SX1308 multi-channel modem and SX1257/SX1255 RF transceivers. The library implements a USB CDC (virtual com port) to communicate with the embedded MCU.
- The picoGW_mcu is an MCU driver/HAL for the PicoCell GW concentrator board. This program runs on MCU (STM32-F401CD). The embedded firmware takes in charge the power management of the SX1308 during the downlink to respect the 500 mA max power constraint in the USB plug. It also implements a USB CDC protocol to bridge commands coming from host to the SX1308 SPI interface.



Figure 5: GW Software Overview

The **packet_forwarder** (gateway application) source code can be found under LoRa® Github: <u>https://github.com/Lora-net/picoGW_packet_forwarder</u>

For more details see the readme.md file in the picoGW_packet_forwarder directory.

The **picoGW_hal** (SX130x control library) source code can be found under LoRa® Github: <u>https://github.com/Lora-net/picoGW_hal</u> For more details see the readme.md file in the picoGW_hal directory.

The **picoGW_mcu** driver/HAL source code can be found under LoRa® Github: <u>https://github.com/Lora-net/picoGW_mcu</u>

For more details see the readme.md file in the picoGW_mcu directory.

The [PATH]/picoGW_mcu/bin/ directory contains the precompiled binary files in .hex or .dfu ("Device Firmware Update") formats. To load the binary file into the STM32F401CD target MCU, you can use a tool such as "dfu-util": <u>http://dfu-util.sourceforge.net/</u>

For basic testing, utilities such as packet logger, util_tx_test, util_tx_continuous, are provided on the LoRa[®] Github repository:

https://github.com/Lora-net/picoGW_hal

https://github.com/Lora-net/picoGW_packet_forwarder)

Notice!

The default configuration file "global_conf.json" is given as an example and may need to be adapted to your design. Several configuration file examples are located in the following directory: [PATH]/picoGW_packet_forwarder/lora_pkt_fwd/cfg/

4 Use with Raspberry Pi

The Semtech LoRa[®] Concentrator reference design has been tested with Raspberry Pi 2 model B, Pi 3 model B as well as Pi zero w:

https://www.raspberrypi.org/products/

4.1 Raspberry Pi Connection

Simply connect the PicoCell GW to the Raspbery Pi through any of the USB Type A connectors as depicted on the picture below:



Figure 6: Raspberry Pi and PicoCell GW Connection

4.2 Raspberry Pi Image Software Installation

- Download the Raspbian image:
 - o Go to address https://www.raspberrypi.org/downloads/raspbian/
 - Choose "RASPBIAN JESSIE LITE"
- Refer to following guide to setup your SD card with the downloaded image:

https://www.raspberrypi.org/documentation/installation/installing-images/

• Format the SD card:

https://www.sdcard.org/downloads/formatter_4/

SDFormatter V4.0	
	Format your drive. All of the data on the drive will be lost when you format it. SD, SDHC and SDXC Logos are trademarks of SD-3C, LLC.
Drive : D: Size : 30	Refresh 0.0 GB Volume Label :
Format Option : QUICK FORMAT,	Option FORMAT SIZE ADJUSTMENT OFF
	Format Exit

Figure 7: SDFormatter

• Write the image previously downloaded on the SD card:

https://sourceforge.net/projects/win32diskimager/

👒 Win32 Disk Imager 🛛 🗁 🖃	
Image File	Device
05-27-raspbian-jessie-lite/2016-05-27-raspbian-jessie-lite.img) 📔 [E:\] 🔻
Copy MD5 Hash:	
Progress	
	6%
Version: 0.9.5 Cancel Read Write	Exit
15.6398MB/s	.4



4.3 Starting Raspberry Pi

Once the SD card is burned, insert it in the Raspberry Pi and choose a way to login Raspberry Pi:

- HDMI monitor and USB keyboard
- UART terminal (thanks to an extra USB to serial adapter)

Below is the description through an SSH client enabled from raspi-config tool, Interfacing Option

4.3.1 Login: pi and Password: raspberry



Figure 9: MobaXterm SSH Client

4.3.2 Resize Partition / FS

• On larger SD cards, the root partition can be resized to use extra space, using the *Expand Filesystem* option from raspi-config menu:

\$ sudo raspi-config



Figure 10: raspi-config Menu

• Select 1 Expand Filesystem from raspi-config menu and press Enter:



Figure 11: raspi-config "Expand Filesystem"

• The system must be then rebooted:

\$ sudo reboot

For more details, go to the following address: <u>https://www.raspberrypi.org/documentation/configuration/raspi-config.md</u>

Get the latest Semtech software package from LoRa® Github (requires a connection to internet):

- \$ mkdir lora-net
- \$ cd lora-net
- \$ sudo apt-get update
- \$ sudo apt-get install git
- *\$ git clone* <u>https://github.com/Lora-net/picoGW_packet_forwarder.git</u>
- *\$ git clone* <u>https://github.com/Lora-net/picoGW_mcu.git</u>
- \$ git clone https://github.com/Lora-net/picoGW_hal.git



Figure 12: Git Clones

4.3.3 Install dfu-util Tool

- \$ cd ~/lora-net/
- \$ sudo apt-get install autoconf
- \$ git clone https://git.code.sf.net/p/dfu-util/dfu-util
- \$ cd dfu-util
- \$./autogen.sh
- \$ sudo apt-get install libusb-1.0-0-dev
- \$./configure
- *\$ make*
- \$ sudo make install



Figure 13: Dfu-util Make Install

4.3.4 Load STM32F401CD MCU Binary

For the first time <u>only</u>, load the STM32F401CD MCU binary:

1. Press the "BOOT0" button of the PicoCell GW while plugging it to any USB port of the Raspberry Pi board:



Figure 14: STM32 MCU Boot0 Button

2. On the Raspberry Pi, load the binary into the STM32F401CD MCU with the following command:

\$ sudo /usr/local/bin/dfu-util -a 0 -D ~/lora-net/picoGW_mcu/bin/pgw_fw_usb.dfu





For any future STM32F401CD MCU binary update, there should be no need to press the "BOOT0" button, simply connect the PicoCell GW to any USB port of the Raspberry Pi and type following commands:

\$ Isusb _

To check Pico GW is recognized:



Figure 16: "Isusb" Command Result

\$ dmesg

To know the COM device to be used to access to the Pico GW (here "ttyACMo"):



Figure 17: "dmesg" Command Result

- \$ cd ~/lora-net/picoGW_hal/util_boot
- \$ make

- *\$./util_boot –d /dev/ttyACM0*
- \$ Isusb

To check Pico GW is in DFU (Device Firmware Update) mode:

R 1	2.168.0.102 (p)				Property N			-		and the second second				Internet in			1		x
Terr	inal Session	ıs View	X serve	r Tools	Games	Settings	Macros	Help												
		2	<i>6</i>	- 🚖	5	1			\geq	0									X	Ċ
Ses	ion Servers	Tools	Games	Sessions	View	Split	MultiExe	c Tunneli	ng Settings	Help									X server	Exit
Q	ick connect.					7. 192.16	8.0.102 (p	i)	×	¢										
	🍅 🖻 🏚 🥝) 🚅 🗋	× 4. I	E A É	[709	.104061]	usb	1-1.2:	Manufac	turer:	SEMTECH									*
**	home/pi/lora-nel	/picoGW n	ncu/bin/	<u> </u>	[709 [700	.104077	usb	1-1.2:	SerialNu	imber:	00000000000000000000000000000000000000	A								
ŝ	News			Circ	[803	.995451	ush	1-1.2	USB disc	connect	device nu	nher 8								
ssio	name D			SIZE	806	.538005	usb	1-1.2	new full	l-speed	USB device	number 9	using (dwc otg						
s	Dow fw u	art.hex		132	[806	.654002]	usb	1-1.2:	New USB	device	found, idVe	endor=047a	a, idĎro	oduct=3	74a					
*	pgw_fw_u	sb.dfu		50	[806	.654031]	usb	1-1.2:	New USB	device	strings: M	fr=1, Proc	duct=2,	Serial	Number=	:3				
~	pgw_fw_u	sb.hex		136	[806	.654049	usb	1-1.2:	Product	SEMTE	CH Corp Vir	tual ComPo	ort							
Ê					[806	.654064	usb	1-1.2:	Manufact	turer:	SEMIECH									
2					[806	656062	cdc	1-1.2: acm 1.	2:1 A.	ttvACM	00000000000000000000000000000000000000	h havica								
8					842	.656611	usb	1-1.2:	USB disc	connect	. device nur	nber 9								
acr					843	.448096	usb	1-1.2:	new full	-speed	USB device	number 10	0 using	dwc oto	1					
2					843	.559547	usb	1-1.2:	New USB	device	found, idVe	endor=0483	3, idPro	oduct=d	É11					
Pre					[843	.559574]	usb	1-1.2:	New USB	device	strings: M	fr=1, Proc	duct=2,	Serial	Number=					
ll ŝ					[843	.559592	usb	1-1.2:	Product	STM32	BOOTLOADE	₹								
					843	.559608	usb	1-1.2:	Manufact	turer	SIMicroelect	tronics								
					[043 [064	410510	usp	1-1.2:	Seriating	imper:	dovice put	bon 10								
					[867	218130	usb	1-1 2.	new full	-sneed	USB device	number 11	1 usina	dwc otr	1					
					867	.334216	usb	1-1.2:	New USB	device	found, idVe	endor=047a	a. idPro	oduct=3	, 74a					
					867	334244	usb	1-1.2:	New USB	device	strings: M	fr=1, Proc	duct=2,	Serial	Number=	-3				
					[867	.334262]	usb	1-1.2:	Product	SEMTE	CH Corp Vir	tual ComPo	ort							
					[867	.334278	usb	1-1.2:	Manufact	turer	SEMTECH									
					867	.334294	usb	1-1.2:	SerialNu	Imber:	0000000000000001/									
					[867	.337041	_cac_	acm I	L.Z:1.0:	TTYACM	9: USB ACM (levice	d (da		40					
					niðras	nherryni	:~/]0	ra-net	nicoGW	nal/uti	boot \$ 1s	ish —								
					Bus 00	1 Device	012:	ID 048	3:df11 9	TMicro	electronics	STM Devic	ce in D	FU Mode						
					D	1 Devier	002.	TD 041	1	Chandan	Minneyet	Com	CHCCOF	12/0514	Cont	Itherne	t Adapt	er		
	< III			P.	Bus 00	1 Device	002:	ID 042	24:9514 9	Standar	d Microsyste	ems Corp.								
	E Fo	llow tem	ninal folde	er	Bus 00	1 Device	001:	ID 1de	b:0002 l	inux F	bundation 2	.0 root hu	ub							=
		at we were			pi@ras	pperrypi	. ~/t0	ra-net,	prcoem_	at/uti	L_DOOT \$									-
UN	EGISTERED	VERSION	- Please	e support	MobaXte	erm by subs	cribing to	the prof	essional editi	on here:	ttp://mobaxterm	.mobatek.net								

Figure 18: DFU Mode

- \$ sudo /usr/local/bin/dfu-util -a 0 -D ~/lora-net/picoGW_mcu/bin/pgw_fw_usb.dfu



Figure 19: Update STM32F401CD MCU Binary

Notice!

To exit the DFU (Device Firmware Update) mode, you need to unplug and plug again the PicoCell GW to the Raspberry Pi board. You can also do it by controlling the USB power of the Raspberry Pi board through a tool such as "hub-ctrl": <u>https://github.com/codazoda/hub-ctrl.c</u>

4.3.5 Compile Semtech HAL + Packet Forwarder

- \$ cd ~/lora-net/picoGW_hal
- \$ make clean all
- \$ cd ~/lora-net/picoGW_packet_forwarder
- \$ make clean all

4.3.6 Semtech HAL Compilation Check

The program *util_com_stress* is used to check the reliability of the link between the host platform (on which the program is run) and the LoRa[®] concentrator register file that is the interface through which all interactions with the LoRa[®] concentrator happen.

The tests run endlessly or until an error is detected: press Ctrl+C to stop the application.

- \$ cd ~/lora-net/picoGW_hal/util_com_stress
- \$./util_com_stress -t 4 -d /dev/ttyACM0

The output looks like this:



Figure 20: Util_com_stress

4.3.7 Set a Unique ID to the Gateway

The PicoCell GW has a unique ID given at production. This ID can be used as a 64-bit MAC address for the PicoCell GW.

\$ cd ~/lora-net/picoGW_hal/util_chip_id \$./util_chip_id -d /dev/ttyACM0 Return a unique ID like the following:

3535303229002e00



Figure 21: Util_chip_id

The gateway ID could be then replaced in the global_conf.json file within the repository:

~/lora-net/picoGW_packet_forwarder/lora_pkt_fwd
{"gateway_conf": {
 "gateway_ID": "3535303229002e00"
 }
}

The user can also create a local_conf.json file in the repository: ~/lora-net/picoGW_packet_forwarder/lora_pkt_fwd with the following line {"gateway_conf": { "gateway_ID": "3535303229002e00" } }

4.3.8 Run Basic Packet Forwarder

The Basic Packet Forwarder is a program running on the host of a LoRa® Gateway that forward RF packets received by the concentrator to a server through an IP/UDP link, and emits RF packets that are sent by the server.

Run Basic Packet Forwarder for a functional check: \$ cd ~/lora-net/picoGW_packet_forwarder/lora_pkt_fwd/ \$./lora_pkt_fwd -d /dev/ttyACM0

The output looks like this:



Figure 22: Basic Packet Forwarder

5 JSON file for RF Parameter Tuning

Edit the file ~/lora-net/picoGW_packet_forwarder/lora_pkt_fwd/global_conf.json to update the following RF parameters:

- freq, radio and if to set frequency channels
 - Frequency channels = [*freq* of selected *radio* + *if*] in Hz
- rssi_offset to tune SX1257 + SX1308 RSSI
- 16 available gain tables *tx_lut_0* until *tx_lut_15* to tune Tx output power thanks to the 4 following parameters:
 - o pa_gain: no possible PA gain setting on PicoCell GW V1.0, so keep it to 0
 - o *mix_gain*: 11 possible mixer gain settings from 5 (min. gain) to 15 (max. gain)
 - o *rf_power*: RF output power target in dBm
 - o *dig_gain*: 4 possible digital gain settings from 0 (max. gain) to 3 (min. gain)

Within a Tx gain table index, the setting {*pa_gain*, *mix_gain*, *dig_gain*} must correspond to the RF output power target defined in the parameter *rf_power*.

A typical PicoCell GW global_conf.json file looks like this:

```
"SX1301_conf": {
  "lorawan_public": false,
  "clksrc": 1, /* radio 1 provides clock to concentrator */
  "antenna gain": 0, /* antenna gain, in dBi */
  "radio_0": {
    "enable": true,
    "type": "SX1257",
    "freg": 867500000,
    "rssi offset": -164.0,
    "tx enable": true,
    "tx_freq_min": 863000000,
    "tx_freq_max": 87000000
  },
  "radio_1": {
    "enable": true,
    "type": "SX1257",
    "freq": 868500000,
    "rssi offset": -164.0,
    "tx_enable": false
  },
  "chan_multiSF_0": {
    /* Lora MAC channel, 125kHz, all SF, 868.1 MHz */
    "enable": true,
    "radio": 1,
    "if": -400000
  }.
  "chan_multiSF_1": {
```

{

```
/* Lora MAC channel, 125kHz, all SF, 868.3 MHz */
    "enable": true,
    "radio": 1,
    "if": -200000
  },
  "chan_multiSF_2": {
    /* Lora MAC channel, 125kHz, all SF, 868.5 MHz */
    "enable": true,
    "radio": 1,
    "if": 0
  },
  "chan_multiSF_3": {
    /* Lora MAC channel, 125kHz, all SF, 867.1 MHz */
    "enable": true,
    "radio": 0,
    "if": -400000
  },
  "chan_multiSF_4": {
    /* Lora MAC channel, 125kHz, all SF, 867.3 MHz */
    "enable": true,
    "radio": 0,
    "if": -200000
  },
  "chan_multiSF_5": {
    /* Lora MAC channel, 125kHz, all SF, 867.5 MHz */
    "enable": true,
    "radio": 0,
    "if": 0
  },
  "chan_multiSF_6": {
    /* Lora MAC channel, 125kHz, all SF, 867.7 MHz */
    "enable": true,
    "radio": 0,
    "if": 200000
  },
  "chan_multiSF_7": {
    /* Lora MAC channel, 125kHz, all SF, 867.9 MHz */
    "enable": true,
    "radio": 0,
    "if": 400000
  },
  "chan_Lora_std": {
    /* Lora MAC channel, 250kHz, SF7, 868.3 MHz */
    "enable": true,
    "radio": 1,
    "if": -200000,
    "bandwidth": 250000,
    "spread_factor": 7
  },
  "chan_FSK": {
    /* FSK 50kbps channel, 868.8 MHz */
    "enable": true,
    "radio": 1,
    "if": 300000,
    "bandwidth": 125000,
    "datarate": 50000
  },
  "tx_lut_0": {
/* TX gain table, index 0 */
    "pa_gain": 0,
    "mix_gain": 5,
    "rf_power": 9,
    "dig_gain": 3
  },
  "tx_lut_1": {
    /* TX gain table, index 1 */
```

```
"pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_2": {
  /* TX gain table, index 2 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_3": {
  /* TX gain table, index 3 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_4": {
  /* TX gain table, index 4 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_5": {
  /* TX gain table, index 5 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_6": {
  /* TX gain table, index 6 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 9,
  "dig_gain": 3
},
"tx_lut_7": {
  /* TX gain table, index 7 */
  "pa_gain": 0,
  "mix_gain": 6,
  "rf power": 11,
  "dig_gain": 3
},
"tx_lut_8": {
  /* TX gain table, index 8 */
  "pa_gain": 0,
  "mix_gain": 5,
  "rf_power": 13,
  "dig_gain": 2
},
"tx_lut_9": {
  /* TX gain table, index 9 */
  "pa_gain": 0,
  "mix_gain": 8,
  "rf_power": 14,
  "dig_gain": 3
},
"tx_lut_10": {
  /* TX gain table, index 10 */
  "pa_gain": 0,
  "mix_gain": 6,
  "rf_power": 15,
```

```
"dig_gain": 2
    },
     "tx_lut_11": {
      /* TX gain table, index 11 */
       "pa_gain": 0,
       "mix_gain": 6,
       "rf_power": 16,
      "dig_gain": 1
    },
    "tx_lut_12": {
      /* TX gain table, index 12 */
       "pa_gain": 0,
       "mix_gain": 9,
      "rf_power": 17,
       "dig_gain": 3
    },
    "tx_lut_13": {
      /* TX gain table, index 13 */
       "pa_gain": 0,
       "mix_gain": 10,
      "rf_power": 18,
      "dig_gain": 3
    },
     "tx_lut_14": {
      /* TX gain table, index 14 */
       "pa_gain": 0,
      "mix_gain": 11,
      "rf_power": 19,
      "dig_gain": 3
    },
     "tx_lut_15": {
      /* TX gain table, index 15 */
       "pa_gain": 0,
      "mix_gain": 12,
      "rf power": 20,
       "dig_gain": 3
    }
  },
  "gateway_conf": {
     "gateway_ID": "AA555A0000240409",
    /* change with default server address/ports, or overwrite in local_conf.json */
    "server_address": "localhost",
    "serv_port_up": 1680,
    "serv port down": 1680,
    /* adjust the following parameters for your network */
    "keepalive_interval": 10,
    "stat_interval": 30,
    "push_timeout_ms": 100,
    /* forward only valid packets */
    "forward_crc_valid": true,
    "forward_crc_error": false,
    "forward_crc_disabled": false
  }
}
```

}

6 References

- [1] SX1308 information: http://www.semtech.com/wireless-rf/rf-transceivers/sx1308/
- [2] SX1257 datasheet: http://www.semtech.com/images/datasheet/sx1257.pdf

7 Revision History

Version	Date	Modifications
1.0	May 2017	First Release
1.1	July 2017	Section 3: addition of of UART support Figure 5 updated accordingly "SX1301" replaced by "SX1308" Section 4.3.4, step 2: linux command change Figure 15 updated accordingly New Figure 16: "Isusb" command result New Figure 17: "dmesg" command result New Figure 17: "dmesg" command result New Figure 17: "dmesg" command result New Figure 18: DFU mode New Figure 18: DFU mode New Figure 19: Update STM32F401CD MCU Binary Linux commands change (add –d option parameter + .dfu name) Section 4.3.6: linux command change (add –d option parameter) + Figure 20: Util_com_stress updated accordingly Section 4.3.7: linux command change (add –d option parameter) Figure 21: Util_chip_id updated accordingly Section 4.3.8: linux command change (add –d option parameter) Figure 22: Basic Packet Forwarder updated accordingly

8 Glossary

BB	BaseBand
ВоМ	Bill Of Materials
BW	BandWidth
CLK	Clock
CW	Continuous Wave
ETSI	European Telecommunications Standard Institute
DFU	Device Firmware Update
EU	Europe
EUI	Extended Unique Identifier
GB	GigaByte
GPS	Global Positioning System
GW	GateWay
HAL	Hardware Abstraction Layer
HDMI	High-Definition Multimedia Interface
HW	HardWare
IP	Intellectual Property
ISM	Industrial, Scientific and Medical applications
LAN	Local Area Network
LBT	Listen Before Talk
LO	Local Oscillator
LoRa®	LOng RAnge modulation technique
LoRaWAN	LoRa [®] low power Wide Area Network protocol
LPF	Low Pass Filter
LSB	Least Significant Bit
LUT	Look Up Table
MAC	Media Access Control address
MCU	Micro-Controller Unit
MPU	Micro-Processing Unit
PA	Power Amplifier
RSSI	Received Signal Strength Indication
RF	Radio-Frequency
RX	Receiver
SAW	Surface Acoustic Wave filter
SD Card	Secure Digital Card
SF	Spreading Factor
SPI	Serial Peripheral Interface
SPDI	Single-Pole, Double-Throw switch
SSH	Secure SHell
5W	Sonware
	i ransmitter
	Universal Asynchronous Receiver/Transmitter
	User Datagram Protocol
O2R	Universal Serial Bus



Important Notice

Information relating to this product and the application or design described herein is believed to be reliable, however such information is provided as a guide only and Semtech assumes no liability for any errors in this document, or for the application or design described herein. Semtech reserves the right to make changes to the product or this document at any time without notice. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. Semtech warrants performance of its products to the specifications applicable at the time of sale, and all sales are made in accordance with Semtech's standard terms and conditions of sale.

SEMTECH PRODUCTS ARE NOT DESIGNED, INTENDED, AUTHORIZED OR WARRANTED TO BE SUITABLE FOR USE IN LIFE-SUPPORT APPLICATIONS, DEVICES OR SYSTEMS, OR IN NUCLEAR APPLICATIONS IN WHICH THE FAILURE COULD BE REASONABLY EXPECTED TO RESULT IN PERSONAL INJURY, LOSS OF LIFE OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. INCLUSION OF SEMTECH PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE UNDERTAKEN SOLELY AT THE CUSTOMER'S OWN RISK. Should a customer purchase or use Semtech products for any such unauthorized application, the customer shall indemnify and hold Semtech and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs damages and attorney fees which could arise.

The Semtech name and logo are registered trademarks of the Semtech Corporation. All other trademarks and trade names mentioned may be marks and names of Semtech or their respective companies. Semtech reserves the right to make changes to, or discontinue any products described in this document without further notice. Semtech makes no warranty, representation or guarantee, express or implied, regarding the suitability of its products for any particular purpose. All rights reserved.

© Semtech 2017

Contact Information

Semtech Corporation Wireless & Sensing Products 200 Flynn Road, Camarillo, CA 93012 E-mail: sales@semtech.com Phone: (805) 498-2111, Fax: (805) 498-3804 www.semtech.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Semtech:

SX1308P868GW SX1308P915GW