Indicator System and Fuse Bases (Blocks)






Trip-indicator fuselinks are available for use in parallel with the main fuselinks. They can either be attached to the associated fuselink or mounted separately in panel mounted fuse clips, Part No. CL1. A push-on adaptor and microswitch attachment is available for use with the trip indicator to give the facility of remote indication, reference MAI or MBI.

Fuse ratings of 20A and below cannot usually accommodate a trip fuselink in parallel.

Where trip indicator fuselinks are to be attached to the main fuselink, an accessory pack comprising a pair of mounting clips and an appropriate trip indicator fuselink will be required.

The ordering code references for these packs are listed below:


Fuse Type	Order Ref.	Fuse Type	Order Ref.
ET	EC-600	FM	MC-600
EET	EC-600	FMM	MC-600
FE	EC-600	LMT	MC-250
FEE	EC-600	LMMT	MC-250
LET	EC-250		

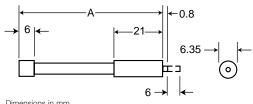


1mm = 0.0394" 1" = 25.4mm

Trip-indicator Fuselink Data

Туре	Dim. 'A' Max.	Voltage Rating	Type	Dim. 'A' Max.	Voltage Rating	
турс	IVIAA.	Rating	Турс	IVIAA.	Rating	
TI250	37.6	250	TI1100	98.4	1100	
TI500	47.5	500	TI1500	120.8	1500	
TI600	55.7	600	TI2000	147.5	2000	
TI700	61.8	700	TI2500	198.3	2500	

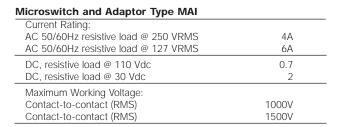

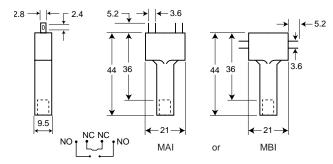



Stud Fuseblocks

Part No.	Stud Height	Stud Dia. & Threads
C5268-1	1.00"	5∕ ₁₆ -18
C5268-2	1.75″	5⁄ ₁₆ -18
C5268-3	0.75"	5⁄ ₁₆ -18
C5268-4	1.00"	1/4-20
C5268-5	1.75″	1/4-20

Universal Fuseblocks

Max.	Max. Fuse	BIF
Voltage	Current Rating	Document
600V	100A	1206
600V	400A	1207
600V	400A	1208
600V	600A	1209
	Voltage 600V 600V 600V	Voltage Current Rating 600V 100A 600V 400A 600V 400A



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Eaton:

1BS104 C5268-2 C5268-5 C5268-1 C5268-3 EC-250