

\* -CHR ALSO AVAILABLE; SEE NOTE 10

SLA3\_BUSSMAN\_GENRBL\_REV\_A

**EAT•N**

**BUSSMANN**  
SERIES

TITLE  
**600V / 60AMP CLASS R & H FUSE BLOCK**



SIZE  
**A3**

DWG NO.  
**RM60060-HM60060-CP**


REV  
**B**

SCALE: 1:2


SHEET 2 OF 3

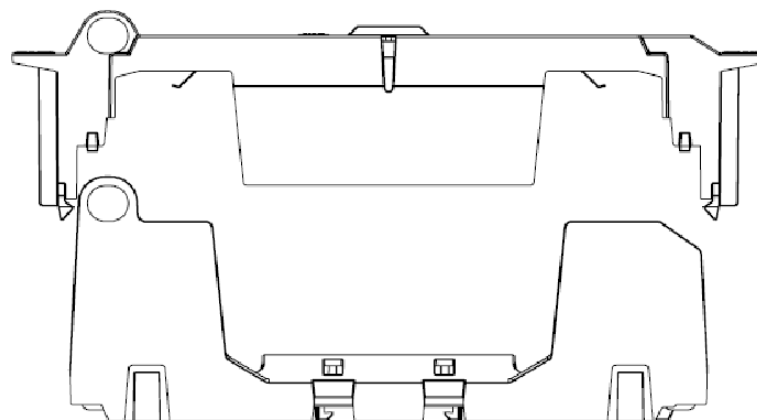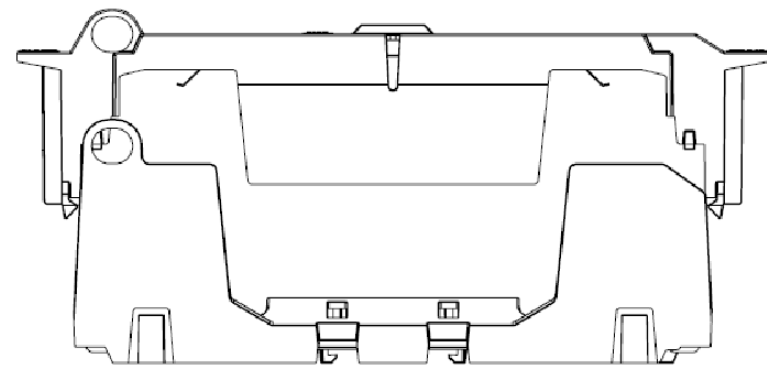


CUT COVER TAB  
AT NOTCH FOR  
USE WITH WIRES  
LARGER THAN  
8 AWG

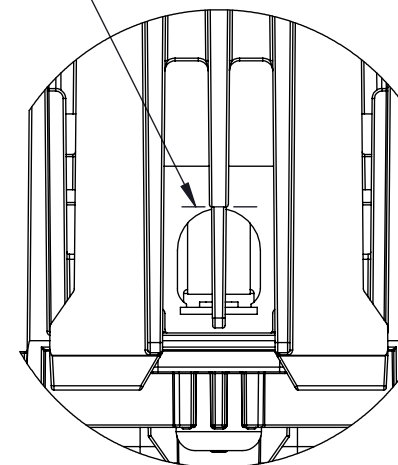


DETAIL A  
SCALE 4 : 3

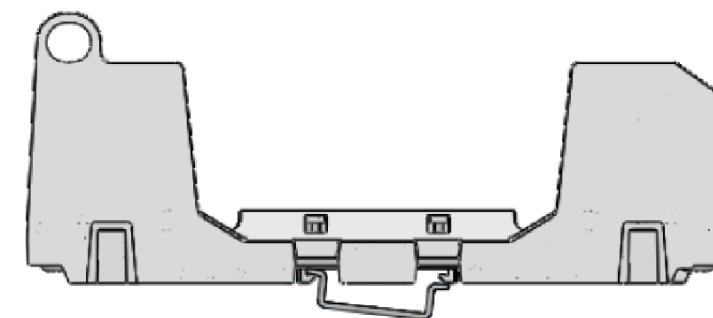



1. HOOK DIN RAIL SNAPS ON ONE SIDE OF THE DIN RAIL

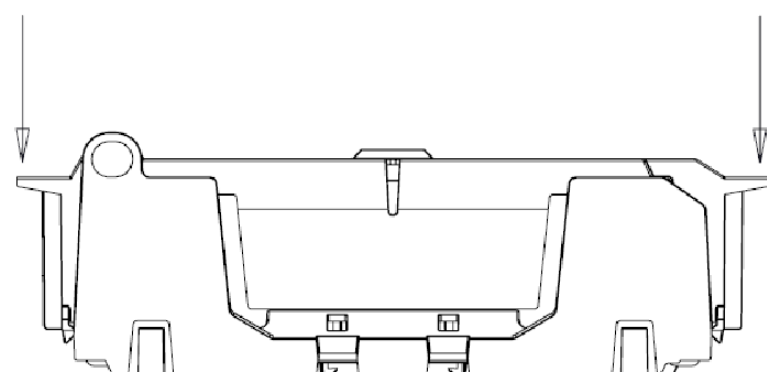

**CLOSING**  
PUSH STRAIGHT DOWN UNTIL SNAPS CLICK  
INTO PLACE

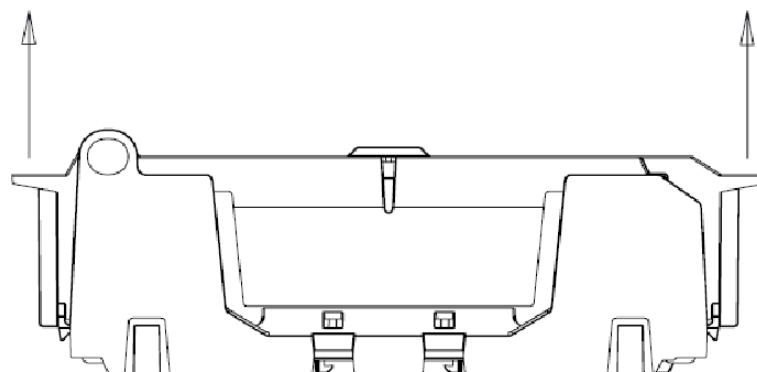

**OPENING**  
PULL STRAIGHT UP AT BOTH OUTSIDE  
HANDLES

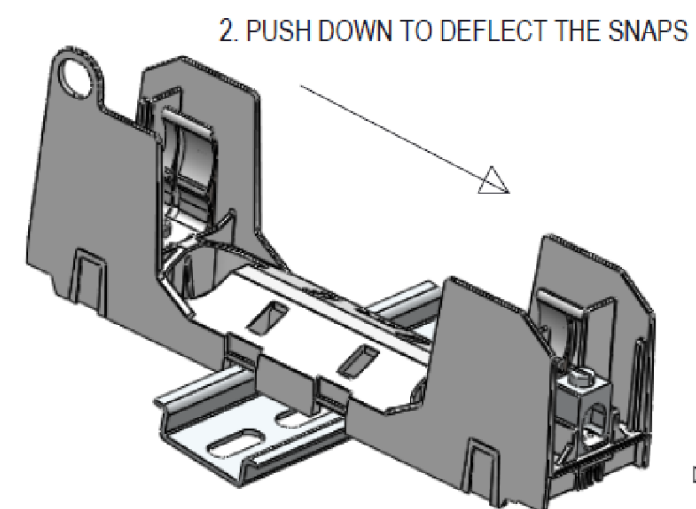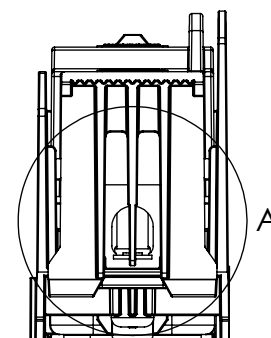

2. PUSH DOWN TO DEFLECT THE SNAPS

3. ROTATE UNTIL THE  
OPPOSITE SIDE SNAPS  
ONTO DIN RAIL

**INSTALLATION ON DIN RAIL**  
END STOPS MAY BE NECESSARY FOR SOME  
ASSEMBLY CONDITIONS - SEE NOTE 7

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Eaton:

[HM60060-2CR](#) [HM60060-1CR](#) [HM60060-3CR](#) [RM60060-1CHR](#) [RM60060-3CHR](#) [RM60060-3MW12](#) [HM60060-1CHR](#) [HM60060-1MW12](#) [HM60060-1MW14](#) [HM60060-1MW24](#) [HM60060-2CHR](#) [HM60060-2MW12](#) [RM60060-2MW24](#) [RM60060-3MW14](#) [RM60060-3MW24](#) [RM60060-1MW12](#) [RM60060-1MW14](#) [RM60060-1MW24](#) [RM60060-2CHR](#) [RM60060-2MW12](#) [RM60060-2MW14](#) [HM60060-2MW14](#) [HM60060-2MW24](#) [HM60060-3CHR](#) [HM60060-3MW12](#) [HM60060-3MW14](#) [HM60060-3MW24](#)