



MIC22950
Evaluation Board
User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELoQ® code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

**QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =**

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Helder, JukeBlox, KEELoQ, KEELoQ logo, Klear, LANCheck, LINK MD, maxStylus, maxTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KlearNet, KlearNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICKit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2018, Microchip Technology Incorporated, All Rights Reserved.
ISBN: 978-1-5224-2983-8

Table of Contents

Preface	5
Introduction	5
Document Layout	5
Conventions Used in This Guide	6
Warranty Registration	6
Recommended Reading	7
The Microchip Web Site	7
Product Change Notification Service	7
Customer Support	7
Document Revision History	7
Chapter 1. Product Overview	
1.1 Introduction	9
1.2 MIC22950 Short Overview	9
1.3 What Is the MIC22950 Evaluation Board?	10
1.4 MIC22950 Evaluation Board Kit Contents	10
Chapter 2. Installation and Operation	
2.1 Introduction	11
2.2 Features	11
2.3 Getting Started	11
2.4 Evaluation Board Description	12
2.4.1 Frequency Set Capacitor (CF)	12
2.4.2 Ramp Control Pin (RC)	12
2.4.3 Delay Pin (DLY)	12
2.4.4 Output Noise and Ripple Measurements	13
2.4.5 Board Layout Considerations	13
Appendix A. Schematic and Layouts	
A.1 Introduction	15
A.2 Board - Schematic	16
A.3 Board - Top Silk	17
A.4 Board - Top copper and Silk	17
A.5 Board - Top Copper	18
A.6 Board - Mid-Layer 1	18
A.7 Board - Mid-layer 2	19
A.8 Board - Bottom Copper	19
A.9 Board - Bottom Copper and Silk	20
A.10 Board - Bottom SILK	20

Appendix B. Bill of Materials (BOM)22

Worldwide Sales and Service23

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our website (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXXXXA”, where “XXXXXXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB® IDE online help. Select the Help menu, and then Topics, to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the MIC22950 Evaluation Board. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in This Guide](#)
- [Recommended Reading](#)
- [The Microchip Web Site](#)
- [Customer Support](#)
- [Document Revision History](#)

DOCUMENT LAYOUT

This document describes how to use the MIC22950 Evaluation Board as a development tool to emulate and debug firmware on a target board. The manual layout is as follows:

- **Chapter 1. “Product Overview”** – Important information about the MIC22950 Evaluation Board.
- **Chapter 2. “Installation and Operation”** – Includes details about the MIC22950 Evaluation Board features, as well as instructions on powering up the board.
- **Appendix A. “Schematic and Layouts”** – Shows the schematic and layout diagrams for the MIC22950 Evaluation Board.
- **Appendix B. “Bill of Materials (BOM)”** – Lists the parts used to build the MIC22950 Evaluation Board.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples
Arial font:		
Italic characters	Referenced books	<i>MPLAB® IDE User's Guide</i>
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u><i>File>Save</i></u>
Bold characters	A dialog button	Click OK
	A tab	Click the Power tab
N'Rnnnn	A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.	4'b0010, 2'hF1
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
Courier New font:		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets []	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	void main (void) { ... }

RECOMMENDED READING

This user's guide describes how to use the MIC22950 Evaluation Board. Other useful documents are listed below. The following Microchip document is available and recommended as a supplemental reference resource:

MIC22950 Data Sheet – “10A Integrated Switch Synchronous Buck Regulator with Freq Programmable to 2 MHz”

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

PRODUCT CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notifications whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip web site at www.microchip.com, click on **Product Change Notification** and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:
<http://www.microchip.com/support>.

DOCUMENT REVISION HISTORY

Revision A (May 2018)

- Initial Release of this Document.

NOTES:

Chapter 1. Product Overview

1.1 INTRODUCTION

This chapter provides information on the MIC22950 Evaluation Board by covering the following topics:

- MIC22950 Short Overview
- What Is the MIC22950 Evaluation Board?
- Content of the MIC22950 Evaluation Board kit

1.2 MIC22950 SHORT OVERVIEW

MIC22950 is a high-efficiency, 10A integrated switch, synchronous buck (step-down) regulator. The switching frequency of the MIC22950 device is programmable from 400 kHz to 2 MHz, allowing the customer to optimize the design, either for efficiency or for the smallest footprint. MIC22950 is optimized for the highest power density and achieves up to 95% efficiency, while switching at 400 kHz to 2 MHz.

The ultra-high-speed control loop keeps the output voltage within regulation, even under extreme transient load swings, commonly found in FPGAs and in low-voltage ASICs.

The output voltage can be adjusted down to 0.7V, in order to address all the low-voltage power needs. The high side MOSFET is a P-Channel, allowing duty cycle control up to 100%.

MIC22950 features a full range of sequencing and tracking options. Multiple outputs are allowed to be sequenced in several ways during turn-on and turn-off, by using the EN pin, the EN/DLY and the DELAY pins, combined with the POR/PG pin. The Ramp Control (RC) pin allows the device to be connected to any other device in the MIC22X00 family of products, to keep the output voltages within a certain delta V during start-up.

MIC22950 is available in a 32-Lead 5 x 5 x 0.9 mm VQFN package, with a junction operating range from -40°C to +125°C.

The key features of the MIC22950 Evaluation Board include:

- 2.6V to 5.5V supply voltage
- Fully integrated MOSFET switches
- Adjustable output voltage option, up to 0.7V
- Output load current, up to 10A
- Full sequencing and tracking capability
- Power-on reset
- Up to 95% efficiency
- Operating frequency programmable from 400 kHz to 2 MHz
- Ultra-fast transient response
- 100% maximum duty cycle
- Micro-power shutdown
- Thermal-shutdown and current-limit protection
- Available in a 32-Lead 5 x 5 x 0.9 mm VQFN package
- -40°C to +125°C junction temperature range

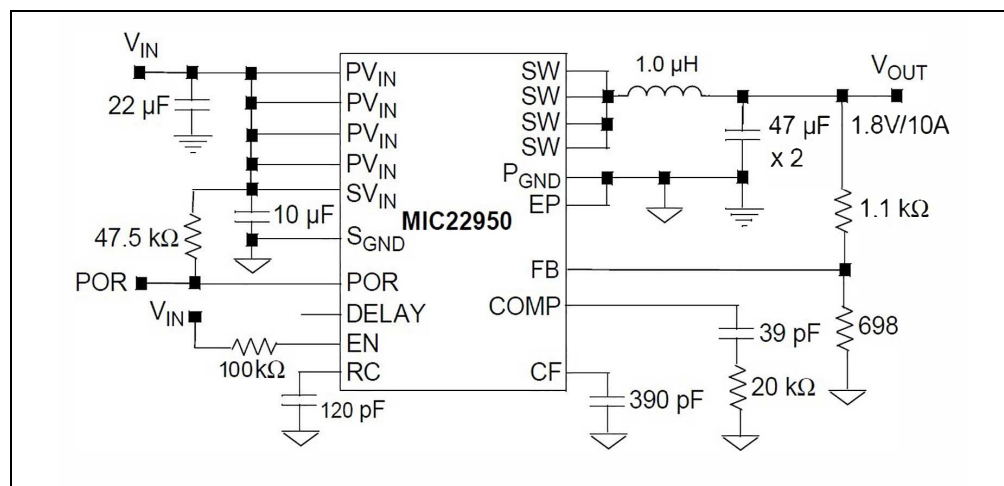


FIGURE 1-1: MIC22950 Typical Application.

1.3 WHAT IS THE MIC22950 EVALUATION BOARD?

The MIC22950 Evaluation Board is developed to evaluate a typical application, where V_{IN} is between 2.6V - 5.5V and V_{OUT} is set to 1.8V. The application can run up to 10A continuous output current loading.

The MIC22950 Evaluation Board is optimized for the highest power density and achieves over 90% efficiency when the switching frequency is around 1 MHz.

The power supply and load are connected to the MIC22950 Evaluation Board through four high-power terminals (turrets type). For the input and output voltage measurements, the dedicated pin headers can be used, allowing a clean measurement with low noise. Dedicated test pins allow monitoring and stimulating all the key features of the device, including Enable, Delay, Power-Good and Ramp Control.

The voltage mode feedback loop is designed to allow high bandwidth, with just two external compensation components.

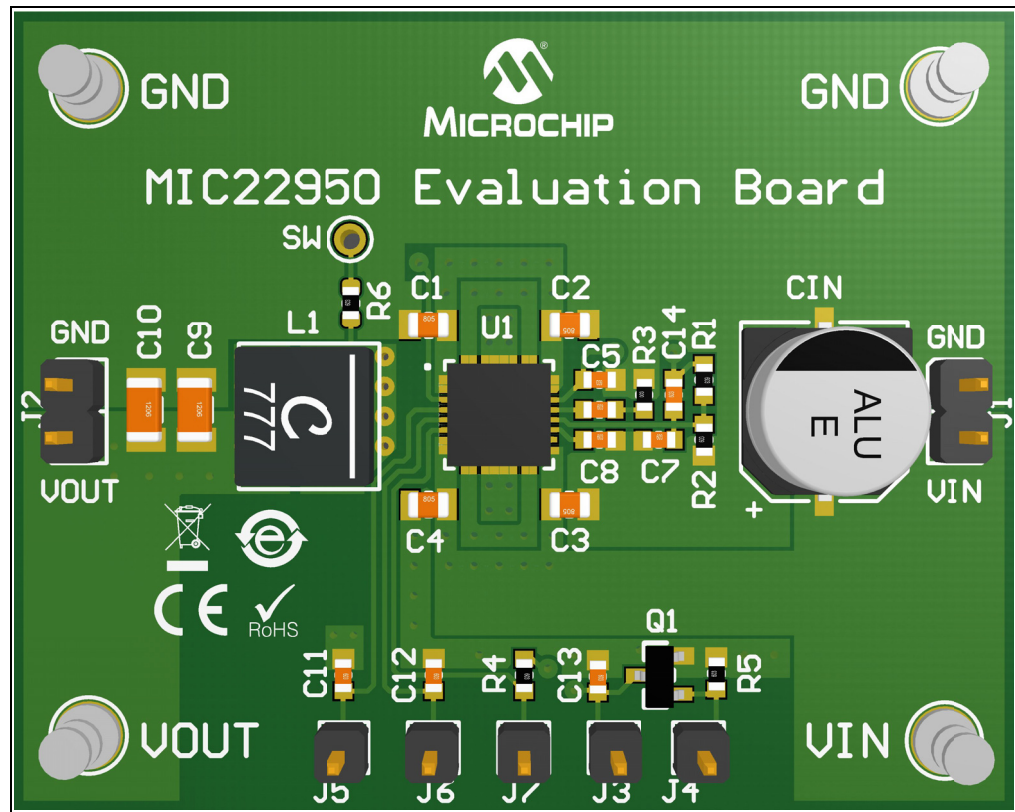


FIGURE 1-2: MIC22950 Evaluation Board - Top View.

1.4 MIC22950 EVALUATION BOARD KIT CONTENTS

The MIC22950 Evaluation Board Kit includes:

- One MIC22950 Evaluation Board, 10A, DC/DC unit (ADM00823)
- Important information sheet

Chapter 2. Installation and Operation

2.1 INTRODUCTION

The MIC22950 Evaluation Board can be powered from a single voltage range, from 2.6V to 5.5V, making it compatible with 5V rails and USB power.

2.2 FEATURES

The key features of the MIC22950 include:

- 2.6V to 5.5V supply voltage
- Output continuous load current up to 10A
- Switching frequency programmed at 524kHz
- 84us programmed output voltage ramp time
- POR delay of 1.24ms
- Accessible test points for SW node, Ramp Control, POR delay and Enable

2.3 GETTING STARTED

Follow the next steps to power-up the MIC22950 Evaluation Board:

1. Connect the external supply between the V_{IN} terminal and the GND terminal. Pay particular attention to the polarity.
2. With the output of the power supply disabled, set its voltage to the desired input test voltage ($2.6V \leq V_{IN} \leq 5.5V$). An ammeter may be placed between the input supply and the V_{IN} terminals. Be sure to monitor the supply voltage at V_{IN} terminal, as the ammeter and/or power lead resistance can reduce the voltage supplied to the device.
3. Connect a load between the V_{OUT} and GND terminals. The load can be either passive (resistive) or active (electronic). An ammeter may be placed between the load and the output. Ensure that the output voltage is monitored at the V_{OUT} terminals. To obtain the best output voltage regulation and low noise, please use the local GND terminal.
4. The MIC22950 Evaluation Board has a pull-down resistor (R7) on the EN pin. By default, the output voltage will be disabled. To enable the device, connect the EN pin at V_{IN} potential. The MIC22950 Evaluation Board also has an SHDN pin, which is used to put the device in shutdown mode when the V_{IN} potential is applied on this pin. Applying a voltage to both EN and SHDN pins will cause the Q1 transistor to short the EN potential to GND; depending on the power supply used, this may cause damage to Q1. In order to use both EN and SHDN pins simultaneously, a pull-up resistor can be used on the EN pin (10k or higher).
5. A power-on reset output is provided to monitor the power-on reset function (J7). The Power-on Reset (POR) output will go higher after the output voltage reaches 90% of the nominal set voltage and after the delay set by C_{DELAY} . POR/PG is asserted low without delay, when the enable pin (EN) is set to low (GND) or when the output goes below the 10% threshold. For the Power-Good (PG) function, the delay must be set to a minimum. This can be done by removing the DELAY pin capacitor (C11).

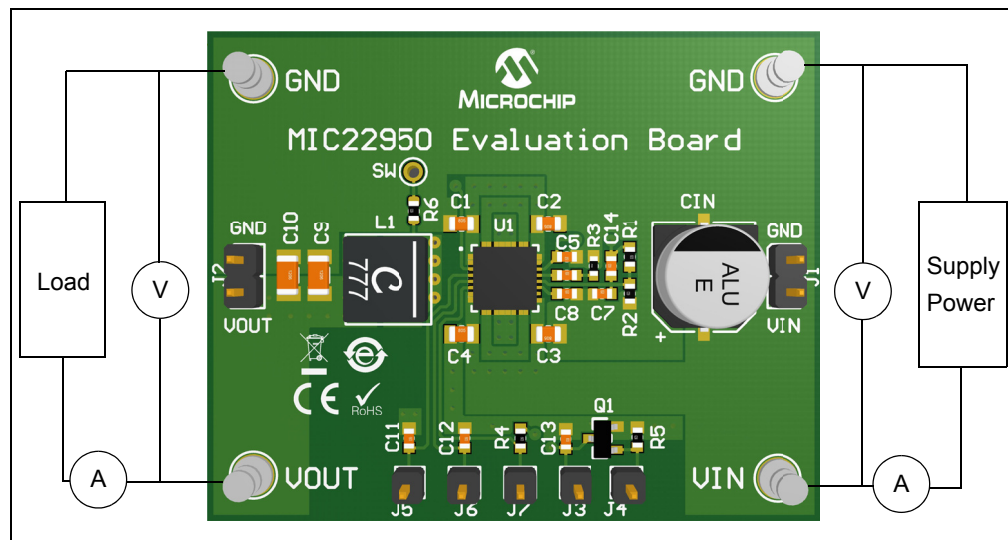


FIGURE 2-1: MIC22950 Evaluation Board - Test Diagram.

2.4 EVALUATION BOARD DESCRIPTION

2.4.1 Frequency set capacitor (CF)

This pin allows the setting of the switching frequency. A 200 μ A source current charges the capacitor (C8) on this pin up to a voltage of 1V. The CF capacitor is then discharged with an internal N-Channel MOSFET, marking the end of the switching period. The capacitor should be connected very close to the IC and grounded directly to the SGND pin.

2.4.2 Ramp control pin (RC)

The J6 (RC) pin allows the slew rate of the output voltage to be programmed by the addition of a capacitor from J6 (RC) pin to ground (C12). RC pin is internally fed with a 1 μ A current source and V_{OUT} slew rate is proportional to the capacitor and the 1 μ A source. The RC pin cannot be left floating. Use a minimum capacitor value of 120 pF or larger.

2.4.3 Delay pin (DELAY)

Adding a capacitor to the J5 (DELAY) pin allows the delay of the POR signal.

When V_{OUT} reaches 90% of its nominal voltage, the DELAY pin current source (1 μ A) starts to charge the external capacitor. At 1.24V, the POR pin is asserted high. On the MIC22950 Evaluation Board, C11 accomplishes this functionality.

2.4.4 Output noise and ripple measurements

The MIC22950 Evaluation Board is populated with headers, which are used for measuring output noise and ripple (J1 and J2). Each connector is designed to probe the output, using the local ground as reference. This is the proper way of measuring low-amplitude ripple signals, as it eliminates any noise caused by long oscilloscope ground or ground plane noise.

2.4.5 Board layout considerations

It is recommended that the switching trace (from the switching node) is kept as short as possible. This will decrease the noise generated by the MIC22950 device and improve performance. The output capacitors (C9 and C10) must be placed as close as possible to the inductor.

It is also recommended that a copper plane is placed immediately under the MIC22950 device; it must be connected to the ground copper plane using a via under the device. The MIC22950 device's exposed pad must be connected at ground plane, in order to conduct the heat away from the device and to improve thermal performance. Doing so will also shield the device and improve output ripple performance.

NOTES:


Appendix A. Schematic and Layouts

A.1 INTRODUCTION


This appendix contains the following schematics and layouts for the MIC22950 Evaluation Board (ADM00823).

- Board - Schematic
- Board - Top Silk
- Board - Top Copper and Silk
- Board - Top Copper
- Board - Mid-Layer 1
- Board - Mid-Layer 2
- Board - Bottom Copper
- Board - Bottom Copper and Silk
- Board - Bottom Silk


A.2 BOARD - SCHEMATIC

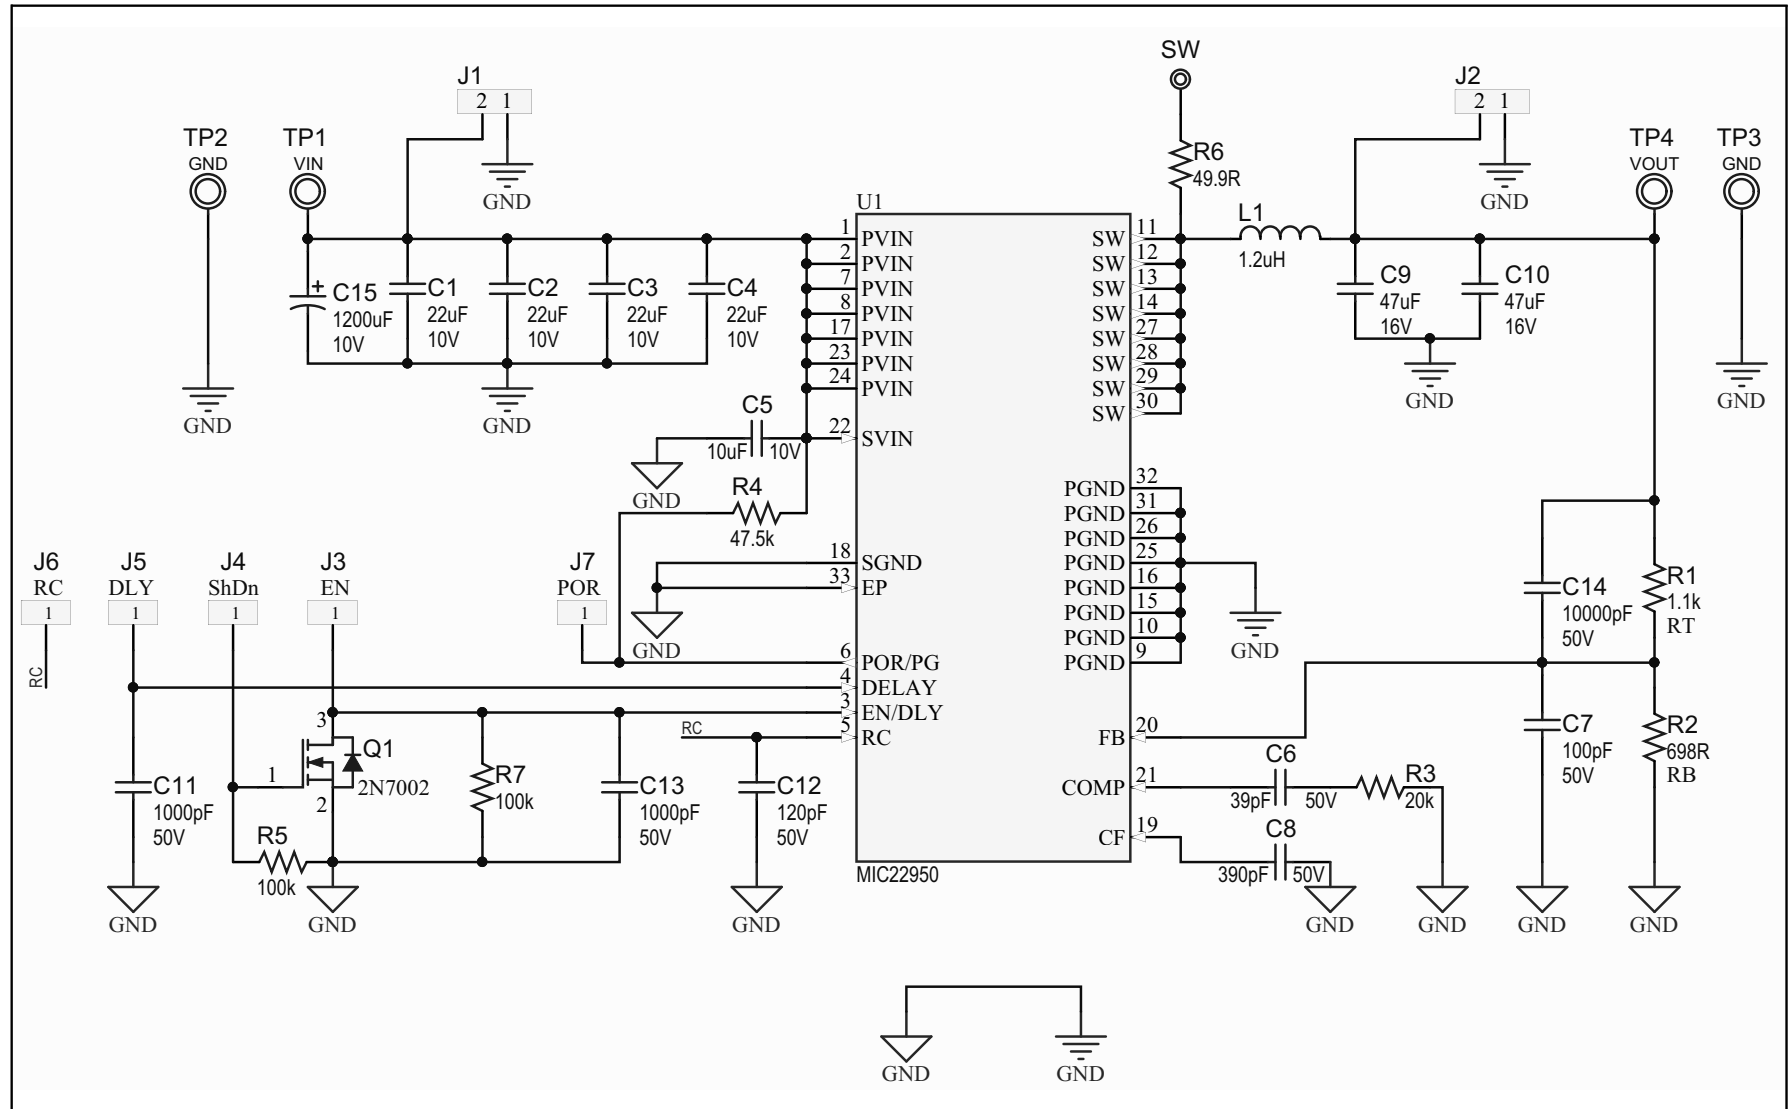


A.3 BOARD - TOP SILK

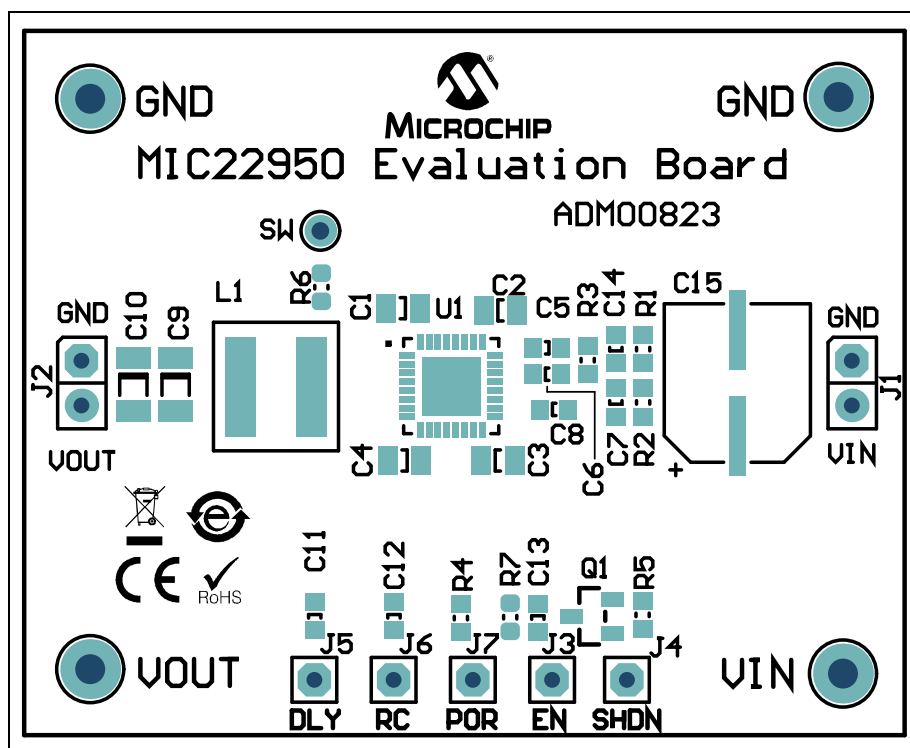


A.4 BOARD - TOP COPPER AND SILK

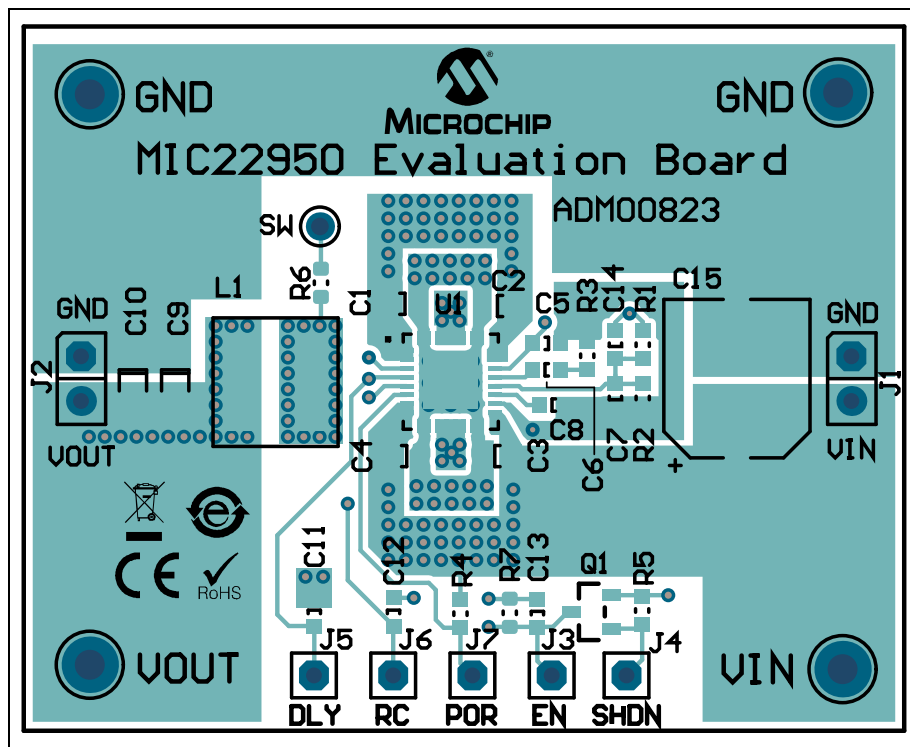


A.5 BOARD - TOP COPPER

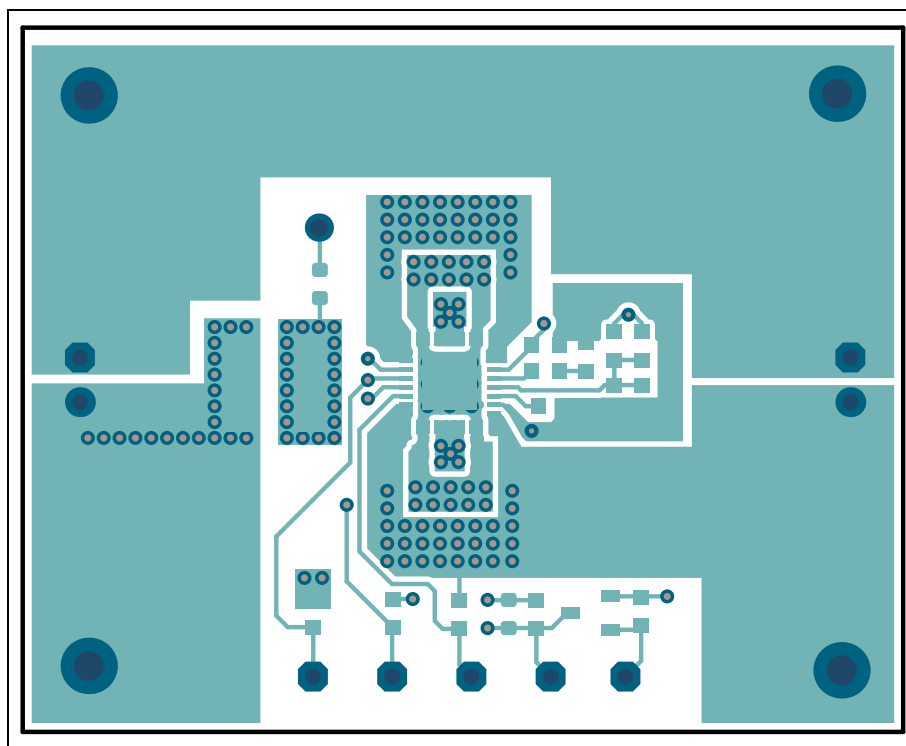


A.6 BOARD - MID-LAYER 1

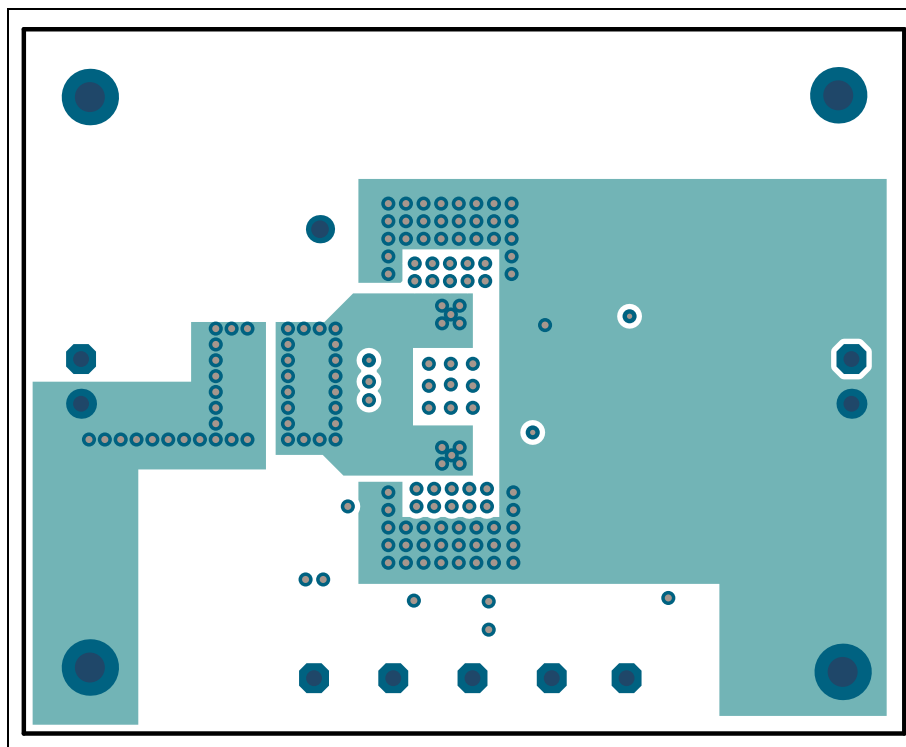


A.7 BOARD - MID-LAYER 2

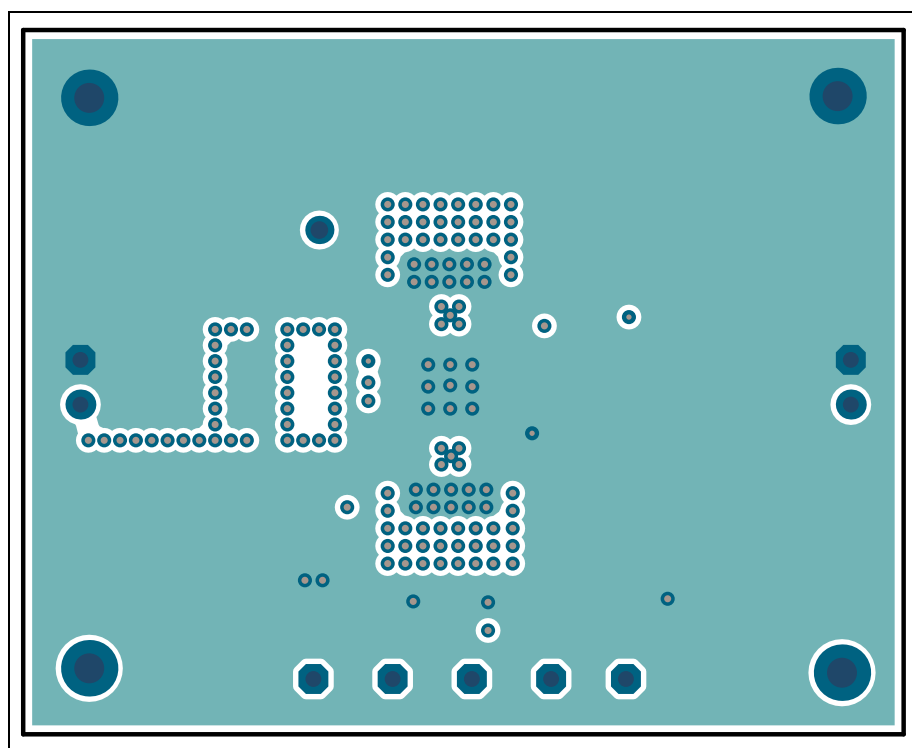


A.8 BOARD - BOTTOM COPPER

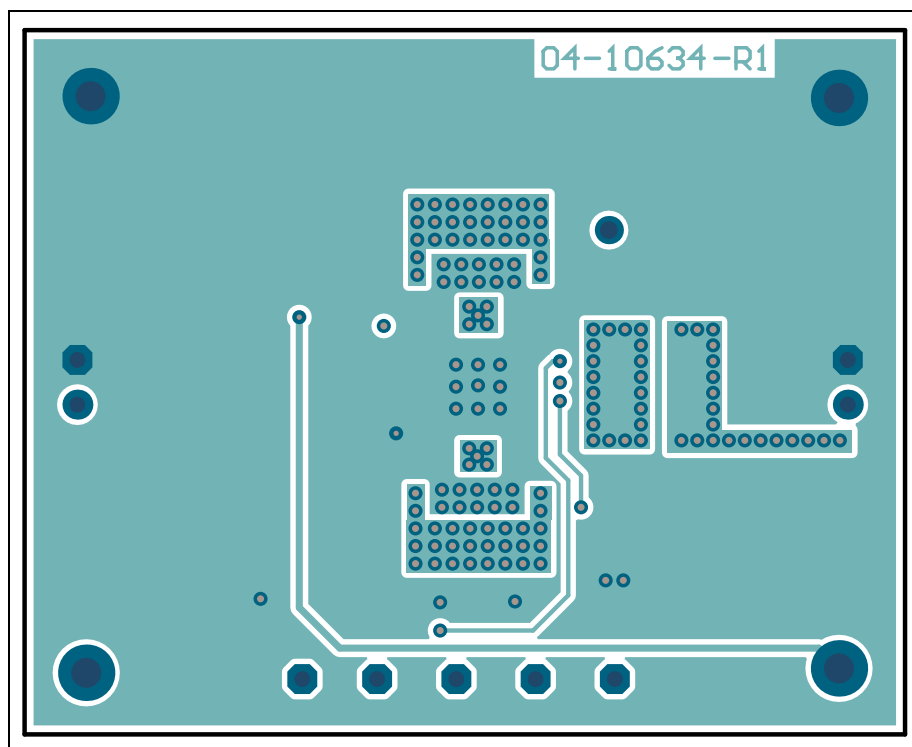

A.9 BOARD - BOTTOM COPPER AND SILK

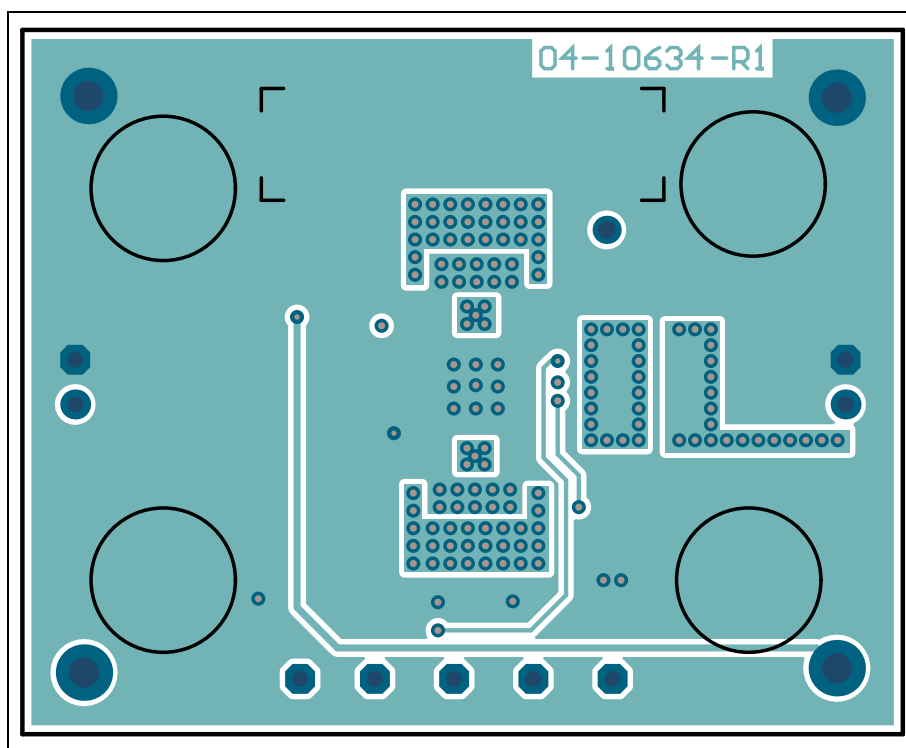

A.10 BOARD - BOTTOM SILK

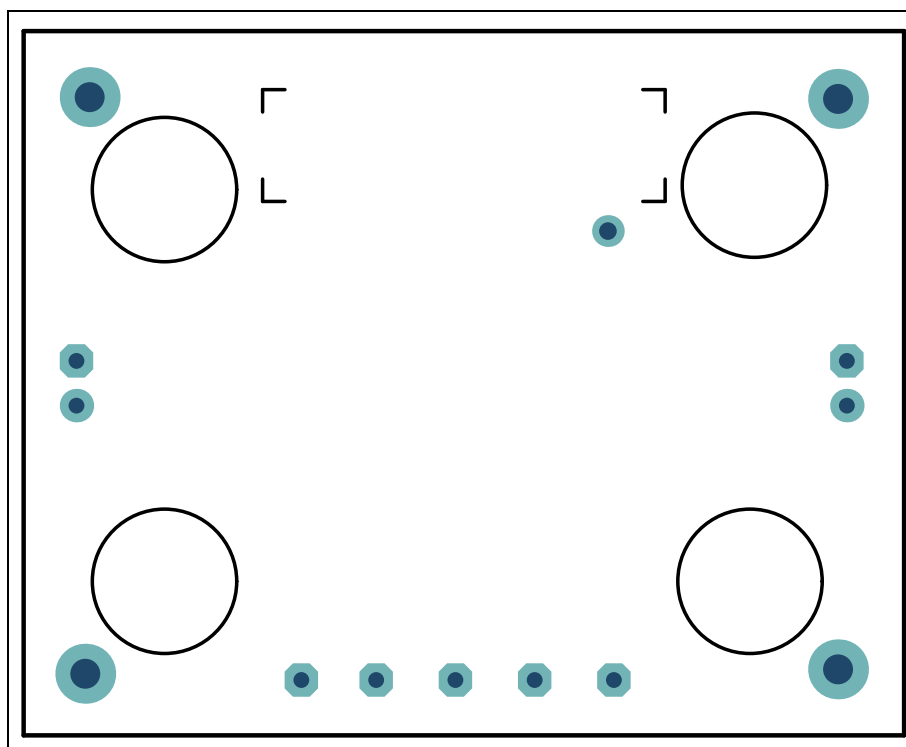

Appendix B. Bill of Materials (BOM)

TABLE B-1: MIC22950 EVALUATION BOARD BILL OF MATERIALS (BOM)

Qty.	Reference	Description	Manufacturer	Part Number
4	C1, C2, C3, C4	Capacitor Ceramic, 22 μ F, 10v, 20%, X7S, SMD, 0805	TDK Corporation	C2012X7S1A226M125AC
2	C11, C13	Capacitor Ceramic, 1000 pF, 50V, 20%, X7R, SMD, 0603	TDK Corporation	C1608X7R2A102K080AA
1	C12	Capacitor Ceramic, 120 pF, 50V, 5%, C0G, SMD, 0603	TDK Corporation	C1608C0G1H121J080AA
1	C15	Capacitor Aluminum, 1200 μ F, 10V, SMD, E	Panasonic® - ECG	EEEFPA122UAP
1	C5	Capacitor Ceramic, 10 μ F, 10V, 20%, X5R, SMD, 0603	Samsung Electro-Mechanics America, Inc.	CL10A106MP8NNNC
1	C6	Capacitor Ceramic, 39 pF, 50V, 5%, C0G, SMD, 0603	TDK Corporation	CGA3E2C0G1H390J080AA
1	C8	Capacitor Ceramic, 390 pF, 50V, 5%, C0G, SMD, 0603	TDK Corporation	C1608C0G1H391J080AA
2	C9, C10	Capacitor Ceramic, 47 μ F, 16V, 20%, X5R, SMD, 1206	TDK Corporation	C3216X5R1C476M160AB
2	J1, J2	CON HDR-2.54, Male, 1x2, Tin, 6.10 MH, TH, VERT	Molex®	0022284020
5	J3, J4, J5, J6, J7	CON HDR-2.54, Male, 1x1, Gold, 5.84 MH, TH, VERT	TE Connectivity, Ltd.	5-146280-1
1	L1	Inductor, 1.2 μ H, 16A, 20%, SMD, L6.56W6.36H3.1	Coilcraft	XAL6030-122MEB
1	LABEL1	Label, Assy W/rev Level (Small Modules) Per Mts-0002	—	—
4	PAD1, PAD2, PAD3, PAD4	Mechanical HW Rubber Pad, Cylindrical, D7.9, H5.3, Black	3M	SJ61A11
1	PCB1	MIC22950 Evaluation Board - Printed Circuit Board	Microchip Technology Inc.	04-10634-R1
1	Q1	TRANS FET N-CH 2N7002, 215 60V 300 mA 830 mW SOT-23-3	NXP Semiconductors	2N7002,215
1	R1	Resistor, SMD, 1.1 k Ω , 1%, 1/10W, 0603	Stackpole Electronics, Inc.	RMCF0603FT1K10
1	R2	Resistor, TKF, 698R, 1%, 1/10W, SMD, 0603	Panasonic - ECG	ERJ-3EKF6980V
1	R3	Resistor, TKF, 20 k Ω , 1%, 1/10W, SMD, 0603	Panasonic - ECG	ERJ-3EKF2002V
1	R4	Resistor, TKF, 47.5 k Ω , 1%, 1/10W, SMD, 0603	Vishay/Dale	CRCW060347K5FKEA

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

MIC22950 Evaluation Board User's Guide

TABLE B-1: MIC22950 EVALUATION BOARD BILL OF MATERIALS (BOM) (CONTINUED)

Qty.	Reference	Description	Manufacturer	Part Number
2	R5, R7	Resistor, TF, 100 k Ω , 1%, 1/8W, SMD, 0603	Vishay Beyschlag	MCT06030C1003FP500
1	R6	Resistor, TKF, 49.9R, 1%, 1/4W, SMD, 0603	Vishay/Dale	CRCW060349R9FKEAHP
4	TP1, TP2, TP3, TP4	CON TP, Pin, Tin, TH	Harwin Plc.	H2121-01
1	U1	MCHP Analog Switcher, Buck, 0.7V to 5.5V, MIC22950YML-TR QFN-32	Microchip Technology Inc.	MIC22950YML-TR

Note 1: The components listed in this Bill of Materials are representative of the PCB assembly. The released BOM used in manufacturing uses all RoHS-compliant components.

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta
Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX
Tel: 512-257-3370

Boston
Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago
Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas
Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit
Novi, MI
Tel: 248-848-4000

Houston, TX
Tel: 281-894-5983

Indianapolis
Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles
Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC
Tel: 919-844-7510

New York, NY
Tel: 631-435-6000

San Jose, CA
Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto
Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733

China - Beijing
Tel: 86-10-8569-7000

China - Chengdu
Tel: 86-28-8665-5511

China - Chongqing
Tel: 86-23-8980-9588

China - Dongguan
Tel: 86-769-8702-9880

China - Guangzhou
Tel: 86-20-8755-8029

China - Hangzhou
Tel: 86-571-8792-8115

China - Hong Kong SAR
Tel: 852-2943-5100

China - Nanjing
Tel: 86-25-8473-2460

China - Qingdao
Tel: 86-532-8502-7355

China - Shanghai
Tel: 86-21-3326-8000

China - Shenyang
Tel: 86-24-2334-2829

China - Shenzhen
Tel: 86-755-8864-2200

China - Suzhou
Tel: 86-186-6233-1526

China - Wuhan
Tel: 86-27-5980-5300

China - Xian
Tel: 86-29-8833-7252

China - Xiamen
Tel: 86-592-2388138

China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444

India - New Delhi
Tel: 91-11-4160-8631

India - Pune
Tel: 91-20-4121-0141

Japan - Osaka
Tel: 81-6-6152-7160

Japan - Tokyo
Tel: 81-3-6880-3770

Korea - Daegu
Tel: 82-53-744-4301

Korea - Seoul
Tel: 82-2-554-7200

Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906

Malaysia - Penang
Tel: 60-4-227-8870

Philippines - Manila
Tel: 63-2-634-9065

Singapore
Tel: 65-6334-8870

Taiwan - Hsin Chu
Tel: 886-3-577-8366

Taiwan - Kaohsiung
Tel: 886-7-213-7830

Taiwan - Taipei
Tel: 886-2-2508-8600

Thailand - Bangkok
Tel: 66-2-694-1351

Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393

Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829

Finland - Espoo
Tel: 358-9-4520-820

France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79

Germany - Garching
Tel: 49-8931-9700

Germany - Haan
Tel: 49-2129-3766400

Germany - Heilbronn
Tel: 49-7131-67-3636

Germany - Karlsruhe
Tel: 49-721-625370

Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44

Germany - Rosenheim
Tel: 49-8031-354-560

Israel - Ra'anana
Tel: 972-9-744-7705

Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781

Italy - Padova
Tel: 39-049-7625286

Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340

Norway - Trondheim
Tel: 47-7289-7561

Poland - Warsaw
Tel: 48-22-3325737

Romania - Bucharest
Tel: 40-21-407-87-50

Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm
Tel: 46-8-5090-4654

UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820