

# Blower (MZBX001) sample manual

## 1.Driver

### MZBD001

- 1) This driver is self-osc. circuit. It works by only DC voltage input.
- 2) Connect +Vcc and GND to each pin
- 3) Input voltage (see table 1)

## 2.Note for evaluation

Don't touch piezo element directly.

Don't use in dusty environment (ex. Tobacco, smoke, particle etc.) Ceramic will be broken over 20Vp-p input to blower . This device is not waterproof.

(Table 1)

Supply Voltage	Blower operation voltage
11.5V	10Vpp
16.4V	15Vpp
21V	20Vpp

Supply voltage : 21V(max.)

