
Read the Docs Template Documentation

Release v3.0-dev-168-gd515eea

Read the Docs

Jul 21, 2017

1	Get Started	3
1.1	Guides	3
1.2	Setup Toolchain	13
1.3	Get ESP-IDF	21
1.4	Setup Path to ESP-IDF	21
1.5	Start a Project	22
1.6	Connect	22
1.7	Configure	22
1.8	Build and Flash	23
1.9	Monitor	24
1.10	Related Documents	24
2	API Reference	39
2.1	Wi-Fi API	39
2.2	Bluetooth API	56
2.3	Ethernet API	142
2.4	Peripherals API	149
2.5	Protocols API	278
2.6	Storage API	286
2.7	System API	325
3	ESP32 Hardware Reference	355
3.1	ESP32 Modules and Boards	355
4	API Guides	357
4.1	General Notes About ESP-IDF Programming	357
4.2	Build System	360
4.3	Debugging	372
4.4	ESP32 Core Dump	375
4.5	Partition Tables	377
4.6	Flash Encryption	380
4.7	Secure Boot	388
4.8	Deep Sleep Wake Stubs	394
4.9	ULP coprocessor programming	395
4.10	Unit Testing in ESP32	418
4.11	Application Level Tracing library	419
4.12	ESP32 ROM console	426

5	Contributions Guide	429
5.1	How to Contribute	429
5.2	Before Contributing	429
5.3	Pull Request Process	430
5.4	Legal Part	430
5.5	Related Documents	430
6	Resources	445
7	Copyrights and Licenses	447
7.1	Software Copyrights	447
7.2	ROM Source Code Copyrights	448
7.3	Xtensa libhal MIT License	448
7.4	TinyBasic Plus MIT License	448
7.5	TJpgDec License	449
8	About	451

This is the documentation for Espressif IoT Development Framework ([esp-idf](#)). ESP-IDF is the official development framework for the [ESP32](#) chip.

Get Started	API Reference	H/W Reference
API Guides	Contribute	Resources

To develop applications for ESP32 you need:

- **PC** loaded with either Windows, Linux or Mac operating system
- **Toolchain** to build the **Application** for ESP32
- **ESP-IDF** that essentially contains API for ESP32 and scripts to operate the **Toolchain**
- A text editor to write programs (**Projects**) in C, e.g. [Eclipse](#)
- **ESP32** board itself

Preparation of development environment consists of three steps:

1. Setup of **Toolchain**
2. Getting of **ESP-IDF** from GitHub
3. Installation and configuration of **Eclipse**

You may skip the last step, if you prefer to use different editor.

Having environment set up, you are ready to start the most interesting part - the application development. This process may be summarized in four steps:

1. Configuration of a **Project** and writing the code
2. Compilation of the **Project** and linking it to build an **Application**
3. Flashing (uploading) of the **Application** to **ESP32**
4. Monitoring / debugging of the **Application**

See instructions below that will walk you through these steps.

Guides

If you have one of ESP32 development boards listed below, click on provided links to get you up and running.

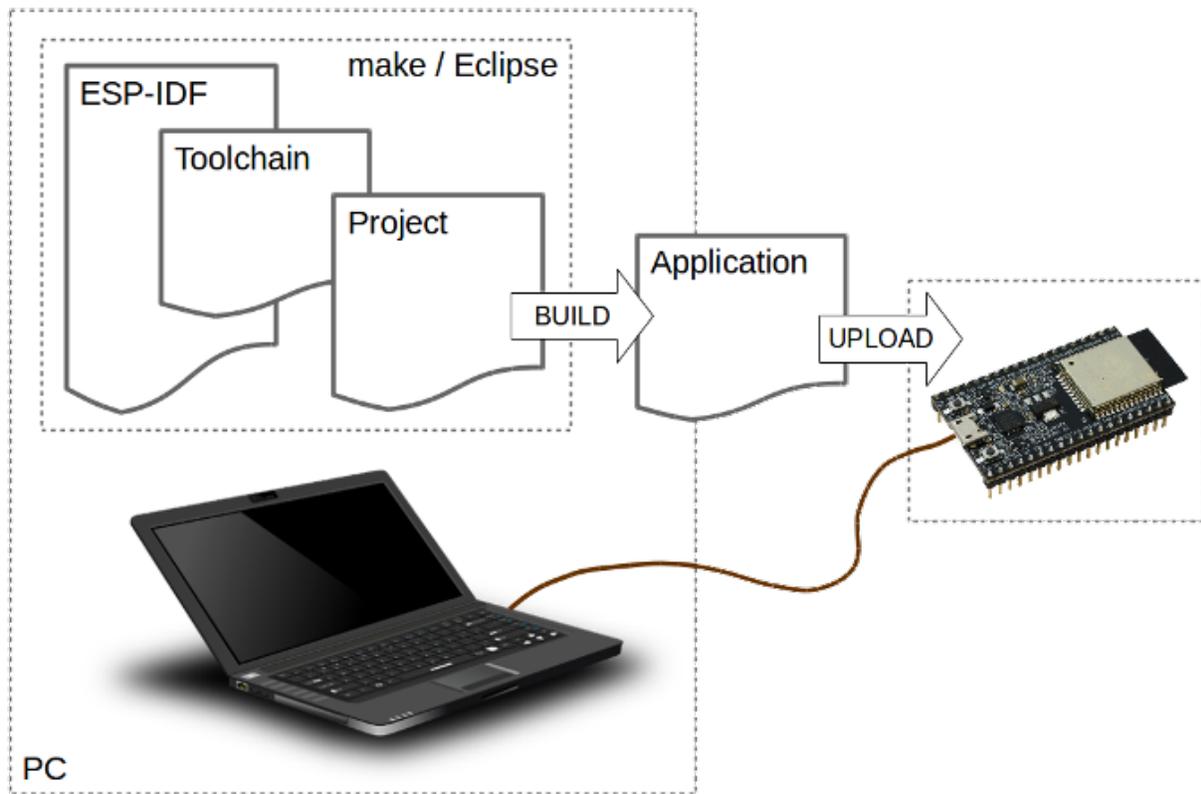


Fig. 1.1: Development of applications for ESP32

ESP32-DevKitC Getting Started Guide

This user guide shows how to get started with ESP32-DevKitC development board.

What You Need

- 1 × ESP32-DevKitC board
- 1 × USB A / mini USB B cable
- 1 × PC loaded with Windows, Linux or Mac O/S

Overview

ESP32-DevKitC is a small-sized ESP32-based development board produced by [Espressif](#). Most of the I/O pins are broken out to the pin headers on both sides for easy interfacing. Developers can connect these pins to peripherals as needed. Standard headers also make development easy and convenient when using a breadboard.

Functional Description

The following list and figure below describe key components, interfaces and controls of ESP32-DevKitC board.

ESP-WROOM-32 Standard [ESP-WROOM-32](#) module soldered to the ESP32-DevKitC board.

EN Reset button: pressing this button resets the system.

Boot Download button: holding down the **Boot** button and pressing the **EN** button initiates the firmware download mode. Then user can download firmware through the serial port.

USB USB interface. It functions as the power supply for the board and the communication interface between PC and ESP-WROOM-32.

I/O Most of the pins on the ESP-WROOM-32 are broken out to the pin headers on the board. Users can program ESP32 to enable multiple functions such as PWM, ADC, DAC, I2C, I2S, SPI, etc.

Start Application Development

Before powering up the ESP32-DevKitC, please make sure that the board has been received in good condition with no obvious signs of damage.

To start development of applications, proceed to section [Get Started](#), that will walk you through the following steps:

- [Setup Toolchain](#) in your PC to develop applications for ESP32 in C language
- [Connect](#) the module to the PC and verify if it is accessible
- [Build and Flash](#) an example application to the ESP32
- [Monitor](#) instantly what the application is doing

Related Documents

- [ESP32-DevKitC schematic \(PDF\)](#)
- [ESP32 Datasheet \(PDF\)](#)
- [ESP-WROOM-32 Datasheet \(PDF\)](#)

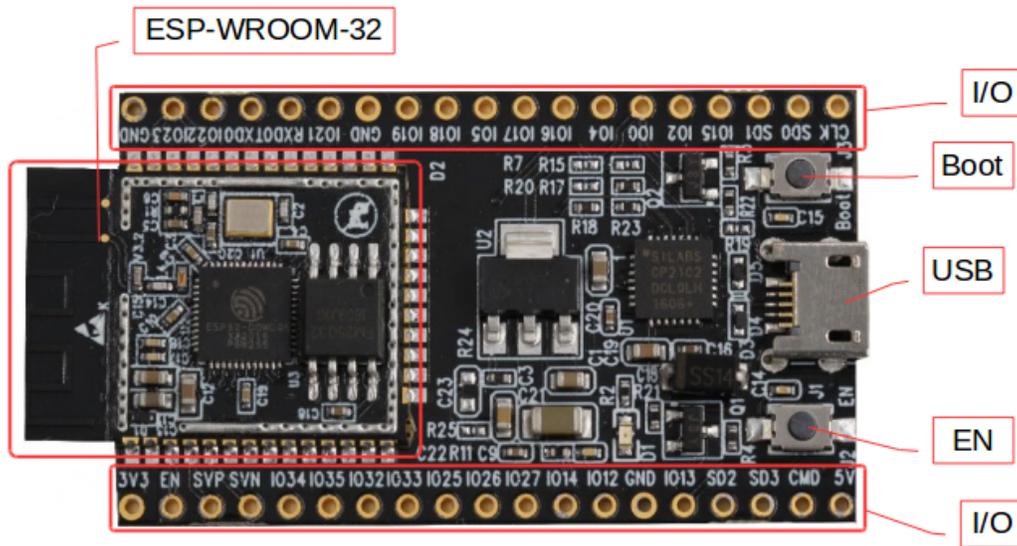


Fig. 1.2: ESP32-DevKitC board layout

ESP-WROVER-KIT Getting Started Guide

This user guide shows how to get started with ESP-WROVER-KIT development board.

What You Need

- 1 × ESP-WROVER-KIT board
- 1 × USB A / mini USB B cable
- 1 × PC loaded with Windows, Linux or Mac O/S

The Board

This section describes functionality of ESP-WROVER-KIT board and configuration options. If you like to start using it now, go directly to section [Start Application Development](#)

Overview

The ESP-WROVER-KIT is a development board produced by [Espressif](#) built around ESP32. This board is compatible with ESP32 modules, including the ESP-WROOM-32 and ESP32-WROVER. The ESP-WROVER-KIT features support for an LCD and MicroSD card. The I/O pins have been broken out from the ESP32 module for easy extension. The board carries an advanced multi-protocol USB bridge (the FTDI FT2232HL), enabling developers to use JTAG directly to debug the ESP32 through the USB interface. The development board makes secondary development easy and cost-effective.

Note: ESP-WROVER-KIT integrates the ESP-WROOM-32 module by default.

Functionality Overview

Block diagram below presents main components of ESP-WROVER-KIT and interconnections between components.

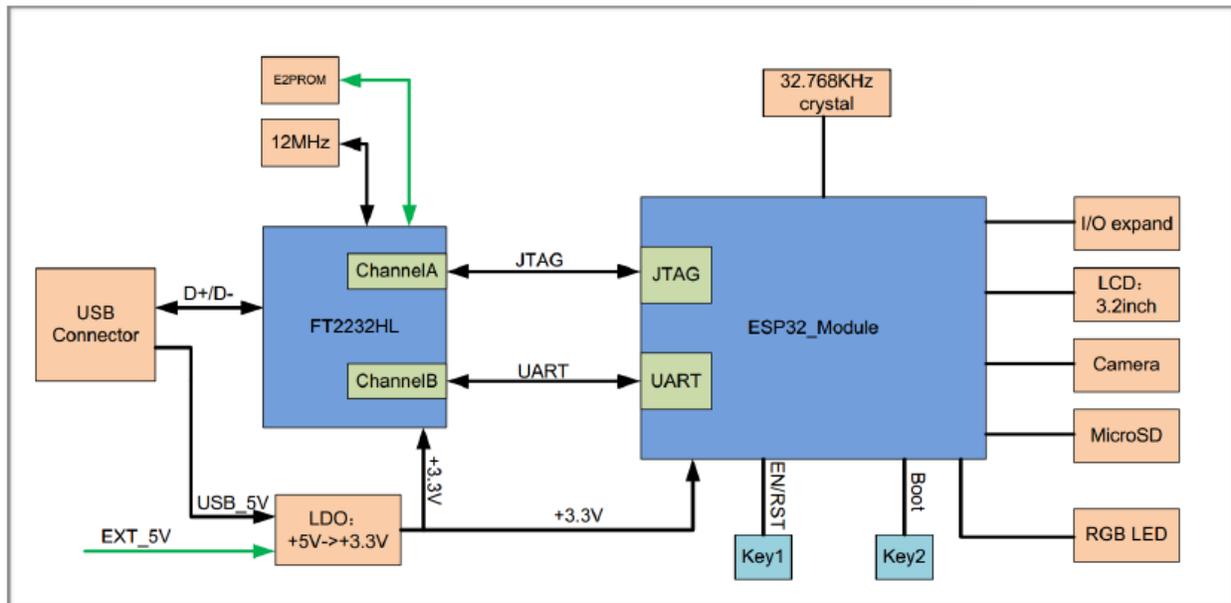


Fig. 1.3: ESP-WROVER-KIT block diagram

Functional Description

The following list and figures below describe key components, interfaces and controls of ESP-WROVER-KIT board.

32.768 kHz An external precision 32.768 kHz crystal oscillator provides the chip with a clock of low-power consumption during the Deep-sleep mode.

ESP32 Module ESP-WROVER-KIT is compatible with both ESP-WROOM-32 and ESP32-WROVER. The ESP32-WROVER module features all the functions of ESP-WROOM-32 and integrates an external 32-MBit PSRAM for flexible extended storage and data processing capabilities.

Note: GPIO16 and GPIO17 are used as the CS and clock signal for PSRAM. To ensure reliable performance, the two GPIOs are not broken out.

CTS/RTS Serial port flow control signals: the pins are not connected to the circuitry by default. To enable them, respective pins of JP14 must be shorted with jumpers.

UART Serial port: the serial TX/RX signals on FT2232HL and ESP32 are broken out to the two sides of JP11. By default, the two signals are connected with jumpers. To use the ESP32 module serial interface only, the jumpers may be removed and the module can be connected to another external serial device.

SPI SPI interface: the SPI interface connects to an external flash (PSRAM). To interface another SPI device, an extra CS signal is needed. If an ESP32-WROVER is being used, please note that the electrical level on the flash and SRAM is 1.8V.

JTAG JTAG interface: the JTAG signals on FT2232HL and ESP32 are broken out to the two sides of JP8. By default, the two signals are disconnected. To enable JTAG, shorting jumpers are required on the signals.

FT2232 FT2232 chip is a multi-protocol USB-to-serial bridge. The FT2232 chip features USB-to-UART and USB-to-JTAG functionalities. Users can control and program the FT2232 chip through the USB interface to establish communication with ESP32.

The embedded FT2232 chip is one of the distinguishing features of the ESPWROVER-KIT. It enhances users' convenience in terms of application development and debugging. In addition, users do not need to buy a JTAG debugger separately, which reduces the development cost. The schematics is provided in section [Related Documents](#).

EN Reset button: pressing this button resets the system.

Boot Download button: holding down the **Boot** button and pressing the **EN** button initiates the firmware download mode. Then user can download firmware through the serial port.

USB USB interface. It functions as the power supply for the board and the communication interface between PC and ESP32 module.

Power Select Power supply selection interface: the ESP-WROVER-KIT can be powered through the USB interface or the 5V Input interface. The user can select the power supply with a jumper. More details can be found in section [Setup Options](#), jumper header JP7.

Power Key Power on/off button: toggling to the right powers the board on; toggling to the left powers the board off.

5V Input The 5V power supply interface is used as a backup power supply in case of full-load operation.

LDO NCP1117(1A). 5V-to-3.3V LDO. (There is an alternative pin-compatible LDO — LM317DCY, with an output current of up to 1.5A). NCP1117 can provide a maximum current of 1A. The LDO solutions are available with both fixed output voltage and variable output voltage. For details please refer to [ESP-WROVER-KIT schematic](#).

Camera Camera interface: a standard OV7670 camera module is supported.

RGB Red, green and blue (RGB) light emitting diodes (LEDs), which may be controlled by pulse width modulation (PWM).

I/O All the pins on the ESP32 module are led out to the pin headers on the ESPWROVER-KIT. Users can program ESP32 to enable multiple functions such as PWM, ADC, DAC, I2C, I2S, SPI, etc.

Micro SD Card Micro SD card slot for data storage: when ESP32 enters the download mode, GPIO2 cannot be held high. However, a pull-up resistor is required on GPIO2 to enable the Micro SD Card. By default, GPIO2 and the pull-up resistor R153 are disconnected. To enable the SD Card, use jumpers on JP1 as shown in section [Setup Options](#).

LCD ESP-WROVER-KIT supports mounting and interfacing a 3.2" SPI (standard 4-wire Serial Peripheral Interface) LCD, as shown on figure [ESP-WROVER-KIT board layout - back](#).

Setup Options

There are five jumper headers available to set up the board functionality. Typical options to select from are listed in table below.

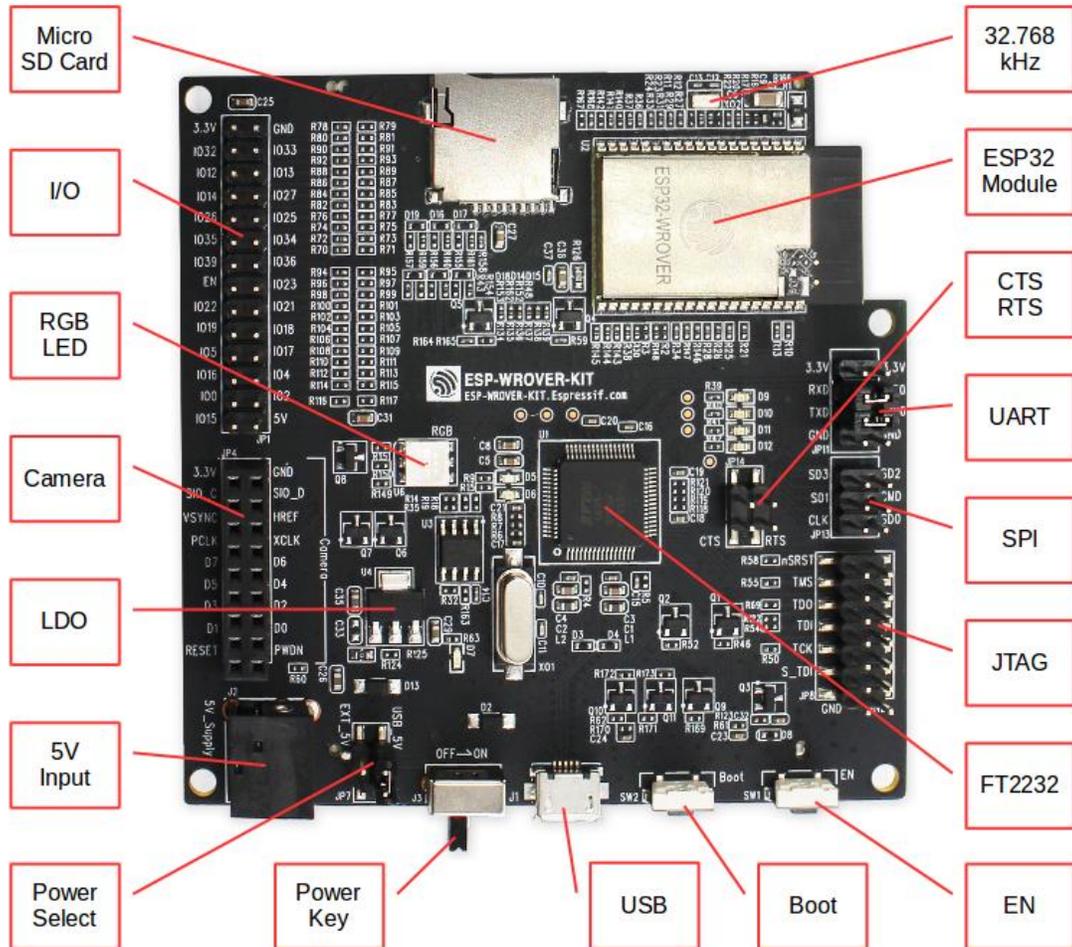


Fig. 1.4: ESP-WROVER-KIT board layout - front

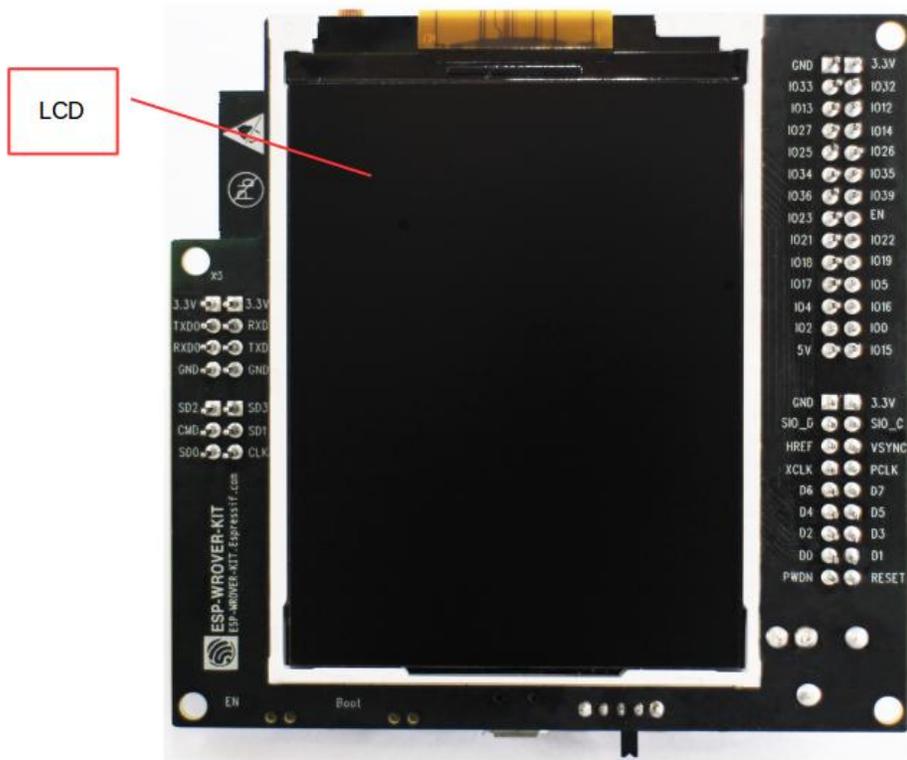
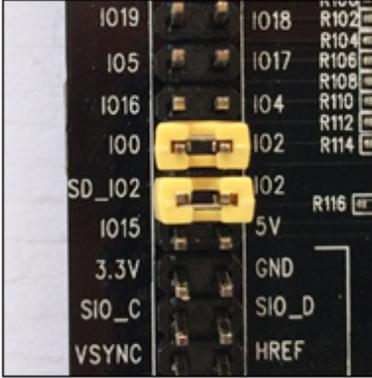
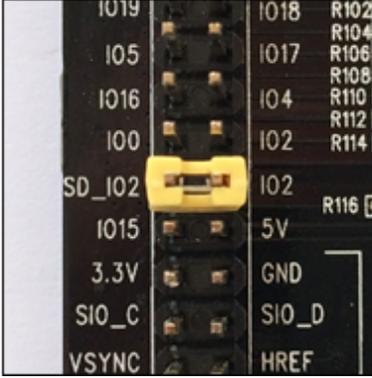
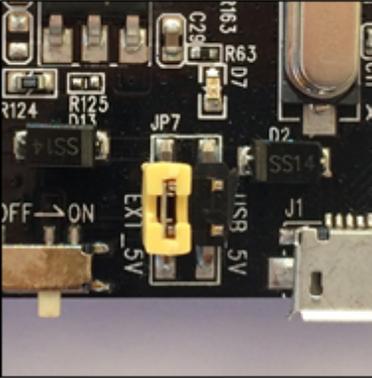
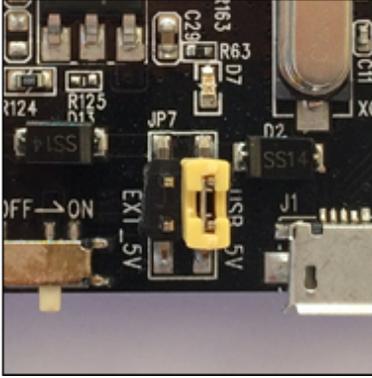


Fig. 1.5: ESP-WROVER-KIT board layout - back


Header	Jumper Setting	Description of Functionality
JP1		Assert GPIO2 low during each download (by jumping it to GPIO0)
JP1		Enable pull up for the Micro SD Card Note: applies to ESP-WROVER-KIT V2 only
JP7		Power ESP-WROVER-KIT board from an external power supply
JP7		Power ESP-WROVER-KIT board from an USB port
1.1. Guides		11

Start Application Development

Before powering up the ESP-WROVER-KIT, please make sure that the board has been received in good condition with no obvious signs of damage.

Initial Setup

Select the source of power supply for the board by setting jumper JP7. The options are either USB port or an external power supply. For this application selection of USB port is sufficient. Enable UART communication by installing jumpers on JP11. Both selections are shown in table below.

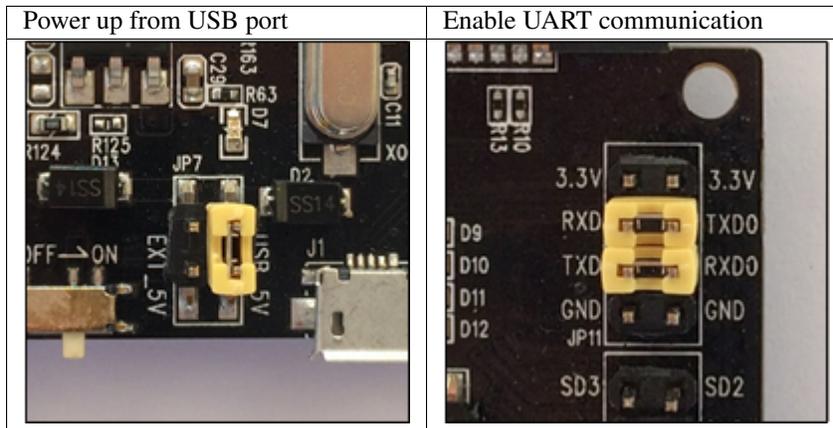

Do not install any other jumpers.

Now to Development

To start development of applications for ESP-WROVER-KIT, proceed to section [Get Started](#), that will walk you through the following steps:

- [Setup Toolchain](#) in your PC to develop applications for ESP32 in C language
- [Connect](#) the module to the PC and verify if it is accessible
- [Build and Flash](#) an example application to the ESP32
- [Monitor](#) instantly what the application is doing

Related Documents

- [ESP-WROVER-KIT schematic \(PDF\)](#)
- [ESP32 Datasheet \(PDF\)](#)
- [ESP-WROOM-32 Datasheet \(PDF\)](#)
- [JTAG Debugging for ESP32 \(PDF\)](#)

If you have different board, move to sections below.

Setup Toolchain

Depending on your experience and preferences, you may follow standard installation process or customize your environment. Instructions immediately below are for standard installation. To set up the system your own way go to section *Customized Setup of Toolchain*.

Standard Setup of Toolchain

The quickest way to start development with ESP32 is by installing prebuild toolchain. Pick up your O/S below and follow provided instructions.

Standard Setup of Toolchain for Windows

Introduction

Windows doesn't have a built-in "make" environment, so as well as installing the toolchain you will need a GNU-compatible environment. We use the **MSYS2** environment to provide this. You don't need to use this environment all the time (you can use *Eclipse* or some other front-end), but it runs behind the scenes.

Toolchain Setup

The quick setup is to download the Windows all-in-one toolchain & MSYS zip file from [dl.espressif.com](https://dl.espressif.com/dl/esp32_win32_msys2_environment_and_toolchain-20170330.zip):

https://dl.espressif.com/dl/esp32_win32_msys2_environment_and_toolchain-20170330.zip

Unzip the zip file to C:\ (or some other location, but this guide assumes C:\) and it will create an `msys32` directory with a pre-prepared environment.

Check it Out

Open a MSYS2 MINGW32 terminal window by running `C:\msys32\mingw32.exe`. The environment in this window is a bash shell.

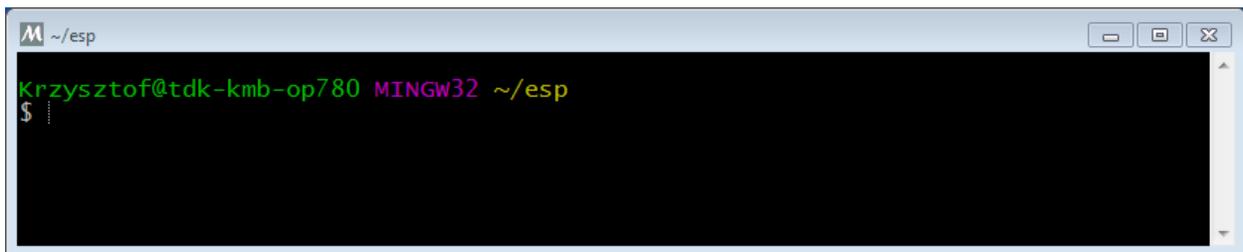


Fig. 1.6: MSYS2 MINGW32 shell window

Use this window in the following steps setting up development environment for ESP32.

Next Steps

To carry on with development environment setup, proceed to section *Get ESP-IDF*.

Related Documents

Setup Windows Toolchain from Scratch

Setting up the environment gives you some more control over the process, and also provides the information for advanced users to customize the install. The *pre-built environment*, addressed to less experienced users, has been prepared by following these steps.

To quickly setup the toolchain in standard way, using prebuild environment, proceed to section *Standard Setup of Toolchain for Windows*.

Configure Toolchain & Environment from Scratch

This process involves installing **MSYS2**, then installing the **MSYS2** and Python packages which ESP-IDF uses, and finally downloading and installing the Xtensa toolchain.

- Navigate to the **MSYS2** installer page and download the `msys2-i686-xxxxxxx.exe` installer executable (we only support a 32-bit MSYS environment, it works on both 32-bit and 64-bit Windows.) At time of writing, the latest installer is `msys2-i686-20161025.exe`.
- Run through the installer steps. **Uncheck the “Run MSYS2 32-bit now” checkbox at the end.**
- Once the installer exits, open Start Menu and find “MSYS2 MinGW 32-bit” to run the terminal.
(Why launch this different terminal? MSYS2 has the concept of different kinds of environments. The default “MSYS” environment is Cygwin-like and uses a translation layer for all Windows API calls. We need the “MinGW” environment in order to have a native Python which supports COM ports.)
- The ESP-IDF repository on github contains a script in the tools directory titled `windows_install_prerequisites.sh`. If you haven’t got a local copy of the ESP-IDF yet, that’s OK - you can just download that one file in Raw format from here: [tools/windows/windows_install_prerequisites.sh](#). Save it somewhere on your computer.
- Type the path to the shell script into the MSYS2 terminal window. You can type it as a normal Windows path, but use forward-slashes instead of back-slashes. ie: `C:/Users/myuser/Downloads/windows_install_prerequisites.sh`. You can read the script beforehand to check what it does.
- The `windows_install_prerequisites.sh` script will download and install packages for ESP-IDF support, and the ESP32 toolchain.
- During the initial update step, MSYS may update itself into a state where it can no longer operate. You may see errors like the following:

```
*** fatal error - cygheap base mismatch detected - 0x612E5408/0x612E4408. This
↪problem is probably due to using incompatible versions of the cygwin DLL.
```

If you see errors like this, close the terminal window entirely (terminating the processes running there) and then re-open a new terminal. Re-run `windows_install_prerequisites.sh` (tip: use the up arrow key to see the last run command). The update process will resume after this step.

MSYS2 Mirrors in China

There are some (unofficial) MSYS2 mirrors inside China, which substantially improves download speeds inside China.

To add these mirrors, edit the following two MSYS2 mirrorlist files before running the setup script. The mirrorlist files can be found in the `/etc/pacman.d` directory (i.e. `c:\msys2\etc\pacman.d`).

Add these lines at the top of `mirrorlist.mingw32`:

```
Server = http://mirrors.ustc.edu.cn/msys2/mingw/i686/  
Server = http://mirror.bit.edu.cn/msys2/REPOS/MINGW/i686
```

Add these lines at the top of `mirrorlist.msys`:

```
Server = http://mirrors.ustc.edu.cn/msys2/msys/$arch  
Server = http://mirror.bit.edu.cn/msys2/REPOS/MSYS2/$arch
```

HTTP Proxy

You can enable an HTTP proxy for MSYS and PIP downloads by setting the `http_proxy` variable in the terminal before running the setup script:

```
export http_proxy='http://http.proxy.server:PORT'
```

Or with credentials:

```
export http_proxy='http://user:password@http.proxy.server:PORT'
```

Add this line to `/etc/profile` in the MSYS directory in order to permanently enable the proxy when using MSYS.

Alternative Setup: Just download a toolchain

If you already have an MSYS2 install or want to do things differently, you can download just the toolchain here:

<https://dl.espressif.com/dl/xtensa-esp32-elf-win32-1.22.0-61-gab8375a-5.2.0.zip>

Note: If you followed instructions *Configure Toolchain & Environment from Scratch*, you already have the toolchain and you won't need this download.

Important: Just having this toolchain is *not enough* to use ESP-IDF on Windows. You will need GNU make, bash, and sed at minimum. The above environments provide all this, plus a host compiler (required for menuconfig support).

Next Steps

To carry on with development environment setup, proceed to section *Get ESP-IDF*.

Standard Setup of Toolchain for Linux

Install Prerequisites

To compile with ESP-IDF you need to get the following packages:

- CentOS 7:

```
sudo yum install git wget make ncurses-devel flex bison gperf python pyserial
```

- Ubuntu and Debian:

```
sudo apt-get install git wget make libncurses-dev flex bison gperf python python-  
↳serial
```

- Arch:

```
sudo pacman -S --needed gcc git make ncurses flex bison gperf python2-pyserial
```

Toolchain Setup

ESP32 toolchain for Linux is available for download from Espressif website:

- for 64-bit Linux:

<https://dl.espressif.com/dl/xtensa-esp32-elf-linux64-1.22.0-61-gab8375a-5.2.0.tar.gz>

- for 32-bit Linux:

<https://dl.espressif.com/dl/xtensa-esp32-elf-linux32-1.22.0-61-gab8375a-5.2.0.tar.gz>

1. Download this file, then extract it in ~/esp directory:

```
mkdir -p ~/esp  
cd ~/esp  
tar -xzf ~/Downloads/xtensa-esp32-elf-linux64-1.22.0-61-gab8375a-5.2.0.tar.gz
```

2. The toolchain will be extracted into ~/esp/xtensa-esp32-elf/ directory.

To use it, you will need to update your PATH environment variable in ~/.profile file. To make xtensa-esp32-elf available for all terminal sessions, add the following line to your ~/.profile file:

```
export PATH=$PATH:$HOME/esp/xtensa-esp32-elf/bin
```

Alternatively, you may create an alias for the above command. This way you can get the toolchain only when you need it. To do this, add different line to your ~/.profile file:

```
alias get_esp32="export PATH=$PATH:$HOME/esp/xtensa-esp32-elf/bin"
```

Then when you need the toolchain you can type get_esp32 on the command line and the toolchain will be added to your PATH.

Note: If you have /bin/bash set as login shell, and both .bash_profile and .profile exist, then update .bash_profile instead.

3. Log off and log in back to make the .profile changes effective. Run the following command to verify if PATH is correctly set:

```
printenv PATH
```

You are looking for similar result containing toolchain's path at the end of displayed string:

```
$ printenv PATH  
/home/user-name/bin:/home/user-name/.local/bin:/usr/local/sbin:/usr/local/bin:/  
↳usr/sbin:/usr/bin:/sbin:/bin:/usr/games:/usr/local/games:/snap/bin:/home/user-  
↳name/esp/xtensa-esp32-elf/bin
```

Instead of `/home/user-name` there should be a home path specific to your installation.

Arch Linux Users

To run the precompiled `gdb (xtensa-esp32-elf-gdb)` in Arch Linux requires `ncurses 5`, but Arch uses `ncurses 6`.

Backwards compatibility libraries are available in [AUR](#) for native and `lib32` configurations:

- <https://aur.archlinux.org/packages/ncurses5-compat-libs/>
- <https://aur.archlinux.org/packages/lib32-ncurses5-compat-libs/>

Alternatively, use `crosstool-NG` to compile a `gdb` that links against `ncurses 6`.

Next Steps

To carry on with development environment setup, proceed to section [Get ESP-IDF](#).

Related Documents

Setup Linux Toolchain from Scratch

The following instructions are alternative to downloading binary toolchain from Espressif website. To quickly setup the binary toolchain, instead of compiling it yourself, backup and proceed to section [Standard Setup of Toolchain for Linux](#).

Install Prerequisites

To compile with ESP-IDF you need to get the following packages:

- Ubuntu and Debian:

```
sudo apt-get install git wget make libncurses-dev flex bison gperf python python-serial
```

- Arch:

```
sudo pacman -S --needed gcc git make ncurses flex bison gperf python2-pyserial
```

Compile the Toolchain from Source

- Install dependencies:

- CentOS 7:

```
sudo yum install gawk gperf grep gettext ncurses-devel python python-devel automake bison flex texinfo help2man libtool
```

- Ubuntu pre-16.04:

```
sudo apt-get install gawk gperf grep gettext libncurses-dev python python-dev automake bison flex texinfo help2man libtool
```

- Ubuntu 16.04:

```
sudo apt-get install gawk gperf grep gettext python python-dev automake bison_  
↵ flex texinfo help2man libtool libtool-bin
```

- Debian:

```
TODO
```

- Arch:

```
TODO
```

Download `crosstool-NG` and build it:

```
cd ~/esp  
git clone -b xtensa-1.22.x https://github.com/espressif/crosstool-NG.git  
cd crosstool-NG  
./bootstrap && ./configure --enable-local && make install
```

Build the toolchain:

```
./ct-ng xtensa-esp32-elf  
./ct-ng build  
chmod -R u+w builds/xtensa-esp32-elf
```

Toolchain will be built in `~/esp/crosstool-NG/builds/xtensa-esp32-elf`. Follow *instructions for standard setup* to add the toolchain to your `PATH`.

Next Steps

To carry on with development environment setup, proceed to section *Get ESP-IDF*.

Standard Setup of Toolchain for Mac OS

Install Prerequisites

- install pip:

```
sudo easy_install pip
```

- install pyserial:

```
sudo pip install pyserial
```

Toolchain Setup

ESP32 toolchain for macOS is available for download from Espressif website:

<https://dl.espressif.com/dl/xtensa-esp32-elf-osx-1.22.0-61-gab8375a-5.2.0.tar.gz>

Download this file, then extract it in `~/esp` directory:

```
mkdir -p ~/esp
cd ~/esp
tar -xzf ~/Downloads/xtensa-esp32-elf-osx-1.22.0-61-gab8375a-5.2.0.tar.gz
```

The toolchain will be extracted into `~/esp/xtensa-esp32-elf/` directory.

To use it, you will need to update your `PATH` environment variable in `~/.profile` file. To make `xtensa-esp32-elf` available for all terminal sessions, add the following line to your `~/.profile` file:

```
export PATH=$PATH:$HOME/esp/xtensa-esp32-elf/bin
```

Alternatively, you may create an alias for the above command. This way you can get the toolchain only when you need it. To do this, add different line to your `~/.profile` file:

```
alias get_esp32="export PATH=$PATH:$HOME/esp/xtensa-esp32-elf/bin"
```

Then when you need the toolchain you can type `get_esp32` on the command line and the toolchain will be added to your `PATH`.

Next Steps

To carry on with development environment setup, proceed to section [Get ESP-IDF](#).

Related Documents

Setup Toolchain for Mac OS from Scratch

Install Prerequisites

- install pip:

```
sudo easy_install pip
```

- install pyserial:

```
sudo pip install pyserial
```

Compile the Toolchain from Source

- Install dependencies:
 - Install either [MacPorts](#) or [homebrew](#) package manager. MacPorts needs a full XCode installation, while homebrew only needs XCode command line tools.
 - with MacPorts:

```
sudo port install gsed gawk binutils gperf grep gettext wget libtool autoconf_
↪automake
```

- with homebrew:

```
brew install gnu-sed gawk binutils gperftools gettext wget help2man libtool_
↪autoconf automake
```

Create a case-sensitive filesystem image:

```
hdiutil create ~/esp/crosstool.dmg -volname "ctng" -size 10g -fs "Case-sensitive HFS+"
```

Mount it:

```
hdiutil mount ~/esp/crosstool.dmg
```

Create a symlink to your work directory:

```
cd ~/esp  
ln -s /Volumes/ctng crosstool-NG
```

Download crosstool-NG and build it:

```
cd ~/esp  
git clone -b xtensa-1.22.x https://github.com/espressif/crosstool-NG.git  
cd crosstool-NG  
./bootstrap && ./configure --enable-local && make install
```


Build the toolchain:

```
./ct-ng xtensa-esp32-elf  
./ct-ng build  
chmod -R u+w builds/xtensa-esp32-elf
```

Toolchain will be built in `~/esp/crosstool-NG/builds/xtensa-esp32-elf`. Follow *instructions for standard setup* to add the toolchain to your PATH.

Next Steps

To carry on with development environment setup, proceed to section *Get ESP-IDF*.

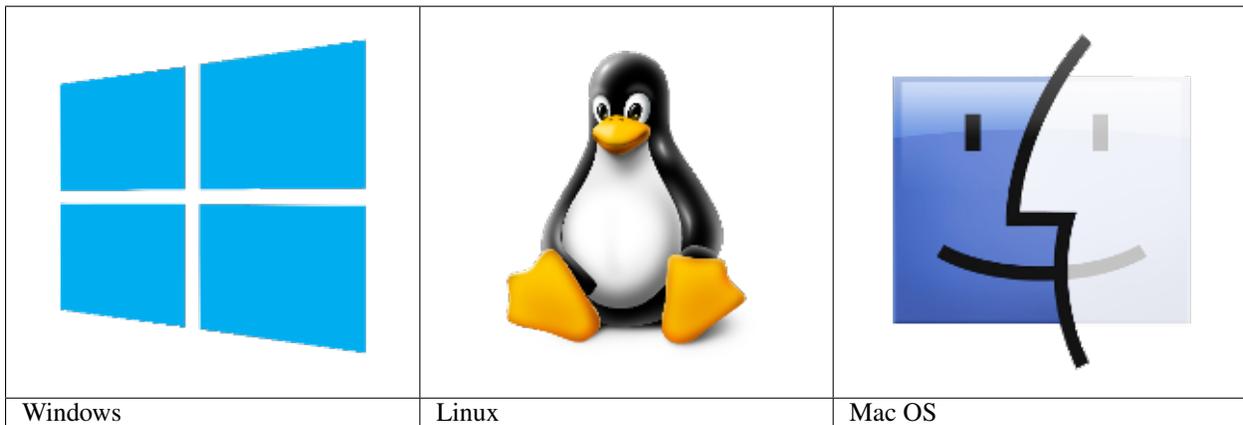

Note: We are using `~/esp` directory to install prebuild toolchain, ESP-IDF and sample applications. You can use different directory, but need to adjust respective commands.

Once you are done with setting up the toolchain then go to section *Get ESP-IDF*.

Customized Setup of Toolchain

Instead of downloading binary toolchain from Espressif website (*Standard Setup of Toolchain* above) you may build the toolchain yourself.

If you can't think of a reason why you need to build it yourself, then probably it's better to stick with the binary version. However, here are some of the reasons why you might want to compile it from source:

- if you want to customize toolchain build configuration
- if you want to use a different GCC version (such as 4.8.5)
- if you want to hack gcc or newlib or libstdc++
- if you are curious and/or have time to spare
- if you don't trust binaries downloaded from the Internet

In any case, here are the instructions to compile the toolchain yourself.

Get ESP-IDF

Once you have the toolchain (that contains programs to compile and build the application) installed, you also need ESP32 specific API / libraries. They are provided by Espressif in [ESP-IDF repository](#). To get it, open terminal, navigate to the directory you want to put ESP-IDF, and clone it using `git clone` command:

```
cd ~/esp
git clone --recursive https://github.com/espressif/esp-idf.git
```

ESP-IDF will be downloaded into `~/esp/esp-idf`.

Note: Do not miss the `--recursive` option. If you have already cloned ESP-IDF without this option, run another command to get all the submodules:

```
cd ~/esp/esp-idf
git submodule update --init
```

Note: While cloning submodules on **Windows** platform, the `git clone` command may print some output starting `': not a valid identifier....` This is a [known issue](#) but the `git clone` still succeeds without any problems.

Setup Path to ESP-IDF

The toolchain programs access ESP-IDF using `IDF_PATH` environment variable. This variable should be set up on your PC, otherwise projects will not build. Setting may be done manually, each time PC is restarted. Another option is to set up it permanently by defining `IDF_PATH` in user profile. To do so, follow instructions specific to [Windows](#) , [Linux and MacOS](#) in section [Add IDF_PATH to User Profile](#).

Start a Project

Now you are ready to prepare your application for ESP32. To start off quickly, we will use `get-started/hello_world` project from `examples` directory in IDF.

Copy `get-started/hello_world` to `~/esp` directory:

```
cd ~/esp
cp -r $IDF_PATH/examples/get-started/hello_world .
```

You can also find a range of example projects under the `examples` directory in ESP-IDF. These example project directories can be copied in the same way as presented above, to begin your own projects.

Important: The esp-idf build system does not support spaces in paths to esp-idf or to projects.

Connect

You are almost there. To be able to proceed further, connect ESP32 board to PC, check under what serial port the board is visible and verify if serial communication works. If you are not sure how to do it, check instructions in section *Establish Serial Connection with ESP32*. Note the port number, as it will be required in the next step.

Configure

Being in terminal window, go to directory of `hello_world` application by typing `cd ~/esp/hello_world`. Then start project configuration utility `menuconfig`:

```
cd ~/esp/hello_world
make menuconfig
```

If previous steps have been done correctly, the following menu will be displayed:

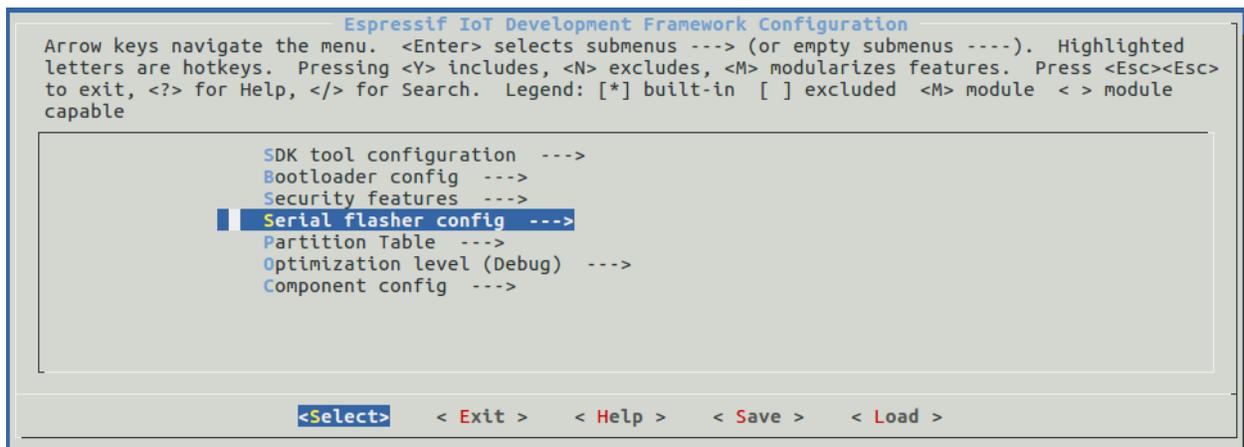


Fig. 1.7: Project configuration - Home window

In the menu, navigate to `Serial flasher config > Default serial port` to configure the serial port, where project will be loaded to. Confirm selection by pressing `enter`, save configuration by selecting `< Save >` and then exit application by selecting `< Exit >`.

Note: On Windows, serial ports have names like COM1. On MacOS, they start with `/dev/cu..` On Linux, they start with `/dev/tty`. (See [Establish Serial Connection with ESP32](#) for full details.)

Here are couple of tips on navigation and use of `menuconfig`:

- Use up & down arrow keys to navigate the menu.
- Use Enter key to go into a submenu, Escape key to go out or to exit.
- Type ? to see a help screen. Enter key exits the help screen.
- Use Space key, or Y and N keys to enable (Yes) and disable (No) configuration items with checkboxes “[*]”
- Pressing ? while highlighting a configuration item displays help about that item.
- Type / to search the configuration items.

Note: If you are Arch Linux user, navigate to `SDK tool configuration` and change the name of Python 2 interpreter from `python` to `python2`.

Build and Flash

Now you can build and flash the application. Run:

```
make flash
```

This will compile the application and all the ESP-IDF components, generate bootloader, partition table, and application binaries, and flash these binaries to your ESP32 board.

```
esptool.py v2.0-beta2
Flashing binaries to serial port /dev/ttyUSB0 (app at offset 0x10000)...
esptool.py v2.0-beta2
Connecting.....____
Uploading stub...
Running stub...
Stub running...
Changing baud rate to 921600
Changed.
Attaching SPI flash...
Configuring flash size...
Auto-detected Flash size: 4MB
Flash params set to 0x0220
Compressed 11616 bytes to 6695...
Wrote 11616 bytes (6695 compressed) at 0x00001000 in 0.1 seconds (effective 920.5
↪kbit/s)...
Hash of data verified.
Compressed 408096 bytes to 171625...
Wrote 408096 bytes (171625 compressed) at 0x00010000 in 3.9 seconds (effective 847.3
↪kbit/s)...
Hash of data verified.
Compressed 3072 bytes to 82...
```

```
Wrote 3072 bytes (82 compressed) at 0x00008000 in 0.0 seconds (effective 8297.4 kbit/
↵s)...
Hash of data verified.

Leaving...
Hard resetting...
```

If there are no issues, at the end of build process, you should see messages describing progress of loading process. Finally, the end module will be reset and “hello_world” application will start.

If you’d like to use the Eclipse IDE instead of running `make`, check out the [Eclipse guide](#).

Monitor

To see if “hello_world” application is indeed running, type `make monitor`. This command is launching *IDF Monitor* application:

```
$ make monitor
MONITOR
--- idf_monitor on /dev/ttyUSB0 115200 ---
--- Quit: Ctrl+] | Menu: Ctrl+T | Help: Ctrl+T followed by Ctrl+H ---
ets Jun  8 2016 00:22:57

rst:0x1 (POWERON_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
ets Jun  8 2016 00:22:57
...
```

Several lines below, after start up and diagnostic log, you should see “Hello world!” printed out by the application.

```
...
Hello world!
Restarting in 10 seconds...
I (211) cpu_start: Starting scheduler on APP CPU.
Restarting in 9 seconds...
Restarting in 8 seconds...
Restarting in 7 seconds...
```

To exit monitor use shortcut `Ctrl+]`. To execute `make flash` and `make monitor` in one shoot type `make flash monitor`. Check section *IDF Monitor* for handy shortcuts and more details on using this application.

Related Documents

Add IDF_PATH to User Profile

To preserve setting of `IDF_PATH` environment variable between system restarts, add it to the user profile, following instructions below.

Windows

The user profile scripts are contained in `C:/msys32/etc/profile.d/` directory. They are executed every time you open an MSYS2 window.

1. Create a new script file in `C:/msys32/etc/profile.d/` directory. Name it `export_idf_path.sh`.
2. Identify the path to ESP-IDF directory. It is specific to your system configuration and may look something like `C:\msys32\home\user-name\esp\esp-idf`
3. Add the `export` command to the script file, e.g.:

```
export IDF_PATH="C:/msys32/home/user-name/esp/esp-idf"
```

Remember to replace back-slashes with forward-slashes in the original Windows path.

4. Save the script file.
5. Close MSYS2 window and open it again. Check if `IDF_PATH` is set, by typing:

```
printenv IDF_PATH
```

The path previously entered in the script file should be printed out.

If you do not like to have `IDF_PATH` set up permanently in user profile, you should enter it manually on opening of an MSYS2 window:

```
export IDF_PATH="C:/msys32/home/user-name/esp/esp-idf"
```

If you got here from section *Setup Path to ESP-IDF*, while installing s/w for ESP32 development, then go back to section *Start a Project*.

Linux and MacOS

Set up `IDF_PATH` by adding the following line to `~/ .profile` file:

```
export IDF_PATH=~ /esp/esp-idf
```

Log off and log in back to make this change effective.

Note: If you have `/bin/bash` set as login shell, and both `.bash_profile` and `.profile` exist, then update `.bash_profile` instead.

Run the following command to check if `IDF_PATH` is set:

```
printenv IDF_PATH
```

The path previously entered in `~/ .profile` file (or set manually) should be printed out.

If you do not like to have `IDF_PATH` set up permanently, you should enter it manually in terminal window on each restart or logout:

```
export IDF_PATH=~ /esp/esp-idf
```

If you got here from section *Setup Path to ESP-IDF*, while installing s/w for ESP32 development, then go back to section *Start a Project*.

Establish Serial Connection with ESP32

This section provides guidance how to establish serial connection between ESP32 and PC.

Connect ESP32 to PC

Connect the ESP32 board to the PC using the USB cable. If device driver does not install automatically, identify USB to serial converter chip on your ESP32 board (or external converter dongle), search for drivers in internet and install them.

Below are the links to Windows and MacOS drivers for ESP32 boards produced by Espressif:

- [ESP32 Core Board - CP210x USB to UART Bridge VCP Drivers](#)
- [ESP32 WROVER KIT and ESP32 Demo Board - FTDI Virtual COM Port Drivers](#)

For Linux, suitable drivers should already be bundled with the operating system.

Check port on Windows

Check the list of identified COM ports in the Windows Device Manager. Disconnect ESP32 and connect it back, to verify which port disappears from the list and then shows back again.

Figures below show serial port for ESP32 DevKitC and ESP32 WROVER KIT

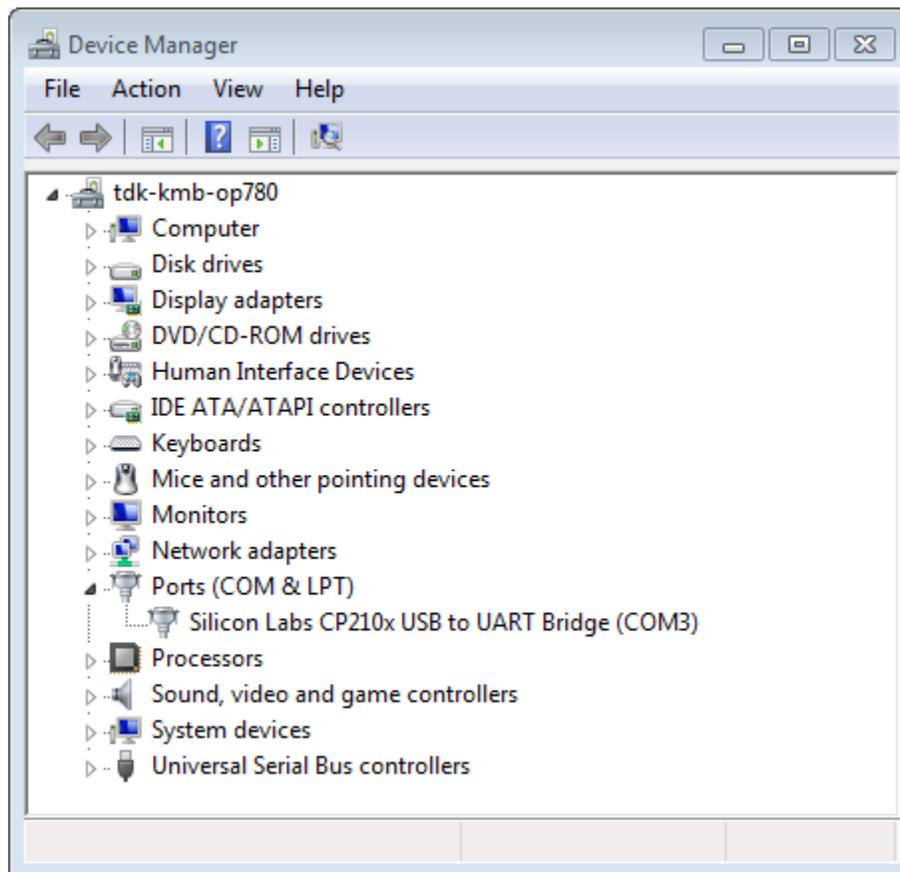


Fig. 1.8: USB to UART bridge of ESP32-DevKitC in Windows Device Manager

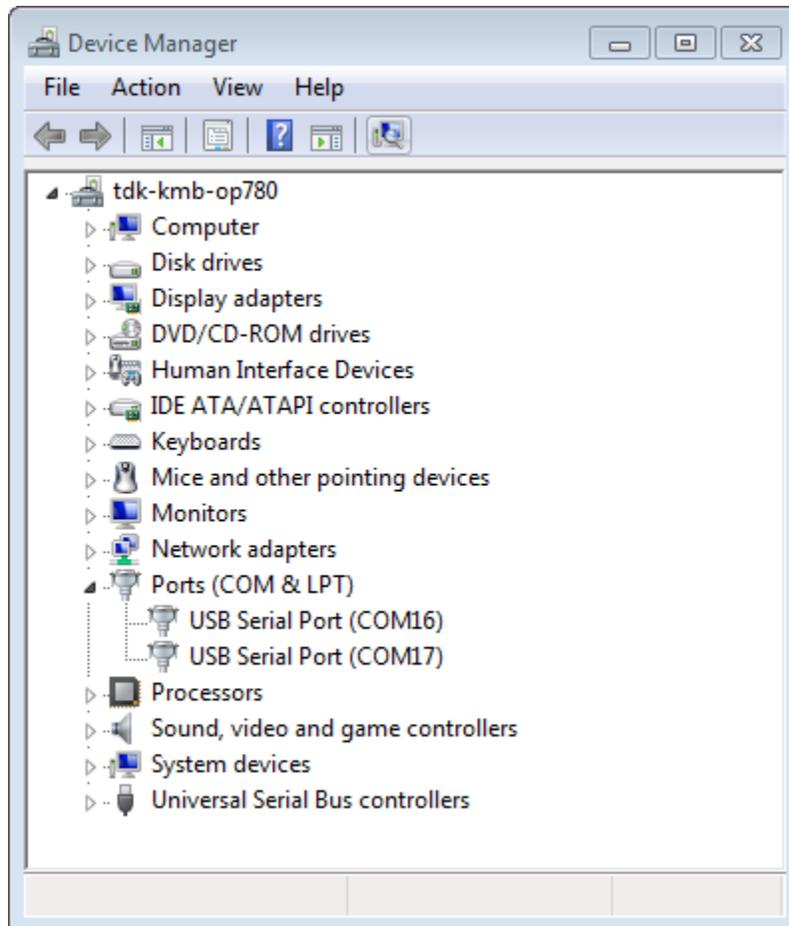


Fig. 1.9: Two USB Serial Ports of ESP-WROVER-KIT in Windows Device Manager

Check port on Linux and MacOS

To check the device name for the serial port of your ESP32 board (or external converter dongle), run this command two times, first with the board / dongle unplugged, then with plugged in. The port which appears the second time is the one you need:

Linux

```
ls /dev/tty*
```

MacOS

```
ls /dev/cu.*
```

Verify serial connection

Now verify that the serial connection is operational. You can do this using a serial terminal program. In this example we will use [PuTTY SSH Client](#) that is available for both Windows and Linux. You can use other serial program and set communication parameters like below.

Run terminal, set identified serial port, baud rate = 115200, data bits = 8, stop bits = 1, and parity = N. Below are example screen shots of setting the port and such transmission parameters (in short described as 115200-8-1-N) on Windows and Linux. Remember to select exactly the same serial port you have identified in steps above.

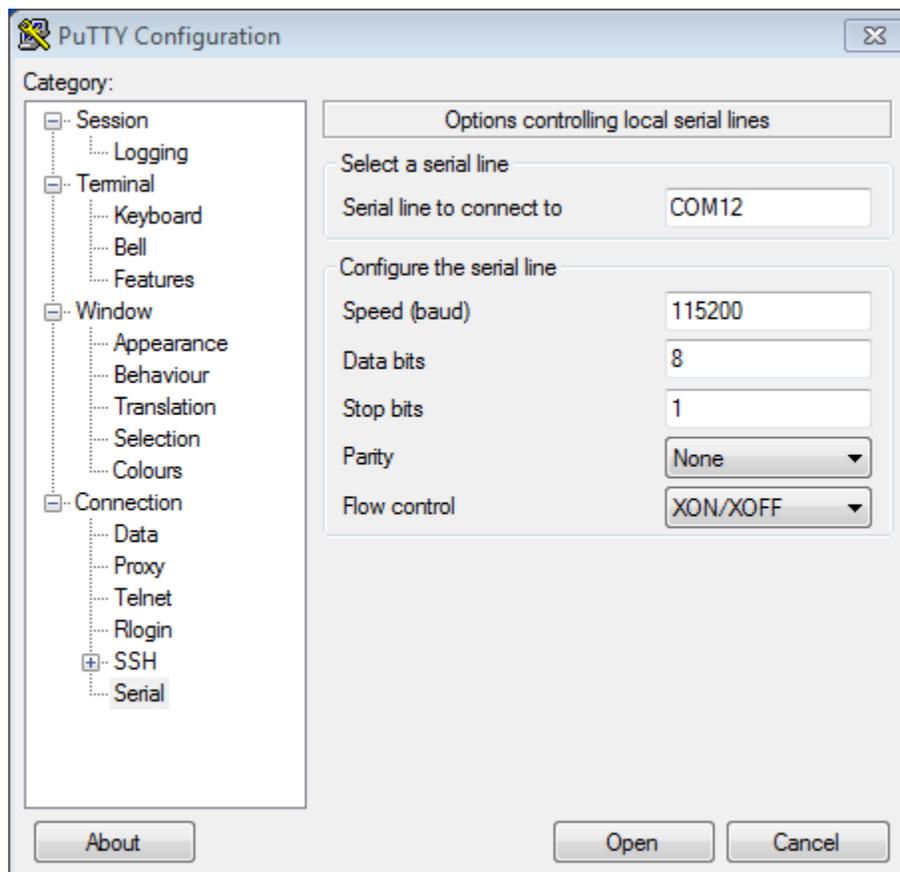


Fig. 1.10: Setting Serial Communication in PuTTY on Windows

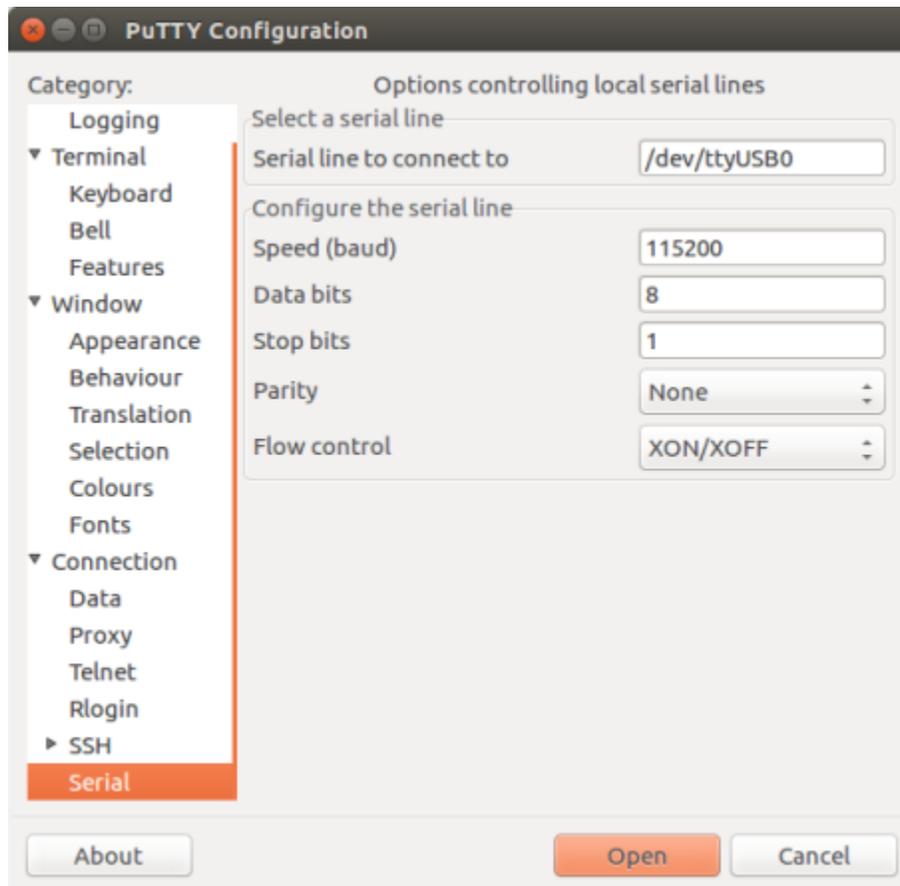


Fig. 1.11: Setting Serial Communication in PuTTY on Linux

Then open serial port in terminal and check, if you see any log printed out by ESP32. The log contents will depend on application loaded to ESP32. An example log by ESP32 is shown below.

```
ets Jun  8 2016 00:22:57

rst:0x5 (DEEPSLEEP_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
ets Jun  8 2016 00:22:57

rst:0x7 (TGOWDT_SYS_RESET),boot:0x13 (SPI_FAST_FLASH_BOOT)
configsip: 0, SPIWP:0x00
clk_drv:0x00,q_drv:0x00,d_drv:0x00,cs0_drv:0x00,hd_drv:0x00,wp_drv:0x00
mode:DIO, clock div:2
load:0x3fff0008,len:8
load:0x3fff0010,len:3464
load:0x40078000,len:7828
load:0x40080000,len:252
entry 0x40080034
I (44) boot: ESP-IDF v2.0-rc1-401-gf9fba35 2nd stage bootloader
I (45) boot: compile time 18:48:10

...
```

If you see some legible log, it means serial connection is working and you are ready to proceed with installation and finally upload of application to ESP32.

Note: For some serial port wiring configurations, the serial RTS & DTR pins need to be disabled in the terminal program before the ESP32 will boot and produce serial output. This depends on the hardware itself, most development boards (including all Espressif boards) *do not* have this issue. The issue is present if RTS & DTR are wired directly to the EN & GPIO0 pins. See the [esptool documentation](#) for more details.

Note: Close serial terminal after verification that communication is working. In next step we are going to use another application to upload ESP32. This application will not be able to access serial port while it is open in terminal.

If you got here from section [Connect](#) when installing s/w for ESP32 development, then go back to section [Configure](#).

Build and Flash with Make

Finding a project

As well as the `esp-idf-template` project, ESP-IDF comes with some example projects on github in the [examples](#) directory.

Once you've found the project you want to work with, change to its directory and you can configure and build it.

Configuring your project

```
make menuconfig
```

Compiling your project

```
make all
```

... will compile app, bootloader and generate a partition table based on the config.

Flashing your project

When `make all` finishes, it will print a command line to use `esptool.py` to flash the chip. However you can also do this from `make` by running:

```
make flash
```

This will flash the entire project (app, bootloader and partition table) to a new chip. The settings for serial port flashing can be configured with `make menuconfig`.

You don't need to run `make all` before running `make flash`, `make flash` will automatically rebuild anything which needs it.

Compiling & Flashing Just the App

After the initial flash, you may just want to build and flash just your app, not the bootloader and partition table:

- `make app` - build just the app.
- `make app-flash` - flash just the app.

`make app-flash` will automatically rebuild the app if it needs it.

There's no downside to reflashing the bootloader and partition table each time, if they haven't changed.

The Partition Table

Once you've compiled your project, the "build" directory will contain a binary file with a name like "my_app.bin". This is an ESP32 image binary that can be loaded by the bootloader.

A single ESP32's flash can contain multiple apps, as well as many kinds of data (calibration data, filesystems, parameter storage, etc). For this reason, a partition table is flashed to offset 0x8000 in the flash.

Each entry in the partition table has a name (label), type (app, data, or something else), subtype and the offset in flash where the partition is loaded.

The simplest way to use the partition table is to `make menuconfig` and choose one of the simple predefined partition tables:

- "Single factory app, no OTA"
- "Factory app, two OTA definitions"

In both cases the factory app is flashed at offset 0x10000. If you `make partition_table` then it will print a summary of the partition table.

For more details about *partition tables* and how to create custom variations, view the *documentation*.

Build and Flash with Eclipse IDE

Installing Eclipse IDE

The Eclipse IDE gives you a graphical integrated development environment for writing, compiling and debugging ESP-IDF projects.

- Start by installing the esp-idf for your platform (see files in this directory with steps for Windows, OS X, Linux).
- We suggest building a project from the command line first, to get a feel for how that process works. You also need to use the command line to configure your esp-idf project (via `make menuconfig`), this is not currently supported inside Eclipse.
- Download the Eclipse Installer for your platform from eclipse.org.
- When running the Eclipse Installer, choose “Eclipse for C/C++ Development” (in other places you’ll see this referred to as CDT.)

Windows Users

Using ESP-IDF with Eclipse on Windows requires different configuration steps. *See the [Eclipse IDE on Windows guide](#).*

Setting up Eclipse

Once your new Eclipse installation launches, follow these steps:

Import New Project

- Eclipse makes use of the Makefile support in ESP-IDF. This means you need to start by creating an ESP-IDF project. You can use the idf-template project from github, or open one of the examples in the esp-idf examples subdirectory.
- Once Eclipse is running, choose File -> Import...
- In the dialog that pops up, choose “C/C++” -> “Existing Code as Makefile Project” and click Next.
- On the next page, enter “Existing Code Location” to be the directory of your IDF project. Don’t specify the path to the ESP-IDF directory itself (that comes later). The directory you specify should contain a file named “Makefile” (the project Makefile).
- On the same page, under “Toolchain for Indexer Settings” choose “Cross GCC”. Then click Finish.

Project Properties

- The new project will appear under Project Explorer. Right-click the project and choose Properties from the context menu.
- Click on the “Environment” properties page under “C/C++ Build”. Click “Add...” and enter name `BATCH_BUILD` and value `1`.
- Click “Add...” again, and enter name `IDF_PATH`. The value should be the full path where ESP-IDF is installed.
- Edit the `PATH` environment variable. Keep the current value, and append the path to the Xtensa toolchain that will be installed as part of IDF setup (`something/xtensa-esp32-elf/bin`) if this is not already listed on the `PATH`.

- On macOS, add a PYTHONPATH environment variable and set it to `/Library/Frameworks/Python.framework/Versions/2.7/lib/python2.7/site-packages`. This is so that the system Python, which has pyserial installed as part of the setup steps, overrides any built-in Eclipse Python.

Navigate to “C/C++ General” -> “Preprocessor Include Paths” property page:

- Click the “Providers” tab
- In the list of providers, click “CDT Cross GCC Built-in Compiler Settings”. Under “Command to get compiler specs”, replace the text `${COMMAND}` at the beginning of the line with `xtensa-esp32-elf-gcc`. This means the full “Command to get compiler specs” should be `xtensa-esp32-elf-gcc ${FLAGS} -E -P -v -dD "${INPUTS}"`.
- In the list of providers, click “CDT GCC Build Output Parser” and type `xtensa-esp32-elf-` at the beginning of the Compiler command pattern. This means the full Compiler command pattern should be `xtensa-esp32-elf-(g?cc)|([gc]\+\+)\|(clang)`

Building in Eclipse

Before your project is first built, Eclipse may show a lot of errors and warnings about undefined values. This is because some source files are automatically generated as part of the esp-idf build process. These errors and warnings will go away after you build the project.

- Click OK to close the Properties dialog in Eclipse.
- Outside Eclipse, open a command line prompt. Navigate to your project directory, and run `make menuconfig` to configure your project’s esp-idf settings. This step currently has to be run outside Eclipse.

If you try to build without running a configuration step first, esp-idf will prompt for configuration on the command line - but Eclipse is not able to deal with this, so the build will hang or fail.

- Back in Eclipse, choose Project -> Build to build your project.

TIP: If your project had already been built outside Eclipse, you may need to do a Project -> Clean before choosing Project -> Build. This is so Eclipse can see the compiler arguments for all source files. It uses these to determine the header include paths.

Flash from Eclipse

You can integrate the “make flash” target into your Eclipse project to flash using `esptool.py` from the Eclipse UI:

- Right-click your project in Project Explorer (important to make sure you select the project, not a directory in the project, or Eclipse may find the wrong Makefile.)
- Select Make Targets -> Create from the context menu.
- Type “flash” as the target name. Leave the other options as their defaults.
- Now you can use Project -> Make Target -> Build (Shift+F9) to build the custom flash target, which will compile and flash the project.

Note that you will need to use “make menuconfig” to set the serial port and other config options for flashing. “make menuconfig” still requires a command line terminal (see the instructions for your platform.)

Follow the same steps to add `bootloader` and `partition_table` targets, if necessary.

Related Documents

Eclipse IDE on Windows

Configuring Eclipse on Windows requires some different steps. The full configuration steps for Windows are shown below.

(For OS X and Linux instructions, see the *Eclipse IDE page*.)

Installing Eclipse IDE

Follow the steps under *Installing Eclipse IDE* for all platforms.

Setting up Eclipse on Windows

Once your new Eclipse installation launches, follow these steps:

Import New Project

- Eclipse makes use of the Makefile support in ESP-IDF. This means you need to start by creating an ESP-IDF project. You can use the idf-template project from github, or open one of the examples in the esp-idf examples subdirectory.
- Once Eclipse is running, choose File -> Import...
- In the dialog that pops up, choose “C/C++” -> “Existing Code as Makefile Project” and click Next.
- On the next page, enter “Existing Code Location” to be the directory of your IDF project. Don’t specify the path to the ESP-IDF directory itself (that comes later). The directory you specify should contain a file named “Makefile” (the project Makefile).
- On the same page, under “Toolchain for Indexer Settings” uncheck “Show only available toolchains that support this platform”.
- On the extended list that appears, choose “Cygwin GCC”. Then click Finish.

Note: you may see warnings in the UI that Cygwin GCC Toolchain could not be found. This is OK, we’re going to reconfigure Eclipse to find our toolchain.

Project Properties

- The new project will appear under Project Explorer. Right-click the project and choose Properties from the context menu.
- Click on the “C/C++ Build” properties page (top-level):
 - Uncheck “Use default build command” and enter this for the custom build command: `python ${IDF_PATH}/tools/windows/eclipse_make.py`.
- Click on the “Environment” properties page under “C/C++ Build”:
 - Click “Add...” and enter name BATCH_BUILD and value 1.

- Click “Add...” again, and enter name `IDF_PATH`. The value should be the full path where ESP-IDF is installed. The `IDF_PATH` directory should be specified using forwards slashes not backslashes, ie `C:/Users/MyUser/Development/esp-idf`.
- Edit the `PATH` environment variable. Delete the existing value and replace it with `C:\msys32\usr\bin;C:\msys32\mingw32\bin;C:\msys32\opt\xtensa-esp32-elf\bin` (If you installed `msys32` to a different directory then you’ll need to change these paths to match).
- Click on “C/C++ General” -> “Preprocessor Include Paths, Macros, etc.” property page:
 - Click the “Providers” tab
 - * In the list of providers, click “CDT GCC Built-in Compiler Settings Cygwin”. Under “Command to get compiler specs”, replace the text `${COMMAND}` at the beginning of the line with `xtensa-esp32-elf-gcc`. This means the full “Command to get compiler specs” should be `xtensa-esp32-elf-gcc ${FLAGS} -E -P -v -dD "${INPUTS}"`.
 - * In the list of providers, click “CDT GCC Build Output Parser” and type `xtensa-esp32-elf-` at the beginning of the Compiler command pattern. This means the full Compiler command pattern should be `xtensa-esp32-elf-(g?cc) | ([gc]\+)+ | (clang)`

Building in Eclipse

Continue from *Building in Eclipse* for all platforms.

Technical Details

Of interest to Windows gurus or very curious parties, only.

Explanations of the technical reasons for some of these steps. You don’t need to know this to use `esp-idf` with Eclipse on Windows, but it may be helpful background knowledge if you plan to do dig into the Eclipse support:

- The `xtensa-esp32-elf-gcc` cross-compiler is *not* a Cygwin toolchain, even though we tell Eclipse that it is one. This is because `msys2` uses Cygwin and supports Cygwin paths (of the type `/c/blah` instead of `c:/blah` or `c:\\blah`). In particular, `xtensa-esp32-elf-gcc` reports to the Eclipse “built-in compiler settings” function that its built-in include directories are all under `/usr/`, which is a Unix/Cygwin-style path that Eclipse otherwise can’t resolve. By telling Eclipse the compiler is Cygwin, it resolves these paths internally using the `cygpath` utility.
- The same problem occurs when parsing make output from `esp-idf`. Eclipse parses this output to find header directories, but it can’t resolve include directories of the form `/c/blah` without using `cygpath`. There is a heuristic that Eclipse Build Output Parser uses to determine whether it should call `cygpath`, but for currently unknown reasons the `esp-idf` configuration doesn’t trigger it. For this reason, the `eclipse_make.py` wrapper script is used to call `make` and then use `cygpath` to process the output for Eclipse.

IDF Monitor

The `idf_monitor` tool is a Python program which runs when the `make monitor` target is invoked in IDF.

It is mainly a serial terminal program which relays serial data to and from the target device’s serial port, but it has some other IDF-specific xfeatures.

Interacting With idf_monitor

- Ctrl-] will exit the monitor.
- Ctrl-T Ctrl-H will display a help menu with all other keyboard shortcuts.
- Any other key apart from Ctrl-] and Ctrl-T is sent through the serial port.

Automatically Decoding Addresses

Any time esp-idf prints a hexadecimal code address of the form 0x4_____, idf_monitor will use addr2line to look up the source code location and function name.

When an esp-idf app crashes and panics a register dump and backtrace such as this is produced:

```
Guru Meditation Error of type StoreProhibited occurred on core 0. Exception was
↳unhandled.
Register dump:
PC      : 0x400f360d  PS      : 0x00060330  A0      : 0x800dbf56  A1      : 0x3ffb7e00
A2      : 0x3ffb136c  A3      : 0x00000005  A4      : 0x00000000  A5      : 0x00000000
A6      : 0x00000000  A7      : 0x00000080  A8      : 0x00000000  A9      : 0x3ffb7dd0
A10     : 0x00000003  A11     : 0x00060f23  A12     : 0x00060f20  A13     : 0x3ffba6d0
A14     : 0x00000047  A15     : 0x0000000f  SAR     : 0x00000019  EXCCAUSE: 0x0000001d
EXCVADDR: 0x00000000  LBEG    : 0x4000c46c  LEND    : 0x4000c477  LCOUNT : 0x00000000

Backtrace: 0x400f360d:0x3ffb7e00 0x400dbf56:0x3ffb7e20 0x400dbf5e:0x3ffb7e40
↳0x400dbf82:0x3ffb7e60 0x400d071d:0x3ffb7e90
```

idf_monitor will augment the dump:

```
Guru Meditation Error of type StoreProhibited occurred on core 0. Exception was
↳unhandled.
Register dump:
PC      : 0x400f360d  PS      : 0x00060330  A0      : 0x800dbf56  A1      : 0x3ffb7e00
0x400f360d: do_something_to_crash at /home/gus/esp/32/idf/examples/get-started/hello_
↳world/main/./hello_world_main.c:57
(inlined by) inner_dont_crash at /home/gus/esp/32/idf/examples/get-started/hello_
↳world/main/./hello_world_main.c:52
A2      : 0x3ffb136c  A3      : 0x00000005  A4      : 0x00000000  A5      : 0x00000000
A6      : 0x00000000  A7      : 0x00000080  A8      : 0x00000000  A9      : 0x3ffb7dd0
A10     : 0x00000003  A11     : 0x00060f23  A12     : 0x00060f20  A13     : 0x3ffba6d0
A14     : 0x00000047  A15     : 0x0000000f  SAR     : 0x00000019  EXCCAUSE: 0x0000001d
EXCVADDR: 0x00000000  LBEG    : 0x4000c46c  LEND    : 0x4000c477  LCOUNT : 0x00000000

Backtrace: 0x400f360d:0x3ffb7e00 0x400dbf56:0x3ffb7e20 0x400dbf5e:0x3ffb7e40
↳0x400dbf82:0x3ffb7e60 0x400d071d:0x3ffb7e90
0x400f360d: do_something_to_crash at /home/gus/esp/32/idf/examples/get-started/hello_
↳world/main/./hello_world_main.c:57
(inlined by) inner_dont_crash at /home/gus/esp/32/idf/examples/get-started/hello_
↳world/main/./hello_world_main.c:52
0x400dbf56: still_dont_crash at /home/gus/esp/32/idf/examples/get-started/hello_world/
↳main/./hello_world_main.c:47
0x400dbf5e: dont_crash at /home/gus/esp/32/idf/examples/get-started/hello_world/main/.
↳/hello_world_main.c:42
0x400dbf82: app_main at /home/gus/esp/32/idf/examples/get-started/hello_world/main/.
↳hello_world_main.c:33
0x400d071d: main_task at /home/gus/esp/32/idf/components/esp32/./cpu_start.c:254
```

Behind the scenes, the command `idf_monitor` runs to decode each address is:

```
xtensa-esp32-elf-addr2line -pfia -e build/PROJECT.elf ADDRESS
```

Launch GDB for GDBStub

By default, if an esp-idf app crashes then the panic handler prints registers and a stack dump as shown above, and then resets.

Optionally, the panic handler can be configured to run a serial “gdb stub” which can communicate with a [gdb](#) debugger program and allow memory to be read, variables and stack frames examined, etc. This is not as versatile as JTAG debugging, but no special hardware is required.

To enable the `gdbstub`, run `make menuconfig` and navigate to `Component config -> ESP32-specific -> Panic handler behaviour`, then set the value to `Invoke GDBStub`.

If this option is enabled and `idf_monitor` sees the `gdb stub` has loaded, it will automatically pause serial monitoring and run GDB with the correct arguments. After GDB exits, the board will be reset via the RTS serial line (if this is connected.)

Behind the scenes, the command `idf_monitor` runs is:

```
xtensa-esp32-elf-gdb -ex "set serial baud BAUD" -ex "target remote PORT" -ex ↵  
↵interrupt build/PROJECT.elf
```

Quick Compile and Flash

The keyboard shortcut `Ctrl-T Ctrl-F` will pause `idf_monitor`, run the `make flash` target, then resume `idf_monitor`. Any changed source files will be recompiled before re-flashing.

The keyboard shortcut `Ctrl-T Ctrl-A` will pause `idf_monitor`, run the `make app-flash` target, then resume `idf_monitor`. This is similar to `make flash`, but only the main app is compiled and reflashed.

Quick Reset

The keyboard shortcut `Ctrl-T Ctrl-R` will reset the target board via the RTS line (if it is connected.)

Simple Monitor

Earlier versions of ESP-IDF used the `pySerial` command line program `miniterm` as a serial console program.

This program can still be run, via `make simple_monitor`.

`idf_monitor` is based on `miniterm` and shares the same basic keyboard shortcuts.

Known Issues with idf_monitor

Issues Observed on Windows

- If you are using the supported Windows environment and receive the error “winpty: command not found” then run `pacman -S winpty` to fix.
- Arrow keys and some other special keys in `gdb` don’t work, due to Windows Console limitations.

- Occasionally when “make” exits, it may stall for up to 30 seconds before idf_monitor resumes.
- Occasionally when “gdb” is run, it may stall for a short time before it begins communicating with the gdbstub.

Wi-Fi API

Wi-Fi

Overview

Instructions

Application Examples

See `wifi` directory of ESP-IDF examples that contains the following applications:

- Simple application showing how to connect ESP32 module to an Access Point - `esp-idf-template`.
- Using power save mode of Wi-Fi - `wifi/power_save`.

API Reference

Header File

- `esp32/include/esp_wifi.h`

Functions

`esp_err_t esp_wifi_init(wifi_init_config_t *config)`

Init WiFi Alloc resource for WiFi driver, such as WiFi control structure, RX/TX buffer, WiFi NVS structure etc, this WiFi also start WiFi task.

Attention 1. This API must be called before all other WiFi API can be called

Attention 2. Always use `WIFI_INIT_CONFIG_DEFAULT` macro to init the config to default values, this can guarantee all the fields got correct value when more fields are added into `wifi_init_config_t` in future release. If you want to set your own initial values, overwrite the default values which are set by `WIFI_INIT_CONFIG_DEFAULT`, please be notified that the field 'magic' of `wifi_init_config_t` should always be `WIFI_INIT_CONFIG_MAGIC`!

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NO_MEM`: out of memory
- others: refer to error code `esp_err.h`

Parameters

- `config`: provide WiFi init configuration

`esp_err_t esp_wifi_deinit` (void)

Deinit WiFi Free all resource allocated in `esp_wifi_init` and stop WiFi task.

Attention 1. This API should be called if you want to remove WiFi driver from the system

Return `ESP_OK`: succeed

`esp_err_t esp_wifi_set_mode` (`wifi_mode_t mode`)

Set the WiFi operating mode.

Set the WiFi operating mode as station, soft-AP or station+soft-AP, The default mode is soft-AP mode.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument
- others: refer to error code in `esp_err.h`

Parameters

- `mode`: WiFi operating mode

`esp_err_t esp_wifi_get_mode` (`wifi_mode_t *mode`)

Get current operating mode of WiFi.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `mode`: store current WiFi mode

`esp_err_t esp_wifi_start` (void)

Start WiFi according to current configuration If mode is `WIFI_MODE_STA`, it create station control block and start station If mode is `WIFI_MODE_AP`, it create soft-AP control block and start soft-AP If mode is `WIFI_MODE_APSTA`, it create soft-AP and station control block and start soft-AP and station.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init
- ESP_ERR_WIFI_ARG: invalid argument
- ESP_ERR_WIFI_NO_MEM: out of memory
- ESP_ERR_WIFI_CONN: WiFi internal error, station or soft-AP control block wrong
- ESP_ERR_WIFI_FAIL: other WiFi internal errors

esp_err_t **esp_wifi_stop** (void)

Stop WiFi If mode is WIFI_MODE_STA, it stop station and free station control block If mode is WIFI_MODE_AP, it stop soft-AP and free soft-AP control block If mode is WIFI_MODE_APSTA, it stop station/soft-AP and free station/soft-AP control block.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init

esp_err_t **esp_wifi_restore** (void)

Restore WiFi stack persistent settings to default values.

This function will reset settings made using the following APIs:

- esp_wifi_get_auto_connect,
- esp_wifi_set_protocol,
- esp_wifi_set_config related
- esp_wifi_set_mode

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init

esp_err_t **esp_wifi_connect** (void)

Connect the ESP32 WiFi station to the AP.

Attention 1. This API only impact WIFI_MODE_STA or WIFI_MODE_APSTA mode

Attention 2. If the ESP32 is connected to an AP, call esp_wifi_disconnect to disconnect.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init
- ESP_ERR_WIFI_NOT_START: WiFi is not started by esp_wifi_start
- ESP_ERR_WIFI_CONN: WiFi internal error, station or soft-AP control block wrong
- ESP_ERR_WIFI_SSID: SSID of AP which station connects is invalid

esp_err_t **esp_wifi_disconnect** (void)

Disconnect the ESP32 WiFi station from the AP.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi was not initialized by esp_wifi_init
- ESP_ERR_WIFI_NOT_STARTED: WiFi was not started by esp_wifi_start
- ESP_ERR_WIFI_FAIL: other WiFi internal errors

esp_err_t **esp_wifi_clear_fast_connect** (void)
Currently this API is just an stub API.

Return

- ESP_OK: succeed
- others: fail

esp_err_t **esp_wifi_deauth_sta** (uint16_t *aid*)
deauthenticate all stations or associated id equals to aid

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init
- ESP_ERR_WIFI_NOT_STARTED: WiFi was not started by esp_wifi_start
- ESP_ERR_WIFI_ARG: invalid argument
- ESP_ERR_WIFI_MODE: WiFi mode is wrong

Parameters

- *aid*: when aid is 0, deauthenticate all stations, otherwise deauthenticate station whose associated id is aid

esp_err_t **esp_wifi_scan_start** (wifi_scan_config_t **config*, bool *block*)
Scan all available APs.

Attention If this API is called, the found APs are stored in WiFi driver dynamic allocated memory and the will be freed in esp_wifi_scan_get_ap_records, so generally, call esp_wifi_scan_get_ap_records to cause the memory to be freed once the scan is done

Attention The values of maximum active scan time and passive scan time per channel are limited to 1500 milliseconds. Values above 1500ms may cause station to disconnect from AP and are not recommended.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by esp_wifi_init
- ESP_ERR_WIFI_NOT_STARTED: WiFi was not started by esp_wifi_start
- ESP_ERR_WIFI_TIMEOUT: blocking scan is timeout
- others: refer to error code in esp_err.h

Parameters

- *config*: configuration of scanning

- `block`: if `block` is true, this API will block the caller until the scan is done, otherwise it will return immediately

`esp_err_t esp_wifi_scan_stop` (void)

Stop the scan in process.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_NOT_STARTED`: WiFi is not started by `esp_wifi_start`

`esp_err_t esp_wifi_scan_get_ap_num` (uint16_t **number*)

Get number of APs found in last scan.

Attention This API can only be called when the scan is completed, otherwise it may get wrong value.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_NOT_STARTED`: WiFi is not started by `esp_wifi_start`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `number`: store number of APIs found in last scan

`esp_err_t esp_wifi_scan_get_ap_records` (uint16_t **number*, wifi_ap_record_t **ap_records*)

Get AP list found in last scan.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_NOT_STARTED`: WiFi is not started by `esp_wifi_start`
- `ESP_ERR_WIFI_ARG`: invalid argument
- `ESP_ERR_WIFI_NO_MEM`: out of memory

Parameters

- `number`: As input param, it stores max AP number `ap_records` can hold. As output param, it receives the actual AP number this API returns.
- `ap_records`: `wifi_ap_record_t` array to hold the found APs

`esp_err_t esp_wifi_sta_get_ap_info` (wifi_ap_record_t **ap_info*)

Get information of AP which the ESP32 station is associated with.

Return

- `ESP_OK`: succeed
- others: fail

Parameters

- `ap_info`: the `wifi_ap_record_t` to hold AP information

`esp_err_t esp_wifi_set_ps` (`wifi_ps_type_t type`)

Set current power save type.

Attention Default power save type is `WIFI_PS_NONE`.

Return `ESP_ERR_WIFI_NOT_SUPPORT`: not supported yet

Parameters

- `type`: power save type

`esp_err_t esp_wifi_get_ps` (`wifi_ps_type_t *type`)

Get current power save type.

Attention Default power save type is `WIFI_PS_NONE`.

Return `ESP_ERR_WIFI_NOT_SUPPORT`: not supported yet

Parameters

- `type`: store current power save type

`esp_err_t esp_wifi_set_protocol` (`wifi_interface_t ifx`, `uint8_t protocol_bitmap`)

Set protocol type of specified interface The default protocol is (`WIFI_PROTOCOL_11B|WIFI_PROTOCOL_11G|WIFI_PROTOCOL_11N`)

Attention Currently we only support 802.11b or 802.11bg or 802.11bgn mode

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_IF`: invalid interface
- others: refer to error codes in `esp_err.h`

Parameters

- `ifx`: interfaces
- `protocol_bitmap`: WiFi protocol bitmap

`esp_err_t esp_wifi_get_protocol` (`wifi_interface_t ifx`, `uint8_t *protocol_bitmap`)

Get the current protocol bitmap of the specified interface.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_IF`: invalid interface
- `ESP_ERR_WIFI_ARG`: invalid argument
- others: refer to error codes in `esp_err.h`

Parameters

- `ifx`: interface

- `protocol_bitmap`: store current WiFi protocol bitmap of interface `ifx`

`esp_err_t esp_wifi_set_bandwidth` (`wifi_interface_t ifx`, `wifi_bandwidth_t bw`)
Set the bandwidth of ESP32 specified interface.

Attention 1. API return false if try to configure an interface that is not enabled

Attention 2. `WIFI_BW_HT40` is supported only when the interface support 11N

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_IF`: invalid interface
- `ESP_ERR_WIFI_ARG`: invalid argument
- others: refer to error codes in `esp_err.h`

Parameters

- `ifx`: interface to be configured
- `bw`: bandwidth

`esp_err_t esp_wifi_get_bandwidth` (`wifi_interface_t ifx`, `wifi_bandwidth_t *bw`)
Get the bandwidth of ESP32 specified interface.

Attention 1. API return false if try to get a interface that is not enable

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_IF`: invalid interface
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `ifx`: interface to be configured
- `bw`: store bandwidth of interface `ifx`

`esp_err_t esp_wifi_set_channel` (`uint8_t primary`, `wifi_second_chan_t second`)
Set primary/secondary channel of ESP32.

Attention 1. This is a special API for sniffer

Attention 2. This API should be called after `esp_wifi_start()` or `esp_wifi_set_promiscuous()`

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_IF`: invalid interface
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `primary`: for HT20, primary is the channel number, for HT40, primary is the primary channel
- `second`: for HT20, second is ignored, for HT40, second is the second channel

`esp_err_t esp_wifi_get_channel` (`uint8_t *primary`, `wifi_second_chan_t *second`)
Get the primary/secondary channel of ESP32.

Attention 1. API return false if try to get a interface that is not enable

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `primary`: store current primary channel
- `second`: store current second channel

`esp_err_t esp_wifi_set_country` (`wifi_country_t country`)
Set country code The default value is `WIFI_COUNTRY_CN`.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument
- others: refer to error code in `esp_err.h`

Parameters

- `country`: country type

`esp_err_t esp_wifi_get_country` (`wifi_country_t *country`)
Get country code.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `country`: store current country

`esp_err_t esp_wifi_set_mac` (`wifi_interface_t ifx`, `uint8_t mac[6]`)
Set MAC address of the ESP32 WiFi station or the soft-AP interface.

Attention 1. This API can only be called when the interface is disabled

Attention 2. ESP32 soft-AP and station have different MAC addresses, do not set them to be the same.

Attention 3. The bit 0 of the first byte of ESP32 MAC address can not be 1. For example, the MAC address can set to be “1a:XX:XX:XX:XX:XX”, but can not be “15:XX:XX:XX:XX:XX”.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument
- `ESP_ERR_WIFI_IF`: invalid interface
- `ESP_ERR_WIFI_MAC`: invalid mac address
- `ESP_ERR_WIFI_MODE`: WiFi mode is wrong
- others: refer to error codes in `esp_err.h`

Parameters

- `ifx`: interface
- `mac`: the MAC address

`esp_err_t esp_wifi_get_mac` (`wifi_interface_t ifx`, `uint8_t mac[6]`)
Get mac of specified interface.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument
- `ESP_ERR_WIFI_IF`: invalid interface

Parameters

- `ifx`: interface
- `mac`: store mac of the interface `ifx`

`esp_err_t esp_wifi_set_promiscuous_rx_cb` (`wifi_promiscuous_cb_t cb`)
Register the RX callback function in the promiscuous mode.
Each time a packet is received, the registered callback function will be called.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`

Parameters

- `cb`: callback

`esp_err_t esp_wifi_set_promiscuous` (`bool en`)
Enable the promiscuous mode.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`

Parameters

- `en`: false - disable, true - enable

`esp_err_t esp_wifi_get_promiscuous` (bool **en*)
Get the promiscuous mode.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `en`: store the current status of promiscuous mode

`esp_err_t esp_wifi_set_promiscuous_filter` (const `wifi_promiscuous_filter_t` **filter*)
Enable the promiscuous filter.

Attention 1. The default filter is to filter all packets except `WIFI_PKT_MISC`

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`

Parameters

- `filter`: the packet type filtered by promiscuous

`esp_err_t esp_wifi_get_promiscuous_filter` (`wifi_promiscuous_filter_t` **filter*)
Get the promiscuous filter.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `filter`: store the current status of promiscuous filter

`esp_err_t esp_wifi_set_config` (`wifi_interface_t` *ifx*, `wifi_config_t` **conf*)
Set the configuration of the ESP32 STA or AP.

Attention 1. This API can be called only when specified interface is enabled, otherwise, API fail

Attention 2. For station configuration, `bssid_set` needs to be 0; and it needs to be 1 only when users need to check the MAC address of the AP.

Attention 3. ESP32 is limited to only one channel, so when in the soft-AP+station mode, the soft-AP will adjust its channel automatically to be the same as the channel of the ESP32 station.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`

- ESP_ERR_WIFI_ARG: invalid argument
- ESP_ERR_WIFI_IF: invalid interface
- ESP_ERR_WIFI_MODE: invalid mode
- ESP_ERR_WIFI_PASSWORD: invalid password
- ESP_ERR_WIFI_NVS: WiFi internal NVS error
- others: refer to the error code in esp_err.h

Parameters

- `ifx`: interface
- `conf`: station or soft-AP configuration

`esp_err_t esp_wifi_get_config` (`wifi_interface_t ifx`, `wifi_config_t *conf`)
Get configuration of specified interface.

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by `esp_wifi_init`
- ESP_ERR_WIFI_ARG: invalid argument
- ESP_ERR_WIFI_IF: invalid interface

Parameters

- `ifx`: interface
- `conf`: station or soft-AP configuration

`esp_err_t esp_wifi_ap_get_sta_list` (`wifi_sta_list_t *sta`)
Get STAs associated with soft-AP.

Attention SSC only API

Return

- ESP_OK: succeed
- ESP_ERR_WIFI_NOT_INIT: WiFi is not initialized by `esp_wifi_init`
- ESP_ERR_WIFI_ARG: invalid argument
- ESP_ERR_WIFI_MODE: WiFi mode is wrong
- ESP_ERR_WIFI_CONN: WiFi internal error, the station/soft-AP control block is invalid

Parameters

- `sta`: station list

`esp_err_t esp_wifi_set_storage` (`wifi_storage_t storage`)
Set the WiFi API configuration storage type.

Attention 1. The default value is `WIFI_STORAGE_FLASH`

Return

- ESP_OK: succeed

- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `storage`: : storage type

`esp_err_t esp_wifi_set_auto_connect` (bool *en*)

Set auto connect The default value is true.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_MODE`: WiFi internal error, the station/soft-AP control block is invalid
- others: refer to error code in `esp_err.h`

Parameters

- `en`: : true - enable auto connect / false - disable auto connect

`esp_err_t esp_wifi_get_auto_connect` (bool **en*)

Get the auto connect flag.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`
- `ESP_ERR_WIFI_ARG`: invalid argument

Parameters

- `en`: store current auto connect configuration

`esp_err_t esp_wifi_set_vendor_ie` (bool *enable*, `wifi_vendor_ie_type_t` *type*, `wifi_vendor_ie_id_t` *idx*,
`const void *vnd_ie`)

Set 802.11 Vendor-Specific Information Element.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init()`
- `ESP_ERR_WIFI_ARG`: Invalid argument, including if first byte of `vnd_ie` is not `WIFI_VENDOR_IE_ELEMENT_ID` (0xDD) or second byte is an invalid length.
- `ESP_ERR_WIFI_NO_MEM`: Out of memory

Parameters

- `enable`: If true, specified IE is enabled. If false, specified IE is removed.
- `type`: Information Element type. Determines the frame type to associate with the IE.
- `idx`: Index to set or clear. Each IE type can be associated with up to two elements (indices 0 & 1).
- `vnd_ie`: Pointer to vendor specific element data. First 6 bytes should be a header with fields matching `wifi_vendor_ie_data_t`. If `enable` is false, this argument is ignored and can be NULL. Data does not need to remain valid after the function returns.

`esp_err_t esp_wifi_set_vendor_ie_cb` (*esp_vendor_ie_cb_t* cb, void *ctx)
Register Vendor-Specific Information Element monitoring callback.

Return

- `ESP_OK`: succeed
- `ESP_ERR_WIFI_NOT_INIT`: WiFi is not initialized by `esp_wifi_init`

Parameters

- `cb`: Callback function
- `ctx`: Context argument, passed to callback function.

Structures

`struct wifi_init_config_t`

WiFi stack configuration parameters passed to `esp_wifi_init` call.

Public Members

`system_event_handler_t event_handler`
WiFi event handler

int `static_rx_buf_num`
WiFi static RX buffer number

int `dynamic_rx_buf_num`
WiFi dynamic RX buffer number

int `tx_buf_type`
WiFi TX buffer type

int `static_tx_buf_num`
WiFi static TX buffer number

int `dynamic_tx_buf_num`
WiFi dynamic TX buffer number

int `ampdu_enable`
WiFi AMPDU feature enable flag

int `nvs_enable`
WiFi NVS flash enable flag

int `nano_enable`
Nano option for printf/scan family enable flag

int `magic`
WiFi init magic number, it should be the last field

Macros

`ESP_ERR_WIFI_OK` `ESP_OK`
No error

ESP_ERR_WIFI_FAIL ESP_FAIL

General fail code

ESP_ERR_WIFI_NO_MEM ESP_ERR_NO_MEM

Out of memory

ESP_ERR_WIFI_ARG ESP_ERR_INVALID_ARG

Invalid argument

ESP_ERR_WIFI_NOT_SUPPORT ESP_ERR_NOT_SUPPORTED

Indicates that API is not supported yet

ESP_ERR_WIFI_NOT_INIT (ESP_ERR_WIFI_BASE + 1)

WiFi driver was not installed by esp_wifi_init

ESP_ERR_WIFI_NOT_STARTED (ESP_ERR_WIFI_BASE + 2)

WiFi driver was not started by esp_wifi_start

ESP_ERR_WIFI_NOT_STOPPED (ESP_ERR_WIFI_BASE + 3)

WiFi driver was not stopped by esp_wifi_stop

ESP_ERR_WIFI_IF (ESP_ERR_WIFI_BASE + 4)

WiFi interface error

ESP_ERR_WIFI_MODE (ESP_ERR_WIFI_BASE + 5)

WiFi mode error

ESP_ERR_WIFI_STATE (ESP_ERR_WIFI_BASE + 6)

WiFi internal state error

ESP_ERR_WIFI_CONN (ESP_ERR_WIFI_BASE + 7)

WiFi internal control block of station or soft-AP error

ESP_ERR_WIFI_NVS (ESP_ERR_WIFI_BASE + 8)

WiFi internal NVS module error

ESP_ERR_WIFI_MAC (ESP_ERR_WIFI_BASE + 9)

MAC address is invalid

ESP_ERR_WIFI_SSID (ESP_ERR_WIFI_BASE + 10)

SSID is invalid

ESP_ERR_WIFI_PASSWORD (ESP_ERR_WIFI_BASE + 11)

Password is invalid

ESP_ERR_WIFI_TIMEOUT (ESP_ERR_WIFI_BASE + 12)

Timeout error

ESP_ERR_WIFI_WAKE_FAIL (ESP_ERR_WIFI_BASE + 13)

WiFi is in sleep state(RF closed) and wakeup fail

WIFI_STATIC_TX_BUFFER_NUM 0

WIFI_DYNAMIC_TX_BUFFER_NUM 0

WIFI_AMPDU_ENABLED 0

WIFI_NVS_ENABLED 0

WIFI_NANO_FORMAT_ENABLED 0

WIFI_INIT_CONFIG_MAGIC 0x1F2F3F4F

WIFI_INIT_CONFIG_DEFAULT {0}; _Static_assert(0, "please enable wifi in menuconfig to use esp_wifi.h");

Type Definitions

typedef void (*wifi_promiscuous_cb_t) (void *buf, wifi_promiscuous_pkt_type_t type)

The RX callback function in the promiscuous mode. Each time a packet is received, the callback function will be called.

Parameters

- `buf`: Data received. Type of data in buffer (`wifi_promiscuous_pkt_t` or `wifi_pkt_rx_ctrl_t`) indicated by 'type' parameter.
- `type`: promiscuous packet type.

typedef void (*esp_vendor_ie_cb_t) (void *ctx, wifi_vendor_ie_type_t type, **const** uint8_t sa[6], **const** vendor_ie_data_t *vnd_ie, int rssi)

Function signature for received Vendor-Specific Information Element callback.

Parameters

- `ctx`: Context argument, as passed to `esp_wifi_set_vendor_ie_cb()` when registering callback.
- `type`: Information element type, based on frame type received.
- `sa`: Source 802.11 address.
- `vnd_ie`: Pointer to the vendor specific element data received.
- `rssi`: Received signal strength indication.

Smart Config

API Reference

Header File

- `esp32/include/esp_smartconfig.h`

Functions

const char *esp_smartconfig_get_version (void)

Get the version of SmartConfig.

Return

- SmartConfig version const char.

`esp_err_t esp_smartconfig_start` (*sc_callback_t cb*, ...)

Start SmartConfig, config ESP device to connect AP. You need to broadcast information by phone APP. Device sniffer special packets from the air that containing SSID and password of target AP.

Attention 1. This API can be called in station or softAP-station mode.

Attention 2. Can not call `esp_smartconfig_start` twice before it finish, please call `esp_smartconfig_stop` first.

Return

- `ESP_OK`: succeed

- others: fail

Parameters

- `cb`: SmartConfig callback function.
- `...`: log 1: UART output logs; 0: UART only outputs the result.

`esp_err_t esp_smartconfig_stop` (void)

Stop SmartConfig, free the buffer taken by `esp_smartconfig_start`.

Attention Whether connect to AP succeed or not, this API should be called to free memory taken by `smartconfig_start`.

Return

- `ESP_OK`: succeed
- others: fail

`esp_err_t esp_esptouch_set_timeout` (uint8_t *time_s*)

Set timeout of SmartConfig process.

Attention Timing starts from `SC_STATUS_FIND_CHANNEL` status. SmartConfig will restart if timeout.

Return

- `ESP_OK`: succeed
- others: fail

Parameters

- `time_s`: range 15s~255s, offset:45s.

`esp_err_t esp_smartconfig_set_type` (*smartconfig_type_t type*)

Set protocol type of SmartConfig.

Attention If users need to set the SmartConfig type, please set it before calling `esp_smartconfig_start`.

Return

- `ESP_OK`: succeed
- others: fail

Parameters

- `type`: Choose from the `smartconfig_type_t`.

`esp_err_t esp_smartconfig_fast_mode` (bool *enable*)

Set mode of SmartConfig. default normal mode.

Attention 1. Please call it before API `esp_smartconfig_start`.

Attention 2. Fast mode have corresponding APP(phone).

Attention 3. Two mode is compatible.

Return

- `ESP_OK`: succeed
- others: fail

Parameters

- `enable`: false-disable(default); true-enable;

Type Definitions

typedef void (***sc_callback_t**) (*smartconfig_status_t* status, void *pdata)
The callback of SmartConfig, executed when smart-config status changed.

Parameters

- `status`: Status of SmartConfig:
 - `SC_STATUS_GETTING_SSID_PSWD` : `pdata` is a pointer of `smartconfig_type_t`, means config type.
 - `SC_STATUS_LINK` : `pdata` is a pointer of struct `station_config`.
 - `SC_STATUS_LINK_OVER` : `pdata` is a pointer of phone's IP address(4 bytes) if `pdata` unequal NULL.
 - otherwise : parameter void *`pdata` is NULL.
- `pdata`: According to the different status have different values.

Enumerations

enum smartconfig_status_t

Values:

SC_STATUS_WAIT = 0
Waiting to start connect

SC_STATUS_FIND_CHANNEL
Finding target channel

SC_STATUS_GETTING_SSID_PSWD
Getting SSID and password of target AP

SC_STATUS_LINK
Connecting to target AP

SC_STATUS_LINK_OVER
Connected to AP successfully

enum smartconfig_type_t

Values:

SC_TYPE_ESPTOUCH = 0
protocol: ESPTouch

SC_TYPE_AIRKISS
protocol: AirKiss

SC_TYPE_ESPTOUCH_AIRKISS
protocol: ESPTouch and AirKiss

Example code for this API section is provided in [wifi](#) directory of ESP-IDF examples.

Bluetooth API

Controller && VHCI

Overview

Instructions

Application Example

Check `bluetooth` folder in ESP-IDF examples, which contains the following application:

- This is a BLE advertising demo with virtual HCI interface. Send Re-set/ADV_PARAM/ADV_DATA/ADV_ENABLE HCI command for BLE advertising - `bluetooth/ble_adv`.

API Reference

Header File

- `bt/include/bt.h`

Functions

`esp_err_t esp_ble_tx_power_set(esp_ble_power_type_t power_type, esp_power_level_t power_level)`
Set BLE TX power Connection Tx power should only be set after connection created.

Return ESP_OK - success, other - failed

Parameters

- `power_type`: : The type of which tx power, could set Advertising/Connection/Default and etc
- `power_level`: Power level(index) corresponding to absolute value(dbm)

`esp_power_level_t esp_ble_tx_power_get(esp_ble_power_type_t power_type)`
Get BLE TX power Connection Tx power should only be get after connection created.

Return ≥ 0 - Power level, < 0 - Invalid

Parameters

- `power_type`: : The type of which tx power, could set Advertising/Connection/Default and etc

`esp_err_t esp_bt_controller_init(esp_bt_controller_config_t *cfg)`
Initialize BT controller to allocate task and other resource.

Return ESP_OK - success, other - failed

Parameters

- `cfg`: Initial configuration of BT controller. This function should be called only once, before any other BT functions are called.

`esp_err_t esp_bt_controller_deinit` (void)

De-initialize BT controller to free resource and delete task.

This function should be called only once, after any other BT functions are called. This function is not whole completed, `esp_bt_controller_init` cannot called after this function.

Return ESP_OK - success, other - failed

`esp_err_t esp_bt_controller_enable` (*esp_bt_mode_t mode*)

Enable BT controller.

Return ESP_OK - success, other - failed

Parameters

- mode: : the mode(BLE/BT/BTDM) to enable. Now only support BTDM.

`esp_err_t esp_bt_controller_disable` (*esp_bt_mode_t mode*)

Disable BT controller.

Return ESP_OK - success, other - failed

Parameters

- mode: : the mode(BLE/BT/BTDM) to disable. Now only support BTDM.

esp_bt_controller_status_t `esp_bt_controller_get_status` (void)

Get BT controller is initialised/de-initialised/enabled/disabled.

Return status value

bool `esp_vhci_host_check_send_available` (void)

`esp_vhci_host_check_send_available` used for check actively if the host can send packet to controller or not.

Return true for ready to send, false means cannot send packet

void `esp_vhci_host_send_packet` (uint8_t *data, uint16_t len)

`esp_vhci_host_send_packet` host send packet to controller

Parameters

- data: the packet point ,
- len: the packet length

void `esp_vhci_host_register_callback` (const *esp_vhci_host_callback_t* *callback)

`esp_vhci_host_register_callback` register the vhci referece callback, the call back struct defined by `vhci_host_callback` structure.

Parameters

- callback: *esp_vhci_host_callback* type variable

Structures

struct `esp_bt_controller_config_t`

Controller config options, depend on config mask. Config mask indicate which functions enabled, this means some options or parameters of some functions enabled by config mask.

Public Members

`uint16_t controller_task_stack_size`

Bluetooth controller task stack size

`uint8_t controller_task_prio`

Bluetooth controller task priority

`uint8_t hci_uart_no`

If use UART1/2 as HCI IO interface, indicate UART number

`uint32_t hci_uart_baudrate`

If use UART1/2 as HCI IO interface, indicate UART baudrate

struct `esp_vhci_host_callback`

esp_vhci_host_callback used for vhci call host function to notify what host need to do

Public Members

`void (*notify_host_send_available)` (void)

callback used to notify that the host can send packet to controller

`int (*notify_host_recv)` (uint8_t *data, uint16_t len)

callback used to notify that the controller has a packet to send to the host

Macros

`BT_CONTROLLER_INIT_CONFIG_DEFAULT` {0}; `_Static_assert`(0, "please enable bluetooth in menuconfig to use bt.h");

Type Definitions

typedef struct *esp_vhci_host_callback* `esp_vhci_host_callback_t`

esp_vhci_host_callback used for vhci call host function to notify what host need to do

Enumerations

enum `esp_bt_mode_t`

Bluetooth mode for controller enable/disable.

Values:

`ESP_BT_MODE_IDLE` = 0x00

Bluetooth is not running

`ESP_BT_MODE_BLE` = 0x01

Run BLE mode

`ESP_BT_MODE_CLASSIC_BT` = 0x02

Run Classic BT mode

`ESP_BT_MODE_BTDM` = 0x03

Run dual mode

enum esp_bt_controller_status_t

Bluetooth controller enable/disable/initialised/de-initialised status.

Values:

ESP_BT_CONTROLLER_STATUS_IDLE = 0

ESP_BT_CONTROLLER_STATUS_INITED

ESP_BT_CONTROLLER_STATUS_ENABLED

ESP_BT_CONTROLLER_STATUS_NUM

enum esp_ble_power_type_t

BLE tx power type ESP_BLE_PWR_TYPE_CONN_HDL0-9: for each connection, and only be set after connection completed. when disconnect, the correspond TX power is not effected. ESP_BLE_PWR_TYPE_ADV : for advertising/scan response. ESP_BLE_PWR_TYPE_SCAN : for scan. ESP_BLE_PWR_TYPE_DEFAULT : if each connection's TX power is not set, it will use this default value. if neither in scan mode nor in adv mode, it will use this default value. If none of power type is set, system will use ESP_PWR_LVL_P1 as default for ADV/SCAN/CONN0-9.

Values:

ESP_BLE_PWR_TYPE_CONN_HDL0 = 0

For connection handle 0

ESP_BLE_PWR_TYPE_CONN_HDL1 = 1

For connection handle 1

ESP_BLE_PWR_TYPE_CONN_HDL2 = 2

For connection handle 2

ESP_BLE_PWR_TYPE_CONN_HDL3 = 3

For connection handle 3

ESP_BLE_PWR_TYPE_CONN_HDL4 = 4

For connection handle 4

ESP_BLE_PWR_TYPE_CONN_HDL5 = 5

For connection handle 5

ESP_BLE_PWR_TYPE_CONN_HDL6 = 6

For connection handle 6

ESP_BLE_PWR_TYPE_CONN_HDL7 = 7

For connection handle 7

ESP_BLE_PWR_TYPE_CONN_HDL8 = 8

For connection handle 8

ESP_BLE_PWR_TYPE_CONN_HDL9 = 9

For connection handle 9

ESP_BLE_PWR_TYPE_ADV = 10

For advertising

ESP_BLE_PWR_TYPE_SCAN = 11

For scan

ESP_BLE_PWR_TYPE_DEFAULT = 12

For default, if not set other, it will use default value

ESP_BLE_PWR_TYPE_NUM = 13

TYPE numbers

enum esp_power_level_t

Bluetooth TX power level(index), it's just a index corresponding to power(dbm).

Values:

- ESP_PWR_LVL_N14** = 0
Corresponding to -14dbm
- ESP_PWR_LVL_N11** = 1
Corresponding to -11dbm
- ESP_PWR_LVL_N8** = 2
Corresponding to -8dbm
- ESP_PWR_LVL_N5** = 3
Corresponding to -5dbm
- ESP_PWR_LVL_N2** = 4
Corresponding to -2dbm
- ESP_PWR_LVL_P1** = 5
Corresponding to 1dbm
- ESP_PWR_LVL_P4** = 6
Corresponding to 4dbm
- ESP_PWR_LVL_P7** = 7
Corresponding to 7dbm

BT COMMON

BT GENERIC DEFINES

Overview

Instructions

Application Example

Instructions

API Reference

Header File

- [bt/bluedroid/api/include/esp_bt_defs.h](#)

Structures

struct esp_bt_uuid_t

UUID type.

Public Members

```
uint16_t len
    UUID length, 16bit, 32bit or 128bit

union esp_bt_uuid_t::@0 esp_bt_uuid_t::uuid
    UUID
```

Macros

```
ESP_BT_OCTET16_LEN 16
ESP_BT_OCTET8_LEN 8
ESP_DEFAULT_GATT_IF 0xff
    Default GATT interface id.
ESP_BLE_CONN_PARAM_UNDEF 0xffff /* use this value when a specific value not to be overwritten */
    Default BLE connection param, if the value doesn't be overwritten.
ESP_BLE_IS_VALID_PARAM(x, min, max) (((x) >= (min) && (x) <= (max)) || ((x) ==
    ESP_BLE_CONN_PARAM_UNDEF))
    Check the param is valid or not.
ESP_UUID_LEN_16 2
ESP_UUID_LEN_32 4
ESP_UUID_LEN_128 16
ESP_BD_ADDR_LEN 6
    Bluetooth address length.
ESP_BLE_ENC_KEY_MASK (1 << 0) /* relate to BTM_BLE_ENC_KEY_MASK in btm_api.h */
    Used to exchange the encryption key in the init key & response key.
ESP_BLE_ID_KEY_MASK (1 << 1) /* relate to BTM_BLE_ID_KEY_MASK in btm_api.h */
    Used to exchange the IRK key in the init key & response key.
ESP_BLE_CSR_KEY_MASK (1 << 2) /* relate to BTM_BLE_CSR_KEY_MASK in btm_api.h */
    Used to exchange the CSRK key in the init key & response key.
ESP_BLE_LINK_KEY_MASK (1 << 3) /* relate to BTM_BLE_LINK_KEY_MASK in btm_api.h */
    Used to exchange the link key(this key just used in the BLE & BR/EDR coexist mode) in the init key & response
    key.
ESP_APP_ID_MIN 0x0000
    Minimum of the application id.
ESP_APP_ID_MAX 0x7fff
    Maximum of the application id.
ESP_BD_ADDR_STR “%02x:%02x:%02x:%02x:%02x:%02x”
ESP_BD_ADDR_HEX(addr) addr[0], addr[1], addr[2], addr[3], addr[4], addr[5]
```

Type Definitions

```
typedef uint8_t esp_bt_octet16_t[ESP_BT_OCTET16_LEN]
typedef uint8_t esp_bt_octet8_t[ESP_BT_OCTET8_LEN]
```

```
typedef uint8_t esp_link_key[ESP_BT_OCTET16_LEN]
```

```
typedef uint8_t esp_bd_addr_t[ESP_BT_ADDR_LEN]
    Bluetooth device address.
```

Enumerations

```
enum esp_bt_status_t
    Status Return Value.
```

Values:

```
ESP_BT_STATUS_SUCCESS = 0
```

```
ESP_BT_STATUS_FAIL
```

```
ESP_BT_STATUS_NOT_READY
```

```
ESP_BT_STATUS_NOMEM
```

```
ESP_BT_STATUS_BUSY
```

```
ESP_BT_STATUS_DONE = 5
```

```
ESP_BT_STATUS_UNSUPPORTED
```

```
ESP_BT_STATUS_PARM_INVALID
```

```
ESP_BT_STATUS_UNHANDLED
```

```
ESP_BT_STATUS_AUTH_FAILURE
```

```
ESP_BT_STATUS_RMT_DEV_DOWN = 10
```

```
ESP_BT_STATUS_AUTH_REJECTED
```

```
ESP_BT_STATUS_INVALID_STATIC_RAND_ADDR
```

```
ESP_BT_STATUS_PENDING
```

```
ESP_BT_STATUS_UNACCEPT_CONN_INTERVAL
```

```
ESP_BT_STATUS_PARAM_OUT_OF_RANGE
```

```
ESP_BT_STATUS_TIMEOUT
```

```
ESP_BT_STATUS_PEER_LE_DATA_LEN_UNSUPPORTED
```

```
ESP_BT_STATUS_CONTROL_LE_DATA_LEN_UNSUPPORTED
```

```
enum esp_bt_dev_type_t
    Bluetooth device type.
```

Values:

```
ESP_BT_DEVICE_TYPE_BREDR = 0x01
```

```
ESP_BT_DEVICE_TYPE_BLE = 0x02
```

```
ESP_BT_DEVICE_TYPE_DUMO = 0x03
```

```
enum esp_ble_addr_type_t
    BLE device address type.
```

Values:

```
BLE_ADDR_TYPE_PUBLIC = 0x00
```

`BLE_ADDR_TYPE_RANDOM = 0x01`

`BLE_ADDR_TYPE_RPA_PUBLIC = 0x02`

`BLE_ADDR_TYPE_RPA_RANDOM = 0x03`

BT MAIN API

Overview

Instructions

Application Example

Instructions

API Reference

Header File

- `bt/bluedroid/api/include/esp_bt_main.h`

Functions

`esp_bluedroid_status_t esp_bluedroid_get_status` (void)
Get bluetooth stack status.

Return Bluetooth stack status

`esp_err_t esp_bluedroid_enable` (void)
Enable bluetooth, must after `esp_bluedroid_init`()

Return

- `ESP_OK` : Succeed
- Other : Failed

`esp_err_t esp_bluedroid_disable` (void)
Disable bluetooth, must prior to `esp_bluedroid_deinit`()

Return

- `ESP_OK` : Succeed
- Other : Failed

`esp_err_t esp_bluedroid_init` (void)
Init and alloc the resource for bluetooth, must be prior to every bluetooth stuff.

Return

- `ESP_OK` : Succeed

- Other : Failed

`esp_err_t esp_bluedroid_deinit` (void)

Deinit and free the resource for bluetooth, must be after every bluetooth stuff.

Return

- ESP_OK : Succeed
- Other : Failed

Enumerations

`enum esp_bluedroid_status_t`

Bluetooth stack status type, to indicate whether the bluetooth stack is ready.

Values:

`ESP_BLUEDROID_STATUS_UNINITIALIZED = 0`

Bluetooth not initialized

`ESP_BLUEDROID_STATUS_INITIALIZED`

Bluetooth initialized but not enabled

`ESP_BLUEDROID_STATUS_ENABLED`

Bluetooth initialized and enabled

BT DEVICE APIs

Overview

Bluetooth device reference APIs.

Instructions

Application Example

Instructions

API Reference

Header File

- `bt/bluedroid/api/include/esp_bt_device.h`

Functions

`const uint8_t *esp_bt_dev_get_address` (void)

Get bluetooth device address. Must use after “`esp_bluedroid_enable`”.

Return bluetooth device address (six bytes), or NULL if bluetooth stack is not enabled

`esp_err_t esp_bt_dev_set_device_name (const char *name)`

Set bluetooth device name. This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK` : Succeed
- `ESP_ERR_INVALID_ARG` : if name is NULL pointer or empty, or string length out of limit
- `ESP_INVALID_STATE` : if bluetooth stack is not yet enabled
- `ESP_FAIL` : others

Parameters

- `name`: : device name to be set

BT LE

GAP API

Overview

Instructions

Application Example

Check `bluetooth` folder in ESP-IDF examples, which contains the following applications:

- The two demos use different GAP APIs, such like advertising, scan, set device name and others - `bluetooth/gatt_server`, `bluetooth/gatt_client`

API Reference

Header File

- `bt/bluedroid/api/include/esp_gap_ble_api.h`

Functions

`esp_err_t esp_ble_gap_register_callback (esp_gap_ble_cb_t callback)`

This function is called to occur gap event, such as scan result.

Return

- `ESP_OK` : success
- other : failed

Parameters

- `callback`: callback function

`esp_err_t esp_ble_gap_config_adv_data (esp_ble_adv_data_t *adv_data)`

This function is called to override the BTA default ADV parameters.

Return

- ESP_OK : success
- other : failed

Parameters

- *adv_data*: Pointer to User defined ADV data structure. This memory space can not be freed until callback of *config_adv_data* is received.

`esp_err_t esp_ble_gap_set_scan_params (esp_ble_scan_params_t *scan_params)`

This function is called to set scan parameters.

Return

- ESP_OK : success
- other : failed

Parameters

- *scan_params*: Pointer to User defined scan_params data structure. This memory space can not be freed until callback of *set_scan_params*

`esp_err_t esp_ble_gap_start_scanning (uint32_t duration)`

This procedure keep the device scanning the peer device which advertising on the air.

Return

- ESP_OK : success
- other : failed

Parameters

- *duration*: Keeping the scanning time, the unit is second.

`esp_err_t esp_ble_gap_stop_scanning (void)`

This function call to stop the device scanning the peer device which advertising on the air.

Return

- ESP_OK : success
- other : failed

`esp_err_t esp_ble_gap_start_advertising (esp_ble_adv_params_t *adv_params)`

This function is called to start advertising.

Return

- ESP_OK : success
- other : failed

Parameters

- *adv_params*: pointer to User defined adv_params data structure.

`esp_err_t esp_ble_gap_stop_advertising (void)`

This function is called to stop advertising.

Return

- ESP_OK : success
- other : failed

esp_err_t **esp_ble_gap_update_conn_params** (*esp_ble_conn_update_params_t* *params)

Update connection parameters, can only be used when connection is up.

Return

- ESP_OK : success
- other : failed

Parameters

- params: - connection update parameters

esp_err_t **esp_ble_gap_set_pkt_data_len** (*esp_bd_addr_t* remote_device, uint16_t tx_data_length)

This function is to set maximum LE data packet size.

Return

- ESP_OK : success
- other : failed

esp_err_t **esp_ble_gap_set_rand_addr** (*esp_bd_addr_t* rand_addr)

This function set the random address for the application.

Return

- ESP_OK : success
- other : failed

Parameters

- rand_addr: the random address which should be setting

esp_err_t **esp_ble_gap_config_local_privacy** (bool privacy_enable)

Enable/disable privacy on the local device.

Return

- ESP_OK : success
- other : failed

Parameters

- privacy_enable: - enable/disable privacy on remote device.

esp_err_t **esp_ble_gap_set_device_name** (const char *name)

Set device name to the local device.

Return

- ESP_OK : success
- other : failed

Parameters

- name: - device name.

`uint8_t *esp_ble_resolve_adv_data (uint8_t *adv_data, uint8_t type, uint8_t *length)`
This function is called to get ADV data for a specific type.

Return - ESP_OK : success

- other : failed

Parameters

- adv_data: - pointer of ADV data which to be resolved
- type: - finding ADV data type
- length: - return the length of ADV data not including type

`esp_err_t esp_ble_gap_config_adv_data_raw (uint8_t *raw_data, uint32_t raw_data_len)`
This function is called to set raw advertising data. User need to fill ADV data by self.

Return

- ESP_OK : success
- other : failed

Parameters

- raw_data: : raw advertising data
- raw_data_len: : raw advertising data length , less than 31 bytes

`esp_err_t esp_ble_gap_config_scan_rsp_data_raw (uint8_t *raw_data, uint32_t raw_data_len)`
This function is called to set raw scan response data. User need to fill scan response data by self.

Return

- ESP_OK : success
- other : failed

Parameters

- raw_data: : raw scan response data
- raw_data_len: : raw scan response data length , less than 31 bytes

`esp_err_t esp_ble_gap_set_security_param (esp_ble_sm_param_t param_type, void *value, uint8_t len)`
Set a GAP security parameter value. Overrides the default value.

Return - ESP_OK : success

- other : failed

Parameters

- param_type: :L the type of the param which to be set
- value: : the param value
- len: : the length of the param value

`esp_err_t esp_ble_gap_security_rsp` (*esp_bd_addr_t* *bd_addr*, *bool* *accept*)
Grant security request access.

Return - ESP_OK : success

- other : failed

Parameters

- *bd_addr*: : BD address of the peer
- *accept*: : accept the security request or not

`esp_err_t esp_ble_set_encryption` (*esp_bd_addr_t* *bd_addr*, *esp_ble_sec_act_t* *sec_act*)
Set a gap parameter value. Use this function to change the default GAP parameter values.

Return - ESP_OK : success

- other : failed

Parameters

- *bd_addr*: : the address of the peer device need to encryption
- *sec_act*: : This is the security action to indicate what kind of BLE security level is required for the BLE link if the BLE is supported

`esp_err_t esp_ble_passkey_reply` (*esp_bd_addr_t* *bd_addr*, *bool* *accept*, *uint32_t* *passkey*)
Reply the key value to the peer device in the lasecy connection stage.

Return - ESP_OK : success

- other : failed

Parameters

- *bd_addr*: : BD address of the peer
- *accept*: : passkey entry successful or declined.
- *passkey*: : passkey value, must be a 6 digit number, can be lead by 0.

`esp_err_t esp_ble_confirm_reply` (*esp_bd_addr_t* *bd_addr*, *bool* *accept*)
Reply the confirm value to the peer device in the lasecy connection stage.

Return - ESP_OK : success

- other : failed

Parameters

- *bd_addr*: : BD address of the peer device
- *accept*: : numbers to compare are the same or different.

`esp_err_t esp_ble_gap_disconnect` (*esp_bd_addr_t* *remote_device*)
This function is to disconnect the physical connection of the peer device.

Return - ESP_OK : success

- other : failed

Parameters

- `remote_device`: : BD address of the peer device

Unions

union `esp_ble_key_value_t`

`#include <esp_gap_ble_api.h>` union type of the security key value

Public Members

`esp_ble_penc_keys_t` **penc_key**
received peer encryption key

`esp_ble_pcsrkeys_t` **pcsrkey**
received peer device SRK

`esp_ble_pidkeys_t` **pid_key**
peer device ID key

`esp_ble_lenc_keys_t` **lenc_key**
local encryption reproduction keys LTK = d1(ER,DIV,0)

`esp_ble_lcsrkeys_t` **lcsrkey**
local device CSRK = d1(ER,DIV,1)

union `esp_ble_sec_t`

`#include <esp_gap_ble_api.h>` union associated with ble security

Public Members

`esp_ble_sec_key_notif_t` **key_notif**
passkey notification

`esp_ble_sec_req_t` **ble_req**
BLE SMP related request

`esp_ble_key_t` **ble_key**
BLE SMP keys used when pairing

`esp_ble_local_id_keys_t` **ble_id_keys**
BLE IR event

`esp_ble_auth_cmpl_t` **auth_cmpl**
Authentication complete indication.

union `esp_ble_gap_cb_param_t`

`#include <esp_gap_ble_api.h>` Gap callback parameters union.

Public Members

`struct esp_ble_gap_cb_param_t::ble_adv_data_cmpl_evt_param` **adv_data_cmpl**
Event parameter of ESP_GAP_BLE_ADV_DATA_SET_COMPLETE_EVT

`struct esp_ble_gap_cb_param_t::ble_scan_rsp_data_cmpl_evt_param` **scan_rsp_data_cmpl**
Event parameter of ESP_GAP_BLE_SCAN_RSP_DATA_SET_COMPLETE_EVT

```

struct esp_ble_gap_cb_param_t::ble_scan_param_cmpl_evt_param scan_param_cmpl
    Event parameter of ESP_GAP_BLE_SCAN_PARAM_SET_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_scan_result_evt_param scan_rst
    Event parameter of ESP_GAP_BLE_SCAN_RESULT_EVT

struct esp_ble_gap_cb_param_t::ble_adv_data_raw_cmpl_evt_param adv_data_raw_cmpl
    Event parameter of ESP_GAP_BLE_ADV_DATA_RAW_SET_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_scan_rsp_data_raw_cmpl_evt_param scan_rsp_data_raw_cmpl
    Event parameter of ESP_GAP_BLE_SCAN_RSP_DATA_RAW_SET_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_adv_start_cmpl_evt_param adv_start_cmpl
    Event parameter of ESP_GAP_BLE_ADV_START_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_scan_start_cmpl_evt_param scan_start_cmpl
    Event parameter of ESP_GAP_BLE_SCAN_START_COMPLETE_EVT

esp_ble_sec_t ble_security
    ble gap security union type

struct esp_ble_gap_cb_param_t::ble_scan_stop_cmpl_evt_param scan_stop_cmpl
    Event parameter of ESP_GAP_BLE_SCAN_STOP_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_adv_stop_cmpl_evt_param adv_stop_cmpl
    Event parameter of ESP_GAP_BLE_ADV_STOP_COMPLETE_EVT

struct esp_ble_gap_cb_param_t::ble_set_rand_cmpl_evt_param set_rand_addr_cmpl
    Event parameter of ESP_GAP_BLE_SET_STATIC_RAND_ADDR_EVT

struct esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param update_conn_params
    Event parameter of ESP_GAP_BLE_UPDATE_CONN_PARAMS_EVT

struct esp_ble_gap_cb_param_t::ble_pkt_data_length_cmpl_evt_param pkt_data_lenth_cmpl
    Event parameter of ESP_GAP_BLE_SET_PKT_LENGTH_COMPLETE_EVT

struct ble_adv_data_cmpl_evt_param
    #include <esp_gap_ble_api.h> ESP_GAP_BLE_ADV_DATA_SET_COMPLETE_EVT.
    
```

Public Members

esp_bt_status_t **status**

Indicate the set advertising data operation success status

```

struct ble_adv_data_raw_cmpl_evt_param
    #include <esp_gap_ble_api.h> ESP_GAP_BLE_ADV_DATA_RAW_SET_COMPLETE_EVT.
    
```

Public Members

esp_bt_status_t **status**

Indicate the set raw advertising data operation success status

```

struct ble_adv_start_cmpl_evt_param
    #include <esp_gap_ble_api.h> ESP_GAP_BLE_ADV_START_COMPLETE_EVT.
    
```

Public Members

esp_bt_status_t **status**

Indicate advertising start operation success status

struct ble_adv_stop_cmpl_evt_param

#include <esp_gap_ble_api.h> ESP_GAP_BLE_ADV_STOP_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**

Indicate adv stop operation success status

struct ble_pkt_data_length_cmpl_evt_param

#include <esp_gap_ble_api.h> ESP_GAP_BLE_SET_PKT_LENGTH_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**

Indicate the set pkt data length operation success status

esp_ble_pkt_data_length_params_t **params**

pkt data length value

struct ble_scan_param_cmpl_evt_param

#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_PARAM_SET_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**

Indicate the set scan param operation success status

struct ble_scan_result_evt_param

#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_RESULT_EVT.

Public Members

esp_gap_search_evt_t **search_evt**

Search event type

esp_bd_addr_t **bda**

Bluetooth device address which has been searched

esp_bt_dev_type_t **dev_type**

Device type

esp_ble_addr_type_t **ble_addr_type**

Ble device address type

esp_ble_evt_type_t **ble_evt_type**

Ble scan result event type

int rssi

Searched device's RSSI

uint8_t **ble_adv**[ESP_BLE_ADV_DATA_LEN_MAX+ESP_BLE_SCAN_RSP_DATA_LEN_MAX]
 Received EIR

int **flag**
 Advertising data flag bit

int **num_resps**
 Scan result number

uint8_t **adv_data_len**
 Adv data length

uint8_t **scan_rsp_len**
 Scan response length

struct ble_scan_rsp_data_cmpl_evt_param
#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_RSP_DATA_SET_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**
 Indicate the set scan response data operation success status

struct ble_scan_rsp_data_raw_cmpl_evt_param
#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_RSP_DATA_RAW_SET_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**
 Indicate the set raw advertising data operation success status

struct ble_scan_start_cmpl_evt_param
#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_START_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**
 Indicate scan start operation success status

struct ble_scan_stop_cmpl_evt_param
#include <esp_gap_ble_api.h> ESP_GAP_BLE_SCAN_STOP_COMPLETE_EVT.

Public Members

esp_bt_status_t **status**
 Indicate scan stop operation success status

struct ble_set_rand_cmpl_evt_param
#include <esp_gap_ble_api.h> ESP_GAP_BLE_SET_STATIC_RAND_ADDR_EVT.

Public Members

esp_bt_status_t **status**

Indicate set static rand address operation success status

struct ble_update_conn_params_evt_param

#include <esp_gap_ble_api.h> ESP_GAP_BLE_UPDATE_CONN_PARAMS_EVT.

Public Members

esp_bt_status_t **status**

Indicate update connection parameters success status

esp_bd_addr_t **bda**

Bluetooth device address

uint16_t min_int

Min connection interval

uint16_t max_int

Max connection interval

uint16_t latency

Slave latency for the connection in number of connection events. Range: 0x0000 to 0x01F3

uint16_t conn_int

Current connection interval

uint16_t timeout

Supervision timeout for the LE Link. Range: 0x000A to 0x0C80. Mandatory Range: 0x000A to 0x0C80 Time = N * 10 msec

Structures

struct esp_ble_adv_params_t

Advertising parameters.

Public Members

uint16_t adv_int_min

Minimum advertising interval for undirected and low duty cycle directed advertising. Range: 0x0020 to 0x4000 Default: N = 0x0800 (1.28 second) Time = N * 0.625 msec Time Range: 20 ms to 10.24 sec

uint16_t adv_int_max

Maximum advertising interval for undirected and low duty cycle directed advertising. Range: 0x0020 to 0x4000 Default: N = 0x0800 (1.28 second) Time = N * 0.625 msec Time Range: 20 ms to 10.24 sec Advertising max interval

esp_ble_adv_type_t **adv_type**

Advertising type

esp_ble_addr_type_t **own_addr_type**

Owner bluetooth device address type

esp_bd_addr_t **peer_addr**

Peer device bluetooth device address

esp_ble_addr_type_t **peer_addr_type**
Peer device bluetooth device address type

esp_ble_adv_channel_t **channel_map**
Advertising channel map

esp_ble_adv_filter_t **adv_filter_policy**
Advertising filter policy

struct esp_ble_adv_data_t

Advertising data content, according to “Supplement to the Bluetooth Core Specification”.

Public Members

bool **set_scan_rsp**
Set this advertising data as scan response or not

bool **include_name**
Advertising data include device name or not

bool **include_txpower**
Advertising data include TX power

int **min_interval**
Advertising data show advertising min interval

int **max_interval**
Advertising data show advertising max interval

int **appearance**
External appearance of device

uint16_t **manufacturer_len**
Manufacturer data length

uint8_t ***p_manufacturer_data**
Manufacturer data point

uint16_t **service_data_len**
Service data length

uint8_t ***p_service_data**
Service data point

uint16_t **service_uuid_len**
Service uuid length

uint8_t ***p_service_uuid**
Service uuid array point

uint8_t **flag**
Advertising flag of discovery mode, see BLE_ADV_DATA_FLAG detail

struct esp_ble_scan_params_t

Ble scan parameters.

Public Members

esp_ble_scan_type_t **scan_type**
Scan type

esp_ble_addr_type_t **own_addr_type**
Owner address type

esp_ble_scan_filter_t **scan_filter_policy**
Scan filter policy

uint16_t scan_interval
Scan interval. This is defined as the time interval from when the Controller started its last LE scan until it begins the subsequent LE scan. Range: 0x0004 to 0x4000 Default: 0x0010 (10 ms) Time = N * 0.625 msec Time Range: 2.5 msec to 10.24 seconds

uint16_t scan_window
Scan window. The duration of the LE scan. LE_Scan_Window shall be less than or equal to LE_Scan_Interval Range: 0x0004 to 0x4000 Default: 0x0010 (10 ms) Time = N * 0.625 msec Time Range: 2.5 msec to 10240 msec

struct esp_ble_conn_update_params_t
Connection update parameters.

Public Members

esp_bd_addr_t **bda**
Bluetooth device address

uint16_t min_int
Min connection interval

uint16_t max_int
Max connection interval

uint16_t latency
Slave latency for the connection in number of connection events. Range: 0x0000 to 0x01F3

uint16_t timeout
Supervision timeout for the LE Link. Range: 0x000A to 0x0C80. Mandatory Range: 0x000A to 0x0C80 Time = N * 10 msec Time Range: 100 msec to 32 seconds

struct esp_ble_pkt_data_length_params_t
BLE pkt data length keys.

Public Members

uint16_t rx_len
pkt rx data length value

uint16_t tx_len
pkt tx data length value

struct esp_ble_penc_keys_t
BLE encryption keys.

Public Members

esp_bt_octet16_t **ltk**
The long term key

esp_bt_octet8_t **rand**

The random number

uint16_t **ediv**

The ediv value

uint8_t **sec_level**

The security level of the security link

uint8_t **key_size**

The key size(7~16) of the security link

struct esp_ble_pcsrkeys_t

BLE CSRK keys.

Public Members

uint32_t **counter**

The counter

esp_bt_octet16_t **csrkey**

The csrkey

uint8_t **sec_level**

The security level

struct esp_ble_pidkeys_t

BLE pid keys.

Public Members

esp_bt_octet16_t **irk**

The irk value

esp_ble_addr_type_t **addr_type**

The address type

esp_bd_addr_t **static_addr**

The static address

struct esp_ble_lenckeys_t

BLE Encryption reproduction keys.

Public Members

esp_bt_octet16_t **ltk**

The long term key

uint16_t **div**

The div value

uint8_t **key_size**

The key size of the security link

uint8_t **sec_level**

The security level of the security link

struct esp_ble_lcsrk_keys
BLE SRK keys.

Public Members

`uint32_t counter`
The counter value

`uint16_t div`
The div value

`uint8_t sec_level`
The security level of the security link

`esp_bt_octet16_t csrk`
The csrk key value

struct esp_ble_sec_key_notif_t
Structure associated with ESP_KEY_NOTIF_EVT.

Public Members

`esp_bd_addr_t bd_addr`
peer address

`uint32_t passkey`
the numeric value for comparison. If just_works, do not show this number to UI

struct esp_ble_sec_req_t
Structure of the security request.

Public Members

`esp_bd_addr_t bd_addr`
peer address

struct esp_ble_key_t
union type of the security key value

Public Members

`esp_bd_addr_t bd_addr`
peer address

`esp_ble_key_type_t key_type`
key type of the security link

`esp_ble_key_value_t p_key_value`
the pointer to the key value

struct esp_ble_local_id_keys_t
structure type of the ble local id keys value

Public Members

esp_bt_octet16_t **ir**
the 16 bits of the ir value

esp_bt_octet16_t **irk**
the 16 bits of the ir key value

esp_bt_octet16_t **dhk**
the 16 bits of the dh key value

struct esp_ble_auth_cmpl_t
Structure associated with ESP_AUTH_CMPL_EVT.

Public Members

esp_bd_addr_t **bd_addr**
BD address peer device.

bool **key_present**
Valid link key value in key element

esp_link_key **key**
Link key associated with peer device.

uint8_t **key_type**
The type of Link Key

bool **success**
TRUE of authentication succeeded, FALSE if failed.

uint8_t **fail_reason**
The HCI reason/error code for when success=FALSE

esp_ble_addr_type_t **addr_type**
Peer device address type

esp_bt_dev_type_t **dev_type**
Device type

Macros

ESP_BLE_ADV_FLAG_LIMIT_DISC (0x01 << 0)
BLE_ADV_DATA_FLAG data flag bit definition used for advertising data flag

ESP_BLE_ADV_FLAG_GEN_DISC (0x01 << 1)

ESP_BLE_ADV_FLAG_BREDR_NOT_SPT (0x01 << 2)

ESP_BLE_ADV_FLAG_DMT_CONTROLLER_SPT (0x01 << 3)

ESP_BLE_ADV_FLAG_DMT_HOST_SPT (0x01 << 4)

ESP_BLE_ADV_FLAG_NON_LIMIT_DISC (0x00)

ESP_LE_KEY_NONE 0 /* relate to BTM_LE_KEY_NONE in btm_api.h */

ESP_LE_KEY_PENC (1 << 0) /*!< encryption key, encryption information of peer device */ /* relate to BTM_LE_KEY_PENC in btm

ESP_LE_KEY_PID (1 << 1) /*!< identity key of the peer device */ /* relate to BTM_LE_KEY_PID in btm_api.h */

```

ESP_LE_KEY_PCSRK (1 << 2) /*!< peer SRK */ /* relate to BTM_LE_KEY_PCSRK in btm_api.h */
ESP_LE_KEY_PLK (1 << 3) /*!< Link key*/ /* relate to BTM_LE_KEY_PLK in btm_api.h */
ESP_LE_KEY_LLK (ESP_LE_KEY_PLK << 4) /* relate to BTM_LE_KEY_LLK in btm_api.h */
ESP_LE_KEY_LENC (ESP_LE_KEY_PENC << 4) /*!< master role security information:div */ /* relate to BTM_LE_KEY_LENC in
ESP_LE_KEY_LID (ESP_LE_KEY_PID << 4) /*!< master device ID key */ /* relate to BTM_LE_KEY_LID in btm_api.h */
ESP_LE_KEY_LCSRK (ESP_LE_KEY_PCSRK << 4) /*!< local CSRK has been deliver to peer */ /* relate to BTM_LE_KEY_LCSRK
ESP_LE_AUTH_NO_BOND 0x00 /*!< 0*/ /* relate to BTM_LE_AUTH_NO_BOND in btm_api.h */
ESP_LE_AUTH_BOND 0x01 /*!< 1 << 0 */ /* relate to BTM_LE_AUTH_BOND in btm_api.h */
ESP_LE_AUTH_REQ_MITM (1 << 2) /*!< 1 << 2 */ /* relate to BTM_LE_AUTH_REQ_MITM in btm_api.h */
ESP_LE_AUTH_REQ_SC_ONLY (1 << 3) /*!< 1 << 3 */ /* relate to BTM_LE_AUTH_REQ_SC_ONLY in btm_api.h */
ESP_LE_AUTH_REQ_SC_BOND (ESP_LE_AUTH_BOND | ESP_LE_AUTH_REQ_SC_ONLY) /*!< 1001 */ /* relate to BTM_LE_A
ESP_LE_AUTH_REQ_SC_MITM (ESP_LE_AUTH_REQ_MITM | ESP_LE_AUTH_REQ_SC_ONLY) /*!< 1100 */ /* relate to BTM
ESP_LE_AUTH_REQ_SC_MITM_BOND (ESP_LE_AUTH_REQ_MITM | ESP_LE_AUTH_REQ_SC_ONLY | ESP_LE_AUTH_BON
ESP_IO_CAP_OUT 0 /*!< DisplayOnly */ /* relate to BTM_IO_CAP_OUT in btm_api.h */
ESP_IO_CAP_IO 1 /*!< DisplayYesNo */ /* relate to BTM_IO_CAP_IO in btm_api.h */
ESP_IO_CAP_IN 2 /*!< KeyboardOnly */ /* relate to BTM_IO_CAP_IN in btm_api.h */
ESP_IO_CAP_NONE 3 /*!< NoInputNoOutput */ /* relate to BTM_IO_CAP_NONE in btm_api.h */
ESP_IO_CAP_KBDISP 4 /*!< Keyboard display */ /* relate to BTM_IO_CAP_KBDISP in btm_api.h */
ESP_BLE_ADV_DATA_LEN_MAX 31
    Advertising data maximum length.
ESP_BLE_SCAN_RSP_DATA_LEN_MAX 31
    Scan response data maximum length.

```

Type Definitions

```

typedef uint8_t esp_ble_key_type_t
typedef uint8_t esp_ble_auth_req_t
    combination of the above bit pattern
typedef uint8_t esp_ble_io_cap_t
    combination of the io capability
typedef void (*esp_gap_ble_cb_t) (esp_gap_ble_cb_event_t event, esp_ble_gap_cb_param_t *param)
    GAP callback function type.

```

Parameters

- event: : Event type
- param: : Point to callback parameter, currently is union type

Enumerations

enum esp_gap_ble_cb_event_t

GAP BLE callback event type.

Values:

ESP_GAP_BLE_ADV_DATA_SET_COMPLETE_EVT = 0

When advertising data set complete, the event comes

ESP_GAP_BLE_SCAN_RSP_DATA_SET_COMPLETE_EVT

When scan response data set complete, the event comes

ESP_GAP_BLE_SCAN_PARAM_SET_COMPLETE_EVT

When scan parameters set complete, the event comes

ESP_GAP_BLE_SCAN_RESULT_EVT

When one scan result ready, the event comes each time

ESP_GAP_BLE_ADV_DATA_RAW_SET_COMPLETE_EVT

When raw advertising data set complete, the event comes

ESP_GAP_BLE_SCAN_RSP_DATA_RAW_SET_COMPLETE_EVT

When raw advertising data set complete, the event comes

ESP_GAP_BLE_ADV_START_COMPLETE_EVT

When start advertising complete, the event comes

ESP_GAP_BLE_SCAN_START_COMPLETE_EVT

When start scan complete, the event comes

ESP_GAP_BLE_AUTH_CMPL_EVT

ESP_GAP_BLE_KEY_EVT

ESP_GAP_BLE_SEC_REQ_EVT

ESP_GAP_BLE_PASSKEY_NOTIF_EVT

ESP_GAP_BLE_PASSKEY_REQ_EVT

ESP_GAP_BLE_OOB_REQ_EVT

ESP_GAP_BLE_LOCAL_IR_EVT

ESP_GAP_BLE_LOCAL_ER_EVT

ESP_GAP_BLE_NC_REQ_EVT

ESP_GAP_BLE_ADV_STOP_COMPLETE_EVT

When stop adv complete, the event comes

ESP_GAP_BLE_SCAN_STOP_COMPLETE_EVT

When stop scan complete, the event comes

ESP_GAP_BLE_SET_STATIC_RAND_ADDR_EVT

When set the static rand address complete, the event comes

ESP_GAP_BLE_UPDATE_CONN_PARAMS_EVT

When update connection parameters complete, the event comes

ESP_GAP_BLE_SET_PKT_LENGTH_COMPLETE_EVT

When set pkt length complete, the event comes

enum esp_ble_adv_data_type

The type of advertising data(not adv_type)

Values:

ESP_BLE_AD_TYPE_FLAG = 0x01
ESP_BLE_AD_TYPE_16SRV_PART = 0x02
ESP_BLE_AD_TYPE_16SRV_CMPL = 0x03
ESP_BLE_AD_TYPE_32SRV_PART = 0x04
ESP_BLE_AD_TYPE_32SRV_CMPL = 0x05
ESP_BLE_AD_TYPE_128SRV_PART = 0x06
ESP_BLE_AD_TYPE_128SRV_CMPL = 0x07
ESP_BLE_AD_TYPE_NAME_SHORT = 0x08
ESP_BLE_AD_TYPE_NAME_CMPL = 0x09
ESP_BLE_AD_TYPE_TX_PWR = 0x0A
ESP_BLE_AD_TYPE_DEV_CLASS = 0x0D
ESP_BLE_AD_TYPE_SM_TK = 0x10
ESP_BLE_AD_TYPE_SM_OOB_FLAG = 0x11
ESP_BLE_AD_TYPE_INT_RANGE = 0x12
ESP_BLE_AD_TYPE_SOL_SRV_UUID = 0x14
ESP_BLE_AD_TYPE_128SOL_SRV_UUID = 0x15
ESP_BLE_AD_TYPE_SERVICE_DATA = 0x16
ESP_BLE_AD_TYPE_PUBLIC_TARGET = 0x17
ESP_BLE_AD_TYPE_RANDOM_TARGET = 0x18
ESP_BLE_AD_TYPE_APPEARANCE = 0x19
ESP_BLE_AD_TYPE_ADV_INT = 0x1A
ESP_BLE_AD_TYPE_LE_DEV_ADDR = 0x1b
ESP_BLE_AD_TYPE_LE_ROLE = 0x1c
ESP_BLE_AD_TYPE_SPAIR_C256 = 0x1d
ESP_BLE_AD_TYPE_SPAIR_R256 = 0x1e
ESP_BLE_AD_TYPE_32SOL_SRV_UUID = 0x1f
ESP_BLE_AD_TYPE_32SERVICE_DATA = 0x20
ESP_BLE_AD_TYPE_128SERVICE_DATA = 0x21
ESP_BLE_AD_TYPE_LE_SECURE_CONFIRM = 0x22
ESP_BLE_AD_TYPE_LE_SECURE_RANDOM = 0x23
ESP_BLE_AD_TYPE_URI = 0x24
ESP_BLE_AD_TYPE_INDOOR_POSITION = 0x25
ESP_BLE_AD_TYPE_TRANS_DISC_DATA = 0x26

```
ESP_BLE_AD_TYPE_LE_SUPPORT_FEATURE = 0x27
ESP_BLE_AD_TYPE_CHAN_MAP_UPDATE = 0x28
ESP_BLE_AD_MANUFACTURER_SPECIFIC_TYPE = 0xFF
```

enum esp_ble_adv_type_t

Advertising mode.

Values:

```
ADV_TYPE_IND = 0x00
ADV_TYPE_DIRECT_IND_HIGH = 0x01
ADV_TYPE_SCAN_IND = 0x02
ADV_TYPE_NONCONN_IND = 0x03
ADV_TYPE_DIRECT_IND_LOW = 0x04
```

enum esp_ble_adv_channel_t

Advertising channel mask.

Values:

```
ADV_CHNL_37 = 0x01
ADV_CHNL_38 = 0x02
ADV_CHNL_39 = 0x04
ADV_CHNL_ALL = 0x07
```

enum esp_ble_adv_filter_t

Values:

```
ADV_FILTER_ALLOW_SCAN_ANY_CON_ANY = 0x00
    Allow both scan and connection requests from anyone.
ADV_FILTER_ALLOW_SCAN_WLST_CON_ANY
    Allow both scan req from White List devices only and connection req from anyone.
ADV_FILTER_ALLOW_SCAN_ANY_CON_WLST
    Allow both scan req from anyone and connection req from White List devices only.
ADV_FILTER_ALLOW_SCAN_WLST_CON_WLST
    Allow scan and connection requests from White List devices only.
```

enum esp_ble_sec_act_t

Values:

```
ESP_BLE_SEC_NONE = 0
ESP_BLE_SEC_ENCRYPT
ESP_BLE_SEC_ENCRYPT_NO_MITM
ESP_BLE_SEC_ENCRYPT_MITM
```

enum esp_ble_sm_param_t

Values:

```
ESP_BLE_SM_PASSKEY = 0
ESP_BLE_SM_AUTHEN_REQ_MODE
ESP_BLE_SM_IOCAP_MODE
```

ESP_BLE_SM_SET_INIT_KEY

ESP_BLE_SM_SET_RSP_KEY

ESP_BLE_SM_MAX_KEY_SIZE

enum esp_ble_scan_type_t

Ble scan type.

Values:

BLE_SCAN_TYPE_PASSIVE = 0x0

Passive scan

BLE_SCAN_TYPE_ACTIVE = 0x1

Active scan

enum esp_ble_scan_filter_t

Ble scan filter type.

Values:

BLE_SCAN_FILTER_ALLOW_ALL = 0x0

Accept all :

- 1.advertisement packets except directed advertising packets not addressed to this device (default).

BLE_SCAN_FILTER_ALLOW_ONLY_WLST = 0x1

Accept only :

- 1.advertisement packets from devices where the advertiser's address is in the White list.
- 2.Directed advertising packets which are not addressed for this device shall be ignored.

BLE_SCAN_FILTER_ALLOW_UND_RPA_DIR = 0x2

Accept all :

- 1.undirected advertisement packets, and
- 2.directed advertising packets where the initiator address is a resolvable private address, and
- 3.directed advertising packets addressed to this device.

BLE_SCAN_FILTER_ALLOW_WLIST_PRA_DIR = 0x3

Accept all :

- 1.advertisement packets from devices where the advertiser's address is in the White list, and
- 2.directed advertising packets where the initiator address is a resolvable private address, and
- 3.directed advertising packets addressed to this device.

enum esp_gap_search_evt_t

Sub Event of ESP_GAP_BLE_SCAN_RESULT_EVT.

Values:

ESP_GAP_SEARCH_INQ_RES_EVT = 0

Inquiry result for a peer device.

ESP_GAP_SEARCH_INQ_CMPL_EVT = 1

Inquiry complete.

ESP_GAP_SEARCH_DISC_RES_EVT = 2

Discovery result for a peer device.

ESP_GAP_SEARCH_DISC_BLE_RES_EVT = 3
Discovery result for BLE GATT based service on a peer device.

ESP_GAP_SEARCH_DISC_CMPL_EVT = 4
Discovery complete.

ESP_GAP_SEARCH_DI_DISC_CMPL_EVT = 5
Discovery complete.

ESP_GAP_SEARCH_SEARCH_CANCEL_CMPL_EVT = 6
Search cancelled

enum esp_ble_evt_type_t

Ble scan result event type, to indicate the result is scan response or advertising data or other.

Values:

ESP_BLE_EVT_CONN_ADV = 0x00
Connectable undirected advertising (ADV_IND)

ESP_BLE_EVT_CONN_DIR_ADV = 0x01
Connectable directed advertising (ADV_DIRECT_IND)

ESP_BLE_EVT_DISC_ADV = 0x02
Scannable undirected advertising (ADV_SCAN_IND)

ESP_BLE_EVT_NON_CONN_ADV = 0x03
Non connectable undirected advertising (ADV_NONCONN_IND)

ESP_BLE_EVT_SCAN_RSP = 0x04
Scan Response (SCAN_RSP)

GATT DEFINES

Overview

Instructions

Application Example

Instructions

API Reference

Header File

- `bt/bluedroid/api/include/esp_gatt_defs.h`

Unions

union esp_gatt_rsp_t

#include <esp_gatt_defs.h> GATT remote read request response type.

Public Members

esp_gatt_value_t **attr_value**

Gatt attribute structure

uint16_t **handle**

Gatt attribute handle

Structures

struct esp_gatt_id_t

Gatt id, include uuid and instance id.

Public Members

esp_bt_uuid_t **uuid**

UUID

uint8_t **inst_id**

Instance id

struct esp_gatt_srvc_id_t

Gatt service id, include id (uuid and instance id) and primary flag.

Public Members

esp_gatt_id_t **id**

Gatt id, include uuid and instance

bool **is_primary**

This service is primary or not

struct esp_attr_desc_t

Attribute description (used to create database)

Public Members

uint16_t **uuid_length**

UUID length

uint8_t ***uuid_p**

UUID value

uint16_t **perm**

Attribute permission

uint16_t **max_length**

Maximum length of the element

uint16_t **length**

Current length of the element

uint8_t ***value**

Element value array

struct esp_attr_control_t
 attribute auto response flag

Public Members

uint8_t auto_rsp
 if auto_rsp set to ESP_GATT_RSP_BY_APP, means the response of Write/Read operation will be replied by application. if auto_rsp set to ESP_GATT_AUTO_RSP, means the response of Write/Read operation will be replied by GATT stack automatically.

struct esp_gatts_attr_db_t
 attribute type added to the gatt server database

Public Members

esp_attr_control_t **attr_control**
 The attribute control type

esp_attr_desc_t **att_desc**
 The attribute type

struct esp_attr_value_t
 set the attribute value type

Public Members

uint16_t attr_max_len
 attribute max value length

uint16_t attr_len
 attribute current value length

uint8_t *attr_value
 the pointer to attribute value

struct esp_gatts_incl_svc_desc_t
 Gatt include service entry element.

Public Members

uint16_t start_hdl
 Gatt start handle value of included service

uint16_t end_hdl
 Gatt end handle value of included service

uint16_t uuid
 Gatt attribute value UUID of included service

struct esp_gatts_incl128_svc_desc_t
 Gatt include 128 bit service entry element.

Public Members

`uint16_t start_hdl`
Gatt start handle value of included 128 bit service

`uint16_t end_hdl`
Gatt end handle value of included 128 bit service

`struct esp_gatt_value_t`
Gatt attribute value.

Public Members

`uint8_t value[ESP_GATT_MAX_ATTR_LEN]`
Gatt attribute value

`uint16_t handle`
Gatt attribute handle

`uint16_t offset`
Gatt attribute value offset

`uint16_t len`
Gatt attribute value length

`uint8_t auth_req`
Gatt authentication request

Macros

`ESP_GATT_UUID_IMMEDIATE_ALERT_SVC` 0x1802 /* Immediate alert Service*/
All “ESP_GATT_UUID_XXX” is attribute types

`ESP_GATT_UUID_LINK_LOSS_SVC` 0x1803 /* Link Loss Service*/

`ESP_GATT_UUID_TX_POWER_SVC` 0x1804 /* TX Power Service*/

`ESP_GATT_UUID_CURRENT_TIME_SVC` 0x1805 /* Current Time Service Service*/

`ESP_GATT_UUID_REF_TIME_UPDATE_SVC` 0x1806 /* Reference Time Update Service*/

`ESP_GATT_UUID_NEXT_DST_CHANGE_SVC` 0x1807 /* Next DST Change Service*/

`ESP_GATT_UUID_GLUCOSE_SVC` 0x1808 /* Glucose Service*/

`ESP_GATT_UUID_HEALTH_THERMOM_SVC` 0x1809 /* Health Thermometer Service*/

`ESP_GATT_UUID_DEVICE_INFO_SVC` 0x180A /* Device Information Service*/

`ESP_GATT_UUID_HEART_RATE_SVC` 0x180D /* Heart Rate Service*/

`ESP_GATT_UUID_PHONE_ALERT_STATUS_SVC` 0x180E /* Phone Alert Status Service*/

`ESP_GATT_UUID_BATTERY_SERVICE_SVC` 0x180F /* Battery Service*/

`ESP_GATT_UUID_BLOOD_PRESSURE_SVC` 0x1810 /* Blood Pressure Service*/

`ESP_GATT_UUID_ALERT_NTF_SVC` 0x1811 /* Alert Notification Service*/

`ESP_GATT_UUID_HID_SVC` 0x1812 /* HID Service*/

`ESP_GATT_UUID_SCAN_PARAMETERS_SVC` 0x1813 /* Scan Parameters Service*/

ESP_GATT_UUID_RUNNING_SPEED_CADENCE_SVC 0x1814 /* Running Speed and Cadence Service*/
ESP_GATT_UUID_CYCLING_SPEED_CADENCE_SVC 0x1816 /* Cycling Speed and Cadence Service*/
ESP_GATT_UUID_CYCLING_POWER_SVC 0x1818 /* Cycling Power Service*/
ESP_GATT_UUID_LOCATION_AND_NAVIGATION_SVC 0x1819 /* Location and Navigation Service*/
ESP_GATT_UUID_USER_DATA_SVC 0x181C /* User Data Service*/
ESP_GATT_UUID_WEIGHT_SCALE_SVC 0x181D /* Weight Scale Service*/
ESP_GATT_UUID_PRI_SERVICE 0x2800
ESP_GATT_UUID_SEC_SERVICE 0x2801
ESP_GATT_UUID_INCLUDE_SERVICE 0x2802
ESP_GATT_UUID_CHAR_DECLARE 0x2803 /* Characteristic Declaration*/
ESP_GATT_UUID_CHAR_EXT_PROP 0x2900 /* Characteristic Extended Properties */
ESP_GATT_UUID_CHAR_DESCRIPTION 0x2901 /* Characteristic User Description*/
ESP_GATT_UUID_CHAR_CLIENT_CONFIG 0x2902 /* Client Characteristic Configuration */
ESP_GATT_UUID_CHAR_SRVR_CONFIG 0x2903 /* Server Characteristic Configuration */
ESP_GATT_UUID_CHAR_PRESENT_FORMAT 0x2904 /* Characteristic Presentation Format*/
ESP_GATT_UUID_CHAR_AGG_FORMAT 0x2905 /* Characteristic Aggregate Format*/
ESP_GATT_UUID_CHAR_VALID_RANGE 0x2906 /* Characteristic Valid Range */
ESP_GATT_UUID_EXT_RPT_REF_DESCR 0x2907
ESP_GATT_UUID_RPT_REF_DESCR 0x2908
ESP_GATT_UUID_GAP_DEVICE_NAME 0x2A00
ESP_GATT_UUID_GAP_ICON 0x2A01
ESP_GATT_UUID_GAP_PREF_CONN_PARAM 0x2A04
ESP_GATT_UUID_GAP_CENTRAL_ADDR_RESOL 0x2AA6
ESP_GATT_UUID_GATT_SRV_CHGD 0x2A05
ESP_GATT_UUID_ALERT_LEVEL 0x2A06 /* Alert Level */
ESP_GATT_UUID_TX_POWER_LEVEL 0x2A07 /* TX power level */
ESP_GATT_UUID_CURRENT_TIME 0x2A2B /* Current Time */
ESP_GATT_UUID_LOCAL_TIME_INFO 0x2A0F /* Local time info */
ESP_GATT_UUID_REF_TIME_INFO 0x2A14 /* reference time information */
ESP_GATT_UUID_NW_STATUS 0x2A18 /* network availability status */
ESP_GATT_UUID_NW_TRIGGER 0x2A1A /* Network availability trigger */
ESP_GATT_UUID_ALERT_STATUS 0x2A3F /* alert status */
ESP_GATT_UUID_RINGER_CP 0x2A40 /* ringer control point */
ESP_GATT_UUID_RINGER_SETTING 0x2A41 /* ringer setting */
ESP_GATT_UUID_GM_MEASUREMENT 0x2A18
ESP_GATT_UUID_GM_CONTEXT 0x2A34

ESP_GATT_UUID_GM_CONTROL_POINT 0x2A52
ESP_GATT_UUID_GM_FEATURE 0x2A51
ESP_GATT_UUID_SYSTEM_ID 0x2A23
ESP_GATT_UUID_MODEL_NUMBER_STR 0x2A24
ESP_GATT_UUID_SERIAL_NUMBER_STR 0x2A25
ESP_GATT_UUID_FW_VERSION_STR 0x2A26
ESP_GATT_UUID_HW_VERSION_STR 0x2A27
ESP_GATT_UUID_SW_VERSION_STR 0x2A28
ESP_GATT_UUID_MANU_NAME 0x2A29
ESP_GATT_UUID_IEEE_DATA 0x2A2A
ESP_GATT_UUID_PNP_ID 0x2A50
ESP_GATT_UUID_HID_INFORMATION 0x2A4A
ESP_GATT_UUID_HID_REPORT_MAP 0x2A4B
ESP_GATT_UUID_HID_CONTROL_POINT 0x2A4C
ESP_GATT_UUID_HID_REPORT 0x2A4D
ESP_GATT_UUID_HID_PROTO_MODE 0x2A4E
ESP_GATT_UUID_HID_BT_KB_INPUT 0x2A22
ESP_GATT_UUID_HID_BT_KB_OUTPUT 0x2A32
ESP_GATT_UUID_HID_BT_MOUSE_INPUT 0x2A33
ESP_GATT_HEART_RATE_MEAS 0x2A37
Heart Rate Measurement.
ESP_GATT_BODY_SENSOR_LOCATION 0x2A38
Body Sensor Location.
ESP_GATT_HEART_RATE_CNTL_POINT 0x2A39
Heart Rate Control Point.
ESP_GATT_UUID_BATTERY_LEVEL 0x2A19
ESP_GATT_UUID_SC_CONTROL_POINT 0x2A55
ESP_GATT_UUID_SENSOR_LOCATION 0x2A5D
ESP_GATT_UUID_RSC_MEASUREMENT 0x2A53
ESP_GATT_UUID_RSC_FEATURE 0x2A54
ESP_GATT_UUID_CSC_MEASUREMENT 0x2A5B
ESP_GATT_UUID_CSC_FEATURE 0x2A5C
ESP_GATT_UUID_SCAN_INT_WINDOW 0x2A4F
ESP_GATT_UUID_SCAN_REFRESH 0x2A31
ESP_GATT_ILLEGAL_UUID 0
GATT INVALID UUID.
ESP_GATT_ILLEGAL_HANDLE 0
GATT INVALID HANDLE.

ESP_GATT_ATTR_HANDLE_MAX 100

GATT attribute max handle.

ESP_GATT_PERM_READ (1 << 0) /* bit 0 - 0x0001 */ /* relate to BTA_GATT_PERM_READ in bta_gatt_api.h */

Attribute permissions.

ESP_GATT_PERM_READ_ENCRYPTED (1 << 1) /* bit 1 - 0x0002 */ /* relate to BTA_GATT_PERM_READ_ENCRYPTED in bta_g

ESP_GATT_PERM_READ_ENC_MITM (1 << 2) /* bit 2 - 0x0004 */ /* relate to BTA_GATT_PERM_READ_ENC_MITM in bta_gatt

ESP_GATT_PERM_WRITE (1 << 4) /* bit 4 - 0x0010 */ /* relate to BTA_GATT_PERM_WRITE in bta_gatt_api.h */

ESP_GATT_PERM_WRITE_ENCRYPTED (1 << 5) /* bit 5 - 0x0020 */ /* relate to BTA_GATT_PERM_WRITE_ENCRYPTED in bta

ESP_GATT_PERM_WRITE_ENC_MITM (1 << 6) /* bit 6 - 0x0040 */ /* relate to BTA_GATT_PERM_WRITE_ENC_MITM in bta_g

ESP_GATT_PERM_WRITE_SIGNED (1 << 7) /* bit 7 - 0x0080 */ /* relate to BTA_GATT_PERM_WRITE_SIGNED in bta_gatt_api

ESP_GATT_PERM_WRITE_SIGNED_MITM (1 << 8) /* bit 8 - 0x0100 */ /* relate to BTA_GATT_PERM_WRITE_SIGNED_MITM

ESP_GATT_CHAR_PROP_BIT_BROADCAST (1 << 0) /* 0x01 */ /* relate to BTA_GATT_CHAR_PROP_BIT_BROADCAST in bta

ESP_GATT_CHAR_PROP_BIT_READ (1 << 1) /* 0x02 */ /* relate to BTA_GATT_CHAR_PROP_BIT_READ in bta_gatt_api.h */

ESP_GATT_CHAR_PROP_BIT_WRITE_NR (1 << 2) /* 0x04 */ /* relate to BTA_GATT_CHAR_PROP_BIT_WRITE_NR in bta_gatt

ESP_GATT_CHAR_PROP_BIT_WRITE (1 << 3) /* 0x08 */ /* relate to BTA_GATT_CHAR_PROP_BIT_WRITE in bta_gatt_api.h */

ESP_GATT_CHAR_PROP_BIT_NOTIFY (1 << 4) /* 0x10 */ /* relate to BTA_GATT_CHAR_PROP_BIT_NOTIFY in bta_gatt_api.h

ESP_GATT_CHAR_PROP_BIT_INDICATE (1 << 5) /* 0x20 */ /* relate to BTA_GATT_CHAR_PROP_BIT_INDICATE in bta_gatt

ESP_GATT_CHAR_PROP_BIT_AUTH (1 << 6) /* 0x40 */ /* relate to BTA_GATT_CHAR_PROP_BIT_AUTH in bta_gatt_api.h */

ESP_GATT_CHAR_PROP_BIT_EXT_PROP (1 << 7) /* 0x80 */ /* relate to BTA_GATT_CHAR_PROP_BIT_EXT_PROP in bta_gatt

ESP_GATT_MAX_ATTR_LEN 600

GATT maximum attribute length.

ESP_GATT_RSP_BY_APP 0

ESP_GATT_AUTO_RSP 1

ESP_GATT_IF_NONE 0xff

If callback report gattc_if/gatts_if as this macro, means this event is not correspond to any app

Type Definitions

```
typedef uint16_t esp_gatt_perm_t
```

```
typedef uint8_t esp_gatt_char_prop_t
```

```
typedef uint8_t esp_gatt_if_t
```

Gatt interface type, different application on GATT client use different gatt_if

Enumerations

```
enum esp_gatt_prep_write_type
```

Attribute write data type from the client.

Values:

```
ESP_GATT_PREP_WRITE_CANCEL = 0x00
```

Prepare write cancel

ESP_GATT_PREP_WRITE_EXEC = 0x01

Prepare write execute

enum esp_gatt_status_t

GATT success code and error codes.

Values:

ESP_GATT_OK = 0x0

ESP_GATT_INVALID_HANDLE = 0x01

ESP_GATT_READ_NOT_PERMIT = 0x02

ESP_GATT_WRITE_NOT_PERMIT = 0x03

ESP_GATT_INVALID_PDU = 0x04

ESP_GATT_INSUF_AUTHENTICATION = 0x05

ESP_GATT_REQ_NOT_SUPPORTED = 0x06

ESP_GATT_INVALID_OFFSET = 0x07

ESP_GATT_INSUF_AUTHORIZATION = 0x08

ESP_GATT_PREPARE_Q_FULL = 0x09

ESP_GATT_NOT_FOUND = 0x0a

ESP_GATT_NOT_LONG = 0x0b

ESP_GATT_INSUF_KEY_SIZE = 0x0c

ESP_GATT_INVALID_ATTR_LEN = 0x0d

ESP_GATT_ERR_UNLIKELY = 0x0e

ESP_GATT_INSUF_ENCRYPTION = 0x0f

ESP_GATT_UNSUPPORT_GRP_TYPE = 0x10

ESP_GATT_INSUF_RESOURCE = 0x11

ESP_GATT_NO_RESOURCES = 0x80

ESP_GATT_INTERNAL_ERROR = 0x81

ESP_GATT_WRONG_STATE = 0x82

ESP_GATT_DB_FULL = 0x83

ESP_GATT_BUSY = 0x84

ESP_GATT_ERROR = 0x85

ESP_GATT_CMD_STARTED = 0x86

ESP_GATT_ILLEGAL_PARAMETER = 0x87

ESP_GATT_PENDING = 0x88

ESP_GATT_AUTH_FAIL = 0x89

ESP_GATT_MORE = 0x8a

ESP_GATT_INVALID_CFG = 0x8b

ESP_GATT_SERVICE_STARTED = 0x8c

ESP_GATT_ENCRYPED_MITM = ESP_GATT_OK

```

ESP_GATT_ENCRYPED_NO_MITM = 0x8d
ESP_GATT_NOT_ENCRYPTED = 0x8e
ESP_GATT_CONGESTED = 0x8f
ESP_GATT_DUP_REG = 0x90
ESP_GATT_ALREADY_OPEN = 0x91
ESP_GATT_CANCEL = 0x92
ESP_GATT_STACK_RSP = 0xe0
ESP_GATT_APP_RSP = 0xe1
ESP_GATT_UNKNOWN_ERROR = 0xef
ESP_GATT_CCC_CFG_ERR = 0xfd
ESP_GATT_PRC_IN_PROGRESS = 0xfe
ESP_GATT_OUT_OF_RANGE = 0xff

```

enum esp_gatt_conn_reason_t
Gatt Connection reason enum.

Values:

```

ESP_GATT_CONN_UNKNOWN = 0
    Gatt connection unknown

ESP_GATT_CONN_L2C_FAILURE = 1
    General L2cap failure

ESP_GATT_CONN_TIMEOUT = 0x08
    Connection timeout

ESP_GATT_CONN_TERMINATE_PEER_USER = 0x13
    Connection terminate by peer user

ESP_GATT_CONN_TERMINATE_LOCAL_HOST = 0x16
    Connection terminated by local host

ESP_GATT_CONN_FAIL_ESTABLISH = 0x3e
    Connection fail to establish

ESP_GATT_CONN_LMP_TIMEOUT = 0x22
    Connection fail for LMP response tout

ESP_GATT_CONN_CONN_CANCEL = 0x0100
    L2CAP connection cancelled

ESP_GATT_CONN_NONE = 0x0101
    No connection to cancel

```

enum esp_gatt_auth_req_t
Gatt authentication request type.

Values:

```

ESP_GATT_AUTH_REQ_NONE = 0
ESP_GATT_AUTH_REQ_NO_MITM = 1
ESP_GATT_AUTH_REQ_MITM = 2
ESP_GATT_AUTH_REQ_SIGNED_NO_MITM = 3

```

ESP_GATT_AUTH_REQ_SIGNED_MITM = 4

enum esp_gatt_write_type_t

Gatt write type.

Values:

ESP_GATT_WRITE_TYPE_NO_RSP = 1

Gatt write attribute need no response

ESP_GATT_WRITE_TYPE_RSP

Gatt write attribute need remote response

GATT SERVER API

Overview

Instructions

Application Example

Check [bluetooth](#) folder in ESP-IDF examples, which contains the following application:

- This is a GATT server demo. Use GATT API to create a GATT server with send advertising. This GATT server can be connected and the service can be discovery - [bluetooth/gatt_server](#)

API Reference

Header File

- [bt/bluedroid/api/include/esp_gatts_api.h](#)

Functions

esp_err_t esp_ble_gatts_register_callback (*esp_gatts_cb_t callback*)

This function is called to register application callbacks with BTA GATTS module.

Return

- ESP_OK : success
- other : failed

esp_err_t esp_ble_gatts_app_register (*uint16_t app_id*)

This function is called to register application identifier.

Return

- ESP_OK : success
- other : failed

esp_err_t esp_ble_gatts_app_unregister (*esp_gatt_if_t gatts_if*)

unregister with GATT Server.

Return

- ESP_OK : success
- other : failed

Parameters

- gatts_if: GATT server access interface

esp_err_t **esp_ble_gatts_create_service** (*esp_gatt_if_t gatts_if, esp_gatt_srvc_id_t *service_id, uint16_t num_handle*)

Create a service. When service creation is done, a callback event BTA_GATTS_CREATE_SRVC_EVT is called to report status and service ID to the profile. The service ID obtained in the callback function needs to be used when adding included service and characteristics/descriptors into the service.

Return

- ESP_OK : success
- other : failed

Parameters

- gatts_if: GATT server access interface
- service_id: service ID.
- num_handle: number of handle requested for this service.

esp_err_t **esp_ble_gatts_create_attr_tab** (*const esp_gatts_attr_db_t *gatts_attr_db, esp_gatt_if_t gatts_if, uint8_t max_nb_attr, uint8_t srvc_inst_id*)

Create a service attribute tab.

Return

- ESP_OK : success
- other : failed

Parameters

- gatts_attr_db: the pointer to the service attr tab
- gatts_if: GATT server access interface
- max_nb_attr: the number of attribute to be added to the service database.
- srvc_inst_id: the instance id of the service

esp_err_t **esp_ble_gatts_add_included_service** (*uint16_t service_handle, uint16_t included_service_handle*)

This function is called to add an included service. After included service is included, a callback event BTA_GATTS_ADD_INCL_SRVC_EVT is reported the included service ID.

Return

- ESP_OK : success
- other : failed

Parameters

- service_handle: service handle to which this included service is to be added.
- included_service_handle: the service ID to be included.

```
esp_err_t esp_ble_gatts_add_char (uint16_t service_handle, esp_bt_uuid_t *char_uuid,
                                  esp_gatt_perm_t perm, esp_gatt_char_prop_t property,
                                  esp_attr_value_t *char_val, esp_attr_control_t *control)
```

This function is called to add a characteristic into a service.

Return

- ESP_OK : success
- other : failed

Parameters

- service_handle: service handle to which this included service is to be added.
- char_uuid: : Characteristic UUID.
- perm: : Characteristic value declaration attribute permission.
- property: : Characteristic Properties
- char_val: : Characteristic value
- control: : attribute response control byte

```
esp_err_t esp_ble_gatts_add_char_descr (uint16_t service_handle, esp_bt_uuid_t *de-
                                        descr_uuid, esp_gatt_perm_t perm, esp_attr_value_t
                                        *char_descr_val, esp_attr_control_t *control)
```

This function is called to add characteristic descriptor. When it's done, a callback event BTA_GATTS_ADD_DESCR_EVT is called to report the status and an ID number for this descriptor.

Return

- ESP_OK : success
- other : failed

Parameters

- service_handle: service handle to which this characteristic descriptor is to be added.
- perm: descriptor access permission.
- descr_uuid: descriptor UUID.
- char_descr_val: : Characteristic descriptor value
- control: : attribute response control byte

```
esp_err_t esp_ble_gatts_delete_service (uint16_t service_handle)
```

This function is called to delete a service. When this is done, a callback event BTA_GATTS_DELETE_EVT is report with the status.

Return

- ESP_OK : success
- other : failed

Parameters

- service_handle: service_handle to be deleted.

```
esp_err_t esp_ble_gatts_start_service (uint16_t service_handle)
```

This function is called to start a service.

Return

- ESP_OK : success
- other : failed

Parameters

- *service_handle*: the service handle to be started.

esp_err_t **esp_ble_gatts_stop_service** (uint16_t *service_handle*)

This function is called to stop a service.

Return

- ESP_OK : success
- other : failed

Parameters

- *service_handle*: - service to be topped.

esp_err_t **esp_ble_gatts_send_indicate** (*esp_gatt_if_t gatts_if*, uint16_t *conn_id*, uint16_t *attr_handle*, uint16_t *value_len*, uint8_t **value*, bool *need_confirm*)

Send indicate or notify to GATT client. Set param *need_confirm* as false will send notification, otherwise indication.

Return

- ESP_OK : success
- other : failed

Parameters

- *gatts_if*: GATT server access interface
- *conn_id*: - connection id to indicate.
- *attr_handle*: - attribute handle to indicate.
- *value_len*: - indicate value length.
- *value*: value to indicate.
- *need_confirm*: - Whether a confirmation is required. false sends a GATT notification, true sends a GATT indication.

esp_err_t **esp_ble_gatts_send_response** (*esp_gatt_if_t gatts_if*, uint16_t *conn_id*, uint32_t *trans_id*, *esp_gatt_status_t status*, *esp_gatt_rsp_t *rsp*)

This function is called to send a response to a request.

Return

- ESP_OK : success
- other : failed

Parameters

- *gatts_if*: GATT server access interface
- *conn_id*: - connection identifier.

- `trans_id`: - transfer id
- `status`: - response status
- `rsp`: - response data.

`esp_err_t esp_ble_gatts_set_attr_value` (`uint16_t attr_handle`, `uint16_t length`, `const uint8_t *value`)

This function is called to set the attribute value by the application.

Return

- `ESP_OK` : success
- other : failed

Parameters

- `attr_handle`: the attribute handle which to be set
- `length`: the value length
- `value`: the pointer to the attribute value

`esp_err_t esp_ble_gatts_get_attr_value` (`uint16_t attr_handle`, `uint16_t *length`, `const uint8_t **value`)

Retrieve attribute value.

Return

- `ESP_OK` : success
- other : failed

Parameters

- `attr_handle`: Attribute handle.
- `length`: pointer to the attribute value length
- `value`: Pointer to attribute value payload, the value cannot be modified by user

`esp_err_t esp_ble_gatts_open` (`esp_gatt_if_t gatts_if`, `esp_bd_addr_t remote_bda`, `bool is_direct`)

Open a direct open connection or add a background auto connection.

Return

- `ESP_OK` : success
- other : failed

Parameters

- `gatts_if`: GATT server access interface
- `remote_bda`: remote device bluetooth device address.
- `is_direct`: direct connection or background auto connection

`esp_err_t esp_ble_gatts_close` (`esp_gatt_if_t gatts_if`, `uint16_t conn_id`)

Close a connection a remote device.

Return

- `ESP_OK` : success

- other : failed

Parameters

- `gatts_if`: GATT server access interface
- `conn_id`: connection ID to be closed.

Unions

union `esp_ble_gatts_cb_param_t`

`#include <esp_gatts_api.h>` Gatt server callback parameters union.

Public Members

`struct esp_ble_gatts_cb_param_t::gatts_reg_evt_param` **reg**
Gatt server callback param of ESP_GATTS_REG_EVT

`struct esp_ble_gatts_cb_param_t::gatts_read_evt_param` **read**
Gatt server callback param of ESP_GATTS_READ_EVT

`struct esp_ble_gatts_cb_param_t::gatts_write_evt_param` **write**
Gatt server callback param of ESP_GATTS_WRITE_EVT

`struct esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param` **exec_write**
Gatt server callback param of ESP_GATTS_EXEC_WRITE_EVT

`struct esp_ble_gatts_cb_param_t::gatts_mtu_evt_param` **mtu**
Gatt server callback param of ESP_GATTS_MTU_EVT

`struct esp_ble_gatts_cb_param_t::gatts_conf_evt_param` **conf**
Gatt server callback param of ESP_GATTS_CONF_EVT (confirm)

`struct esp_ble_gatts_cb_param_t::gatts_create_evt_param` **create**
Gatt server callback param of ESP_GATTS_CREATE_EVT

`struct esp_ble_gatts_cb_param_t::gatts_add_incl_srvc_evt_param` **add_incl_srvc**
Gatt server callback param of ESP_GATTS_ADD_INCL_SRVC_EVT

`struct esp_ble_gatts_cb_param_t::gatts_add_char_evt_param` **add_char**
Gatt server callback param of ESP_GATTS_ADD_CHAR_EVT

`struct esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param` **add_char_descr**
Gatt server callback param of ESP_GATTS_ADD_CHAR_DESCR_EVT

`struct esp_ble_gatts_cb_param_t::gatts_delete_evt_param` **del**
Gatt server callback param of ESP_GATTS_DELETE_EVT

`struct esp_ble_gatts_cb_param_t::gatts_start_evt_param` **start**
Gatt server callback param of ESP_GATTS_START_EVT

`struct esp_ble_gatts_cb_param_t::gatts_stop_evt_param` **stop**
Gatt server callback param of ESP_GATTS_STOP_EVT

`struct esp_ble_gatts_cb_param_t::gatts_connect_evt_param` **connect**
Gatt server callback param of ESP_GATTS_CONNECT_EVT

`struct esp_ble_gatts_cb_param_t::gatts_disconnect_evt_param` **disconnect**
Gatt server callback param of ESP_GATTS_DISCONNECT_EVT

```

struct esp_ble_gatts_cb_param_t::gatts_open_evt_param open
    Gatt server callback param of ESP_GATTS_OPEN_EVT

struct esp_ble_gatts_cb_param_t::gatts_cancel_open_evt_param cancel_open
    Gatt server callback param of ESP_GATTS_CANCEL_OPEN_EVT

struct esp_ble_gatts_cb_param_t::gatts_close_evt_param close
    Gatt server callback param of ESP_GATTS_CLOSE_EVT

struct esp_ble_gatts_cb_param_t::gatts_congest_evt_param congest
    Gatt server callback param of ESP_GATTS_CONGEST_EVT

struct esp_ble_gatts_cb_param_t::gatts_rsp_evt_param rsp
    Gatt server callback param of ESP_GATTS_RESPONSE_EVT

struct esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param add_attr_tab
    Gatt server callback param of ESP_GATTS_CREAT_ATTR_TAB_EVT

struct esp_ble_gatts_cb_param_t::gatts_set_attr_val_evt_param set_attr_val
    Gatt server callback param of ESP_GATTS_SET_ATTR_VAL_EVT

struct gatts_add_attr_tab_evt_param
    #include <esp_gatts_api.h> ESP_GATTS_CREAT_ATTR_TAB_EVT.
    
```

Public Members

```

esp_gatt_status_t status
    Operation status

esp_bt_uuid_t svc_uuid
    Service uuid type

uint16_t num_handle
    The number of the attribute handle to be added to the gatts database

uint16_t *handles
    The number to the handles

struct gatts_add_char_descr_evt_param
    #include <esp_gatts_api.h> ESP_GATTS_ADD_CHAR_DESCR_EVT.
    
```

Public Members

```

esp_gatt_status_t status
    Operation status

uint16_t attr_handle
    Descriptor attribute handle

uint16_t service_handle
    Service attribute handle

esp_bt_uuid_t char_uuid
    Characteristic uuid

struct gatts_add_char_evt_param
    #include <esp_gatts_api.h> ESP_GATTS_ADD_CHAR_EVT.
    
```

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **attr_handle**

Characteristic attribute handle

uint16_t **service_handle**

Service attribute handle

esp_bt_uuid_t **char_uuid**

Characteristic uuid

struct gatts_add_incl_srvc_evt_param

#include <esp_gatts_api.h> ESP_GATTS_ADD_INCL_SRVC_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **attr_handle**

Included service attribute handle

uint16_t **service_handle**

Service attribute handle

struct gatts_cancel_open_evt_param

#include <esp_gatts_api.h> ESP_GATTS_CANCEL_OPEN_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

struct gatts_close_evt_param

#include <esp_gatts_api.h> ESP_GATTS_CLOSE_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **conn_id**

Connection id

struct gatts_conf_evt_param

#include <esp_gatts_api.h> ESP_GATTS_CONF_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

`uint16_t conn_id`
Connection id

struct gatts_congest_evt_param
#include <esp_gatts_api.h> ESP_GATTS_LISTEN_EVT.
ESP_GATTS_CONGEST_EVT

Public Members

`uint16_t conn_id`
Connection id

`bool congested`
Congested or not

struct gatts_connect_evt_param
#include <esp_gatts_api.h> ESP_GATTS_CONNECT_EVT.

Public Members

`uint16_t conn_id`
Connection id

esp_bd_addr_t **remote_bda**
Remote bluetooth device address

`bool is_connected`
Indicate it is connected or not

struct gatts_create_evt_param
#include <esp_gatts_api.h> ESP_GATTS_UNREG_EVT.
ESP_GATTS_CREATE_EVT

Public Members

esp_gatt_status_t **status**
Operation status

`uint16_t service_handle`
Service attribute handle

esp_gatt_srv_id_t **service_id**
Service id, include service uuid and other information

struct gatts_delete_evt_param
#include <esp_gatts_api.h> ESP_GATTS_DELETE_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **service_handle**
Service attribute handle

struct gatts_disconnect_evt_param
#include <esp_gatts_api.h> ESP_GATTS_DISCONNECT_EVT.

Public Members

uint16_t **conn_id**
Connection id

esp_bd_addr_t **remote_bda**
Remote bluetooth device address

bool **is_connected**
Indicate it is connected or not

struct gatts_exec_write_evt_param
#include <esp_gatts_api.h> ESP_GATTS_EXEC_WRITE_EVT.

Public Members

uint16_t **conn_id**
Connection id

uint32_t **trans_id**
Transfer id

esp_bd_addr_t **bda**
The bluetooth device address which been written

uint8_t **exec_write_flag**
Execute write flag

struct gatts_mtu_evt_param
#include <esp_gatts_api.h> ESP_GATTS_MTU_EVT.

Public Members

uint16_t **conn_id**
Connection id

uint16_t **mtu**
MTU size

struct gatts_open_evt_param
#include <esp_gatts_api.h> ESP_GATTS_OPEN_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

struct gatts_read_evt_param
#include <esp_gatts_api.h> ESP_GATTS_READ_EVT.

Public Members

`uint16_t conn_id`
Connection id

`uint32_t trans_id`
Transfer id

`esp_bd_addr_t bda`
The bluetooth device address which been read

`uint16_t handle`
The attribute handle

`uint16_t offset`
Offset of the value, if the value is too long

`bool is_long`
The value is too long or not

`bool need_rsp`
The read operation need to do response

struct gatts_reg_evt_param
#include <esp_gatts_api.h> ESP_GATTS_REG_EVT.

Public Members

`esp_gatt_status_t status`
Operation status

`uint16_t app_id`
Application id which input in register API

struct gatts_rsp_evt_param
#include <esp_gatts_api.h> ESP_GATTS_RESPONSE_EVT.

Public Members

`esp_gatt_status_t status`
Operation status

`uint16_t handle`
Attribute handle which send response

struct gatts_set_attr_val_evt_param
#include <esp_gatts_api.h> ESP_GATTS_SET_ATTR_VAL_EVT.

Public Members

`uint16_t srvc_handle`
The service handle

`uint16_t attr_handle`
The attribute handle

esp_gatt_status_t **status**

Operation status

struct gatts_start_evt_param

#include <esp_gatts_api.h> ESP_GATTS_START_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **service_handle**

Service attribute handle

struct gatts_stop_evt_param

#include <esp_gatts_api.h> ESP_GATTS_STOP_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **service_handle**

Service attribute handle

struct gatts_write_evt_param

#include <esp_gatts_api.h> ESP_GATTS_WRITE_EVT.

Public Members

uint16_t **conn_id**

Connection id

uint32_t **trans_id**

Transfer id

esp_bd_addr_t **bda**

The bluetooth device address which been written

uint16_t **handle**

The attribute handle

uint16_t **offset**

Offset of the value, if the value is too long

bool **need_rsp**

The write operation need to do response

bool **is_prep**

This write operation is prepare write

uint16_t **len**

The write attribute value length

uint8_t ***value**

The write attribute value

Macros

ESP_GATT_PREP_WRITE_CANCEL 0x00
Prepare write flag to indicate cancel prepare write

ESP_GATT_PREP_WRITE_EXEC 0x01
Prepare write flag to indicate execute prepare write

Type Definitions

```
typedef void (*esp_gatts_cb_t)(esp_gatts_cb_event_t event, esp_gatt_if_t gatts_if,
                               esp_ble_gatts_cb_param_t *param)
    GATT Server callback function type.
```

Parameters

- `event`: : Event type
- `gatts_if`: : GATT server access interface, normally different `gatts_if` correspond to different profile
- `param`: : Point to callback parameter, currently is union type

Enumerations

enum esp_gatts_cb_event_t
GATT Server callback function events.

Values:

- ESP_GATTS_REG_EVT** = 0
When register application id, the event comes
- ESP_GATTS_READ_EVT** = 1
When gatt client request read operation, the event comes
- ESP_GATTS_WRITE_EVT** = 2
When gatt client request write operation, the event comes
- ESP_GATTS_EXEC_WRITE_EVT** = 3
When gatt client request execute write, the event comes
- ESP_GATTS_MTU_EVT** = 4
When set mtu complete, the event comes
- ESP_GATTS_CONF_EVT** = 5
When receive confirm, the event comes
- ESP_GATTS_UNREG_EVT** = 6
When unregister application id, the event comes
- ESP_GATTS_CREATE_EVT** = 7
When create service complete, the event comes
- ESP_GATTS_ADD_INCL_SRVC_EVT** = 8
When add included service complete, the event comes
- ESP_GATTS_ADD_CHAR_EVT** = 9
When add characteristic complete, the event comes

- ESP_GATTS_ADD_CHAR_DESCR_EVT = 10**
When add descriptor complete, the event comes
- ESP_GATTS_DELETE_EVT = 11**
When delete service complete, the event comes
- ESP_GATTS_START_EVT = 12**
When start service complete, the event comes
- ESP_GATTS_STOP_EVT = 13**
When stop service complete, the event comes
- ESP_GATTS_CONNECT_EVT = 14**
When gatt client connect, the event comes
- ESP_GATTS_DISCONNECT_EVT = 15**
When gatt client disconnect, the event comes
- ESP_GATTS_OPEN_EVT = 16**
When connect to peer, the event comes
- ESP_GATTS_CANCEL_OPEN_EVT = 17**
When disconnect from peer, the event comes
- ESP_GATTS_CLOSE_EVT = 18**
When gatt server close, the event comes
- ESP_GATTS_LISTEN_EVT = 19**
When gatt listen to be connected the event comes
- ESP_GATTS_CONGEST_EVT = 20**
When congest happen, the event comes
- ESP_GATTS_RESPONSE_EVT = 21**
When gatt send response complete, the event comes
- ESP_GATTS_CREAT_ATTR_TAB_EVT = 22**
- ESP_GATTS_SET_ATTR_VAL_EVT = 23**

GATT CLIENT API

Overview

Instructions

Application Example

Check `bluetooth` folder in ESP-IDF examples, which contains the following application:

- This is a GATT client demo. This demo can scan devices, connect to the GATT server and discover the service `bluetooth/gatt_client`

API Reference

Header File

- `bt/bluedroid/api/include/esp_gattc_api.h`

Functions

`esp_err_t esp_ble_gattc_register_callback` (*esp_gattc_cb_t* callback)

This function is called to register application callbacks with GATTC module.

Return

- ESP_OK: success
- other: failed

Parameters

- callback: : pointer to the application callback function.

`esp_err_t esp_ble_gattc_app_register` (*uint16_t* app_id)

This function is called to register application callbacks with GATTC module.

Return

- ESP_OK: success
- other: failed

Parameters

- app_id: : Application Identify (UUID), for different application

`esp_err_t esp_ble_gattc_app_unregister` (*esp_gatt_if_t* gattc_if)

This function is called to unregister an application from GATTC module.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.

`esp_err_t esp_ble_gattc_open` (*esp_gatt_if_t* gattc_if, *esp_bd_addr_t* remote_bda, bool is_direct)

Open a direct connection or add a background auto connection.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- remote_bda: remote device bluetooth device address.
- is_direct: direct connection or background auto connection

`esp_err_t esp_ble_gattc_close` (*esp_gatt_if_t* gattc_if, *uint16_t* conn_id)

Close a virtual connection to a GATT server. gattc maybe have multiple virtual GATT server connections when multiple app_id registered, this API only close one virtual GATT server connection. if there exist other virtual GATT server connections, it does not disconnect the physical connection. if you want to disconnect the physical connection directly, you can use `esp_ble_gap_disconnect(esp_bd_addr_t remote_device)`.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: connection ID to be closed.

esp_err_t **esp_ble_gattc_config_mtu** (*esp_gatt_if_t gattc_if*, uint16_t *conn_id*, uint16_t *mtu*)
 Configure the MTU size in the GATT channel. This can be done only once per connection.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: connection ID.
- mtu: desired MTU size to use.

esp_err_t **esp_ble_gattc_search_service** (*esp_gatt_if_t gattc_if*, uint16_t *conn_id*, *esp_bt_uuid_t *filter_uuid*)

This function is called to request a GATT service discovery on a GATT server. This function report service search result by a callback event, and followed by a service search complete event.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: connection ID.
- filter_uuid: a UUID of the service application is interested in. If Null, discover for all services.

esp_err_t **esp_ble_gattc_get_characteristic** (*esp_gatt_if_t gattc_if*, uint16_t *conn_id*, *esp_gatt_srv_id_t *srvc_id*, *esp_gatt_id_t *start_char_id*)

This function is called to find the first characteristic of the service on the given server.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: connection ID which identify the server.
- srvc_id: service ID

- `start_char_id`: the start characteristic ID

`esp_err_t esp_ble_gattc_get_descriptor` (*esp_gatt_if_t gattc_if, uint16_t conn_id, esp_gatt_srvc_id_t *srvc_id, esp_gatt_id_t *char_id, esp_gatt_id_t *start_descr_id*)

This function is called to find the descriptor of the service on the given server.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `conn_id`: connection ID which identify the server.
- `srvc_id`: the service ID of which the characteristic is belonged to.
- `char_id`: Characteristic ID, if NULL find the first available characteristic.
- `start_descr_id`: the start descriptor id

`esp_err_t esp_ble_gattc_get_included_service` (*esp_gatt_if_t gattc_if, uint16_t conn_id, esp_gatt_srvc_id_t *srvc_id, esp_gatt_srvc_id_t *start_incl_srvc_id*)

This function is called to find the first characteristic of the service on the given server.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `conn_id`: connection ID which identify the server.
- `srvc_id`: the service ID of which the characteristic is belonged to.
- `start_incl_srvc_id`: the start include service id

`esp_err_t esp_ble_gattc_read_char` (*esp_gatt_if_t gattc_if, uint16_t conn_id, esp_gatt_srvc_id_t *srvc_id, esp_gatt_id_t *char_id, esp_gatt_auth_req_t auth_req*)

This function is called to read a service's characteristics of the given characteristic ID.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `conn_id`: : connection ID.
- `srvc_id`: : service ID.

- `char_id`: characteristic ID to read.
- `auth_req`: authenticate request type

```
esp_err_t esp_ble_gattc_read_char_descr (esp_gatt_if_t gattc_if, uint16_t conn_id,
                                         esp_gatt_srv_id_t *srv_id, esp_gatt_id_t *char_id,
                                         esp_gatt_id_t *descr_id, esp_gatt_auth_req_t
                                         auth_req)
```

This function is called to read a characteristics descriptor.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `conn_id`: connection ID.
- `srv_id`: service ID.
- `char_id`: characteristic ID to read.
- `descr_id`: characteristic descriptor ID to read.
- `auth_req`: authenticate request type

```
esp_err_t esp_ble_gattc_write_char (esp_gatt_if_t gattc_if, uint16_t conn_id, esp_gatt_srv_id_t
                                     *srv_id, esp_gatt_id_t *char_id, uint16_t value_len, uint8_t
                                     *value, esp_gatt_write_type_t write_type, esp_gatt_auth_req_t
                                     auth_req)
```

This function is called to write characteristic value.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `conn_id`: connection ID.
- `srv_id`: service ID.
- `char_id`: characteristic ID to write.
- `value_len`: length of the value to be written.
- `value`: the value to be written.
- `write_type`: the type of attribute write operation.
- `auth_req`: authentication request.

```
esp_err_t esp_ble_gattc_write_char_descr(esp_gatt_if_t gattc_if, uint16_t conn_id,
                                         esp_gatt_srv_id_t *srv_id, esp_gatt_id_t *char_id,
                                         esp_gatt_id_t *descr_id, uint16_t value_len,
                                         uint8_t *value, esp_gatt_write_type_t write_type,
                                         esp_gatt_auth_req_t auth_req)
```

This function is called to write characteristic descriptor value.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: : connection ID
- srv_id: : service ID.
- char_id: : characteristic ID.
- descr_id: : characteristic descriptor ID to write.
- value_len: length of the value to be written.
- value: : the value to be written.
- write_type: : the type of attribute write operation.
- auth_req: : authentication request.

```
esp_err_t esp_ble_gattc_prepare_write(esp_gatt_if_t gattc_if, uint16_t conn_id,
                                       esp_gatt_srv_id_t *srv_id, esp_gatt_id_t *char_id,
                                       uint16_t offset, uint16_t value_len, uint8_t *value,
                                       esp_gatt_auth_req_t auth_req)
```

This function is called to prepare write a characteristic value.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: : connection ID.
- srv_id: : service ID.
- char_id: : GATT characteristic ID of the service.
- offset: : offset of the write value.
- value_len: length of the value to be written.
- value: : the value to be written.
- auth_req: : authentication request.

```
esp_err_t esp_ble_gattc_prepare_write_char_descr(esp_gatt_if_t gattc_if, uint16_t
                                                conn_id, esp_gatt_srv_id_t
                                                *srv_id, esp_gatt_id_t *char_id,
                                                esp_gatt_id_t *descr_id, uint16_t off-
                                                set, uint16_t value_len, uint8_t *value,
                                                esp_gatt_auth_req_t auth_req)
```

This function is called to prepare write a characteristic descriptor value.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: : connection ID.
- srv_id: : service ID.
- char_id: : GATT characteristic ID of the service.
- descr_id: : characteristic descriptor ID to write.
- offset: : offset of the write value.
- value_len: length of the value to be written.
- value: : the value to be written.
- auth_req: : authentication request.

```
esp_err_t esp_ble_gattc_execute_write(esp_gatt_if_t gattc_if, uint16_t conn_id, bool is_execute)
```

This function is called to execute write a prepare write sequence.

Return

- ESP_OK: success
- other: failed

Parameters

- gattc_if: Gatt client access interface.
- conn_id: : connection ID.
- is_execute: : execute or cancel.

```
esp_gatt_status_t esp_ble_gattc_register_for_notify(esp_gatt_if_t gattc_if, esp_bd_addr_t
                                                    server_bda, esp_gatt_srv_id_t *srv_id,
                                                    esp_gatt_id_t *char_id)
```

This function is called to register for notification of a service.

Return

- ESP_OK: registration succeeds
- other: failed

Parameters

- gattc_if: Gatt client access interface.

- `server_bda`: : target GATT server.
- `srvc_id`: : pointer to GATT service ID.
- `char_id`: : pointer to GATT characteristic ID.

`esp_gatt_status_t esp_ble_gattc_unregister_for_notify` (`esp_gatt_if_t gattc_if`, `esp_bd_addr_t server_bda`, `esp_gatt_srvc_id_t *srvc_id`, `esp_gatt_id_t *char_id`)

This function is called to de-register for notification of a service.

Return

- `ESP_OK`: unregister succeeds
- other: failed

Parameters

- `gattc_if`: Gatt client access interface.
- `server_bda`: : target GATT server.
- `srvc_id`: : pointer to GATT service ID.
- `char_id`: : pointer to GATT characteristic ID.

`esp_err_t esp_ble_gattc_cache_refresh` (`esp_bd_addr_t remote_bda`)

Refresh the server cache store in the gattc stack of the remote device.

Return

- `ESP_OK`: success
- other: failed

Parameters

- `remote_bda`: remote device BD address.

Unions

`union esp_ble_gattc_cb_param_t`

`#include <esp_gattc_api.h>` Gatt client callback parameters union.

Public Members

`struct esp_ble_gattc_cb_param_t::gattc_reg_evt_param reg`

Gatt client callback param of `ESP_GATTC_REG_EVT`

`struct esp_ble_gattc_cb_param_t::gattc_open_evt_param open`

Gatt client callback param of `ESP_GATTC_OPEN_EVT`

`struct esp_ble_gattc_cb_param_t::gattc_close_evt_param close`

Gatt client callback param of `ESP_GATTC_CLOSE_EVT`

`struct esp_ble_gattc_cb_param_t::gattc_cfg_mtu_evt_param cfg_mtu`

Gatt client callback param of `ESP_GATTC_CFG_MTU_EVT`

`struct esp_ble_gattc_cb_param_t::gattc_search_cmpl_evt_param search_cmpl`

Gatt client callback param of `ESP_GATTC_SEARCH_CMPL_EVT`

```

struct esp_ble_gattc_cb_param_t::gattc_search_res_evt_param search_res
    Gatt client callback param of ESP_GATTC_SEARCH_RES_EVT

struct esp_ble_gattc_cb_param_t::gattc_read_char_evt_param read
    Gatt client callback param of ESP_GATTC_READ_CHAR_EVT

struct esp_ble_gattc_cb_param_t::gattc_write_evt_param write
    Gatt client callback param of ESP_GATTC_WRITE_DESCR_EVT

struct esp_ble_gattc_cb_param_t::gattc_exec_cmpl_evt_param exec_cmpl
    Gatt client callback param of ESP_GATTC_EXEC_EVT

struct esp_ble_gattc_cb_param_t::gattc_notify_evt_param notify
    Gatt client callback param of ESP_GATTC_NOTIFY_EVT

struct esp_ble_gattc_cb_param_t::gattc_srvc_chg_evt_param srvc_chg
    Gatt client callback param of ESP_GATTC_SRVC_CHG_EVT

struct esp_ble_gattc_cb_param_t::gattc_congest_evt_param congest
    Gatt client callback param of ESP_GATTC_CONGEST_EVT

struct esp_ble_gattc_cb_param_t::gattc_get_char_evt_param get_char
    Gatt client callback param of ESP_GATTC_GET_CHAR_EVT

struct esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param get_descr
    Gatt client callback param of ESP_GATTC_GET_DESCR_EVT

struct esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param get_incl_srvc
    Gatt client callback param of ESP_GATTC_GET_INCL_SRVC_EVT

struct esp_ble_gattc_cb_param_t::gattc_reg_for_notify_evt_param reg_for_notify
    Gatt client callback param of ESP_GATTC_REG_FOR_NOTIFY_EVT

struct esp_ble_gattc_cb_param_t::gattc_unreg_for_notify_evt_param unreg_for_notify
    Gatt client callback param of ESP_GATTC_UNREG_FOR_NOTIFY_EVT

struct esp_ble_gattc_cb_param_t::gattc_connect_evt_param connect
    Gatt client callback param of ESP_GATTC_CONNECT_EVT

struct esp_ble_gattc_cb_param_t::gattc_disconnect_evt_param disconnect
    Gatt client callback param of ESP_GATTC_DISCONNECT_EVT

struct gattc_cfg_mtu_evt_param
    #include <esp_gattc_api.h> ESP_GATTC_CFG_MTU_EVT.

```

Public Members

```

esp_gatt_status_t status
    Operation status

uint16_t conn_id
    Connection id

uint16_t mtu
    MTU size

struct gattc_close_evt_param
    #include <esp_gattc_api.h> ESP_GATTC_CLOSE_EVT.

```

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **conn_id**

Connection id

esp_bd_addr_t **remote_bda**

Remote bluetooth device address

esp_gatt_conn_reason_t **reason**

The reason of gatt connection close

struct gattc_congest_evt_param

#include <esp_gattc_api.h> ESP_GATTC_CONGEST_EVT.

Public Members

uint16_t **conn_id**

Connection id

bool **congested**

Congested or not

struct gattc_connect_evt_param

#include <esp_gattc_api.h> ESP_GATTC_CONNECT_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **conn_id**

Connection id

esp_bd_addr_t **remote_bda**

Remote bluetooth device address

struct gattc_disconnect_evt_param

#include <esp_gattc_api.h> ESP_GATTC_DISCONNECT_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **conn_id**

Connection id

esp_bd_addr_t **remote_bda**

Remote bluetooth device address

struct gattc_exec_cmpl_evt_param

#include <esp_gattc_api.h> ESP_GATTC_EXEC_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **conn_id**
Connection id

struct gattc_get_char_evt_param
#include <esp_gattc_api.h> ESP_GATTC_GET_CHAR_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **conn_id**
Connection id

esp_gatt_srv_id_t **srv_id**
Service id, include service uuid and other information

esp_gatt_id_t **char_id**
Characteristic id, include characteristic uuid and other information

esp_gatt_char_prop_t **char_prop**
Characteristic property

struct gattc_get_descr_evt_param
#include <esp_gattc_api.h> ESP_GATTC_GET_DESCR_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **conn_id**
Connection id

esp_gatt_srv_id_t **srv_id**
Service id, include service uuid and other information

esp_gatt_id_t **char_id**
Characteristic id, include characteristic uuid and other information

esp_gatt_id_t **descr_id**
Descriptor id, include descriptor uuid and other information

struct gattc_get_incl_srv_evt_param
#include <esp_gattc_api.h> ESP_GATTC_GET_INCL_SRVC_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

`uint16_t conn_id`
Connection id

`esp_gatt_srvc_id_t srvc_id`
Service id, include service uuid and other information

`esp_gatt_srvc_id_t incl_srvc_id`
Included service id, include service uuid and other information

struct gattc_notify_evt_param
#include <esp_gattc_api.h> ESP_GATTC_NOTIFY_EVT.

Public Members

`uint16_t conn_id`
Connection id

`esp_bd_addr_t remote_bda`
Remote bluetooth device address

`esp_gatt_srvc_id_t srvc_id`
Service id, include service uuid and other information

`esp_gatt_id_t char_id`
Characteristic id, include characteristic uuid and other information

`esp_gatt_id_t descr_id`
Descriptor id, include descriptor uuid and other information

`uint16_t value_len`
Notify attribute value

`uint8_t *value`
Notify attribute value

`bool is_notify`
True means notify, false means indicate

struct gattc_open_evt_param
#include <esp_gattc_api.h> ESP_GATTC_OPEN_EVT.

Public Members

`esp_gatt_status_t status`
Operation status

`uint16_t conn_id`
Connection id

`esp_bd_addr_t remote_bda`
Remote bluetooth device address

`uint16_t mtu`
MTU size

struct gattc_read_char_evt_param
#include <esp_gattc_api.h> ESP_GATTC_READ_CHAR_EVT, ESP_GATTC_READ_DESCR_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **conn_id**

Connection id

esp_gatt_srv_id_t **srv_id**

Service id, include service uuid and other information

esp_gatt_id_t **char_id**

Characteristic id, include characteristic uuid and other information

esp_gatt_id_t **descr_id**

Descriptor id, include descriptor uuid and other information

uint8_t ***value**

Characteristic value

uint16_t **value_type**

Characteristic value type, there is two value for this type:

ESP_GATTC_READ_VALUE_TYPE_VALUE(0x0000) and ESP_GATTC_READ_VALUE_TYPE_AGG_FORMAT(

If the value is ESP_GATTC_READ_VALUE_TYPE_VALUE means it is a generally value type, and

if is the type of ESP_GATTC_READ_VALUE_TYPE_AGG_FORMAT, the unit of the value will

indicate in the Characteristic aggregate format descriptor

uint16_t **value_len**

Characteristic value length

struct gattc_reg_evt_param

#include <esp_gattc_api.h> ESP_GATTC_REG_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

uint16_t **app_id**

Application id which input in register API

struct gattc_reg_for_notify_evt_param

#include <esp_gattc_api.h> ESP_GATTC_REG_FOR_NOTIFY_EVT.

Public Members

esp_gatt_status_t **status**

Operation status

esp_gatt_srv_id_t **srv_id**

Service id, include service uuid and other information

esp_gatt_id_t **char_id**

Characteristic id, include characteristic uuid and other information

struct gattc_search_cmpl_evt_param

#include <esp_gattc_api.h> ESP_GATTC_SEARCH_CMPL_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **conn_id**
Connection id

struct gattc_search_res_evt_param
#include <esp_gattc_api.h> ESP_GATTC_SEARCH_RES_EVT.

Public Members

uint16_t **conn_id**
Connection id

esp_gatt_srvc_id_t **srvc_id**
Service id, include service uuid and other information

struct gattc_srvc_chg_evt_param
#include <esp_gattc_api.h> ESP_GATTC_SRVC_CHG_EVT.

Public Members

esp_bd_addr_t **remote_bda**
Remote bluetooth device address

struct gattc_unreg_for_notify_evt_param
#include <esp_gattc_api.h> ESP_GATTC_UNREG_FOR_NOTIFY_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

esp_gatt_srvc_id_t **srvc_id**
Service id, include service uuid and other information

esp_gatt_id_t **char_id**
Characteristic id, include characteristic uuid and other information

struct gattc_write_evt_param
#include <esp_gattc_api.h> ESP_GATTC_WRITE_CHAR_EVT, ESP_GATTC_PREP_WRITE_EVT,
ESP_GATTC_WRITE_DESCR_EVT.

Public Members

esp_gatt_status_t **status**
Operation status

uint16_t **conn_id**
Connection id

esp_gatt_srv_id_t **srv_id**
 Service id, include service uuid and other information

esp_gatt_id_t **char_id**
 Characteristic id, include characteristic uuid and other information

esp_gatt_id_t **descr_id**
 Descriptor id, include descriptor uuid and other information

Macros

ESP_GATT_DEF_BLE_MTU_SIZE 23
 Maximum Transmission Unit used in GATT.

ESP_GATT_MAX_MTU_SIZE 517
 Maximum Transmission Unit allowed in GATT.

Type Definitions

typedef void (*esp_gattc_cb_t) (*esp_gattc_cb_event_t* event, *esp_gatt_if_t* gattc_if,
esp_ble_gattc_cb_param_t *param)
 GATT Client callback function type.

Parameters

- event: : Event type
- gatts_if: : GATT client access interface, normally different gattc_if correspond to different profile
- param: : Point to callback parameter, currently is union type

Enumerations

enum esp_gattc_cb_event_t
 GATT Client callback function events.

Values:

ESP_GATTC_REG_EVT = 0
 When GATT client is registered, the event comes

ESP_GATTC_UNREG_EVT = 1
 When GATT client is unregistered, the event comes

ESP_GATTC_OPEN_EVT = 2
 When GATT virtual connection is set up, the event comes

ESP_GATTC_READ_CHAR_EVT = 3
 When GATT characteristic is read, the event comes

ESP_GATTC_WRITE_CHAR_EVT = 4
 When GATT characteristic write operation completes, the event comes

ESP_GATTC_CLOSE_EVT = 5
 When GATT virtual connection is closed, the event comes

ESP_GATTC_SEARCH_CMPL_EVT = 6
 When GATT service discovery is completed, the event comes

- ESP_GATTC_SEARCH_RES_EVT = 7**
When GATT service discovery result is got, the event comes
- ESP_GATTC_READ_DESCR_EVT = 8**
When GATT characteristic descriptor read completes, the event comes
- ESP_GATTC_WRITE_DESCR_EVT = 9**
When GATT characteristic descriptor write completes, the event comes
- ESP_GATTC_NOTIFY_EVT = 10**
When GATT notification or indication arrives, the event comes
- ESP_GATTC_PREP_WRITE_EVT = 11**
When GATT prepare-write operation completes, the event comes
- ESP_GATTC_EXEC_EVT = 12**
When write execution completes, the event comes
- ESP_GATTC_ACL_EVT = 13**
When ACL connection is up, the event comes
- ESP_GATTC_CANCEL_OPEN_EVT = 14**
When GATT client ongoing connection is cancelled, the event comes
- ESP_GATTC_SRVC_CHG_EVT = 15**
When “service changed” occurs, the event comes
- ESP_GATTC_ENC_CMPL_CB_EVT = 17**
When encryption procedure completes, the event comes
- ESP_GATTC_CFG_MTU_EVT = 18**
When configuration of MTU completes, the event comes
- ESP_GATTC_ADV_DATA_EVT = 19**
When advertising of data, the event comes
- ESP_GATTC_MULT_ADV_ENB_EVT = 20**
When multi-advertising is enabled, the event comes
- ESP_GATTC_MULT_ADV_UPD_EVT = 21**
When multi-advertising parameters are updated, the event comes
- ESP_GATTC_MULT_ADV_DATA_EVT = 22**
When multi-advertising data arrives, the event comes
- ESP_GATTC_MULT_ADV_DIS_EVT = 23**
When multi-advertising is disabled, the event comes
- ESP_GATTC_CONGEST_EVT = 24**
When GATT connection congestion comes, the event comes
- ESP_GATTC_BTH_SCAN_ENB_EVT = 25**
When batch scan is enabled, the event comes
- ESP_GATTC_BTH_SCAN_CFG_EVT = 26**
When batch scan storage is configured, the event comes
- ESP_GATTC_BTH_SCAN_RD_EVT = 27**
When Batch scan read event is reported, the event comes
- ESP_GATTC_BTH_SCAN_THR_EVT = 28**
When Batch scan threshold is set, the event comes

- ESP_GATTC_BTH_SCAN_PARAM_EVT = 29**
When Batch scan parameters are set, the event comes
- ESP_GATTC_BTH_SCAN_DIS_EVT = 30**
When Batch scan is disabled, the event comes
- ESP_GATTC_SCAN_FLT_CFG_EVT = 31**
When Scan filter configuration completes, the event comes
- ESP_GATTC_SCAN_FLT_PARAM_EVT = 32**
When Scan filter parameters are set, the event comes
- ESP_GATTC_SCAN_FLT_STATUS_EVT = 33**
When Scan filter status is reported, the event comes
- ESP_GATTC_ADV_VSC_EVT = 34**
When advertising vendor spec content event is reported, the event comes
- ESP_GATTC_GET_CHAR_EVT = 35**
When characteristic is got from GATT server, the event comes
- ESP_GATTC_GET_DESCR_EVT = 36**
When characteristic descriptor is got from GATT server, the event comes
- ESP_GATTC_GET_INCL_SRVC_EVT = 37**
When included service is got from GATT server, the event comes
- ESP_GATTC_REG_FOR_NOTIFY_EVT = 38**
When register for notification of a service completes, the event comes
- ESP_GATTC_UNREG_FOR_NOTIFY_EVT = 39**
When unregister for notification of a service completes, the event comes
- ESP_GATTC_CONNECT_EVT = 40**
When the ble physical connection is set up, the event comes
- ESP_GATTC_DISCONNECT_EVT = 41**
When the ble physical connection disconnected, the event comes

BLUFI API

Overview

BLUFI is a profile based GATT to config ESP32 WIFI to connect/disconnect AP or setup a softap and etc. Use should concern these things:

1. The event sent from profile. Then you need to do something as the event indicate.
2. Security reference. You can write your own Security functions such as symmetrical encryption/decryption and checksum functions. Even you can define the “Key Exchange/Negotiation” procedure.

Application Example

Check [bluetooth](#) folder in ESP-IDF examples, which contains the following application:

- This is a BLUFI demo. This demo can set ESP32’s wifi to softap/station/softap&station mode and config wifi connections - [bluetooth/blufi](#)

API Reference

Header File

- `bt/bluedroid/api/include/esp_blufi_api.h`

Functions

`esp_err_t esp_blufi_register_callbacks` (*esp_blufi_callbacks_t* *callbacks)

This function is called to receive blufi callback event.

Return ESP_OK - success, other - failed

Parameters

- `callbacks`: callback functions

`esp_err_t esp_blufi_profile_init` (void)

This function is called to initialize blufi_profile.

Return ESP_OK - success, other - failed

`esp_err_t esp_blufi_profile_deinit` (void)

This function is called to de-initialize blufi_profile.

Return ESP_OK - success, other - failed

`esp_err_t esp_blufi_send_wifi_conn_report` (*wifi_mode_t* opmode, *esp_blufi_sta_conn_state_t* sta_conn_state, *uint8_t* softap_conn_num, *esp_blufi_extra_info_t* *extra_info)

This function is called to send wifi connection report.

Return ESP_OK - success, other - failed

Parameters

- `opmode`: : wifi opmode
- `sta_conn_state`: : station is already in connection or not
- `softap_conn_num`: : softap connection number
- `extra_info`: : extra information, such as sta_ssid, softap_ssid and etc.

`uint16_t esp_blufi_get_version` (void)

Get BLUFI profile version.

Return Most 8bit significant is Great version, Least 8bit is Sub version

`esp_err_t esp_blufi_close` (*esp_gatt_if_t* gatts_if, *uint16_t* conn_id)

Close a connection a remote device.

Return

- ESP_OK : success
- other : failed

Parameters

- `gatts_if`: GATT server access interface
- `conn_id`: connection ID to be closed.

Unions

union `esp_blufi_cb_param_t`
#include <esp_blufi_api.h> BLUFI callback parameters union.

Public Members

```
struct esp_blufi_cb_param_t::blufi_init_finish_evt_param init_finish
    Blufi callback param of ESP_BLUFI_EVENT_INIT_FINISH

struct esp_blufi_cb_param_t::blufi_deinit_finish_evt_param deinit_finish
    Blufi callback param of ESP_BLUFI_EVENT_DEINIT_FINISH

struct esp_blufi_cb_param_t::blufi_set_wifi_mode_evt_param wifi_mode
    Blufi callback param of ESP_BLUFI_EVENT_INIT_FINISH

struct esp_blufi_cb_param_t::blufi_connect_evt_param connect
    Blufi callback param of ESP_BLUFI_EVENT_CONNECT

struct esp_blufi_cb_param_t::blufi_disconnect_evt_param disconnect
    Blufi callback param of ESP_BLUFI_EVENT_DISCONNECT

struct esp_blufi_cb_param_t::blufi_recv_sta_bssid_evt_param sta_bssid
    Blufi callback param of ESP_BLUFI_EVENT_RECV_STA_BSSID

struct esp_blufi_cb_param_t::blufi_recv_sta_ssid_evt_param sta_ssid
    Blufi callback param of ESP_BLUFI_EVENT_RECV_STA_SSID

struct esp_blufi_cb_param_t::blufi_recv_sta_passwd_evt_param sta_passwd
    Blufi callback param of ESP_BLUFI_EVENT_RECV_STA_PASSWD

struct esp_blufi_cb_param_t::blufi_recv_softap_ssid_evt_param softap_ssid
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SOFTAP_SSID

struct esp_blufi_cb_param_t::blufi_recv_softap_passwd_evt_param softap_passwd
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SOFTAP_PASSWD

struct esp_blufi_cb_param_t::blufi_recv_softap_max_conn_num_evt_param softap_max_conn_num
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SOFTAP_MAX_CONN_NUM

struct esp_blufi_cb_param_t::blufi_recv_softap_auth_mode_evt_param softap_auth_mode
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SOFTAP_AUTH_MODE

struct esp_blufi_cb_param_t::blufi_recv_softap_channel_evt_param softap_channel
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SOFTAP_CHANNEL

struct esp_blufi_cb_param_t::blufi_recv_username_evt_param username
    Blufi callback param of ESP_BLUFI_EVENT_RECV_USERNAME

struct esp_blufi_cb_param_t::blufi_recv_ca_evt_param ca
    Blufi callback param of ESP_BLUFI_EVENT_RECV_CA_CERT

struct esp_blufi_cb_param_t::blufi_recv_client_cert_evt_param client_cert
    Blufi callback param of ESP_BLUFI_EVENT_RECV_CLIENT_CERT
```

```
struct esp_blufi_cb_param_t::blufi_rcv_server_cert_evt_param server_cert  
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SERVER_CERT  
struct esp_blufi_cb_param_t::blufi_rcv_client_pkey_evt_param client_pkey  
    Blufi callback param of ESP_BLUFI_EVENT_RECV_CLIENT_PRIV_KEY  
struct esp_blufi_cb_param_t::blufi_rcv_server_pkey_evt_param server_pkey  
    Blufi callback param of ESP_BLUFI_EVENT_RECV_SERVER_PRIV_KEY  
  
struct blufi_connect_evt_param  
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_CONNECT.
```

Public Members

```
esp_bd_addr_t remote_bda  
    Blufi Remote bluetooth device address  
  
uint8_t server_if  
    server interface  
  
uint16_t conn_id  
    Connection id  
  
struct blufi_deinit_finish_evt_param  
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_DEINIT_FINISH.
```

Public Members

```
esp_blufi_deinit_state_t state  
    De-initial status  
  
struct blufi_disconnect_evt_param  
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_DISCONNECT.
```

Public Members

```
esp_bd_addr_t remote_bda  
    Blufi Remote bluetooth device address  
  
struct blufi_init_finish_evt_param  
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_INIT_FINISH.
```

Public Members

```
esp_blufi_init_state_t state  
    Initial status  
  
struct blufi_rcv_ca_evt_param  
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_CA_CERT.
```

Public Members

uint8_t ***cert**
CA certificate point

int **cert_len**
CA certificate length

struct blufi_recv_client_cert_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_CLIENT_CERT

Public Members

uint8_t ***cert**
Client certificate point

int **cert_len**
Client certificate length

struct blufi_recv_client_pkey_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_CLIENT_PRIV_KEY

Public Members

uint8_t ***pkey**
Client Private Key point, if Client certificate not contain Key

int **pkey_len**
Client Private key length

struct blufi_recv_server_cert_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SERVER_CERT

Public Members

uint8_t ***cert**
Client certificate point

int **cert_len**
Client certificate length

struct blufi_recv_server_pkey_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SERVER_PRIV_KEY

Public Members

uint8_t ***pkey**
Client Private Key point, if Client certificate not contain Key

int **pkey_len**
Client Private key length

struct blufi_recv_softap_auth_mode_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SOFTAP_AUTH_MODE.

Public Members

wifi_auth_mode_t **auth_mode**
Authentication mode

struct blufi_recv_softap_channel_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SOFTAP_CHANNEL.

Public Members

uint8_t **channel**
Authentication mode

struct blufi_recv_softap_max_conn_num_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SOFTAP_MAX_CONN_NUM.

Public Members

int **max_conn_num**
SSID

struct blufi_recv_softap_passwd_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SOFTAP_PASSWD.

Public Members

uint8_t ***passwd**
Password

int **passwd_len**
Password Length

struct blufi_recv_softap_ssid_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_SOFTAP_SSID.

Public Members

uint8_t ***ssid**
SSID

int **ssid_len**
SSID length

struct blufi_recv_sta_bssid_evt_param
#include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_STA_BSSID.

Public Members

uint8_t **bssid**[6]
BSSID

```
struct blufi_recv_sta_passwd_evt_param
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_STA_PASSWD.
```

Public Members

uint8_t *passwd
Password

int passwd_len
Password Length

```
struct blufi_recv_sta_ssid_evt_param
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_STA_SSID.
```

Public Members

uint8_t *ssid
SSID

int ssid_len
SSID length

```
struct blufi_recv_username_evt_param
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_RECV_USERNAME.
```

Public Members

uint8_t *name
Username point

int name_len
Username length

```
struct blufi_set_wifi_mode_evt_param
    #include <esp_blufi_api.h> ESP_BLUFI_EVENT_SET_WIFI_MODE.
```

Public Members

wifi_mode_t op_mode
Wifi operation mode

Structures

```
struct esp_blufi_extra_info_t
    BLUFI extra information structure.
```

Public Members

uint8_t sta_bssid[6]
BSSID of station interface

bool **sta_bssid_set**
is BSSID of station interface set

uint8_t ***sta_ssid**
SSID of station interface

int **sta_ssid_len**
length of SSID of station interface

uint8_t ***sta_passwd**
password of station interface

int **sta_passwd_len**
length of password of station interface

uint8_t ***softap_ssid**
SSID of softap interface

int **softap_ssid_len**
length of SSID of softap interface

uint8_t ***softap_passwd**
password of station interface

int **softap_passwd_len**
length of password of station interface

uint8_t **softap_authmode**
authentication mode of softap interface

bool **softap_authmode_set**
is authentication mode of softap interface set

uint8_t **softap_max_conn_num**
max connection number of softap interface

bool **softap_max_conn_num_set**
is max connection number of softap interface set

uint8_t **softap_channel**
channel of softap interface

bool **softap_channel_set**
is channel of softap interface set

struct **esp_blufi_callbacks_t**
BLUFI callback functions type.

Public Members

esp_blufi_event_cb_t **event_cb**
BLUFI event callback

esp_blufi_negotiate_data_handler_t **negotiate_data_handler**
BLUFI negotiate data function for negotiate share key

esp_blufi_encrypt_func_t **encrypt_func**
BLUFI encrypt data function with share key generated by negotiate_data_handler

esp_blufi_decrypt_func_t **decrypt_func**
BLUFI decrypt data function with share key generated by negotiate_data_handler

esp_blufi_checksum_func_t **checksum_func**
BLUFI check sum function (FCS)

Type Definitions

typedef void (*esp_blufi_event_cb_t) (*esp_blufi_cb_event_t* event, *esp_blufi_cb_param_t* *param)
BLUFI event callback function type.

Parameters

- event: : Event type
- param: : Point to callback parameter, currently is union type

typedef void (*esp_blufi_negotiate_data_handler_t) (uint8_t *data, int len, uint8_t **out-
put_data, int *output_len, bool
*need_free)

BLUFI negotiate data handler.

Parameters

- data: : data from phone
- len: : length of data from phone
- output_data: : data want to send to phone
- output_len: : length of data want to send to phone

typedef int (*esp_blufi_encrypt_func_t) (uint8_t iv8, uint8_t *crypt_data, int cyprt_len)
BLUFI encrypt the data after negotiate a share key.

Return Nonnegative number is encrypted length, if error, return negative number;

Parameters

- iv8: : initial vector(8bit), normally, blufi core will input packet sequence number
- crypt_data: : plain text and encrypted data, the encrypt function must support autochthonous encrypt
- crypt_len: : length of plain text

typedef int (*esp_blufi_decrypt_func_t) (uint8_t iv8, uint8_t *crypt_data, int crypt_len)
BLUFI decrypt the data after negotiate a share key.

Return Nonnegative number is decrypted length, if error, return negative number;

Parameters

- iv8: : initial vector(8bit), normally, blufi core will input packet sequence number
- crypt_data: : encrypted data and plain text, the encrypt function must support autochthonous decrypt
- crypt_len: : length of encrypted text

typedef uint16_t (*esp_blufi_checksum_func_t) (uint8_t iv8, uint8_t *data, int len)
BLUFI checksum.

Parameters

- `iv8`: : initial vector(8bit), normally, blufi core will input packet sequence number
- `data`: : data need to checksum
- `len`: : length of data

Enumerations

`enum esp_blufi_cb_event_t`

Values:

```
ESP_BLUFI_EVENT_INIT_FINISH = 0
ESP_BLUFI_EVENT_DEINIT_FINISH
ESP_BLUFI_EVENT_SET_WIFI_OPMODE
ESP_BLUFI_EVENT_BLE_CONNECT
ESP_BLUFI_EVENT_BLE_DISCONNECT
ESP_BLUFI_EVENT_REQ_CONNECT_TO_AP
ESP_BLUFI_EVENT_REQ_DISCONNECT_FROM_AP
ESP_BLUFI_EVENT_GET_WIFI_STATUS
ESP_BLUFI_EVENT_DEAUTHENTICATE_STA
ESP_BLUFI_EVENT_RECV_STA_BSSID
ESP_BLUFI_EVENT_RECV_STA_SSID
ESP_BLUFI_EVENT_RECV_STA_PASSWD
ESP_BLUFI_EVENT_RECV_SOFTAP_SSID
ESP_BLUFI_EVENT_RECV_SOFTAP_PASSWD
ESP_BLUFI_EVENT_RECV_SOFTAP_MAX_CONN_NUM
ESP_BLUFI_EVENT_RECV_SOFTAP_AUTH_MODE
ESP_BLUFI_EVENT_RECV_SOFTAP_CHANNEL
ESP_BLUFI_EVENT_RECV_USERNAME
ESP_BLUFI_EVENT_RECV_CA_CERT
ESP_BLUFI_EVENT_RECV_CLIENT_CERT
ESP_BLUFI_EVENT_RECV_SERVER_CERT
ESP_BLUFI_EVENT_RECV_CLIENT_PRIV_KEY
ESP_BLUFI_EVENT_RECV_SERVER_PRIV_KEY
ESP_BLUFI_EVENT_RECV_SLAVE_DISCONNECT_BLE
```

`enum esp_blufi_sta_conn_state_t`

BLUFI config status.

Values:

```
ESP_BLUFI_STA_CONN_SUCCESS = 0x00
```

```
ESP_BLUFI_STA_CONN_FAIL = 0x01
```

```
enum esp_blufi_init_state_t
```

BLUFI init status.

Values:

```
ESP_BLUFI_INIT_OK = 0
```

```
ESP_BLUFI_INIT_FAILED = 0
```

```
enum esp_blufi_deinit_state_t
```

BLUFI deinit status.

Values:

```
ESP_BLUFI_DEINIT_OK = 0
```

```
ESP_BLUFI_DEINIT_FAILED = 0
```

CLASSIC BT

CLASSIC BLUETOOTH GAP API

Overview

Instructions

Application Example

Instructions

API Reference

Header File

- `bt/bluedroid/api/include/esp_gap_bt_api.h`

Functions

`esp_err_t esp_bt_gap_set_scan_mode` (*esp_bt_scan_mode_t mode*)

Set discoverability and connectability mode for legacy bluetooth. This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK` : Succeed
- `ESP_ERR_INVALID_ARG`: if argument invalid
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

Parameters

- mode: : one of the enums of `bt_scan_mode_t`

Enumerations

enum `esp_bt_scan_mode_t`

Discoverability and Connectivity mode.

Values:

ESP_BT_SCAN_MODE_NONE = 0

Neither discoverable nor connectable

ESP_BT_SCAN_MODE_CONNECTABLE

Connectable but not discoverable

ESP_BT_SCAN_MODE_CONNECTABLE_DISCOVERABLE

both discoverable and connectable

Bluetooth A2DP API

Overview

Instructions

Application Example

Check `bluetooth` folder in ESP-IDF examples, which contains the following application:

- This is a A2DP sink client demo. This demo can be discovered and connected by A2DP source device and receive the audio stream from remote device - [bluetooth/a2dp_sink](#)

API Reference

Header File

- `bt/bluedroid/api/include/esp_a2dp_api.h`

Functions

`esp_err_t esp_a2d_register_callback` (*esp_a2d_cb_t callback*)

Register application callback function to A2DP module. This function should be called only after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: if callback is a NULL function pointer

Parameters

- `callback`: A2DP sink event callback function

`esp_err_t esp_a2d_register_data_callback` (*esp_a2d_data_cb_t* callback)

Register A2DP sink data output function; For now the output is PCM data stream decoded from SBC format. This function should be called only after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: if callback is a NULL function pointer

Parameters

- `callback`: A2DP data callback function

`esp_err_t esp_a2d_sink_init` (void)

Initialize the bluetooth A2DP sink module. This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: if the initialization request is sent successfully
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

`esp_err_t esp_a2d_sink_deinit` (void)

De-initialize for A2DP sink module. This function should be called only after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

`esp_err_t esp_a2d_sink_connect` (*esp_bd_addr_t* remote_bda)

Connect the remote bluetooth device bluetooth, must after `esp_a2d_sink_init()`

Return

- `ESP_OK`: connect request is sent to lower layer
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

Parameters

- `remote_bda`: remote bluetooth device address

`esp_err_t esp_a2d_sink_disconnect` (*esp_bd_addr_t* remote_bda)

Disconnect the remote bluetooth device.

Return

- `ESP_OK`: disconnect request is sent to lower layer
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled

- ESP_FAIL: others

Parameters

- remote_bda: remote bluetooth device address

Unions

union esp_a2d_cb_param_t
#include <esp_a2dp_api.h> A2DP state callback parameters.

Public Members

struct esp_a2d_cb_param_t::a2d_conn_stat_param conn_stat
A2DP connection status

struct esp_a2d_cb_param_t::a2d_audio_stat_param audio_stat
audio stream playing state

struct esp_a2d_cb_param_t::a2d_audio_cfg_param audio_cfg
media codec configuration information

struct a2d_audio_cfg_param
#include <esp_a2dp_api.h> ESP_A2D_AUDIO_CFG_EVT.

Public Members

esp_bd_addr_t **remote_bda**
remote bluetooth device address

esp_a2d_mcc_t **mcc**
A2DP media codec capability information

struct a2d_audio_stat_param
#include <esp_a2dp_api.h> ESP_A2D_AUDIO_STATE_EVT.

Public Members

esp_a2d_audio_state_t **state**
one of the values from esp_a2d_audio_state_t

esp_bd_addr_t **remote_bda**
remote bluetooth device address

struct a2d_conn_stat_param
#include <esp_a2dp_api.h> ESP_A2D_CONNECTION_STATE_EVT.

Public Members

esp_a2d_connection_state_t **state**
one of values from esp_a2d_connection_state_t

esp_bd_addr_t **remote_bda**
remote bluetooth device address

esp_a2d_disc_rsn_t **disc_rsn**
reason of disconnection for “DISCONNECTED”

Structures

struct esp_a2d_mcc_t
A2DP media codec capabilities union.

Public Members

esp_a2d_mct_t **type**
A2DP media codec type

union esp_a2d_mcc_t::@1 esp_a2d_mcc_t::cie
A2DP codec information element

Macros

ESP_A2D_MCT_SBC (0)
Media codec types supported by A2DP.
SBC

ESP_A2D_MCT_M12 (0x01)
MPEG-1, 2 Audio

ESP_A2D_MCT_M24 (0x02)
MPEG-2, 4 AAC

ESP_A2D_MCT_ATRAC (0x04)
ATRAC family

ESP_A2D_MCT_NON_A2DP (0xff)

ESP_A2D_CIE_LEN_SBC (4)

ESP_A2D_CIE_LEN_M12 (4)

ESP_A2D_CIE_LEN_M24 (6)

ESP_A2D_CIE_LEN_ATRAC (7)

Type Definitions

typedef uint8_t esp_a2d_mct_t

typedef void (*esp_a2d_cb_t) (esp_a2d_cb_event_t event, esp_a2d_cb_param_t *param)
A2DP profile callback function type.

Parameters

- *event*: : Event type
- *param*: : Pointer to callback parameter

typedef void (*esp_a2d_data_cb_t) (const uint8_t *buf, uint32_t len)
A2DP profile data callback function.

Parameters

- `buf`: : data received from A2DP source device and is PCM format decoder from SBC decoder; `buf` references to a static memory block and can be overwritten by upcoming data
- `len`: : size(in bytes) in `buf`

Enumerations

enum esp_a2d_connection_state_t
Bluetooth A2DP connection states.

Values:

ESP_A2D_CONNECTION_STATE_DISCONNECTED = 0
connection released

ESP_A2D_CONNECTION_STATE_CONNECTING
connecting remote device

ESP_A2D_CONNECTION_STATE_CONNECTED
connection established

ESP_A2D_CONNECTION_STATE_DISCONNECTING
disconnecting remote device

enum esp_a2d_disc_rsn_t
Bluetooth A2DP disconnection reason.

Values:

ESP_A2D_DISC_RSN_NORMAL = 0
Finished disconnection that is initiated by local or remote device

ESP_A2D_DISC_RSN_ABNORMAL
Abnormal disconnection caused by signal loss

enum esp_a2d_audio_state_t
Bluetooth A2DP datapath states.

Values:

ESP_A2D_AUDIO_STATE_REMOTE_SUSPEND = 0
audio stream datapath suspended by remote device

ESP_A2D_AUDIO_STATE_STOPPED
audio stream datapath stopped

ESP_A2D_AUDIO_STATE_STARTED
audio stream datapath started

enum esp_a2d_cb_event_t
A2DP callback events.

Values:

ESP_A2D_CONNECTION_STATE_EVT = 0
connection state changed event

ESP_A2D_AUDIO_STATE_EVT = 1
audio stream transmission state changed event

ESP_A2D_AUDIO_CFG_EVT = 2
audio codec is configured

BT AVRCP APIs

Overview

Bluetooth AVRCP reference APIs.

Instructions

Application Example

Instructions

API Reference

Header File

- `bt/bluedroid/api/include/esp_avrc_api.h`

Functions

`esp_err_t esp_avrc_ct_register_callback` (*esp_avrc_ct_cb_t* callback)

Register application callbacks to AVRCP module; for now only AVRCP Controller role is supported. This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

Parameters

- `callback`: AVRCP controller callback function

`esp_err_t esp_avrc_ct_init` (void)

Initialize the bluetooth AVRCP controller module, This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

`esp_err_t esp_avrc_ct_deinit` (void)

De-initialize AVRCP controller module. This function should be called after `esp_bluedroid_enable()` completes successfully.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

`esp_err_t esp_avrc_ct_send_passthrough_cmd` (uint8_t *tl*, uint8_t *key_code*, uint8_t *key_state*)

Send passthrough command to AVRCP target, This function should be called after `ESP_AVRC_CT_CONNECTION_STATE_EVT` is received and AVRCP connection is established.

Return

- `ESP_OK`: success
- `ESP_INVALID_STATE`: if bluetooth stack is not yet enabled
- `ESP_FAIL`: others

Parameters

- *tl*: : transaction label, 0 to 15, consecutive commands should use different values.
- *key_code*: : passthrough command code, e.g. `ESP_AVRC_PT_CMD_PLAY`, `ESP_AVRC_PT_CMD_STOP`, etc.
- *key_state*: : passthrough command key state, `ESP_AVRC_PT_CMD_STATE_PRESSED` or `ESP_AVRC_PT_CMD_STATE_RELEASED`

Unions

`union esp_avrc_ct_cb_param_t`

#include <esp_avrc_api.h> AVRCP controller callback parameters.

Public Members

`struct esp_avrc_ct_cb_param_t::avrc_ct_conn_stat_param` **conn_stat**
AVRCP connection status

`struct esp_avrc_ct_cb_param_t::avrc_ct_psth_rsp_param` **psth_rsp**
passthrough command response

`struct avrc_ct_conn_stat_param`
#include <esp_avrc_api.h> `ESP_AVRC_CT_CONNECTION_STATE_EVT`.

Public Members

`bool` **connected**
whether AVRCP connection is set up

`uint32_t` **feat_mask**
AVRCP feature mask of remote device

esp_bd_addr_t **remote_bda**
remote bluetooth device address

struct avrc_ct_psth_rsp_param
#include <esp_avrc_api.h> ESP_AVRC_CT_PASSTHROUGH_RSP_EVT.

Public Members

uint8_t t1
transaction label, 0 to 15

uint8_t key_code
passthrough command code

uint8_t key_state
0 for PRESSED, 1 for RELEASED

Type Definitions

typedef void (*esp_avrc_ct_cb_t) (*esp_avrc_ct_cb_event_t* event, *esp_avrc_ct_cb_param_t* *param)
AVRCP controller callback function type.

Parameters

- event: : Event type
- param: : Pointer to callback parameter union

Enumerations

enum esp_avrc_features_t
AVRC feature bit mask.

Values:

ESP_AVRC_FEAT_RCTG = 0x0001
remote control target

ESP_AVRC_FEAT_RCCT = 0x0002
remote control controller

ESP_AVRC_FEAT_VENDOR = 0x0008
remote control vendor dependent commands

ESP_AVRC_FEAT_BROWSE = 0x0010
use browsing channel

ESP_AVRC_FEAT_META_DATA = 0x0040
remote control metadata transfer command/response

ESP_AVRC_FEAT_ADV_CTRL = 0x0200
remote control advanced control commmand/response

enum esp_avrc_pt_cmd_t
AVRC passthrough command code.

Values:

ESP_AVRC_PT_CMD_PLAY = 0x44
play

ESP_AVRC_PT_CMD_STOP = 0x45
stop

ESP_AVRC_PT_CMD_PAUSE = 0x46
pause

ESP_AVRC_PT_CMD_FORWARD = 0x4B
forward

ESP_AVRC_PT_CMD_BACKWARD = 0x4C
backward

enum esp_avrc_pt_cmd_state_t
AVRC passthrough command state.

Values:

ESP_AVRC_PT_CMD_STATE_PRESSED = 0
key pressed

ESP_AVRC_PT_CMD_STATE_RELEASED = 1
key released

enum esp_avrc_ct_cb_event_t
AVRC Controller callback events.

Values:

ESP_AVRC_CT_CONNECTION_STATE_EVT = 0
connection state changed event

ESP_AVRC_CT_PASSTHROUGH_RSP_EVT = 1
passthrough response event

ESP_AVRC_CT_MAX_EVT

Example code for this API section is provided in [bluetooth](#) directory of ESP-IDF examples.

Ethernet API

ETHERNET

Application Example

Ethernet example: [ethernet/ethernet](#).

PHY Interfaces

The configured PHY model(s) are set in software by configuring the `eth_config_t` structure for the given PHY.

Headers include a default configuration structure. These default configurations will need some members overridden or re-set before they can be used for a particular PHY hardware configuration. Consult the Ethernet example to see how this is done.

- [ethernet/include/eth_phy/phy.h](#) (common)
- [ethernet/include/eth_phy/phy_tk110.h](#)

- `ethernet/include/eth_phy/phy_lan8720.h`

PHY Configuration Constants

const `eth_config_t phy_tlk110_default_ethernet_config`

Default TLK110 PHY configuration.

This configuration is not suitable for use as-is, it will need to be modified for your particular PHY hardware setup.

Consult the Ethernet example to see how this is done.

const `eth_config_t phy_lan8720_default_ethernet_config`

Default LAN8720 PHY configuration.

This configuration is not suitable for use as-is, it will need to be modified for your particular PHY hardware setup.

Consult the Ethernet example to see how this is done.

API Reference - Ethernet

Header File

- `ethernet/include/esp_eth.h`

Functions

`esp_err_t esp_eth_init (eth_config_t *config)`

Init ethernet mac.

Note config can not be NULL, and phy chip must be suitable to phy init func.

Return

- ESP_OK
- ESP_FAIL

Parameters

- config: mac init data.

`esp_err_t esp_eth_tx (uint8_t *buf, uint16_t size)`

Send packet from tcp/ip to mac.

Note buf can not be NULL, size must be less than 1580

Return

- ESP_OK
- ESP_FAIL

Parameters

- buf: start address of packet data.
- size: size (byte) of packet data.

esp_err_t **esp_eth_enable** (void)
Enable ethernet interface.

Note Shout be called after esp_eth_init

Return

- ESP_OK
- ESP_FAIL

esp_err_t **esp_eth_disable** (void)
Disable ethernet interface.

Note Shout be called after esp_eth_init

Return

- ESP_OK
- ESP_FAIL

void **esp_eth_get_mac** (uint8_t mac[6])
Get mac addr.

Note mac addr must be a valid unicast address

Parameters

- mac: start address of mac address.

void **esp_eth_smi_write** (uint32_t reg_num, uint16_t value)
Read phy reg with smi interface.

Note phy base addr must be right.

Parameters

- reg_num: phy reg num.
- value: value which write to phy reg.

uint16_t **esp_eth_smi_read** (uint32_t reg_num)
Read phy reg with smi interface.

Note phy base addr must be right.

Return value what read from phy reg

Parameters

- reg_num: phy reg num.

esp_err_t **esp_eth_smi_wait_value** (uint32_t reg_num, uint16_t value, uint16_t value_mask, int time-
out_ms)
Continuously read a PHY register over SMI interface, wait until the register has the desired value.

Note PHY base address must be right.

Return ESP_OK if desired value matches, ESP_ERR_TIMEOUT if timed out.

Parameters

- `reg_num`: PHY register number
- `value`: Value to wait for (masked with `value_mask`)
- `value_mask`: Mask of bits to match in the register.
- `timeout_ms`: Timeout to wait for this value (milliseconds). 0 means never timeout.

static `esp_err_t esp_eth_smi_wait_set` (`uint32_t reg_num`, `uint16_t value_mask`, `int timeout_ms`)
 Continuously read a PHY register over SMI interface, wait until the register has all bits in a mask set.

Note PHY base address must be right.

Return `ESP_OK` if desired value matches, `ESP_ERR_TIMEOUT` if timed out.

Parameters

- `reg_num`: PHY register number
- `value_mask`: Value mask to wait for (all bits in this mask must be set)
- `timeout_ms`: Timeout to wait for this value (milliseconds). 0 means never timeout.

`void esp_eth_free_rx_buf` (`void *buf`)
 Free emac rx buf.

Note `buf` can not be null, and it is tcpip input buf.

Parameters

- `buf`: start address of receive packet data.

Structures

struct `eth_config_t`
 ethernet configuration

Public Members

`eth_phy_base_t phy_addr`
 phy base addr (0~31)

`eth_mode_t mac_mode`
 mac mode only support RMI now

`eth_tcpip_input_func tcpip_input`
 tcpip input func

`eth_phy_func phy_init`
 phy init func

`eth_phy_check_link_func phy_check_link`
 phy check link func

`eth_phy_check_init_func phy_check_init`
 phy check init func

`eth_phy_get_speed_mode_func phy_get_speed_mode`
 phy check init func

eth_phy_get_duplex_mode_func **phy_get_duplex_mode**
 phy check init func

eth_gpio_config_func **gpio_config**
 gpio config func

bool **flow_ctrl_enable**
 flag of flow ctrl enable

eth_phy_get_partner_pause_enable_func **phy_get_partner_pause_enable**
 get partner pause enable

eth_phy_power_enable_func **phy_power_enable**
 enable or disable phy power

Type Definitions

```
typedef bool (*eth_phy_check_link_func) (void)
typedef void (*eth_phy_check_init_func) (void)
typedef eth_speed_mode_t (*eth_phy_get_speed_mode_func) (void)
typedef eth_duplex_mode_t (*eth_phy_get_duplex_mode_func) (void)
typedef void (*eth_phy_func) (void)
typedef esp_err_t (*eth_tcpip_input_func) (void *buffer, uint16_t len, void *eb)
typedef void (*eth_gpio_config_func) (void)
typedef bool (*eth_phy_get_partner_pause_enable_func) (void)
typedef void (*eth_phy_power_enable_func) (bool enable)
```

Enumerations

```
enum eth_mode_t
  Values:
  ETH_MODE_RMII = 0
  ETH_MODE_MII

enum eth_speed_mode_t
  Values:
  ETH_SPEED_MODE_10M = 0
  ETH_SPEED_MODE_100M

enum eth_duplex_mode_t
  Values:
  ETH_MODE_HALFDUPLEX = 0
  ETH_MODE_FULLLDUPLEX

enum eth_phy_base_t
  Values:
  PHY0 = 0
```

PHY1
PHY2
PHY3
PHY4
PHY5
PHY6
PHY7
PHY8
PHY9
PHY10
PHY11
PHY12
PHY13
PHY14
PHY15
PHY16
PHY17
PHY18
PHY19
PHY20
PHY21
PHY22
PHY23
PHY24
PHY25
PHY26
PHY27
PHY28
PHY29
PHY30
PHY31

API Reference - PHY Common

Header File

- [ethernet/include/eth_phy/phy.h](#)

Functions

void **phy_rmii_configure_data_interface_pins** (void)

Common PHY-management functions.

These are not enough to drive any particular Ethernet PHY, but they provide a common configuration structure and management functions. Configure fixed pins for RMII data interface.

This configures GPIOs 0, 19, 22, 25, 26, 27 for use with RMII data interface. These pins cannot be changed, and must be wired to ethernet functions.

This is not sufficient to fully configure the Ethernet PHY, MDIO configuration interface pins (such as SMI MDC, MDO, MDI) must also be configured correctly in the GPIO matrix.

void **phy_rmii_smi_configure_pins** (uint8_t *mdc_gpio*, uint8_t *mdio_gpio*)

Configure variable pins for SMI (MDIO) ethernet functions.

Calling this function along with `mii_configure_default_pins()` will fully configure the GPIOs for the ethernet PHY.

void **phy_mii_enable_flow_ctrl** (void)

Enable flow control in standard PHY MII register.

bool **phy_mii_check_link_status** (void)

bool **phy_mii_get_partner_pause_enable** (void)

API Reference - PHY TLK110

Header File

- `ethernet/include/eth_phy/phy_tlk110.h`

Functions

void **phy_tlk110_dump_registers** ()

Dump all TLK110 PHY SMI configuration registers.

Note These registers are dumped at ‘debug’ level, so output may not be visible depending on default log levels.

void **phy_tlk110_check_phy_init** (void)

Default TLK110 `phy_check_init` function.

eth_speed_mode_t **phy_tlk110_get_speed_mode** (void)

Default TLK110 `phy_get_speed_mode` function.

eth_duplex_mode_t **phy_tlk110_get_duplex_mode** (void)

Default TLK110 `phy_get_duplex_mode` function.

void **phy_tlk110_power_enable** (bool)

Default TLK110 `phy_power_enable` function.

Consult the ethernet example to see how this is done.

Note This function may need to be replaced with a custom function if the PHY has a GPIO to enable power or start a clock.

void **phy_tlk110_init** (void)

Default TLK110 `phy_init` function.

API Reference - PHY LAN8720

Header File

- [ethernet/include/eth_phy/phy_lan8720.h](#)

Functions

void **phy_lan8720_dump_registers** ()
Dump all LAN8720 PHY SMI configuration registers.

Note These registers are dumped at ‘debug’ level, so output may not be visible depending on default log levels.

void **phy_lan8720_check_phy_init** (void)
Default LAN8720 phy_check_init function.

eth_speed_mode_t **phy_lan8720_get_speed_mode** (void)
Default LAN8720 phy_get_speed_mode function.

eth_duplex_mode_t **phy_lan8720_get_duplex_mode** (void)
Default LAN8720 phy_get_duplex_mode function.

void **phy_lan8720_power_enable** (bool)
Default LAN8720 phy_power_enable function.

Consult the ethernet example to see how this is done.

Note This function may need to be replaced with a custom function if the PHY has a GPIO to enable power or start a clock.

void **phy_lan8720_init** (void)
Default LAN8720 phy_init function.

Example code for this API section is provided in [ethernet](#) directory of ESP-IDF examples.

Peripherals API

Analog to Digital Converter

Overview

ESP32 integrates two 12-bit SAR (“Successive Approximation Register”) ADCs (Analog to Digital Converters) and supports measurements on 18 channels (analog enabled pins). Some of these pins can be used to build a programmable gain amplifier which is used for the measurement of small analog signals.

The ADC driver API currently only supports ADC1 (9 channels, attached to GPIOs 32-39).

Taking an ADC reading involves configuring the ADC with the desired precision and attenuation settings, and then calling `adc1_get_voltage()` to read the channel.

It is also possible to read the internal hall effect sensor via ADC1.

Application Example

Reading voltage on ADC1 channel 0 (GPIO 36):

```
#include <driver/adc.h>

...

adc1_config_width(ADC_WIDTH_12Bit);
adc1_config_channel_atten(ADC1_CHANNEL_0, ADC_ATTEN_0db);
int val = adc1_get_voltage(ADC1_CHANNEL_0);
```

Reading the internal hall effect sensor:

```
#include <driver/adc.h>

...

adc1_config_width(ADC_WIDTH_12Bit);
int val = hall_sensor_read();
```

The value read in both these examples is 12 bits wide (range 0-4095).

API Reference

Header File

- `driver/include/driver/adc.h`

Functions

`esp_err_t adc1_config_width(adc_bits_width_t width_bit)`

Configure ADC1 capture width.

The configuration is for all channels of ADC1

Return

- `ESP_OK` success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `width_bit`: Bit capture width for ADC1

`esp_err_t adc1_config_channel_atten(adc1_channel_t channel, adc_atten_t atten)`

Configure the ADC1 channel, including setting attenuation.

The default ADC full-scale voltage is 1.1V. To read higher voltages (up to the pin maximum voltage, usually 3.3V) requires setting >0dB signal attenuation for that ADC channel.

Note This function also configures the input GPIO pin mux to connect it to the ADC1 channel. It must be called before calling `adc1_get_voltage()` for this channel.

When `VDD_A` is 3.3V:

- 0dB attenuation (ADC_ATTEN_0db) gives full-scale voltage 1.1V
- 2.5dB attenuation (ADC_ATTEN_2_5db) gives full-scale voltage 1.5V
- 6dB attenuation (ADC_ATTEN_6db) gives full-scale voltage 2.2V
- 11dB attenuation (ADC_ATTEN_11db) gives full-scale voltage 3.9V (see note below)

Note The full-scale voltage is the voltage corresponding to a maximum reading (depending on ADC1 configured bit width, this value is: 4095 for 12-bits, 2047 for 11-bits, 1023 for 10-bits, 511 for 9 bits.)

Note At 11dB attenuation the maximum voltage is limited by VDD_A, not the full scale voltage.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `channel`: ADC1 channel to configure
- `atten`: Attenuation level

int **adc1_get_voltage** (*adc1_channel_t channel*)

Take an ADC1 reading on a single channel.

Note Call `adc1_config_width()` before the first time this function is called.

Note For a given channel, `adc1_config_channel_atten(channel)` must be called before the first time this function is called.

Return

- -1: Parameter error
- Other: ADC1 channel reading.

Parameters

- `channel`: ADC1 channel to read

void **adc1_ulp_enable** ()

Configure ADC1 to be usable by the ULP.

This function reconfigures ADC1 to be controlled by the ULP. Effect of this function can be reverted using `adc1_get_voltage` function.

Note that `adc1_config_channel_atten`, `adc1_config_width` functions need to be called to configure ADC1 channels, before ADC1 is used by the ULP.

int **hall_sensor_read** ()

Read Hall Sensor.

Note The Hall Sensor uses channels 0 and 3 of ADC1. Do not configure these channels for use as ADC channels.

Note The ADC1 module must be enabled by calling `adc1_config_width()` before calling `hall_sensor_read()`. ADC1 should be configured for 12 bit readings, as the hall sensor readings are low values and do not cover the full range of the ADC.

Return The hall sensor reading.

Enumerations

enum `adc_atten_t`

Values:

ADC_ATTEN_0db = 0

The input voltage of ADC will be reduced to about 1/1

ADC_ATTEN_2_5db = 1

The input voltage of ADC will be reduced to about 1/1.34

ADC_ATTEN_6db = 2

The input voltage of ADC will be reduced to about 1/2

ADC_ATTEN_11db = 3

The input voltage of ADC will be reduced to about 1/3.6

enum `adc_bits_width_t`

Values:

ADC_WIDTH_9Bit = 0

ADC capture width is 9Bit

ADC_WIDTH_10Bit = 1

ADC capture width is 10Bit

ADC_WIDTH_11Bit = 2

ADC capture width is 11Bit

ADC_WIDTH_12Bit = 3

ADC capture width is 12Bit

enum `adc1_channel_t`

Values:

ADC1_CHANNEL_0 = 0

ADC1 channel 0 is GPIO36

ADC1_CHANNEL_1

ADC1 channel 1 is GPIO37

ADC1_CHANNEL_2

ADC1 channel 2 is GPIO38

ADC1_CHANNEL_3

ADC1 channel 3 is GPIO39

ADC1_CHANNEL_4

ADC1 channel 4 is GPIO32

ADC1_CHANNEL_5

ADC1 channel 5 is GPIO33

ADC1_CHANNEL_6

ADC1 channel 6 is GPIO34

ADC1_CHANNEL_7

ADC1 channel 7 is GPIO35

ADC1_CHANNEL_MAX

Digital To Analog Converter

Overview

ESP32 has two 8-bit DAC (digital to analog converter) channels, connected to GPIO25 (Channel 1) and GPIO26 (Channel 2).

The DAC driver allows these channels to be set to arbitrary voltages.

The DAC channels can also be driven with DMA-style written sample data, via the *I2S driver* when using the “built-in DAC mode”.

For other analog output options, see the *Sigma-delta Modulation module* and the *LED Control module*. Both these modules produce high frequency PWM output, which can be hardware low-pass filtered in order to generate a lower frequency analog output.

Application Example

Setting DAC channel 1 (GPIO 25) voltage to approx 0.78 of VDD_A voltage ($VDD * 200 / 255$). For VDD_A 3.3V, this is 2.59V:

```
#include <driver/dac.h>
...
dac_output_enable(DAC_CHANNEL_1);
dac_output_voltage(DAC_CHANNEL_1, 200);
```

API Reference

Header File

- `driver/include/driver/dac.h`

Functions

`esp_err_t dac_output_voltage(dac_channel_t channel, uint8_t dac_value)`

Set DAC output voltage.

DAC output is 8-bit. Maximum (255) corresponds to VDD.

Note Need to configure DAC pad before calling this function. DAC channel 1 is attached to GPIO25, DAC channel 2 is attached to GPIO26

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `channel`: DAC channel
- `dac_value`: DAC output value

`esp_err_t dac_output_enable (dac_channel_t channel)`
DAC pad output enable.

Note DAC channel 1 is attached to GPIO25, DAC channel 2 is attached to GPIO26 I2S left channel will be mapped to DAC channel 2 I2S right channel will be mapped to DAC channel 1

Parameters

- `channel`: DAC channel

`esp_err_t dac_output_disable (dac_channel_t channel)`
DAC pad output disable.

Note DAC channel 1 is attached to GPIO25, DAC channel 2 is attached to GPIO26

Parameters

- `channel`: DAC channel

`esp_err_t dac_i2s_enable ()`
Enable DAC output data from I2S.

`esp_err_t dac_i2s_disable ()`
Disable DAC output data from I2S.

Enumerations

`enum dac_channel_t`

Values:

`DAC_CHANNEL_1 = 1`
DAC channel 1 is GPIO25

`DAC_CHANNEL_2`
DAC channel 2 is GPIO26

`DAC_CHANNEL_MAX`

GPIO & RTC GPIO

Overview

The ESP32 chip features 40 physical GPIO pads. Some GPIO pads cannot be used or do not have the corresponding pin on the chip package (refer to technical reference manual). Each pad can be used as a general purpose I/O or can be connected to an internal peripheral signal.

- Note that GPIO6-11 are usually used for SPI flash.
- GPIO34-39 can only be set as input mode and do not have software pullup or pulldown functions.

There is also separate “RTC GPIO” support, which functions when GPIOs are routed to the “RTC” low-power and analog subsystem. These pin functions can be used when in deep sleep, when the *Ultra Low Power co-processor* is running, or when analog functions such as ADC/DAC/etc are in use.

Application Example

GPIO output and input interrupt example: [peripherals/gpio](#).

API Reference - Normal GPIO

Header File

- `driver/include/driver/gpio.h`

Functions

`esp_err_t gpio_config (const gpio_config_t *pGPIOConfig)`
GPIO common configuration.

Configure GPIO's Mode,pull-up,PullDown,IntrType

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- pGPIOConfig: Pointer to GPIO configure struct

`esp_err_t gpio_set_intr_type (gpio_num_t gpio_num, gpio_int_type_t intr_type)`
GPIO set interrupt trigger type.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number. If you want to set the trigger type of e.g. of GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);
- `intr_type`: Interrupt type, select from `gpio_int_type_t`

`esp_err_t gpio_intr_enable (gpio_num_t gpio_num)`
Enable GPIO module interrupt signal.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number. If you want to enable an interrupt on e.g. GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);

`esp_err_t gpio_intr_disable (gpio_num_t gpio_num)`
Disable GPIO module interrupt signal.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number. If you want to disable the interrupt of e.g. GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);

`esp_err_t gpio_set_level` (*gpio_num_t gpio_num, uint32_t level*)

GPIO set output level.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` GPIO number error

Parameters

- `gpio_num`: GPIO number. If you want to set the output level of e.g. GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);
- `level`: Output level. 0: low ; 1: high

`int gpio_get_level` (*gpio_num_t gpio_num*)

GPIO get input level.

Return

- 0 the GPIO input level is 0
- 1 the GPIO input level is 1

Parameters

- `gpio_num`: GPIO number. If you want to get the logic level of e.g. pin GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);

`esp_err_t gpio_set_direction` (*gpio_num_t gpio_num, gpio_mode_t mode*)

GPIO set direction.

Configure GPIO direction, such as `output_only`, `input_only`, `output_and_input`

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` GPIO error

Parameters

- `gpio_num`: Configure GPIO pins number, it should be GPIO number. If you want to set direction of e.g. GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);
- `mode`: GPIO direction

`esp_err_t gpio_set_pull_mode` (*gpio_num_t gpio_num, gpio_pull_mode_t pull*)

Configure GPIO pull-up/pull-down resistors.

Only pins that support both input & output have integrated pull-up and pull-down resistors. Input-only GPIOs 34-39 do not.

Return

- `ESP_OK` Success

- ESP_ERR_INVALID_ARG : Parameter error

Parameters

- `gpio_num`: GPIO number. If you want to set pull up or down mode for e.g. GPIO16, `gpio_num` should be `GPIO_NUM_16` (16);
- `pull`: GPIO pull up/down mode.

`esp_err_t gpio_wakeup_enable` (*gpio_num_t* `gpio_num`, *gpio_int_type_t* `intr_type`)
Enable GPIO wake-up function.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number.
- `intr_type`: GPIO wake-up type. Only `GPIO_INTR_LOW_LEVEL` or `GPIO_INTR_HIGH_LEVEL` can be used.

`esp_err_t gpio_wakeup_disable` (*gpio_num_t* `gpio_num`)
Disable GPIO wake-up function.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number

`esp_err_t gpio_isr_register` (*void (*fn)*) *void **
, *void *arg*, *int intr_alloc_flags*, *gpio_isr_handle_t *handle* Register GPIO interrupt handler, the handler is an ISR. The handler will be attached to the same CPU core that this function is running on.

This ISR function is called whenever any GPIO interrupt occurs. See the alternative `gpio_install_isr_service()` and `gpio_isr_handler_add()` API in order to have the driver support per-GPIO ISRs.

To disable or remove the ISR, pass the returned handle to the *interrupt allocation functions*.

Parameters

- `fn`: Interrupt handler function.
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `arg`: Parameter for handler function
- `handle`: Pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

Return

- ESP_OK Success ;
- ESP_ERR_INVALID_ARG GPIO error

esp_err_t **gpio_pullup_en**(*gpio_num_t gpio_num*)
Enable pull-up on GPIO.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- gpio_num: GPIO number

esp_err_t **gpio_pullup_dis**(*gpio_num_t gpio_num*)
Disable pull-up on GPIO.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- gpio_num: GPIO number

esp_err_t **gpiopulldown_en**(*gpio_num_t gpio_num*)
Enable pull-down on GPIO.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- gpio_num: GPIO number

esp_err_t **gpiopulldown_dis**(*gpio_num_t gpio_num*)
Disable pull-down on GPIO.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- gpio_num: GPIO number

esp_err_t **gpio_install_isr_service**(int *intr_alloc_flags*)
Install the driver's GPIO ISR handler service, which allows per-pin GPIO interrupt handlers.

This function is incompatible with `gpio_isr_register()` - if that function is used, a single global ISR is registered for all GPIO interrupts. If this function is used, the ISR service provides a global GPIO ISR and individual pin handlers are registered via the `gpio_isr_handler_add()` function.

Return

- ESP_OK Success

- ESP_FAIL Operation fail
- ESP_ERR_NO_MEM No memory to install this service

Parameters

- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) ESP_INTR_FLAG_* values. See `esp_intr_alloc.h` for more info.

void **gpio_uninstall_isr_service** ()

Uninstall the driver's GPIO ISR service, freeing related resources.

esp_err_t **gpio_isr_handler_add** (*gpio_num_t* gpio_num, *gpio_isr_t* isr_handler, void *args)

Add ISR handler for the corresponding GPIO pin.

Call this function after using `gpio_install_isr_service()` to install the driver's GPIO ISR handler service.

The pin ISR handlers no longer need to be declared with `IRAM_ATTR`, unless you pass the `ESP_INTR_FLAG_IRAM` flag when allocating the ISR in `gpio_install_isr_service()`.

This ISR handler will be called from an ISR. So there is a stack size limit (configurable as "ISR stack size" in menuconfig). This limit is smaller compared to a global GPIO interrupt handler due to the additional level of indirection.

Return

- ESP_OK Success
- ESP_ERR_INVALID_STATE Wrong state, the ISR service has not been initialized.
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number
- `isr_handler`: ISR handler function for the corresponding GPIO number.
- `args`: parameter for ISR handler.

esp_err_t **gpio_isr_handler_remove** (*gpio_num_t* gpio_num)

Remove ISR handler for the corresponding GPIO pin.

Return

- ESP_OK Success
- ESP_ERR_INVALID_STATE Wrong state, the ISR service has not been initialized.
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `gpio_num`: GPIO number

Structures

struct **gpio_config_t**

Configuration parameters of GPIO pad for `gpio_config` function.

Public Members

`uint64_t pin_bit_mask`
 GPIO pin: set with bit mask, each bit maps to a GPIO

`gpio_mode_t mode`
 GPIO mode: set input/output mode

`gpio_pullup_t pull_up_en`
 GPIO pull-up

`gpio_pulldown_t pull_down_en`
 GPIO pull-down

`gpio_int_type_t intr_type`
 GPIO interrupt type

Macros

`GPIO_SEL_0` (BIT(0))

Pin 0 selected

`GPIO_SEL_1` (BIT(1))

Pin 1 selected

`GPIO_SEL_2` (BIT(2))

Pin 2 selected

Note There are more macros like that up to pin 39, excluding pins 20, 24 and 28..31. They are not shown here to reduce redundant information.

`GPIO_IS_VALID_GPIO` (gpio_num) ((gpio_num < GPIO_PIN_COUNT && GPIO_PIN_MUX_REG[gpio_num] != 0))

Check whether it is a valid GPIO number

`GPIO_IS_VALID_OUTPUT_GPIO` (gpio_num) ((GPIO_IS_VALID_GPIO(gpio_num) && (gpio_num < 34))

Check whether it can be a valid GPIO number of output mode

Type Definitions

`typedef void (*gpio_isr_t) (void *)`

`typedef intr_handle_t gpio_isr_handle_t`

Enumerations

`enum gpio_num_t`

Values:

`GPIO_NUM_0` = 0

GPIO0, input and output

`GPIO_NUM_1` = 1

GPIO1, input and output

`GPIO_NUM_2` = 2

GPIO2, input and output

Note There are more enumerations like that up to GPIO39, excluding GPIO20, GPIO24 and GPIO28..31. They are not shown here to reduce redundant information.

Note GPIO34..39 are input mode only.

enum `gpio_int_type_t`

Values:

GPIO_INTR_DISABLE = 0
Disable GPIO interrupt

GPIO_INTR_POSEDGE = 1
GPIO interrupt type : rising edge

GPIO_INTR_NEGEDGE = 2
GPIO interrupt type : falling edge

GPIO_INTR_ANYEDGE = 3
GPIO interrupt type : both rising and falling edge

GPIO_INTR_LOW_LEVEL = 4
GPIO interrupt type : input low level trigger

GPIO_INTR_HIGH_LEVEL = 5
GPIO interrupt type : input high level trigger

GPIO_INTR_MAX

enum `gpio_mode_t`

Values:

GPIO_MODE_INPUT = **GPIO_MODE_DEF_INPUT**
GPIO mode : input only

GPIO_MODE_OUTPUT = **GPIO_MODE_DEF_OUTPUT**
GPIO mode : output only mode

GPIO_MODE_OUTPUT_OD = ((**GPIO_MODE_DEF_OUTPUT**))(**GPIO_MODE_DEF_OD**)
GPIO mode : output only with open-drain mode

GPIO_MODE_INPUT_OUTPUT_OD = ((**GPIO_MODE_DEF_INPUT**))(**GPIO_MODE_DEF_OUTPUT**))(**GPIO_MODE_DEF_OD**)
GPIO mode : output and input with open-drain mode

GPIO_MODE_INPUT_OUTPUT = ((**GPIO_MODE_DEF_INPUT**))(**GPIO_MODE_DEF_OUTPUT**)
GPIO mode : output and input mode

enum `gpio_pullup_t`

Values:

GPIO_PULLUP_DISABLE = 0x0
Disable GPIO pull-up resistor

GPIO_PULLUP_ENABLE = 0x1
Enable GPIO pull-up resistor

enum `gpio_pulldown_t`

Values:

GPIO_PULLDOWN_DISABLE = 0x0
Disable GPIO pull-down resistor

GPIO_PULLDOWN_ENABLE = 0x1
Enable GPIO pull-down resistor

enum `gpio_pull_mode_t`

Values:

`GPIO_PULLUP_ONLY`

Pad pull up

`GPIO_PULLDOWN_ONLY`

Pad pull down

`GPIO_PULLUP_PULLDOWN`

Pad pull up + pull down

`GPIO_FLOATING`

Pad floating

API Reference - RTC GPIO

Header File

- `driver/include/driver/rtc_io.h`

Functions

static bool `rtc_gpio_is_valid_gpio` (*gpio_num_t* *gpio_num*)

Determine if the specified GPIO is a valid RTC GPIO.

Return true if GPIO is valid for RTC GPIO use. false otherwise.

Parameters

- `gpio_num`: GPIO number

esp_err_t `rtc_gpio_init` (*gpio_num_t* *gpio_num*)

Init a GPIO as RTC GPIO.

This function must be called when initializing a pad for an analog function.

Return

- `ESP_OK` success
- `ESP_ERR_INVALID_ARG` GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. `GPIO_NUM_12`)

esp_err_t `rtc_gpio_deinit` (*gpio_num_t* *gpio_num*)

Init a GPIO as digital GPIO.

Return

- `ESP_OK` success
- `ESP_ERR_INVALID_ARG` GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. `GPIO_NUM_12`)

`uint32_t rtc_gpio_get_level (gpio_num_t gpio_num)`

Get the RTC IO input level.

Return

- 1 High level
- 0 Low level
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_set_level (gpio_num_t gpio_num, uint32_t level)`

Set the RTC IO output level.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)
- `level`: output level

`esp_err_t rtc_gpio_set_direction (gpio_num_t gpio_num, rtc_gpio_mode_t mode)`

RTC GPIO set direction.

Configure RTC GPIO direction, such as output only, input only, output and input.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)
- `mode`: GPIO direction

`esp_err_t rtc_gpio_pullup_en (gpio_num_t gpio_num)`

RTC GPIO pullup enable.

This function only works for RTC IOs. In general, call `gpio_pullup_en`, which will work both for normal GPIOs and RTC IOs.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_pulldown_en(gpio_num_t gpio_num)`
RTC GPIO pulldown enable.

This function only works for RTC IOs. In general, call `gpio_pulldown_en`, which will work both for normal GPIOs and RTC IOs.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_pullup_dis(gpio_num_t gpio_num)`
RTC GPIO pullup disable.

This function only works for RTC IOs. In general, call `gpio_pullup_dis`, which will work both for normal GPIOs and RTC IOs.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_pulldown_dis(gpio_num_t gpio_num)`
RTC GPIO pulldown disable.

This function only works for RTC IOs. In general, call `gpio_pulldown_dis`, which will work both for normal GPIOs and RTC IOs.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_hold_en(gpio_num_t gpio_num)`
Enable hold function on an RTC IO pad.

Enabling HOLD function will cause the pad to latch current values of input enable, output enable, output value, function, drive strength values. This function is useful when going into light or deep sleep mode to prevent the pin configuration from changing.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

`esp_err_t rtc_gpio_hold_dis (gpio_num_t gpio_num)`

Disable hold function on an RTC IO pad.

Disabling hold function will allow the pad receive the values of input enable, output enable, output value, function, drive strength from RTC_IO peripheral.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG GPIO is not an RTC IO

Parameters

- `gpio_num`: GPIO number (e.g. GPIO_NUM_12)

void `rtc_gpio_force_hold_dis_all ()`

Disable force hold signal for all RTC IOs.

Each RTC pad has a “force hold” input signal from the RTC controller. If this signal is set, pad latches current values of input enable, function, output enable, and other signals which come from the RTC mux. Force hold signal is enabled before going into deep sleep for pins which are used for EXT1 wakeup.

Structures

struct `rtc_gpio_desc_t`

Pin function information for a single GPIO pad’s RTC functions.

This is an internal function of the driver, and is not usually useful for external use.

Public Members

uint32_t `reg`

Register of RTC pad, or 0 if not an RTC GPIO

uint32_t `mux`

Bit mask for selecting digital pad or RTC pad

uint32_t `func`

Shift of pad function (FUN_SEL) field

uint32_t `ie`

Mask of input enable

uint32_t `pullup`

Mask of pullup enable

uint32_t `pulldown`

Mask of pulldown enable

uint32_t `slpsel`

If slpsel bit is set, slpie will be used as pad input enabled signal in sleep mode

uint32_t `slpie`

Mask of input enable in sleep mode

uint32_t `hold`

Mask of hold enable

`uint32_t hold_force`
Mask of hold_force bit for RTC IO in RTC_CNTL_HOLD_FORCE_REG

`int rtc_num`
RTC IO number, or -1 if not an RTC GPIO

Macros

`RTC_GPIO_IS_VALID_GPIO(gpio_num) rtc_gpio_is_valid_gpio(gpio_num)`

Enumerations

`enum rtc_gpio_mode_t`
Values:

`RTC_GPIO_MODE_INPUT_ONLY`
Pad output

`RTC_GPIO_MODE_OUTPUT_ONLY`
Pad input

`RTC_GPIO_MODE_INPUT_OUTPUT`
Pad pull output + input

`RTC_GPIO_MODE_DISABLED`
Pad (output + input) disable

I2C

Overview

ESP32 has two I2C controllers which can be set as master mode or slave mode.

Application Example

I2C master and slave example: [peripherals/i2c](#).

API Reference

Header File

- `driver/include/driver/i2c.h`

Functions

`esp_err_t i2c_driver_install(i2c_port_t i2c_num, i2c_mode_t mode, size_t slv_rx_buf_len, size_t slv_tx_buf_len, int intr_alloc_flags)`
I2C driver install.

Note Only slave mode will use this value, driver will ignore this value in master mode.

Note Only slave mode will use this value, driver will ignore this value in master mode.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_FAIL Driver install error

Parameters

- *i2c_num*: I2C port number
- *mode*: I2C mode(master or slave)
- *slv_rx_buf_len*: receiving buffer size for slave mode

Parameters

- *slv_tx_buf_len*: sending buffer size for slave mode

Parameters

- *intr_alloc_flags*: Flags used to allocate the interrupt. One or multiple (ORred) ESP_INTR_FLAG_* values. See esp_intr_alloc.h for more info.

esp_err_t **i2c_driver_delete** (*i2c_port_t* *i2c_num*)
I2C driver delete.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *i2c_num*: I2C port number

esp_err_t **i2c_param_config** (*i2c_port_t* *i2c_num*, const *i2c_config_t* **i2c_conf*)
I2C parameter initialization.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *i2c_num*: I2C port number
- *i2c_conf*: pointer to I2C parameter settings

esp_err_t **i2c_reset_tx_fifo** (*i2c_port_t* *i2c_num*)
reset I2C tx hardware fifo

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `i2c_num`: I2C port number

`esp_err_t i2c_reset_rx_fifo` (*`i2c_port_t i2c_num`*)
reset I2C rx fifo

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number

`esp_err_t i2c_isr_register` (*`i2c_port_t i2c_num`*, `void (*fn)`) `void *`
, `void *arg`, `int intr_alloc_flags`, *`intr_handle_t *handle`*I2C isr handler register.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number
- `fn`: isr handler function
- `arg`: parameter for isr handler function
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `handle`: handle return from `esp_intr_alloc`.

`esp_err_t i2c_isr_free` (*`intr_handle_t handle`*)
to delete and free I2C isr.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `handle`: handle of isr.

`esp_err_t i2c_set_pin` (*`i2c_port_t i2c_num`*, *`gpio_num_t sda_io_num`*, *`gpio_num_t scl_io_num`*,
`gpio_pullup_t sda_pullup_en`, *`gpio_pullup_t scl_pullup_en`*, *`i2c_mode_t mode`*)
Configure GPIO signal for I2C sck and sda.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number
- `sda_io_num`: GPIO number for I2C sda signal

- `scl_io_num`: GPIO number for I2C scl signal
- `sda_pullup_en`: Whether to enable the internal pullup for sda pin
- `scl_pullup_en`: Whether to enable the internal pullup for scl pin
- `mode`: I2C mode

`i2c_cmd_handle_t i2c_cmd_link_create()`

Create and init I2C command link.

Note Before we build I2C command link, we need to call `i2c_cmd_link_create()` to create a command link. After we finish sending the commands, we need to call `i2c_cmd_link_delete()` to release and return the resources.

Return i2c command link handler

`void i2c_cmd_link_delete(i2c_cmd_handle_t cmd_handle)`

Free I2C command link.

Note Before we build I2C command link, we need to call `i2c_cmd_link_create()` to create a command link. After we finish sending the commands, we need to call `i2c_cmd_link_delete()` to release and return the resources.

Parameters

- `cmd_handle`: I2C command handle

`esp_err_t i2c_master_start(i2c_cmd_handle_t cmd_handle)`

Queue command for I2C master to generate a start signal.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `cmd_handle`: I2C cmd link

`esp_err_t i2c_master_write_byte(i2c_cmd_handle_t cmd_handle, uint8_t data, bool ack_en)`

Queue command for I2C master to write one byte to I2C bus.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `cmd_handle`: I2C cmd link
- `data`: I2C one byte command to write to bus
- `ack_en`: enable ack check for master

`esp_err_t i2c_master_write(i2c_cmd_handle_t cmd_handle, uint8_t *data, size_t data_len, bool ack_en)`

Queue command for I2C master to write buffer to I2C bus.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `cmd_handle`: I2C cmd link
- `data`: data to send
- `data_len`: data length
- `ack_en`: enable ack check for master

`esp_err_t i2c_master_read_byte(i2c_cmd_handle_t cmd_handle, uint8_t *data, int ack)`

Queue command for I2C master to read one byte from I2C bus.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `cmd_handle`: I2C cmd link
- `data`: pointer accept the data byte
- `ack`: ack value for read command

`esp_err_t i2c_master_read(i2c_cmd_handle_t cmd_handle, uint8_t *data, size_t data_len, int ack)`

Queue command for I2C master to read data from I2C bus.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `cmd_handle`: I2C cmd link
- `data`: data buffer to accept the data from bus
- `data_len`: read data length
- `ack`: ack value for read command

`esp_err_t i2c_master_stop(i2c_cmd_handle_t cmd_handle)`

Queue command for I2C master to generate a stop signal.

Note Only call this function in I2C master mode Call `i2c_master_cmd_begin()` to send all queued commands

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- cmd_handle: I2C cmd link

esp_err_t **i2c_master_cmd_begin**(i2c_port_t i2c_num, i2c_cmd_handle_t cmd_handle, portBASE_TYPE ticks_to_wait)

I2C master send queued commands. This function will trigger sending all queued commands. The task will be blocked until all the commands have been sent out. The I2C APIs are not thread-safe, if you want to use one I2C port in different tasks, you need to take care of the multi-thread issue.

Note Only call this function in I2C master mode

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_FAIL Sending command error, slave doesn't ACK the transfer.
- ESP_ERR_INVALID_STATE I2C driver not installed or not in master mode.
- ESP_ERR_TIMEOUT Operation timeout because the bus is busy.

Parameters

- i2c_num: I2C port number
- cmd_handle: I2C command handler
- ticks_to_wait: maximum wait ticks.

int **i2c_slave_write_buffer**(i2c_port_t i2c_num, uint8_t *data, int size, portBASE_TYPE ticks_to_wait)

I2C slave write data to internal ringbuffer, when tx fifo empty, isr will fill the hardware fifo from the internal ringbuffer.

Note Only call this function in I2C slave mode

Return

- ESP_FAIL(-1) Parameter error
- Others(>=0) The number of data bytes that pushed to the I2C slave buffer.

Parameters

- i2c_num: I2C port number
- data: data pointer to write into internal buffer
- size: data size
- ticks_to_wait: Maximum waiting ticks

int **i2c_slave_read_buffer**(i2c_port_t i2c_num, uint8_t *data, size_t max_size, portBASE_TYPE ticks_to_wait)

I2C slave read data from internal buffer. When I2C slave receive data, isr will copy received data from hardware rx fifo to internal ringbuffer. Then users can read from internal ringbuffer.

Note Only call this function in I2C slave mode

Return

- ESP_FAIL(-1) Parameter error
- Others(>=0) The number of data bytes that read from I2C slave buffer.

Parameters

- *i2c_num*: I2C port number
- *data*: data pointer to write into internal buffer
- *max_size*: Maximum data size to read
- *ticks_to_wait*: Maximum waiting ticks

`esp_err_t i2c_set_period(i2c_port_t i2c_num, int high_period, int low_period)`
set I2C master clock period

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *i2c_num*: I2C port number
- *high_period*: clock cycle number during SCL is high level, *high_period* is a 14 bit value
- *low_period*: clock cycle number during SCL is low level, *low_period* is a 14 bit value

`esp_err_t i2c_get_period(i2c_port_t i2c_num, int *high_period, int *low_period)`
get I2C master clock period

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *i2c_num*: I2C port number
- *high_period*: pointer to get clock cycle number during SCL is high level, will get a 14 bit value
- *low_period*: pointer to get clock cycle number during SCL is low level, will get a 14 bit value

`esp_err_t i2c_set_start_timing(i2c_port_t i2c_num, int setup_time, int hold_time)`
set I2C master start signal timing

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *i2c_num*: I2C port number

- `setup_time`: clock number between the falling-edge of SDA and rising-edge of SCL for start mark, it's a 10-bit value.
- `hold_time`: clock num between the falling-edge of SDA and falling-edge of SCL for start mark, it's a 10-bit value.

`esp_err_t i2c_get_start_timing(i2c_port_t i2c_num, int *setup_time, int *hold_time)`
get I2C master start signal timing

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number
- `setup_time`: pointer to get setup time
- `hold_time`: pointer to get hold time

`esp_err_t i2c_set_stop_timing(i2c_port_t i2c_num, int setup_time, int hold_time)`
set I2C master stop signal timing

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number
- `setup_time`: clock num between the rising-edge of SCL and the rising-edge of SDA, it's a 10-bit value.
- `hold_time`: clock number after the STOP bit's rising-edge, it's a 14-bit value.

`esp_err_t i2c_get_stop_timing(i2c_port_t i2c_num, int *setup_time, int *hold_time)`
get I2C master stop signal timing

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `i2c_num`: I2C port number
- `setup_time`: pointer to get setup time.
- `hold_time`: pointer to get hold time.

`esp_err_t i2c_set_data_timing(i2c_port_t i2c_num, int sample_time, int hold_time)`
set I2C data signal timing

Return

- `ESP_OK` Success

- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `i2c_num`: I2C port number
- `sample_time`: clock number I2C used to sample data on SDA after the rising-edge of SCL, it's a 10-bit value
- `hold_time`: clock number I2C used to hold the data after the falling-edge of SCL, it's a 10-bit value

`esp_err_t i2c_get_data_timing(i2c_port_t i2c_num, int *sample_time, int *hold_time)`
get I2C data signal timing

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `i2c_num`: I2C port number
- `sample_time`: pointer to get sample time
- `hold_time`: pointer to get hold time

`esp_err_t i2c_set_data_mode(i2c_port_t i2c_num, i2c_trans_mode_t tx_trans_mode, i2c_trans_mode_t rx_trans_mode)`
set I2C data transfer mode

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `i2c_num`: I2C port number
- `tx_trans_mode`: I2C sending data mode
- `rx_trans_mode`: I2C receiving data mode

`esp_err_t i2c_get_data_mode(i2c_port_t i2c_num, i2c_trans_mode_t *tx_trans_mode, i2c_trans_mode_t *rx_trans_mode)`
get I2C data transfer mode

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `i2c_num`: I2C port number
- `tx_trans_mode`: pointer to get I2C sending data mode
- `rx_trans_mode`: pointer to get I2C receiving data mode

Structures

struct i2c_config_t
I2C initialization parameters.

Public Members

i2c_mode_t **mode**
I2C mode

gpio_num_t **sda_io_num**
GPIO number for I2C sda signal

gpio_pullup_t **sda_pullup_en**
Internal GPIO pull mode for I2C sda signal

gpio_num_t **scl_io_num**
GPIO number for I2C scl signal

gpio_pullup_t **scl_pullup_en**
Internal GPIO pull mode for I2C scl signal

uint32_t **clk_speed**
I2C clock frequency for master mode, (no higher than 1MHz for now)

uint8_t **addr_10bit_en**
I2C 10bit address mode enable for slave mode

uint16_t **slave_addr**
I2C address for slave mode

Macros

I2C_APB_CLK_FREQ APB_CLK_FREQ
I2C source clock is APB clock, 80MHz

I2C_FIFO_LEN (32)
I2C hardware fifo length

Type Definitions

typedef void *i2c_cmd_handle_t
I2C command handle

Enumerations

enum i2c_mode_t
Values:

- I2C_MODE_SLAVE** = 0
I2C slave mode
- I2C_MODE_MASTER**
I2C master mode

I2C_MODE_MAX

enum i2c_rw_t

Values:

I2C_MASTER_WRITE = 0

I2C write data

I2C_MASTER_READ

I2C read data

enum i2c_trans_mode_t

Values:

I2C_DATA_MODE_MSB_FIRST = 0

I2C data msb first

I2C_DATA_MODE_LSB_FIRST = 1

I2C data lsb first

I2C_DATA_MODE_MAX

enum i2c_opmode_t

Values:

I2C_CMD_RESTART = 0

I2C restart command

I2C_CMD_WRITE

I2C write command

I2C_CMD_READ

I2C read command

I2C_CMD_STOP

I2C stop command

I2C_CMD_END

I2C end command

enum i2c_port_t

Values:

I2C_NUM_0 = 0

I2C port 0

I2C_NUM_1

I2C port 1

I2C_NUM_MAX

enum i2c_addr_mode_t

Values:

I2C_ADDR_BIT_7 = 0

I2C 7bit address for slave mode

I2C_ADDR_BIT_10

I2C 10bit address for slave mode

I2C_ADDR_BIT_MAX

I2S

Overview

ESP32 contains two I2S peripherals. These peripherals can be configured to input and output sample data via the I2S driver.

The I2S peripheral supports DMA meaning it can stream sample data without requiring each sample to be read or written by the CPU.

I2S output can also be routed directly to the Digital/Analog Converter output channels (GPIO 25 & GPIO 26) to produce analog output directly, rather than via an external I2S codec.

Application Example

A full I2S example is available in esp-idf: [peripherals/i2s](#).

Short example of I2S configuration:

```
#include "driver/i2s.h"
#include "freertos/queue.h"

static const int i2s_num = 0; // i2s port number

static const i2s_config_t i2s_config = {
    .mode = I2S_MODE_MASTER | I2S_MODE_TX,
    .sample_rate = 44100,
    .bits_per_sample = 16,
    .channel_format = I2S_CHANNEL_FMT_RIGHT_LEFT,
    .communication_format = I2S_COMM_FORMAT_I2S | I2S_COMM_FORMAT_I2S_MSB,
    .intr_alloc_flags = ESP_INTR_FLAG_LEVEL1, // high interrupt priority
    .dma_buf_count = 8,
    .dma_buf_len = 64
};

static const i2s_pin_config_t pin_config = {
    .bck_io_num = 26,
    .ws_io_num = 25,
    .data_out_num = 22,
    .data_in_num = I2S_PIN_NO_CHANGE
};

...

i2s_driver_install(i2s_num, &i2s_config, 0, NULL); //install and start i2s_
↪driver

i2s_set_pin(i2s_num, &pin_config);

i2s_set_sample_rates(i2s_num, 22050); //set sample rates

i2s_driver_uninstall(i2s_num); //stop & destroy i2s driver
```

Short example configuring I2S to use internal DAC for analog output:

```
#include "driver/i2s.h"
#include "freertos/queue.h"
```

```

static const int i2s_num = 0; // i2s port number

static const i2s_config_t i2s_config = {
    .mode = I2S_MODE_MASTER | I2S_MODE_TX | I2S_MODE_DAC_BUILT_IN,
    .sample_rate = 44100,
    .bits_per_sample = 16, /* the DAC module will only take the 8bits from MSB */
    .channel_format = I2S_CHANNEL_FMT_RIGHT_LEFT,
    .communication_format = I2S_COMM_FORMAT_I2S_MSB,
    .intr_alloc_flags = ESP_INTR_FLAG_LEVEL1, // high interrupt priority
    .dma_buf_count = 8,
    .dma_buf_len = 64
};

...

    i2s_driver_install(i2s_num, &i2s_config, 0, NULL); //install and start i2s_
↪driver

    i2s_set_pin(i2s_num, NULL); //for internal DAC, this will enable both of the_
↪internal channels

    //You can call i2s_set_dac_mode to set built-in DAC output mode.
    //i2s_set_dac_mode(I2S_DAC_CHANNEL_BOTH_EN);

    i2s_set_sample_rates(i2s_num, 22050); //set sample rates

    i2s_driver_uninstall(i2s_num); //stop & destroy i2s driver

```

API Reference

Header File

- driver/include/driver/i2s.h

Functions

esp_err_t **i2s_set_pin**(i2s_port_t i2s_num, const i2s_pin_config_t *pin)

Set I2S pin number.

Inside the pin configuration structure, set I2S_PIN_NO_CHANGE for any pin where the current configuration should not be changed.

Note The I2S peripheral output signals can be connected to multiple GPIO pads. However, the I2S peripheral input signal can only be connected to one GPIO pad.

Parameters

- i2s_num: I2S_NUM_0 or I2S_NUM_1
- pin: I2S Pin structure, or NULL to set 2-channel 8-bit internal DAC pin configuration (GPIO25 & GPIO26)

Note if *pin is set as NULL, this function will initialize both of the built-in DAC channels by default. if you don't want this to happen and you want to initialize only one of the DAC channels, you can call i2s_set_dac_mode instead.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

esp_err_t **i2s_set_dac_mode** (*i2s_dac_mode_t* dac_mode)

Set I2S dac mode, I2S built-in DAC is disabled by default.

Note Built-in DAC functions are only supported on I2S0 for current ESP32 chip. If either of the built-in DAC channel are enabled, the other one can not be used as RTC DAC function at the same time.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- dac_mode: DAC mode configurations - see *i2s_dac_mode_t*

esp_err_t **i2s_driver_install** (*i2s_port_t* i2s_num, const *i2s_config_t* *i2s_config, int queue_size, void *i2s_queue)

Install and start I2S driver.

This function must be called before any I2S driver read/write operations.

Parameters

- i2s_num: I2S_NUM_0, I2S_NUM_1
- i2s_config: I2S configurations - see *i2s_config_t* struct
- queue_size: I2S event queue size/depth.
- i2s_queue: I2S event queue handle, if set NULL, driver will not use an event queue.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

esp_err_t **i2s_driver_uninstall** (*i2s_port_t* i2s_num)

Uninstall I2S driver.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- i2s_num: I2S_NUM_0, I2S_NUM_1

int **i2s_write_bytes** (*i2s_port_t* i2s_num, const char *src, size_t size, TickType_t ticks_to_wait)

Write data to I2S DMA transmit buffer.

Format of the data in source buffer is determined by the I2S configuration (see *i2s_config_t*).

Parameters

- i2s_num: I2S_NUM_0, I2S_NUM_1

- `src`: Source address to write from
- `size`: Size of data in bytes
- `ticks_to_wait`: TX buffer wait timeout in RTOS ticks. If this many ticks pass without space becoming available in the DMA transmit buffer, then the function will return (note that if the data is written to the DMA buffer in pieces, the overall operation may still take longer than this timeout.) Pass `portMAX_DELAY` for no timeout.

Return Number of bytes written, or `ESP_FAIL` (-1) for parameter error. If a timeout occurred, bytes written will be less than total size.

int **`i2s_read_bytes`** (*`i2s_port_t`* `i2s_num`, char **`dest`*, *`size_t`* `size`, *`TickType_t`* `ticks_to_wait`)

Read data from I2S DMA receive buffer.

Format of the data in source buffer is determined by the I2S configuration (see *`i2s_config_t`*).

Parameters

- `i2s_num`: `I2S_NUM_0`, `I2S_NUM_1`
- `dest`: Destination address to read into
- `size`: Size of data in bytes
- `ticks_to_wait`: RX buffer wait timeout in RTOS ticks. If this many ticks pass without bytes becoming available in the DMA receive buffer, then the function will return (note that if data is read from the DMA buffer in pieces, the overall operation may still take longer than this timeout.) Pass `portMAX_DELAY` for no timeout.

Return Number of bytes read, or `ESP_FAIL` (-1) for parameter error. If a timeout occurred, bytes read will be less than total size.

int **`i2s_push_sample`** (*`i2s_port_t`* `i2s_num`, **const** char **`sample`*, *`TickType_t`* `ticks_to_wait`)

Push (write) a single sample to the I2S DMA TX buffer.

Size of the sample is determined by the `channel_format` (mono or stereo) & `bits_per_sample` configuration (see *`i2s_config_t`*).

Return Number of bytes successfully pushed to DMA buffer, or `ESP_FAIL` (-1) for parameter error. Will be either zero or the size of configured sample buffer.

Parameters

- `i2s_num`: `I2S_NUM_0`, `I2S_NUM_1`
- `sample`: Pointer to buffer containing sample to write. Size of buffer (in bytes) = (number of channels) * `bits_per_sample` / 8.
- `ticks_to_wait`: Push timeout in RTOS ticks. If space is not available in the DMA TX buffer within this period, no data is written and function returns 0.

int **`i2s_pop_sample`** (*`i2s_port_t`* `i2s_num`, char **`sample`*, *`TickType_t`* `ticks_to_wait`)

Pop (read) a single sample from the I2S DMA RX buffer.

Size of the sample is determined by the `channel_format` (mono or stereo) & `bits_per_sample` configuration (see *`i2s_config_t`*).

Return Number of bytes successfully read from DMA buffer, or `ESP_FAIL` (-1) for parameter error. Byte count will be either zero or the size of the configured sample buffer.

Parameters

- `i2s_num`: I2S_NUM_0, I2S_NUM_1
- `sample`: Buffer sample data will be read into. Size of buffer (in bytes) = (number of channels) * `bits_per_sample` / 8.
- `ticks_to_wait`: Pop timeout in RTOS ticks. If a sample is not available in the DMA buffer within this period, no data is read and function returns zero.

`esp_err_t i2s_set_sample_rates` (*i2s_port_t* *i2s_num*, `uint32_t` *rate*)

Set sample rate used for I2S RX and TX.

The bit clock rate is determined by the sample rate and *i2s_config_t* configuration parameters (number of channels, `bits_per_sample`).

`bit_clock` = `rate` * (number of channels) * `bits_per_sample`

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `i2s_num`: I2S_NUM_0, I2S_NUM_1
- `rate`: I2S sample rate (ex: 8000, 44100...)

`esp_err_t i2s_stop` (*i2s_port_t* *i2s_num*)

Stop I2S driver.

Disables I2S TX/RX, until `i2s_start()` is called.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `i2s_num`: I2S_NUM_0, I2S_NUM_1

`esp_err_t i2s_start` (*i2s_port_t* *i2s_num*)

Start I2S driver.

It is not necessary to call this function after `i2s_driver_install()` (it is started automatically), however it is necessary to call it after `i2s_stop()`.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `i2s_num`: I2S_NUM_0, I2S_NUM_1

`esp_err_t i2s_zero_dma_buffer` (*i2s_port_t* *i2s_num*)

Zero the contents of the TX DMA buffer.

Pushes zero-byte samples into the TX DMA buffer, until it is full.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *i2s_num*: I2S_NUM_0, I2S_NUM_1

`esp_err_t i2s_set_clk` (*i2s_port_t* *i2s_num*, `uint32_t` *rate*, *i2s_bits_per_sample_t* *bits*, *i2s_channel_t* *ch*)

Set clock & bit width used for I2S RX and TX.

Similar to `i2s_set_sample_rates()`, but also sets bit width.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *i2s_num*: I2S_NUM_0, I2S_NUM_1
- *rate*: I2S sample rate (ex: 8000, 44100...)
- *bits*: I2S bit width (I2S_BITS_PER_SAMPLE_16BIT, I2S_BITS_PER_SAMPLE_24BIT, I2S_BITS_PER_SAMPLE_32BIT)
- *ch*: I2S channel, (I2S_CHANNEL_MONO, I2S_CHANNEL_STEREO)

Structures

`struct i2s_config_t`

I2S configuration parameters for `i2s_param_config` function.

Public Members

i2s_mode_t **mode**

I2S work mode

`int` **sample_rate**

I2S sample rate

i2s_bits_per_sample_t **bits_per_sample**

I2S bits per sample

i2s_channel_fmt_t **channel_format**

I2S channel format

i2s_comm_format_t **communication_format**

I2S communication format

int **intr_alloc_flags**

Flags used to allocate the interrupt. One or multiple (ORred) ESP_INTR_FLAG_* values. See esp_intr_alloc.h for more info

int **dma_buf_count**

I2S DMA Buffer Count

int **dma_buf_len**

I2S DMA Buffer Length

struct i2s_event_t

Event structure used in I2S event queue.

Public Members

i2s_event_type_t **type**

I2S event type

size_t **size**

I2S data size for I2S_DATA event

struct i2s_pin_config_t

I2S pin number for i2s_set_pin.

Public Members

int **bck_io_num**

BCK in out pin

int **ws_io_num**

WS in out pin

int **data_out_num**

DATA out pin

int **data_in_num**

DATA in pin

Macros

I2S_PIN_NO_CHANGE (-1)

Use in *i2s_pin_config_t* for pins which should not be changed

Type Definitions

typedef intr_handle_t i2s_isr_handle_t

Enumerations

enum i2s_bits_per_sample_t

I2S bit width per sample.

Values:

I2S_BITS_PER_SAMPLE_8BIT = 8

I2S bits per sample: 8-bits

I2S_BITS_PER_SAMPLE_16BIT = 16

I2S bits per sample: 16-bits

I2S_BITS_PER_SAMPLE_24BIT = 24

I2S bits per sample: 24-bits

I2S_BITS_PER_SAMPLE_32BIT = 32

I2S bits per sample: 32-bits

enum i2s_channel_t

I2S channel.

Values:

I2S_CHANNEL_MONO = 1

I2S 1 channel (mono)

I2S_CHANNEL_STEREO = 2

I2S 2 channel (stereo)

enum i2s_comm_format_t

I2S communication standard format.

Values:

I2S_COMM_FORMAT_I2S = 0x01

I2S communication format I2S

I2S_COMM_FORMAT_I2S_MSB = 0x02

I2S format MSB

I2S_COMM_FORMAT_I2S_LSB = 0x04

I2S format LSB

I2S_COMM_FORMAT_PCM = 0x08

I2S communication format PCM

I2S_COMM_FORMAT_PCM_SHORT = 0x10

PCM Short

I2S_COMM_FORMAT_PCM_LONG = 0x20

PCM Long

enum i2s_channel_fmt_t

I2S channel format type.

Values:

I2S_CHANNEL_FMT_RIGHT_LEFT = 0x00

I2S_CHANNEL_FMT_ALL_RIGHT

I2S_CHANNEL_FMT_ALL_LEFT

I2S_CHANNEL_FMT_ONLY_RIGHT

I2S_CHANNEL_FMT_ONLY_LEFT

enum pdm_sample_rate_ratio_t

PDM sample rate ratio, measured in Hz.

Values:

PDM_SAMPLE_RATE_RATIO_64

PDM_SAMPLE_RATE_RATIO_128

enum pdm_pcm_conv_t
PDM PCM convter enable/disable.

Values:

PDM_PCM_CONV_ENABLE

PDM_PCM_CONV_DISABLE

enum i2s_port_t
I2S Peripheral, 0 & 1.

Values:

I2S_NUM_0 = 0x0
I2S 0

I2S_NUM_1 = 0x1
I2S 1

I2S_NUM_MAX

enum i2s_mode_t
I2S Mode, default is I2S_MODE_MASTER | I2S_MODE_TX.

Note PDM and built-in DAC functions are only supported on I2S0 for current ESP32 chip.

Values:

I2S_MODE_MASTER = 1

I2S_MODE_SLAVE = 2

I2S_MODE_TX = 4

I2S_MODE_RX = 8

I2S_MODE_DAC_BUILT_IN = 16
Output I2S data to built-in DAC, no matter the data format is 16bit or 32 bit, the DAC module will only take the 8bits from MSB

I2S_MODE_PDM = 64

enum i2s_event_type_t
I2S event types.

Values:

I2S_EVENT_DMA_ERROR

I2S_EVENT_TX_DONE
I2S DMA finish sent 1 buffer

I2S_EVENT_RX_DONE
I2S DMA finish received 1 buffer

I2S_EVENT_MAX
I2S event max index

enum i2s_dac_mode_t
I2S DAC mode for i2s_set_dac_mode.

Note PDM and built-in DAC functions are only supported on I2S0 for current ESP32 chip.

Values:

I2S_DAC_CHANNEL_DISABLE = 0
Disable I2S built-in DAC signals

I2S_DAC_CHANNEL_RIGHT_EN = 1
Enable I2S built-in DAC right channel, maps to DAC channel 1 on GPIO25

I2S_DAC_CHANNEL_LEFT_EN = 2
Enable I2S built-in DAC left channel, maps to DAC channel 2 on GPIO26

I2S_DAC_CHANNEL_BOTH_EN = 0x3
Enable both of the I2S built-in DAC channels.

I2S_DAC_CHANNEL_MAX = 0x4
I2S built-in DAC mode max index

LED Control

Overview

The LED control module is primarily designed to control the intensity of LEDs, although it can be used to generate PWM signals for other purposes as well. It has 16 channels which can generate independent waveforms that can be used to drive e.g. RGB LED devices. For maximum flexibility, the high-speed as well as the low-speed channels can be driven from one of four high-speed/low-speed timers. The PWM controller also has the ability to automatically increase or decrease the duty cycle gradually, allowing for fades without any processor interference.

Application Example

LEDC change duty cycle and fading control example: [peripherals/ledc](#).

API Reference

Header File

- [driver/include/driver/ledc.h](#)

Functions

`esp_err_t ledc_channel_config(const ledc_channel_config_t *ledc_conf)`

LEDC channel configuration Configure LEDC channel with the given channel/output gpio_num/interrupt/source timer/frequency(Hz)/LEDC depth.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `ledc_conf`: Pointer of LEDC channel configure struct

`esp_err_t ledc_timer_config (const ledc_timer_config_t *timer_conf)`

LEDC timer configuration Configure LEDC timer with the given source timer/frequency(Hz)/bit_num.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_FAIL Can not find a proper pre-divider number base on the given frequency and the current bit_num.

Parameters

- timer_conf: Pointer of LEDC timer configure struct

`esp_err_t ledc_update_duty (ledc_mode_t speed_mode, ledc_channel_t channel)`

LEDC update channel parameters Call this function to activate the LEDC updated parameters. After ledc_set_duty, ledc_set_fade, we need to call this function to update the settings.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- speed_mode: Select the LEDC speed_mode, high-speed mode and low-speed mode,
- channel: LEDC channel(0-7), select from ledc_channel_t

`esp_err_t ledc_stop (ledc_mode_t speed_mode, ledc_channel_t channel, uint32_t idle_level)`

LEDC stop. Disable LEDC output, and set idle level.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- speed_mode: Select the LEDC speed_mode, high-speed mode and low-speed mode
- channel: LEDC channel(0-7), select from ledc_channel_t
- idle_level: Set output idle level after LEDC stops.

`esp_err_t ledc_set_freq (ledc_mode_t speed_mode, ledc_timer_t timer_num, uint32_t freq_hz)`

LEDC set channel frequency(Hz)

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_FAIL Can not find a proper pre-divider number base on the given frequency and the current bit_num.

Parameters

- speed_mode: Select the LEDC speed_mode, high-speed mode and low-speed mode

- `timer_num`: LEDC timer index(0-3), select from `ledc_timer_t`
- `freq_hz`: Set the LEDC frequency

`uint32_t ledc_get_freq` (*ledc_mode_t speed_mode, ledc_timer_t timer_num*)
LEDC get channel frequency(Hz)

Return

- 0 error
- Others Current LEDC frequency

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `timer_num`: LEDC timer index(0-3), select from `ledc_timer_t`

`esp_err_t ledc_set_duty` (*ledc_mode_t speed_mode, ledc_channel_t channel, uint32_t duty*)
LEDC set duty Only after calling `ledc_update_duty` will the duty update.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `channel`: LEDC channel(0-7), select from `ledc_channel_t`
- `duty`: Set the LEDC duty, the duty range is $[0, (2^{**}bit_num) - 1]$

`int ledc_get_duty` (*ledc_mode_t speed_mode, ledc_channel_t channel*)
LEDC get duty.

Return

- (-1) parameter error
- Others Current LEDC duty

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `channel`: LEDC channel(0-7), select from `ledc_channel_t`

`esp_err_t ledc_set_fade` (*ledc_mode_t speed_mode, ledc_channel_t channel, uint32_t duty, ledc_duty_direction_t gradule_direction, uint32_t step_num, uint32_t duty_cyle_num, uint32_t duty_scale*)

LEDC set gradient Set LEDC gradient, After the function calls the `ledc_update_duty` function, the function can take effect.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `channel`: LEDC channel(0-7), select from `ledc_channel_t`
- `duty`: Set the start of the gradient duty, the duty range is $[0, (2^{**bit_num}) - 1]$
- `gradule_direction`: Set the direction of the gradient
- `step_num`: Set the number of the gradient
- `duty_cyle_num`: Set how many LEDC tick each time the gradient lasts
- `duty_scale`: Set gradient change amplitude

`esp_err_t ledc_isr_register` (`void (*fn)`) `void *`
`, void *arg, int intr_alloc_flags, ledc_isr_handle_t *handle` Register LEDC interrupt handler, the handler is an ISR. The handler will be attached to the same CPU core that this function is running on.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Function pointer error.

Parameters

- `fn`: Interrupt handler function.
- `arg`: User-supplied argument passed to the handler function.
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `arg`: Parameter for handler function
- `handle`: Pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

`esp_err_t ledc_timer_set` (`ledc_mode_t speed_mode, ledc_timer_t timer_sel, uint32_t div_num, uint32_t bit_num, ledc_clk_src_t clk_src`)
 Configure LEDC settings.

Return

- (-1) Parameter error
- Other Current LEDC duty

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `timer_sel`: Timer index(0-3), there are 4 timers in LEDC module
- `div_num`: Timer clock divide number, the timer clock is divided from the selected clock source
- `bit_num`: The count number of one period, counter range is $0 \sim ((2^{** bit_num}) - 1)$
- `clk_src`: Select LEDC source clock.

`esp_err_t ledc_timer_rst` (`ledc_mode_t speed_mode, uint32_t timer_sel`)
 Reset LEDC timer.

Return

- `ESP_ERR_INVALID_ARG` Parameter error

- ESP_OK Success

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `timer_sel`: LEDC timer index(0-3), select from `ledc_timer_t`

`esp_err_t ledc_timer_pause` (*ledc_mode_t speed_mode*, *uint32_t timer_sel*)
Pause LEDC timer counter.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `timer_sel`: LEDC timer index(0-3), select from `ledc_timer_t`

`esp_err_t ledc_timer_resume` (*ledc_mode_t speed_mode*, *uint32_t timer_sel*)
Resume LEDC timer.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `timer_sel`: LEDC timer index(0-3), select from `ledc_timer_t`

`esp_err_t ledc_bind_channel_timer` (*ledc_mode_t speed_mode*, *uint32_t channel*, *uint32_t timer_idx*)
Bind LEDC channel with the selected timer.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `channel`: LEDC channel index(0-7), select from `ledc_channel_t`
- `timer_idx`: LEDC timer index(0-3), select from `ledc_timer_t`

`esp_err_t ledc_set_fade_with_step` (*ledc_mode_t speed_mode*, *ledc_channel_t channel*, *int target_duty*, *int scale*, *int cycle_num*)
Set LEDC fade function. Should call `ledc_fade_func_install()` before calling this function. Call `ledc_fade_start()` after this to start fading.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

- ESP_ERR_INVALID_STATE Fade function not installed.
- ESP_FAIL Fade function init error

Parameters

- speed_mode: Select the LEDC speed_mode, high-speed mode and low-speed mode,
- channel: LEDC channel index(0-7), select from ledc_channel_t
- target_duty: Target duty of fading.(0 - (2 ** bit_num - 1))
- scale: Controls the increase or decrease step scale.
- cycle_num: increase or decrease the duty every cycle_num cycles

esp_err_t **ledc_set_fade_with_time**(*ledc_mode_t speed_mode, ledc_channel_t channel, int target_duty, int max_fade_time_ms*)

Set LEDC fade function, with a limited time. Should call ledc_fade_func_install() before calling this function. Call ledc_fade_start() after this to start fading.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success
- ESP_ERR_INVALID_STATE Fade function not installed.
- ESP_FAIL Fade function init error

Parameters

- speed_mode: Select the LEDC speed_mode, high-speed mode and low-speed mode,
- channel: LEDC channel index(0-7), select from ledc_channel_t
- target_duty: Target duty of fading.(0 - (2 ** bit_num - 1))
- max_fade_time_ms: The maximum time of the fading (ms).

esp_err_t **ledc_fade_func_install**(int *intr_alloc_flags*)

Install ledc fade function. This function will occupy interrupt of LEDC module.

Return

- ESP_OK Success
- ESP_ERR_INVALID_STATE Fade function already installed.

Parameters

- intr_alloc_flags: Flags used to allocate the interrupt. One or multiple (ORred) ESP_INTR_FLAG_* values. See esp_intr_alloc.h for more info.

void **ledc_fade_func_uninstall**()

Uninstall LEDC fade function.

esp_err_t **ledc_fade_start**(*ledc_mode_t speed_mode, ledc_channel_t channel, ledc_fade_mode_t wait_done*)

Start LEDC fading.

Return

- ESP_OK Success

- `ESP_ERR_INVALID_STATE` Fade function not installed.
- `ESP_ERR_INVALID_ARG` Parameter error.

Parameters

- `speed_mode`: Select the LEDC `speed_mode`, high-speed mode and low-speed mode
- `channel`: LEDC channel number
- `wait_done`: Whether to block until fading done.

Structures

`struct ledc_channel_config_t`

Configuration parameters of LEDC channel for `ledc_channel_config` function.

Public Members

`int gpio_num`

the LEDC output `gpio_num`, if you want to use `gpio16`, `gpio_num = 16`

`ledc_mode_t speed_mode`

LEDC speed `speed_mode`, high-speed mode or low-speed mode

`ledc_channel_t channel`

LEDC channel(0 - 7)

`ledc_intr_type_t intr_type`

configure interrupt, Fade interrupt enable or Fade interrupt disable

`ledc_timer_t timer_sel`

Select the timer source of channel (0 - 3)

`uint32_t duty`

LEDC channel duty, the duty range is $[0, (2^{**}bit_num) - 1]$,

`struct ledc_timer_config_t`

Configuration parameters of LEDC Timer `timer` for `ledc_timer_config` function.

Public Members

`ledc_mode_t speed_mode`

LEDC speed `speed_mode`, high-speed mode or low-speed mode

`ledc_timer_bit_t bit_num`

LEDC channel duty depth

`ledc_timer_t timer_num`

The timer source of channel (0 - 3)

`uint32_t freq_hz`

LEDC timer frequency(Hz)

Macros

LEDC_APB_CLK_HZ (APB_CLK_FREQ)

LEDC_REF_CLK_HZ (1*1000000)

Type Definitions

typedef *intr_handle_t* **ledc_isr_handle_t**

Enumerations

enum **ledc_mode_t**

Values:

LEDC_HIGH_SPEED_MODE = 0
LEDC high speed speed_mode

LEDC_LOW_SPEED_MODE
LEDC low speed speed_mode

LEDC_SPEED_MODE_MAX
LEDC speed limit

enum **ledc_intr_type_t**

Values:

LEDC_INTR_DISABLE = 0
Disable LEDC interrupt

LEDC_INTR_FADE_END
Enable LEDC interrupt

enum **ledc_duty_direction_t**

Values:

LEDC_DUTY_DIR_DECREASE = 0
LEDC duty decrease direction

LEDC_DUTY_DIR_INCREASE = 1
LEDC duty increase direction

enum **ledc_clk_src_t**

Values:

LEDC_REF_TICK = 0
LEDC timer clock divided from reference tick(1Mhz)

LEDC_APB_CLK
LEDC timer clock divided from APB clock(80Mhz)

enum **ledc_timer_t**

Values:

LEDC_TIMER_0 = 0
LEDC source timer TIMER0

LEDC_TIMER_1
LEDC source timer TIMER1

LEDC_TIMER_2
LEDC source timer TIMER2

LEDC_TIMER_3
LEDC source timer TIMER3

enum ledc_channel_t

Values:

LEDC_CHANNEL_0 = 0
LEDC channel 0

LEDC_CHANNEL_1
LEDC channel 1

LEDC_CHANNEL_2
LEDC channel 2

LEDC_CHANNEL_3
LEDC channel 3

LEDC_CHANNEL_4
LEDC channel 4

LEDC_CHANNEL_5
LEDC channel 5

LEDC_CHANNEL_6
LEDC channel 6

LEDC_CHANNEL_7
LEDC channel 7

LEDC_CHANNEL_MAX

enum ledc_timer_bit_t

Values:

LEDC_TIMER_10_BIT = 10
LEDC PWM depth 10Bit

LEDC_TIMER_11_BIT = 11
LEDC PWM depth 11Bit

LEDC_TIMER_12_BIT = 12
LEDC PWM depth 12Bit

LEDC_TIMER_13_BIT = 13
LEDC PWM depth 13Bit

LEDC_TIMER_14_BIT = 14
LEDC PWM depth 14Bit

LEDC_TIMER_15_BIT = 15
LEDC PWM depth 15Bit

enum ledc_fade_mode_t

Values:

LEDC_FADE_NO_WAIT = 0
LEDC fade function will return immediately

LEDC_FADE_WAIT_DONE
LEDC fade function will block until fading to the target duty

LEDC_FADE_MAX


MCPWM


Overview

ESP32 has two MCPWM units which can be used to control different motors.

Block Diagram

The block diagram of MCPWM unit is as shown.

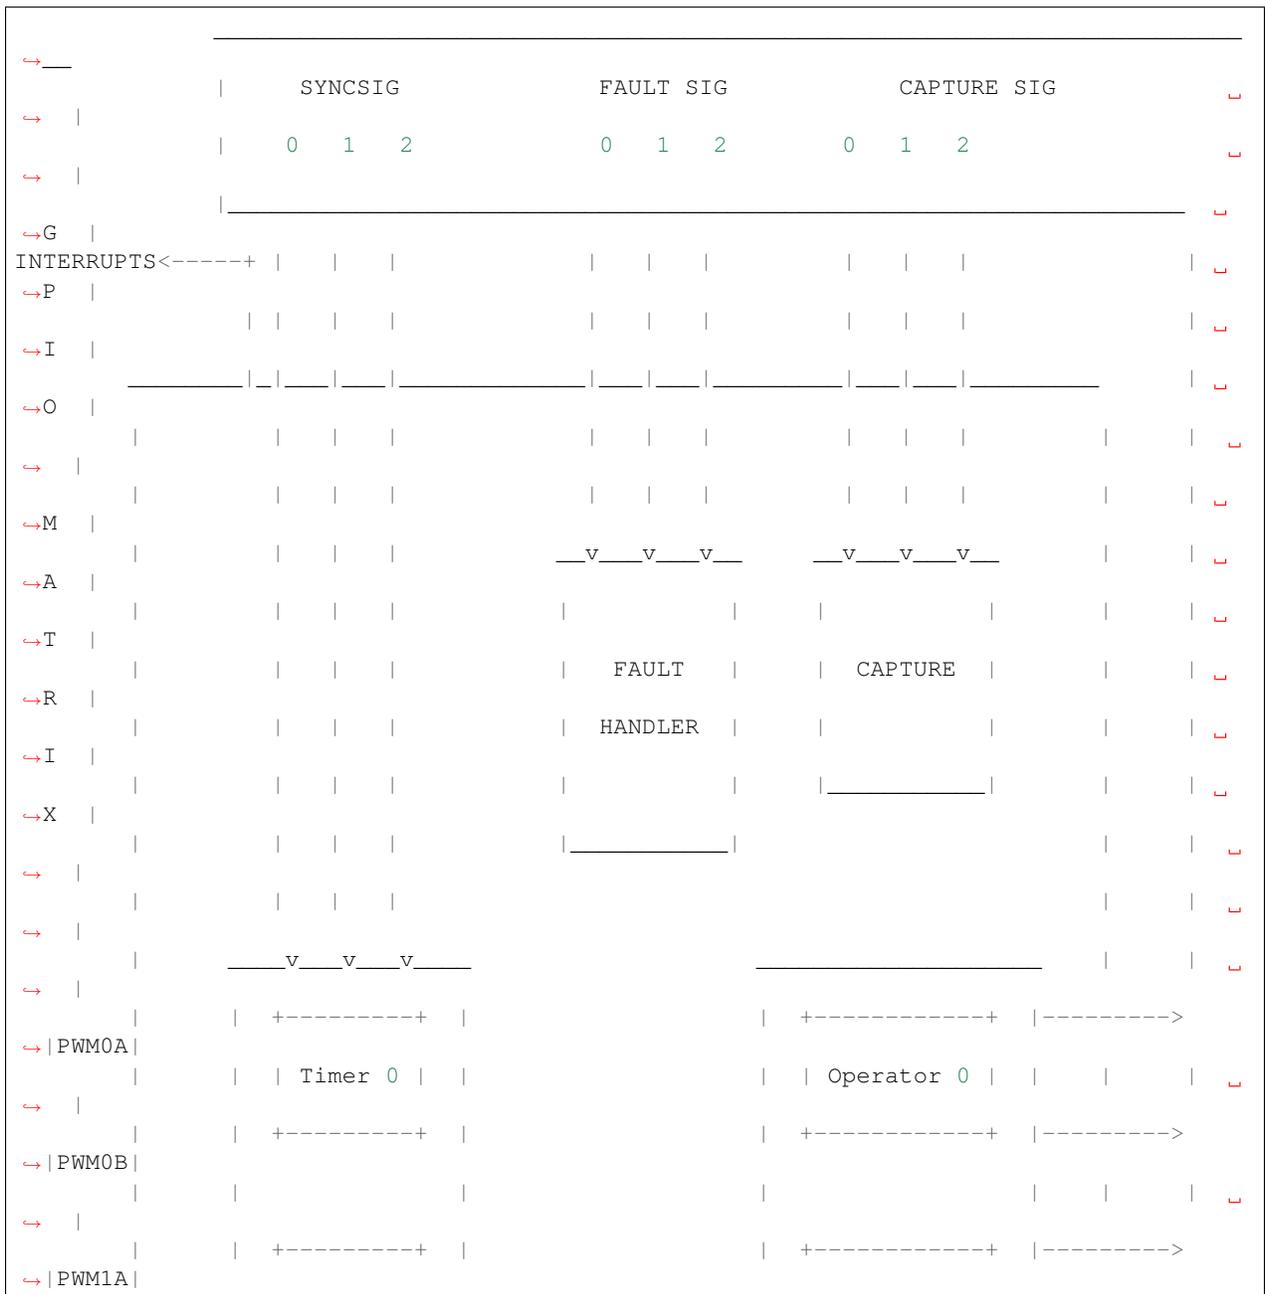

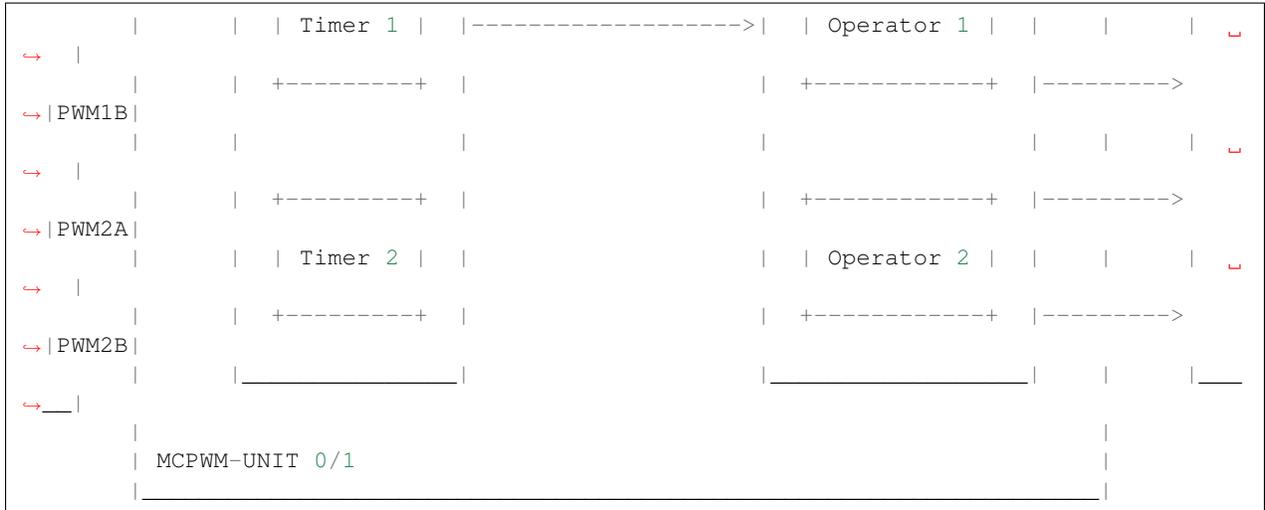

Application Example

Examples of using MCPWM for motor control: [peripherals/mcpwm](#).

API Reference

Header File

- [driver/include/driver/mcpwm.h](#)

Functions

`esp_err_t mcpwm_gpio_init(mcpwm_unit_t mcpwm_num, mcpwm_io_signals_t io_signal, int gpio_num)`
 This function initializes each gpio signal for MCPWM.

Note This function initializes one gpio at a time.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM Channel(0-1)
- `io_signal`: set MCPWM signals, each MCPWM unit has 6 output(MCPWMXA, MCPWMXB) and 9 input(SYNC_X, FAULT_X, CAP_X) 'X' is timer_num(0-2)
- `gpio_num`: set this to configure gpio for MCPWM, if you want to use gpio16, `gpio_num = 16`

`esp_err_t mcpwm_set_pin(mcpwm_unit_t mcpwm_num, const mcpwm_pin_config_t *mcpwm_pin)`
 Initialize MCPWM gpio structure.

Note This function can be used to initialize more then one gpio at a time.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM Channel(0-1)
- `mcpwm_pin`: MCPWM pin structure

`esp_err_t mcpwm_init` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, **const** *mcpwm_config_t* `*mcpwm_conf`)

Initialize MCPWM parameters.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM Channel(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `mcpwm_conf`: configure structure *mcpwm_config_t*

`esp_err_t mcpwm_set_frequency` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, *uint32_t* `frequency`)

Set frequency(in Hz) of MCPWM timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `frequency`: set the frequency in Hz of each timer

`esp_err_t mcpwm_set_duty` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, *mcpwm_operator_t* `op_num`, *float* `duty`)

Set duty cycle of each operator(MCPWMXA/MCPWMB)

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `op_num`: set the operator(MCPWMXA/MCPWMB), 'X' is timer number selected
- `duty`: set duty cycle in % (i.e for 62.3% duty cycle, duty = 62.3) of each operator

`esp_err_t mcpwm_set_duty_in_us` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*,
mcpwm_operator_t *op_num*, *uint32_t* *duty*)
Set duty cycle of each operator(MCPWMXA/MCPWMXB) in us.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *mcpwm_num*: set MCPWM unit(0-1)
- *timer_num*: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- *op_num*: set the operator(MCPWMXA/MCPWMXB), 'x' is timer number selected
- *duty*: set duty value in microseconds of each operator

`esp_err_t mcpwm_set_duty_type` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*,
mcpwm_operator_t *op_num*, *mcpwm_duty_type_t* *duty_num*)
Set duty either active high or active low(out of phase/inverted)

Note Call this function every time after `mcpwm_set_signal_high` or `mcpwm_set_signal_low` to resume with previously set duty cycle

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *mcpwm_num*: set MCPWM unit(0-1)
- *timer_num*: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- *op_num*: set the operator(MCPWMXA/MCPWMXB), 'x' is timer number selected
- *duty_num*: set active low or active high duty type

`uint32_t mcpwm_get_frequency` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*)
Get frequency of timer.

Return

- frequency of timer

Parameters

- *mcpwm_num*: set MCPWM unit(0-1)
- *timer_num*: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`float mcpwm_get_duty` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*, *mcpwm_operator_t* *op_num*)
Get duty cycle of each operator.

Return

- duty cycle in % of each operator(56.7 means duty is 56.7%)

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `op_num`: set the operator(MCPWMXA/MCPWMB), 'x' is timer number selected

`esp_err_t mcpwm_set_signal_high` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*, *mcpwm_operator_t* *op_num*)

Use this function to set MCPWM signal high.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `op_num`: set the operator(MCPWMXA/MCPWMB), 'x' is timer number selected

`esp_err_t mcpwm_set_signal_low` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*, *mcpwm_operator_t* *op_num*)

Use this function to set MCPWM signal low.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `op_num`: set the operator(MCPWMXA/MCPWMB), 'x' is timer number selected

`esp_err_t mcpwm_start` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*)

Start MCPWM signal on timer 'x'.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_stop` (*mcpwm_unit_t* *mcpwm_num*, *mcpwm_timer_t* *timer_num*)

Start MCPWM signal on timer 'x'.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_carrier_init` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, **const** *mcpwm_carrier_config_t* *`carrier_conf`)
Initialize carrier configuration.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `carrier_conf`: configure structure *mcpwm_carrier_config_t*

`esp_err_t mcpwm_carrier_enable` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`)
Enable MCPWM carrier submodule, for respective timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_carrier_disable` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`)
Disable MCPWM carrier submodule, for respective timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_carrier_set_period` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, *uint8_t* `carrier_period`)
Set period of carrier.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `carrier_period`: set the carrier period of each timer, carrier period = (carrier_period + 1)*800ns (carrier_period <= 15)

`esp_err_t mcpwm_carrier_set_duty_cycle` (*mcpwm_unit_t* mcpwm_num, *mcpwm_timer_t* timer_num, *uint8_t* carrier_duty)

Set duty_cycle of carrier.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `carrier_duty`: set duty_cycle of carrier , carrier duty cycle = carrier_duty*12.5% (chop_duty <= 7)

`esp_err_t mcpwm_carrier_oneshot_mode_enable` (*mcpwm_unit_t* mcpwm_num, *mcpwm_timer_t* timer_num, *uint8_t* pulse_width)

Enable and set width of first pulse in carrier oneshot mode.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `pulse_width`: set pulse width of first pulse in oneshot mode, width = (carrier period)*(pulse_width + 1) (pulse_width <= 15)

`esp_err_t mcpwm_carrier_oneshot_mode_disable` (*mcpwm_unit_t* mcpwm_num, *mcpwm_timer_t* timer_num)

Disable oneshot mode, width of first pulse = carrier period.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_carrier_output_invert` (*mcpwm_unit_t* mcpwm_num, *mcpwm_timer_t* timer_num, *mcpwm_carrier_out_ivt_t* carrier_ivt_mode)

Enable or disable carrier output inversion.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `carrier_ivt_mode`: enable or disable carrier output inversion

`esp_err_t mcpwm_deadtime_enable` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`, *mcpwm_deadtime_type_t* `dt_mode`, *uint32_t* `red`, *uint32_t* `fed`)

Enable and initialize deadtime for each MCPWM timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `dt_mode`: set deadtime mode
- `red`: set rising edge delay = `red`*100ns
- `fed`: set rising edge delay = `fed`*100ns

`esp_err_t mcpwm_deadtime_disable` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_timer_t* `timer_num`)

Disable deadtime on MCPWM timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_fault_init` (*mcpwm_unit_t* `mcpwm_num`, *mcpwm_fault_input_level_t* `input_level`, *mcpwm_fault_signal_t* `fault_sig`)

Initialize fault submodule, currently low level triggering not supported.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `input_level`: set fault signal level, which will cause fault to occur

- `fault_sig`: set the fault Pin, which needs to be enabled

```
esp_err_t mcpwm_fault_set_oneshot_mode(mcpwm_unit_t mcpwm_num, mcpwm_timer_t timer_num,
                                       mcpwm_fault_signal_t fault_sig,
                                       mcpwm_action_on_pwmxa_t action_on_pwmxa,
                                       mcpwm_action_on_pwmxb_t action_on_pwmxb)
```

Set oneshot mode on fault detection, once fault occur in oneshot mode reset is required to resume MCPWM signals.

Note currently low level triggering not supported

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `fault_sig`: set the fault Pin, which needs to be enabled for oneshot mode
- `action_on_pwmxa`: action to be taken on MCPWMXA when fault occurs, either no change or high or low or toggle
- `action_on_pwmxb`: action to be taken on MCPWMXB when fault occurs, either no change or high or low or toggle

```
esp_err_t mcpwm_fault_set_cyc_mode(mcpwm_unit_t mcpwm_num, mcpwm_timer_t timer_num,
                                   mcpwm_fault_signal_t fault_sig, mcpwm_action_on_pwmxa_t
                                   action_on_pwmxa, mcpwm_action_on_pwmxb_t ac-
                                   tion_on_pwmxb)
```

Set cycle-by-cycle mode on fault detection, once fault occur in cyc mode MCPWM signal resumes as soon as fault signal becomes inactive.

Note currently low level triggering not supported

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `fault_sig`: set the fault Pin, which needs to be enabled for cyc mode
- `action_on_pwmxa`: action to be taken on MCPWMXA when fault occurs, either no change or high or low or toggle
- `action_on_pwmxb`: action to be taken on MCPWMXB when fault occurs, either no change or high or low or toggle

```
esp_err_t mcpwm_fault_deinit(mcpwm_unit_t mcpwm_num, mcpwm_fault_signal_t fault_sig)
```

Disable fault signal.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `fault_sig`: fault pin, which needs to be disabled

`esp_err_t mcpwm_capture_enable` (*mcpwm_unit_t mcpwm_num, mcpwm_capture_signal_t cap_sig, mcpwm_capture_on_edge_t cap_edge, uint32_t num_of_pulse*)

Initialize capture submodule.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `cap_edge`: set capture edge, BIT(0) - negative edge, BIT(1) - positive edge
- `cap_sig`: capture Pin, which needs to be enabled
- `num_of_pulse`: count time between rising/falling edge between 2 *(pulses mentioned), counter uses APB_CLK

`esp_err_t mcpwm_capture_disable` (*mcpwm_unit_t mcpwm_num, mcpwm_capture_signal_t cap_sig*)

Disable capture signal.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `cap_sig`: capture Pin, which needs to be disabled

`uint32_t mcpwm_capture_signal_get_value` (*mcpwm_unit_t mcpwm_num, mcpwm_capture_signal_t cap_sig*)

Get capture value.

Return Captured value

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `cap_sig`: capture pin on which value is to be measured

`uint32_t mcpwm_capture_signal_get_edge` (*mcpwm_unit_t mcpwm_num, mcpwm_capture_signal_t cap_sig*)

Get edge of capture signal.

Return Capture signal edge: 1 - positive edge, 2 - negative edge

Parameters

- `mcpwm_num`: set MCPWM Channel(0-1)
- `cap_sig`: capture pin of whose edge is to be determined

`esp_err_t mcpwm_sync_enable` (`mcpwm_unit_t mcpwm_num`, `mcpwm_timer_t timer_num`, `mcpwm_sync_signal_t sync_sig`, `uint32_t phase_val`)
 Initialize sync submodule.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers
- `sync_sig`: set the fault Pin, which needs to be enabled
- `phase_val`: phase value in 1/1000(for 86.7%, `phase_val = 867`) which timer moves to on sync signal

`esp_err_t mcpwm_sync_disable` (`mcpwm_unit_t mcpwm_num`, `mcpwm_timer_t timer_num`)
 Disable sync submodule on given timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `timer_num`: set timer number(0-2) of MCPWM, each MCPWM unit has 3 timers

`esp_err_t mcpwm_isr_register` (`mcpwm_unit_t mcpwm_num`, `void (*fn)`) `void *`
`, void *arg, int intr_alloc_flags, intr_handle_t *handle` Register MCPWM interrupt handler, the handler is an ISR. the handler will be attached to the same CPU core that this function is running on.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Function pointer error.

Parameters

- `mcpwm_num`: set MCPWM unit(0-1)
- `fn`: interrupt handler function.
- `arg`: user-supplied argument passed to the handler function.
- `intr_alloc_flags`: flags used to allocate the interrupt. One or multiple (`OR`red) `ESP_INTR_FLAG_*` values. see `esp_intr_alloc.h` for more info.
- `arg`: parameter for handler function

- `handle`: pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

Structures

struct mcpwm_pin_config_t

MCPWM pin number for.

Public Members

int mcpwm0a_out_num

MCPWM0A out pin

int mcpwm0b_out_num

MCPWM0A out pin

int mcpwm1a_out_num

MCPWM0A out pin

int mcpwm1b_out_num

MCPWM0A out pin

int mcpwm2a_out_num

MCPWM0A out pin

int mcpwm2b_out_num

MCPWM0A out pin

int mcpwm_sync0_in_num

SYNC0 in pin

int mcpwm_sync1_in_num

SYNC1 in pin

int mcpwm_sync2_in_num

SYNC2 in pin

int mcpwm_fault0_in_num

FAULT0 in pin

int mcpwm_fault1_in_num

FAULT1 in pin

int mcpwm_fault2_in_num

FAULT2 in pin

int mcpwm_cap0_in_num

CAP0 in pin

int mcpwm_cap1_in_num

CAP1 in pin

int mcpwm_cap2_in_num

CAP2 in pin

struct mcpwm_config_t

MCPWM config structure.

Public Members

uint32_t **frequency**

Set frequency of MCPWM in Hz

float **cmp_r_a**

Set % duty cycle for operator a(MCPWMXA), i.e for 62.3% duty cycle, duty_a = 62.3

float **cmp_r_b**

Set % duty cycle for operator b(MCPWMXB), i.e for 48% duty cycle, duty_b = 48.0

mcpwm_duty_type_t **duty_mode**

Set type of duty cycle

mcpwm_counter_type_t **counter_mode**

Set type of MCPWM counter

struct **mcpwm_carrier_config_t**

MCPWM config carrier structure.

Public Members

uint8_t **carrier_period**

Set carrier period = (carrier_period + 1)*800ns, carrier_period should be < 16

uint8_t **carrier_duty**

Set carrier duty cycle, carrier_duty should be less than 8(increment every 12.5%)

uint8_t **pulse_width_in_os**

Set pulse width of first pulse in one shot mode = (carrier_period)*(pulse_width_in_os + 1), should be less than 16

mcpwm_carrier_os_t **carrier_os_mode**

Enable or disable carrier oneshot mode

mcpwm_carrier_out_ivt_t **carrier_ivt_mode**

Invert output of carrier

Enumerations

enum **mcpwm_io_signals_t**

IO signals for MCPWM 6 MCPWM output pins that generate PWM signals 3 MCPWM fault input pins to detect faults like overcurrent, overvoltage, etc 3 MCPWM sync input pins to synchronize MCPWM outputs signals 3 MCPWM capture input pin to capture hall sell signal to measure time.

Values:

MCPWM0A = 0

PWM0A output pin

MCPWM0B

PWM0B output pin

MCPWM1A

PWM1A output pin

MCPWM1B

PWM1B output pin

MCPWM2A
PWM2A output pin

MCPWM2B
PWM2B output pin

MCPWM_SYNC_0
SYNC0 input pin

MCPWM_SYNC_1
SYNC1 input pin

MCPWM_SYNC_2
SYNC2 input pin

MCPWM_FAULT_0
FAULT0 input pin

MCPWM_FAULT_1
FAULT1 input pin

MCPWM_FAULT_2
FAULT2 input pin

MCPWM_CAP_0 = 84
CAP0 input pin

MCPWM_CAP_1
CAP1 input pin

MCPWM_CAP_2
CAP2 input pin

enum mcpwm_unit_t
Select MCPWM unit.

Values:

MCPWM_UNIT_0 = 0
MCPWM unit0 selected

MCPWM_UNIT_1
MCPWM unit1 selected

MCPWM_UNIT_MAX
Num of MCPWM units on ESP32

enum mcpwm_timer_t
Select MCPWM timer.

Values:

MCPWM_TIMER_0 = 0
Select MCPWM timer0

MCPWM_TIMER_1
Select MCPWM timer1

MCPWM_TIMER_2
Select MCPWM timer2

MCPWM_TIMER_MAX
Num of MCPWM timers on ESP32

enum mcpwm_operator_t
Select MCPWM operator.

Values:

MCPWM_OPR_A = 0
Select MCPWMXA, where 'X' is timer number

MCPWM_OPR_B
Select MCPWMXB, where 'X' is timer number

MCPWM_OPR_MAX
Num of operators to each timer of MCPWM

enum mcpwm_counter_type_t
Select type of MCPWM counter.

Values:

MCPWM_UP_COUNTER = 1
For asymmetric MCPWM

MCPWM_DOWN_COUNTER
For asymmetric MCPWM

MCPWM_UP_DOWN_COUNTER
For symmetric MCPWM, frequency is half of MCPWM frequency set

MCPWM_COUNTER_MAX
Maximum counter mode

enum mcpwm_duty_type_t
Select type of MCPWM duty cycle mode.

Values:

MCPWM_DUTY_MODE_0 = 0
Active high duty, i.e. duty cycle proportional to high time for asymmetric MCPWM

MCPWM_DUTY_MODE_1
Active low duty, i.e. duty cycle proportional to low time for asymmetric MCPWM, out of phase(inverted) MCPWM

MCPWM_DUTY_MODE_MAX
Num of duty cycle modes

enum mcpwm_carrier_os_t
MCPWM carrier oneshot mode, in this mode the width of the first pulse of carrier can be programmed.

Values:

MCPWM_ONESHOT_MODE_DIS = 0
Enable oneshot mode

MCPWM_ONESHOT_MODE_EN
Disable oneshot mode

enum mcpwm_carrier_out_ivt_t
MCPWM carrier output inversion, high frequency carrier signal active with MCPWM signal is high.

Values:

MCPWM_CARRIER_OUT_IVT_DIS = 0
Enable carrier output inversion

MCPWM_CARRIER_OUT_IVT_EN
Disable carrier output inversion

enum mcpwm_sync_signal_t
MCPWM select sync signal input.

Values:

MCPWM_SELECT_SYNC0 = 4
Select SYNC0 as input

MCPWM_SELECT_SYNC1
Select SYNC1 as input

MCPWM_SELECT_SYNC2
Select SYNC2 as input

enum mcpwm_fault_signal_t
MCPWM select fault signal input.

Values:

MCPWM_SELECT_F0 = 0
Select F0 as input

MCPWM_SELECT_F1
Select F1 as input

MCPWM_SELECT_F2
Select F2 as input

enum mcpwm_fault_input_level_t
MCPWM select triggering level of fault signal.

Values:

MCPWM_LOW_LEVEL_TGR = 0
Fault condition occurs when fault input signal goes from high to low, currently not supported

MCPWM_HIGH_LEVEL_TGR
Fault condition occurs when fault input signal goes low to high

enum mcpwm_action_on_pwmxa_t
MCPWM select action to be taken on MCPWMXA when fault occurs.

Values:

MCPWM_NO_CHANGE_IN_MCPWMXA = 0
No change in MCPWMXA output

MCPWM_FORCE_MCPWMXA_LOW
Make MCPWMXA output low

MCPWM_FORCE_MCPWMXA_HIGH
Make MCPWMXA output high

MCPWM_TOG_MCPWMXA
Make MCPWMXA output toggle

enum mcpwm_action_on_pwmxb_t
MCPWM select action to be taken on MCPWMxB when fault occurs.

Values:

MCPWM_NO_CHANGE_IN_MCPWMXB = 0

No change in MCPWMXB output

MCPWM_FORCE_MCPWMXB_LOW

Make MCPWMXB output low

MCPWM_FORCE_MCPWMXB_HIGH

Make MCPWMXB output high

MCPWM_TOG_MCPWMXB

Make MCPWMXB output toggle

enum mcpwm_capture_signal_t

MCPWM select capture signal input.

Values:

MCPWM_SELECT_CAP0 = 0

Select CAP0 as input

MCPWM_SELECT_CAP1

Select CAP1 as input

MCPWM_SELECT_CAP2

Select CAP2 as input

enum mcpwm_capture_on_edge_t

MCPWM select capture starts from which edge.

Values:

MCPWM_NEG_EDGE = 0

Capture starts from negative edge

MCPWM_POS_EDGE

Capture starts from positive edge

enum mcpwm_deadtime_type_t

MCPWM deadtime types, used to generate deadtime, RED refers to rising edge delay and FED refers to falling edge delay.

Values:

MCPWM_BYPASS_RED = 0

MCPWMXA = no change, MCPWMXB = falling edge delay

MCPWM_BYPASS_FED

MCPWMXA = rising edge delay, MCPWMXB = no change

MCPWM_ACTIVE_HIGH_MODE

MCPWMXA = rising edge delay, MCPWMXB = falling edge delay

MCPWM_ACTIVE_LOW_MODE

MCPWMXA = compliment of rising edge delay, MCPWMXB = compliment of falling edge delay

MCPWM_ACTIVE_HIGH_COMPLIMENT_MODE

MCPWMXA = rising edge delay, MCPWMXB = compliment of falling edge delay

MCPWM_ACTIVE_LOW_COMPLIMENT_MODE

MCPWMXA = compliment of rising edge delay, MCPWMXB = falling edge delay

MCPWM_ACTIVE_RED_FED_FROM_PWMXA

MCPWMXA = MCPWMXB = rising edge delay as well as falling edge delay, generated from MCPWMXA

MCPWM_ACTIVE_RED_FED_FROM_PWMXB

MCPWMXA = MCPWMXB = rising edge delay as well as falling edge delay, generated from MCPWMXB

MCPWM_DEADTIME_TYPE_MAX

Pulse Counter

Overview

The PCNT (Pulse Counter) module is designed to count the number of rising and/or falling edges of an input signal. Each pulse counter unit has a 16-bit signed counter register and two channels that can be configured to either increment or decrement the counter. Each channel has a signal input that accepts signal edges to be detected, as well as a control input that can be used to enable or disable the signal input. The inputs have optional filters that can be used to discard unwanted glitches in the signal.

Application Example

Pulse counter with control signal and event interrupt example: [peripherals/pcnt](#).

API Reference

Header File

- [driver/include/driver/pcnt.h](#)

Functions

`esp_err_t pcnt_unit_config (const pcnt_config_t *pcnt_config)`
Configure Pulse Counter unit.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *pcnt_config*: Pointer of Pulse Counter unit configure parameter

`esp_err_t pcnt_get_counter_value (pcnt_unit_t pcnt_unit, int16_t *count)`
Get pulse counter value.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- *pcnt_unit*: Pulse Counter unit number
- *count*: Pointer to accept counter value

esp_err_t **pcnt_counter_pause** (*pcnt_unit_t* pcnt_unit)
 Pause PCNT counter of PCNT unit.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- pcnt_unit: PCNT unit number

esp_err_t **pcnt_counter_resume** (*pcnt_unit_t* pcnt_unit)
 Resume counting for PCNT counter.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- pcnt_unit: PCNT unit number, select from pcnt_unit_t

esp_err_t **pcnt_counter_clear** (*pcnt_unit_t* pcnt_unit)
 Clear and reset PCNT counter value to zero.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- pcnt_unit: PCNT unit number, select from pcnt_unit_t

esp_err_t **pcnt_intr_enable** (*pcnt_unit_t* pcnt_unit)
 Enable PCNT interrupt for PCNT unit.

Note Each Pulse counter unit has five watch point events that share the same interrupt. Configure events with pcnt_event_enable() and pcnt_event_disable()

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- pcnt_unit: PCNT unit number

esp_err_t **pcnt_intr_disable** (*pcnt_unit_t* pcnt_unit)
 Disable PCNT interrupt for PCNT unit.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `pcnt_unit`: PCNT unit number

`esp_err_t pcnt_event_enable` (*pcnt_unit_t unit, pcnt_evt_type_t evt_type*)
Enable PCNT event of PCNT unit.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number
- `evt_type`: Watch point event type. All enabled events share the same interrupt (one interrupt per pulse counter unit).

`esp_err_t pcnt_event_disable` (*pcnt_unit_t unit, pcnt_evt_type_t evt_type*)
Disable PCNT event of PCNT unit.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number
- `evt_type`: Watch point event type. All enabled events share the same interrupt (one interrupt per pulse counter unit).

`esp_err_t pcnt_set_event_value` (*pcnt_unit_t unit, pcnt_evt_type_t evt_type, int16_t value*)
Set PCNT event value of PCNT unit.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number
- `evt_type`: Watch point event type. All enabled events share the same interrupt (one interrupt per pulse counter unit).
- `value`: Counter value for PCNT event

`esp_err_t pcnt_get_event_value` (*pcnt_unit_t unit, pcnt_evt_type_t evt_type, int16_t *value*)
Get PCNT event value of PCNT unit.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number
- `evt_type`: Watch point event type. All enabled events share the same interrupt (one interrupt per pulse counter unit).
- `value`: Pointer to accept counter value for PCNT event

`esp_err_t pcnt_isr_register` (`void (*fn)`) `void *`
`, void *arg, int intr_alloc_flags, pcnt_isr_handle_t *handle` Register PCNT interrupt handler, the handler is an ISR. The handler will be attached to the same CPU core that this function is running on.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Function pointer error.

Parameters

- `fn`: Interrupt handler function.
- `arg`: Parameter for handler function
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `handle`: Pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

`esp_err_t pcnt_set_pin` (`pcnt_unit_t unit, pcnt_channel_t channel, int pulse_io, int ctrl_io`)
 Configure PCNT pulse signal input pin and control input pin.

Note Set to `PCNT_PIN_NOT_USED` if unused.

Note Set to `PCNT_PIN_NOT_USED` if unused.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number
- `channel`: PCNT channel number
- `pulse_io`: Pulse signal input GPIO

Parameters

- `ctrl_io`: Control signal input GPIO

`esp_err_t pcnt_filter_enable` (`pcnt_unit_t unit`)
 Enable PCNT input filter.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `unit`: PCNT unit number

esp_err_t **pcnt_filter_disable** (*pcnt_unit_t* unit)
Disable PCNT input filter.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- unit: PCNT unit number

esp_err_t **pcnt_set_filter_value** (*pcnt_unit_t* unit, uint16_t filter_val)
Set PCNT filter value.

Note filter_val is a 10-bit value, so the maximum filter_val should be limited to 1023.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- unit: PCNT unit number
- filter_val: PCNT signal filter value, counter in APB_CLK cycles. Any pulses lasting shorter than this will be ignored when the filter is enabled.

esp_err_t **pcnt_get_filter_value** (*pcnt_unit_t* unit, uint16_t *filter_val)
Get PCNT filter value.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- unit: PCNT unit number
- filter_val: Pointer to accept PCNT filter value.

esp_err_t **pcnt_set_mode** (*pcnt_unit_t* unit, *pcnt_channel_t* channel, *pcnt_count_mode_t* pos_mode, *pcnt_count_mode_t* neg_mode, *pcnt_ctrl_mode_t* hctrl_mode, *pcnt_ctrl_mode_t* lctrl_mode)
Set PCNT counter mode.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- unit: PCNT unit number
- channel: PCNT channel number
- pos_mode: Counter mode when detecting positive edge

- `neg_mode`: Counter mode when detecting negative edge
- `hctrl_mode`: Counter mode when control signal is high level
- `lctrl_mode`: Counter mode when control signal is low level

Structures

`struct pcnt_config_t`

Pulse Counter configure struct.

Public Members

`int pulse_gpio_num`

Pulse input `gpio_num`, if you want to use `gpio16`, `pulse_gpio_num = 16`, a negative value will be ignored

`int ctrl_gpio_num`

Control signal input `gpio_num`, a negative value will be ignored

`pcnt_ctrl_mode_t lctrl_mode`

PCNT low control mode

`pcnt_ctrl_mode_t hctrl_mode`

PCNT high control mode

`pcnt_count_mode_t pos_mode`

PCNT positive edge count mode

`pcnt_count_mode_t neg_mode`

PCNT negative edge count mode

`int16_t counter_h_lim`

Maximum counter value

`int16_t counter_l_lim`

Minimum counter value

`pcnt_unit_t unit`

PCNT unit number

`pcnt_channel_t channel`

the PCNT channel

Macros

`PCNT_PIN_NOT_USED (-1)`

Pin are not used

Type Definitions

`typedef intr_handle_t pcnt_isr_handle_t`

Enumerations

enum `pcnt_ctrl_mode_t`

Values:

PCNT_MODE_KEEP = 0

Control mode: won't change counter mode

PCNT_MODE_REVERSE = 1

Control mode: invert counter mode(increase -> decrease, decrease -> increase);

PCNT_MODE_DISABLE = 2

Control mode: Inhibit counter(counter value will not change in this condition)

PCNT_MODE_MAX

enum `pcnt_count_mode_t`

Values:

PCNT_COUNT_DIS = 0

Counter mode: Inhibit counter(counter value will not change in this condition)

PCNT_COUNT_INC = 1

Counter mode: Increase counter value

PCNT_COUNT_DEC = 2

Counter mode: Decrease counter value

PCNT_COUNT_MAX

enum `pcnt_unit_t`

Values:

PCNT_UNIT_0 = 0

PCNT unit0

PCNT_UNIT_1 = 1

PCNT unit1

PCNT_UNIT_2 = 2

PCNT unit2

PCNT_UNIT_3 = 3

PCNT unit3

PCNT_UNIT_4 = 4

PCNT unit4

PCNT_UNIT_5 = 5

PCNT unit5

PCNT_UNIT_6 = 6

PCNT unit6

PCNT_UNIT_7 = 7

PCNT unit7

PCNT_UNIT_MAX

enum `pcnt_channel_t`

Values:

PCNT_CHANNEL_0 = 0x00

PCNT channel0

PCNT_CHANNEL_1 = 0x01
PCNT channel1

PCNT_CHANNEL_MAX

enum `pcnt_evt_type_t`

Values:

PCNT_EVT_L_LIM = 0
PCNT watch point event: Minimum counter value

PCNT_EVT_H_LIM = 1
PCNT watch point event: Maximum counter value

PCNT_EVT_THRES_0 = 2
PCNT watch point event: threshold0 value event

PCNT_EVT_THRES_1 = 3
PCNT watch point event: threshold1 value event

PCNT_EVT_ZERO = 4
PCNT watch point event: counter value zero event

PCNT_EVT_MAX

RMT

Overview

The RMT (Remote Control) module driver can be used to send and receive infrared remote control signals. Due to flexibility of RMT module, the driver can also be used to generate many other types of signals.

Application Example

NEC remote control TX and RX example: [peripherals/rmt_nec_tx_rx](#).

API Reference

Header File

- `driver/include/driver/rmt.h`

Functions

`esp_err_t` **rmt_set_clk_div** (*rmt_channel_t* channel, *uint8_t* div_cnt)
Set RMT clock divider, channel clock is divided from source clock.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)

- `div_cnt`: RMT counter clock divider

`esp_err_t rmt_get_clk_div(rmt_channel_t channel, uint8_t *div_cnt)`
Get RMT clock divider, channel clock is divided from source clock.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)
- `div_cnt`: pointer to accept RMT counter divider

`esp_err_t rmt_set_rx_idle_thresh(rmt_channel_t channel, uint16_t thresh)`
Set RMT RX idle threshold value.

In receive mode, when no edge is detected on the input signal for longer than `idle_thres` channel clock cycles, the receive process is finished.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)
- `thresh`: RMT RX idle threshold

`esp_err_t rmt_get_rx_idle_thresh(rmt_channel_t channel, uint16_t *thresh)`
Get RMT idle threshold value.

In receive mode, when no edge is detected on the input signal for longer than `idle_thres` channel clock cycles, the receive process is finished.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)
- `thresh`: pointer to accept RMT RX idle threshold value

`esp_err_t rmt_set_mem_block_num(rmt_channel_t channel, uint8_t rmt_mem_num)`
Set RMT memory block number for RMT channel.

This function is used to configure the amount of memory blocks allocated to channel `n`. The 8 channels share a 512x32-bit RAM block which can be read and written by the processor cores over the APB bus, as well as read by the transmitters and written by the receivers. The RAM address range for channel `n` is `start_addr_CHn` to `end_addr_CHn`, which are defined by: Memory block start address is `RMT_CHANNEL_MEM(n)` (in `soc/rmt_reg.h`), that is, `start_addr_chn = RMT base address + 0x800 + 64 * n`, and `end_addr_chn = RMT base address + 0x800 + 64 * n + 64 * RMT_MEM_SIZE_CHn mod 512`.

Note If memory block number of one channel is set to a value greater than 1, this channel will occupy the memory block of the next channel. Channel0 can use at most 8 blocks of memory, accordingly channel7 can only use one memory block.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- rmt_mem_num: RMT RX memory block number, one block has 64 * 32 bits.

esp_err_t **rmt_get_mem_block_num**(*rmt_channel_t* channel, uint8_t *rmt_mem_num)
Get RMT memory block number.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- rmt_mem_num: Pointer to accept RMT RX memory block number

esp_err_t **rmt_set_tx_carrier**(*rmt_channel_t* channel, bool carrier_en, uint16_t high_level, uint16_t low_level, *rmt_carrier_level_t* carrier_level)
Configure RMT carrier for TX signal.

Set different values for carrier_high and carrier_low to set different frequency of carrier. The unit of carrier_high/low is the source clock tick, not the divided channel counter clock.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- carrier_en: Whether to enable output carrier.
- high_level: High level duration of carrier
- low_level: Low level duration of carrier.
- carrier_level: Configure the way carrier wave is modulated for channel0-7.

```
1'b1:transmit on low output level
1'b0:transmit on high output level
```

esp_err_t **rmt_set_mem_pd**(*rmt_channel_t* channel, bool pd_en)
Set RMT memory in low power mode.

Reduce power consumed by memory. 1:memory is in low power state.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `pd_en`: RMT memory low power enable.

`esp_err_t rmt_get_mem_pd(rmt_channel_t channel, bool *pd_en)`
Get RMT memory low power mode.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `pd_en`: Pointer to accept RMT memory low power mode.

`esp_err_t rmt_tx_start(rmt_channel_t channel, bool tx_idx_rst)`
Set RMT start sending data from memory.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `tx_idx_rst`: Set true to reset memory index for TX. Otherwise, transmitter will continue sending from the last index in memory.

`esp_err_t rmt_tx_stop(rmt_channel_t channel)`
Set RMT stop sending.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)

`esp_err_t rmt_rx_start(rmt_channel_t channel, bool rx_idx_rst)`
Set RMT start receiving data.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `rx_idx_rst`: Set true to reset memory index for receiver. Otherwise, receiver will continue receiving data to the last index in memory.

`esp_err_t rmt_rx_stop(rmt_channel_t channel)`
Set RMT stop receiving data.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)

`esp_err_t rmt_memory_rw_rst(rmt_channel_t channel)`
Reset RMT TX/RX memory index.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)

`esp_err_t rmt_set_memory_owner(rmt_channel_t channel, rmt_mem_owner_t owner)`
Set RMT memory owner.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)
- `owner`: To set when the transmitter or receiver can process the memory of channel.

`esp_err_t rmt_get_memory_owner(rmt_channel_t channel, rmt_mem_owner_t *owner)`
Get RMT memory owner.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0-7)
- `owner`: Pointer to get memory owner.

`esp_err_t rmt_set_tx_loop_mode(rmt_channel_t channel, bool loop_en)`
 Set RMT tx loop mode.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- loop_en: To enable RMT transmitter loop sending mode.

```

↔data      If set true, transmitter will continue sending from the first_
           to the last data in channel0-7 again and again.
```

`esp_err_t rmt_get_tx_loop_mode(rmt_channel_t channel, bool *loop_en)`
 Get RMT tx loop mode.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- loop_en: Pointer to accept RMT transmitter loop sending mode.

`esp_err_t rmt_set_rx_filter(rmt_channel_t channel, bool rx_filter_en, uint8_t thresh)`
 Set RMT RX filter.

In receive mode, channel0-7 will ignore input pulse when the pulse width is smaller than threshold. Counted in source clock, not divided counter clock.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0-7)
- rx_filter_en: To enable RMT receiver filter.
- thresh: Threshold of pulse width for receiver.

`esp_err_t rmt_set_source_clk(rmt_channel_t channel, rmt_source_clk_t base_clk)`
 Set RMT source clock.

RMT module has two source clock:

- 1.APB clock which is 80Mhz
- 2.REF tick clock, which would be 1Mhz(not supported in this version).

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `base_clk`: To choose source clock for RMT module.

`esp_err_t rmt_get_source_clk (rmt_channel_t channel, rmt_source_clk_t *src_clk)`
 Get RMT source clock.

RMT module has two source clock:

1. APB clock which is 80Mhz
2. REF tick clock, which would be 1Mhz(not supported in this version).

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `src_clk`: Pointer to accept source clock for RMT module.

`esp_err_t rmt_set_idle_level (rmt_channel_t channel, bool idle_out_en, rmt_idle_level_t level)`
 Set RMT idle output level for transmitter.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `idle_out_en`: To enable idle level output.
- `level`: To set the output signal's level for channel0-7 in idle state.

`esp_err_t rmt_get_status (rmt_channel_t channel, uint32_t *status)`
 Get RMT status.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- `channel`: RMT channel (0-7)
- `status`: Pointer to accept channel status.

`void rmt_set_intr_enable_mask (uint32_t mask)`
 Set mask value to RMT interrupt enable register.

Parameters

- `mask`: Bit mask to set to the register

void `rmt_clr_intr_enable_mask` (uint32_t *mask*)
Clear mask value to RMT interrupt enable register.

Parameters

- `mask`: Bit mask to clear the register

esp_err_t `rmt_set_rx_intr_en` (*rmt_channel_t* *channel*, bool *en*)
Set RMT RX interrupt enable.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0 - 7)
- `en`: enable or disable RX interrupt.

esp_err_t `rmt_set_err_intr_en` (*rmt_channel_t* *channel*, bool *en*)
Set RMT RX error interrupt enable.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0 - 7)
- `en`: enable or disable RX err interrupt.

esp_err_t `rmt_set_tx_intr_en` (*rmt_channel_t* *channel*, bool *en*)
Set RMT TX interrupt enable.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0 - 7)
- `en`: enable or disable TX interrupt.

esp_err_t `rmt_set_tx_thr_intr_en` (*rmt_channel_t* *channel*, bool *en*, uint16_t *evt_thresh*)
Set RMT TX threshold event interrupt enable.

Causes an interrupt when a threshold number of items have been transmitted.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0 - 7)
- en: enable or disable TX event interrupt.
- evt_thresh: RMT event interrupt threshold value

esp_err_t **rmt_set_pin** (*rmt_channel_t* channel, *rmt_mode_t* mode, *gpio_num_t* gpio_num)
Set RMT pins.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0 - 7)
- mode: TX or RX mode for RMT
- gpio_num: GPIO number to transmit or receive the signal.

esp_err_t **rmt_config** (**const** *rmt_config_t* *rmt_param)
Configure RMT parameters.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- rmt_param: RMT parameter structor

esp_err_t **rmt_isr_register** (void (*fn)) void *
, void *arg, int intr_alloc_flags, *rmt_isr_handle_t* *handler register RMT interrupt handler, the handler is an ISR.

The handler will be attached to the same CPU core that this function is running on.

Note If you already called rmt_driver_install to use system RMT driver, please do not register ISR handler again.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Function pointer error.
- ESP_FAIL System driver installed, can not register ISR handler for RMT

Parameters

- fn: Interrupt handler function.
- arg: Parameter for handler function
- intr_alloc_flags: Flags used to allocate the interrupt. One or multiple (ORred) ESP_INTR_FLAG_* values. See esp_intr_alloc.h for more info.

- `handle`: If non-zero, a handle to later clean up the ISR gets stored here.

`esp_err_t rmt_isr_deregister` (*rmt_isr_handle_t* `handle`)
Deregister previously registered RMT interrupt handler.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Handle invalid

Parameters

- `handle`: Handle obtained from `rmt_isr_register`

`esp_err_t rmt_fill_tx_items` (*rmt_channel_t* `channel`, **const** *rmt_item32_t* *`item`, *uint16_t* `item_num`,
uint16_t `mem_offset`)
Fill memory data of channel with given RMT items.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0 - 7)
- `item`: Pointer of items.
- `item_num`: RMT sending items number.
- `mem_offset`: Index offset of memory.

`esp_err_t rmt_driver_install` (*rmt_channel_t* `channel`, *size_t* `rx_buf_size`, *int* `intr_alloc_flags`)
Initialize RMT driver.

Return

- `ESP_ERR_INVALID_STATE` Driver is already installed, call `rmt_driver_uninstall` first.
- `ESP_ERR_NO_MEM` Memory allocation failure
- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- `channel`: RMT channel (0 - 7)
- `rx_buf_size`: Size of RMT RX ringbuffer. Can be 0 if the RX ringbuffer is not used.
- `intr_alloc_flags`: Flags for the RMT driver interrupt handler. Pass 0 for default flags. See `esp_intr_alloc.h` for details.

`esp_err_t rmt_driver_uninstall` (*rmt_channel_t* `channel`)
Uninstall RMT driver.

Return

- `ESP_ERR_INVALID_ARG` Parameter error
- `ESP_OK` Success

Parameters

- channel: RMT channel (0 - 7)

esp_err_t **rmt_write_items** (*rmt_channel_t* channel, const rmt_item32_t *rmt_item, int item_num, bool wait_tx_done)

RMT send waveform from rmt_item array.

This API allows user to send waveform with any length.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0 - 7)
- rmt_item: head point of RMT items array.
- item_num: RMT data item number.
- wait_tx_done: If set 1, it will block the task and wait for sending done.

```

        If set 0, it will not wait and return immediately.

        @note
        This function will not copy data, instead, it will point_
↪to the original items,
        and send the waveform items.
        If wait_tx_done is set to true, this function will block_
↪and will not return until
        all items have been sent out.
        If wait_tx_done is set to false, this function will_
↪return immediately, and the driver
        interrupt will continue sending the items. We must make_
↪sure the item data will not be
        damaged when the driver is still sending items in driver_
↪interrupt.

```

esp_err_t **rmt_wait_tx_done** (*rmt_channel_t* channel)

Wait RMT TX finished.

Return

- ESP_ERR_INVALID_ARG Parameter error
- ESP_OK Success

Parameters

- channel: RMT channel (0 - 7)

esp_err_t **rmt_get_ringbuf_handler** (*rmt_channel_t* channel, RingbufHandle_t *buf_handler)

Get ringbuffer from UART.

Users can get the RMT RX ringbuffer handler, and process the RX data.

Return

- ESP_ERR_INVALID_ARG Parameter error

- ESP_OK Success

Parameters

- `channel`: RMT channel (0 - 7)
- `buf_handler`: Pointer to buffer handler to accept RX ringbuffer handler.

Structures

struct rmt_tx_config_t

Data struct of RMT TX configure parameters.

Public Members

bool **loop_en**

RMT loop output mode

uint32_t **carrier_freq_hz**

RMT carrier frequency

uint8_t **carrier_duty_percent**

RMT carrier duty (%)

rmt_carrier_level_t **carrier_level**

RMT carrier level

bool **carrier_en**

RMT carrier enable

rmt_idle_level_t **idle_level**

RMT idle level

bool **idle_output_en**

RMT idle level output enable

struct rmt_rx_config_t

Data struct of RMT RX configure parameters.

Public Members

bool **filter_en**

RMT receiver filter enable

uint8_t **filter_ticks_thresh**

RMT filter tick number

uint16_t **idle_threshold**

RMT RX idle threshold

struct rmt_config_t

Data struct of RMT configure parameters.

Public Members

rmt_mode_t **rmt_mode**

RMT mode: transmitter or receiver

rmt_channel_t **channel**
RMT channel

uint8_t **clk_div**
RMT channel counter divider

gpio_num_t **gpio_num**
RMT GPIO number

uint8_t **mem_block_num**
RMT memory block number

rmt_tx_config_t **tx_config**
RMT TX parameter

rmt_rx_config_t **rx_config**
RMT RX parameter

Macros

RMT_MEM_BLOCK_BYTE_NUM (256)
RMT_MEM_ITEM_NUM (RMT_MEM_BLOCK_BYTE_NUM/4)

Type Definitions

typedef *intr_handle_t* **rmt_isr_handle_t**

Enumerations

enum **rmt_channel_t**
Values:

RMT_CHANNEL_0 =0
RMT Channel0

RMT_CHANNEL_1
RMT Channel1

RMT_CHANNEL_2
RMT Channel2

RMT_CHANNEL_3
RMT Channel3

RMT_CHANNEL_4
RMT Channel4

RMT_CHANNEL_5
RMT Channel5

RMT_CHANNEL_6
RMT Channel6

RMT_CHANNEL_7
RMT Channel7

RMT_CHANNEL_MAX

enum rmt_mem_owner_t

Values:

RMT_MEM_OWNER_TX = 0

RMT RX mode, RMT transmitter owns the memory block

RMT_MEM_OWNER_RX = 1

RMT RX mode, RMT receiver owns the memory block

RMT_MEM_OWNER_MAX

enum rmt_source_clk_t

Values:

RMT_BASECLK_REF = 0

RMT source clock system reference tick, 1MHz by default(Not supported in this version)

RMT_BASECLK_APB

RMT source clock is APB CLK, 80Mhz by default

RMT_BASECLK_MAX

enum rmt_data_mode_t

Values:

RMT_DATA_MODE_FIFO = 0

RMT_DATA_MODE_MEM = 1

RMT_DATA_MODE_MAX

enum rmt_mode_t

Values:

RMT_MODE_TX = 0

RMT TX mode

RMT_MODE_RX

RMT RX mode

RMT_MODE_MAX

enum rmt_idle_level_t

Values:

RMT_IDLE_LEVEL_LOW = 0

RMT TX idle level: low Level

RMT_IDLE_LEVEL_HIGH

RMT TX idle level: high Level

RMT_IDLE_LEVEL_MAX

enum rmt_carrier_level_t

Values:

RMT_CARRIER_LEVEL_LOW = 0

RMT carrier wave is modulated for low Level output

RMT_CARRIER_LEVEL_HIGH

RMT carrier wave is modulated for high Level output

RMT_CARRIER_LEVEL_MAX

SDMMC Host Peripheral

Overview

SDMMC peripheral supports SD and MMC memory cards and SDIO cards. SDMMC software builds on top of SDMMC driver and consists of the following parts:

1. SDMMC host driver (`driver/sdmmc_host.h`) — this driver provides APIs to send commands to the slave device(s), send and receive data, and handling error conditions on the bus.
2. SDMMC protocol layer (`sdmmc_cmd.h`) — this component handles specifics of SD protocol such as card initialization and data transfer commands. Despite the name, only SD (SDSC/SDHC/SDXC) cards are supported at the moment. Support for MCC/eMMC cards can be added in the future.

Protocol layer works with the host via `sdmmc_host_t` structure. This structure contains pointers to various functions of the host. This design makes it possible to implement an SD host using SPI interface later.

Application Example

An example which combines SDMMC driver with FATFS library is provided in `examples/storage/sd_card` directory. This example initializes the card, writes and reads data from it using POSIX and C library APIs. See `README.md` file in the example directory for more information.

Protocol layer APIs

Protocol layer is given `sdmmc_host_t` structure which describes the SD/MMC host driver, lists its capabilities, and provides pointers to functions of the driver. Protocol layer stores card-specific information in `sdmmc_card_t` structure. When sending commands to the SD/MMC host driver, protocol layer uses `sdmmc_command_t` structure to describe the command, argument, expected return value, and data to transfer, if any.

Normal usage of the protocol layer is as follows:

1. Call the host driver functions to initialize the host (e.g. `sdmmc_host_init`, `sdmmc_host_init_slot`).
2. Call `sdmmc_card_init` to initialize the card, passing it host driver information (`host`) and a pointer to `sdmmc_card_t` structure which will be filled in (`card`).
3. To read and write sectors of the card, use `sdmmc_read_sectors` and `sdmmc_write_sectors`, passing the pointer to card information structure (`card`).
4. When card is not used anymore, call the host driver function to disable SDMMC host peripheral and free resources allocated by the driver (e.g. `sdmmc_host_deinit`).

Most applications need to use the protocol layer only in one task; therefore the protocol layer doesn't implement any kind of locking on the `sdmmc_card_t` structure, or when accessing SDMMC host driver. Such locking has to be implemented in the higher layer, if necessary (e.g. in the filesystem driver).

struct `sdmmc_host_t`

SD/MMC Host description

This structure defines properties of SD/MMC host and functions of SD/MMC host which can be used by upper layers.

Public Members

`uint32_t flags`

flags defining host properties

int **slot**
slot number, to be passed to host functions

int **max_freq_khz**
max frequency supported by the host

float **io_voltage**
I/O voltage used by the controller (voltage switching is not supported)

esp_err_t (***init**) (void)
Host function to initialize the driver

esp_err_t (***set_bus_width**) (int *slot*, size_t width)
host function to set bus width

esp_err_t (***set_card_clk**) (int *slot*, uint32_t freq_khz)
host function to set card clock frequency

esp_err_t (***do_transaction**) (int *slot*, *sdmmc_command_t* *cmdinfo)
host function to do a transaction

esp_err_t (***deinit**) (void)
host function to deinitialize the driver

SDMMC_HOST_FLAG_1BIT BIT(0)
host supports 1-line SD and MMC protocol

SDMMC_HOST_FLAG_4BIT BIT(1)
host supports 4-line SD and MMC protocol

SDMMC_HOST_FLAG_8BIT BIT(2)
host supports 8-line MMC protocol

SDMMC_HOST_FLAG_SPI BIT(3)
host supports SPI protocol

SDMMC_FREQ_DEFAULT 20000
SD/MMC Default speed (limited by clock divider)

SDMMC_FREQ_HIGHSPEED 40000
SD High speed (limited by clock divider)

SDMMC_FREQ_PROBING 4000
SD/MMC probing speed

struct **sdmmc_command_t**
SD/MMC command information

Public Members

uint32_t **opcode**
SD or MMC command index

uint32_t **arg**
SD/MMC command argument

sdmmc_response_t **response**
response buffer

void ***data**
buffer to send or read into

size_t **datalen**
length of data buffer

size_t **blklen**
block length

int **flags**
see below

esp_err_t **error**
error returned from transfer

struct sdmmc_card_t
SD/MMC card information structure

Public Members

sdmmc_host_t **host**
Host with which the card is associated

uint32_t **ocr**
OCR (Operation Conditions Register) value

sdmmc_cid_t **cid**
decoded CID (Card IDentification) register value

sdmmc_csd_t **csd**
decoded CSD (Card-Specific Data) register value

sdmmc_scr_t **scr**
decoded SCR (SD card Configuration Register) value

uint16_t **rca**
RCA (Relative Card Address)

struct sdmmc_csd_t
Decoded values from SD card Card Specific Data register

Public Members

int **csd_ver**
CSD structure format

int **mmc_ver**
MMC version (for CID format)

int **capacity**
total number of sectors

int **sector_size**
sector size in bytes

int **read_block_len**
block length for reads

int **card_command_class**
Card Command Class for SD

int **tr_speed**
Max transfer speed

struct sdmmc_cid_t
Decoded values from SD card Card IDentification register

Public Members

int **mfg_id**
manufacturer identification number

int **oem_id**
OEM/product identification number

char **name**[8]
product name (MMC v1 has the longest)

int **revision**
product revision

int **serial**
product serial number

int **date**
manufacturing date

struct sdmmc_scr_t
Decoded values from SD Configuration Register

Public Members

int **sd_spec**
SD Physical layer specification version, reported by card

int **bus_width**
bus widths supported by card: BIT(0) — 1-bit bus, BIT(2) — 4-bit bus

esp_err_t **sdmmc_card_init** (**const** *sdmmc_host_t* *host, *sdmmc_card_t* *out_card)
Probe and initialize SD/MMC card using given host

Note Only SD cards (SDSC and SDHC/SDXC) are supported now. Support for MMC/eMMC cards will be added later.

Return

- ESP_OK on success
- One of the error codes from SDMMC host controller

Parameters

- host: pointer to structure defining host controller
- out_card: pointer to structure which will receive information about the card when the function completes

esp_err_t **sdmmc_write_sectors** (*sdmmc_card_t* *card, **const** void *src, size_t start_sector, size_t sector_count)
Write given number of sectors to SD/MMC card

Return

- ESP_OK on success

- One of the error codes from SDMMC host controller

Parameters

- `card`: pointer to card information structure previously initialized using `sdmmc_card_init`
- `src`: pointer to data buffer to read data from; data size must be equal to `sector_count * card->csd.sector_size`
- `start_sector`: sector where to start writing
- `sector_count`: number of sectors to write

`esp_err_t sdmmc_read_sectors (sdmmc_card_t *card, void *dst, size_t start_sector, size_t sector_count)`
Write given number of sectors to SD/MMC card

Return

- ESP_OK on success
- One of the error codes from SDMMC host controller

Parameters

- `card`: pointer to card information structure previously initialized using `sdmmc_card_init`
- `dst`: pointer to data buffer to write into; buffer size must be at least `sector_count * card->csd.sector_size`
- `start_sector`: sector where to start reading
- `sector_count`: number of sectors to read

SDMMC host driver APIs

On the ESP32, SDMMC host peripheral has two slots:

- Slot 0 (SDMMC_HOST_SLOT_0) is an 8-bit slot. It uses HS1_* signals in the PIN MUX.
- Slot 1 (SDMMC_HOST_SLOT_1) is a 4-bit slot. It uses HS2_* signals in the PIN MUX.

Card Detect and Write Protect signals can be routed to arbitrary pins using GPIO matrix. To use these pins, set `gpio_cd` and `gpio_wp` members of `sdmmc_slot_config_t` structure when calling `sdmmc_host_init_slot`.

Of all the funtions listed below, only `sdmmc_host_init`, `sdmmc_host_init_slot`, and `sdmmc_host_deinit` will be used directly by most applications. Other functions, such as `sdmmc_host_set_bus_width`, `sdmmc_host_set_card_clk`, and `sdmmc_host_do_transaction` will be called by the SD/MMC protocol layer via function pointers in `sdmmc_host_t` structure.

`esp_err_t sdmmc_host_init ()`
Initialize SDMMC host peripheral.

Note This function is not thread safe

Return

- ESP_OK on success
- ESP_ERR_INVALID_STATE if `sdmmc_host_init` was already called
- ESP_ERR_NO_MEM if memory can not be allocated

SDMMC_HOST_SLOT_0 0

SDMMC slot 0.

SDMMC_HOST_SLOT_1 1

SDMMC slot 1.

SDMMC_HOST_DEFAULT {\ .flags = SDMMC_HOST_FLAG_4BIT, \ .slot = SDMMC_HOST_SLOT_1, \ .max_freq_khz = SDMMC

Default *sdmmc_host_t* structure initializer for SDMMC peripheral.

Uses SDMMC peripheral, with 4-bit mode enabled, and max frequency set to 20MHz

SDMMC_SLOT_WIDTH_DEFAULT 0

use the default width for the slot (8 for slot 0, 4 for slot 1)

esp_err_t **sdmmc_host_init_slot** (int slot, const *sdmmc_slot_config_t* *slot_config)

Initialize given slot of SDMMC peripheral.

On the ESP32, SDMMC peripheral has two slots:

- Slot 0: 8-bit wide, maps to HS1_* signals in PIN MUX
- Slot 1: 4-bit wide, maps to HS2_* signals in PIN MUX

Card detect and write protect signals can be routed to arbitrary GPIOs using GPIO matrix.

Note This function is not thread safe

Return

- ESP_OK on success
- ESP_ERR_INVALID_STATE if host has not been initialized using `sdmmc_host_init`

Parameters

- slot: slot number (SDMMC_HOST_SLOT_0 or SDMMC_HOST_SLOT_1)
- slot_config: additional configuration for the slot

struct **sdmmc_slot_config_t**

Extra configuration for SDMMC peripheral slot

Public Members

gpio_num_t **gpio_cd**

GPIO number of card detect signal.

gpio_num_t **gpio_wp**

GPIO number of write protect signal.

uint8_t **width**

Bus width used by the slot (might be less than the max width supported)

SDMMC_SLOT_NO_CD ((gpio_num_t) -1)

indicates that card detect line is not used

SDMMC_SLOT_NO_WP ((gpio_num_t) -1)

indicates that write protect line is not used

SDMMC_SLOT_CONFIG_DEFAULT {\ .gpio_cd = SDMMC_SLOT_NO_CD, \ .gpio_wp = SDMMC_SLOT_NO_WP, \ .width = SDMMC

Macro defining default configuration of SDMMC host slot

`esp_err_t sdmmc_host_set_bus_width` (int *slot*, size_t *width*)

Select bus width to be used for data transfer.

SD/MMC card must be initialized prior to this command, and a command to set bus width has to be sent to the card (e.g. SD_APP_SET_BUS_WIDTH)

Note This function is not thread safe

Return

- ESP_OK on success
- ESP_ERR_INVALID_ARG if slot number or width is not valid

Parameters

- *slot*: slot number (SDMMC_HOST_SLOT_0 or SDMMC_HOST_SLOT_1)
- *width*: bus width (1, 4, or 8 for slot 0; 1 or 4 for slot 1)

`esp_err_t sdmmc_host_set_card_clk` (int *slot*, uint32_t *freq_khz*)

Set card clock frequency.

Currently only integer fractions of 40MHz clock can be used. For High Speed cards, 40MHz can be used. For Default Speed cards, 20MHz can be used.

Note This function is not thread safe

Return

- ESP_OK on success
- other error codes may be returned in the future

Parameters

- *slot*: slot number (SDMMC_HOST_SLOT_0 or SDMMC_HOST_SLOT_1)
- *freq_khz*: card clock frequency, in kHz

`esp_err_t sdmmc_host_do_transaction` (int *slot*, *sdmmc_command_t* **cmdinfo*)

Send command to the card and get response.

This function returns when command is sent and response is received, or data is transferred, or timeout occurs.

Note This function is not thread safe w.r.t. init/deinit functions, and bus width/clock speed configuration functions. Multiple tasks can call `sdmmc_host_do_transaction` as long as other `sdmmc_host_*` functions are not called.

Return

- ESP_OK on success
- ESP_ERR_TIMEOUT if response or data transfer has timed out
- ESP_ERR_INVALID_CRC if response or data transfer CRC check has failed
- ESP_ERR_INVALID_RESPONSE if the card has sent an invalid response

Parameters

- *slot*: slot number (SDMMC_HOST_SLOT_0 or SDMMC_HOST_SLOT_1)
- *cmdinfo*: pointer to structure describing command and data to transfer

esp_err_t **sdmmc_host_deinit** ()

Disable SDMMC host and release allocated resources.

Note This function is not thread safe

Return

- ESP_OK on success
- ESP_ERR_INVALID_STATE if sdmmc_host_init function has not been called

Sigma-delta Modulation

Overview

ESP32 has a second-order sigma-delta modulation module. This driver configures the channels of the sigma-delta module.

Application Example

Sigma-delta Modulation example: [peripherals/sigmadelta](#).

API Reference

Header File

- [driver/include/driver/sigmadelta.h](#)

Functions

esp_err_t **sigmadelta_config** (const *sigmadelta_config_t* *config)

Configure Sigma-delta channel.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- config: Pointer of Sigma-delta channel configuration struct

esp_err_t **sigmadelta_set_duty** (*sigmadelta_channel_t* channel, int8_t duty)

Set Sigma-delta channel duty.

This function is used to set Sigma-delta channel duty, If you add a capacitor between the output pin and ground, the average output voltage $V_{dc} = VDDIO / 256 * duty + VDDIO/2$, VDDIO is power supply voltage.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `channel`: Sigma-delta channel number
- `duty`: Sigma-delta duty of one channel, the value ranges from -128 to 127, recommended range is -90 ~ 90. The waveform is more like a random one in this range.

`esp_err_t sigmadelta_set_prescale` (*sigmadelta_channel_t channel*, *uint8_t prescale*)

Set Sigma-delta channel's clock pre-scale value. The source clock is APP_CLK, 80MHz. The clock frequency of the sigma-delta channel is APP_CLK / pre_scale.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `channel`: Sigma-delta channel number
- `prescale`: The divider of source clock, ranges from 0 to 255

`esp_err_t sigmadelta_set_pin` (*sigmadelta_channel_t channel*, *gpio_num_t gpio_num*)

Set Sigma-delta signal output pin.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `channel`: Sigma-delta channel number
- `gpio_num`: GPIO number of output pin.

Structures

`struct sigmadelta_config_t`

Sigma-delta configure struct.

Public Members

sigmadelta_channel_t **channel**

Sigma-delta channel number

int8_t **sigmadelta_duty**

Sigma-delta duty, duty ranges from -128 to 127.

uint8_t **sigmadelta_prescale**

Sigma-delta prescale, prescale ranges from 0 to 255.

uint8_t **sigmadelta_gpio**

Sigma-delta output io number, refer to gpio.h for more details.

Enumerations

```
enum sigmadelta_channel_t
    Sigma-delta channel list.

    Values:

    SIGMADELTA_CHANNEL_0 = 0
        Sigma-delta channel0

    SIGMADELTA_CHANNEL_1 = 1
        Sigma-delta channel1

    SIGMADELTA_CHANNEL_2 = 2
        Sigma-delta channel2

    SIGMADELTA_CHANNEL_3 = 3
        Sigma-delta channel3

    SIGMADELTA_CHANNEL_4 = 4
        Sigma-delta channel4

    SIGMADELTA_CHANNEL_5 = 5
        Sigma-delta channel5

    SIGMADELTA_CHANNEL_6 = 6
        Sigma-delta channel6

    SIGMADELTA_CHANNEL_7 = 7
        Sigma-delta channel7

    SIGMADELTA_CHANNEL_MAX
```

SPI Master driver

Overview

The ESP32 has four SPI peripheral devices, called SPI0, SPI1, HSPI and VSPI. SPI0 is entirely dedicated to the flash cache the ESP32 uses to map the SPI flash device it is connected to into memory. SPI1 is connected to the same hardware lines as SPI0 and is used to write to the flash chip. HSPI and VSPI are free to use. SPI1, HSPI and VSPI all have three chip select lines, allowing them to drive up to three SPI devices each as a master.

The spi_master driver

The spi_master driver allows easy communicating with SPI slave devices, even in a multithreaded environment. It fully transparently handles DMA transfers to read and write data and automatically takes care of multiplexing between different SPI slaves on the same master

Terminology

The spi_master driver uses the following terms:

- Host: The SPI peripheral inside the ESP32 initiating the SPI transmissions. One of SPI, HSPI or VSPI. (For now, only HSPI or VSPI are actually supported in the driver; it will support all 3 peripherals somewhere in the future.)

- Bus: The SPI bus, common to all SPI devices connected to one host. In general the bus consists of the miso, mosi, sclk and optionally quadwp and quadhd signals. The SPI slaves are connected to these signals in parallel.
 - miso - Also known as q, this is the input of the serial stream into the ESP32
 - mosi - Also known as d, this is the output of the serial stream from the ESP32
 - sclk - Clock signal. Each data bit is clocked out or in on the positive or negative edge of this signal
 - quadwp - Write Protect signal. Only used for 4-bit (qio/qout) transactions.
 - quadhd - Hold signal. Only used for 4-bit (qio/qout) transactions.
- Device: A SPI slave. Each SPI slave has its own chip select (CS) line, which is made active when a transmission to/from the SPI slave occurs.
- Transaction: One instance of CS going active, data transfer from and/or to a device happening, and CS going inactive again. Transactions are atomic, as in they will never be interrupted by another transaction.

SPI transactions

A transaction on the SPI bus consists of five phases, any of which may be skipped:

- The command phase. In this phase, a command (0-16 bit) is clocked out.
- The address phase. In this phase, an address (0-64 bit) is clocked out.
- The read phase. The slave sends data to the master.
- The write phase. The master sends data to the slave.

In full duplex, the read and write phases are combined, causing the SPI host to read and write data simultaneously.

The command and address phase are optional in that not every SPI device will need to be sent a command and/or address. This is reflected in the device configuration: when the `command_bits` or `data_bits` fields are set to zero, no command or address phase is done.

Something similar is true for the read and write phase: not every transaction needs both data to be written as well as data to be read. When `rx_buffer` is NULL (and `SPI_USE_RXDATA`) is not set) the read phase is skipped. When `tx_buffer` is NULL (and `SPI_USE_TXDATA`) is not set) the write phase is skipped.

Using the `spi_master` driver

- Initialize a SPI bus by calling `spi_bus_initialize`. Make sure to set the correct IO pins in the `bus_config` struct. Take care to set signals that are not needed to -1.
- Tell the driver about a SPI slave device connected to the bus by calling `spi_bus_add_device`. Make sure to configure any timing requirements the device has in the `dev_config` structure. You should now have a handle for the device, to be used when sending it a transaction.
- To interact with the device, fill one or more `spi_transaction_t` structure with any transaction parameters you need. Either queue all transactions by calling `spi_device_queue_trans`, later querying the result using `spi_device_get_trans_result`, or handle all requests synchronously by feeding them into `spi_device_transmit`.
- Optional: to unload the driver for a device, call `spi_bus_remove_device` with the device handle as an argument
- Optional: to remove the driver for a bus, make sure no more drivers are attached and call `spi_bus_free`.

Transaction data

Normally, data to be transferred to or from a device will be read from or written to a chunk of memory indicated by the `rx_buffer` and `tx_buffer` members of the transaction structure. The SPI driver may decide to use DMA for transfers, so these buffers should be allocated in DMA-capable memory using `pvPortMallocCaps(size, MALLOC_CAP_DMA)`.

Sometimes, the amount of data is very small making it less than optimal allocating a separate buffer for it. If the data to be transferred is 32 bits or less, it can be stored in the transaction struct itself. For transmitted data, use the `tx_data` member for this and set the `SPI_USE_TXDATA` flag on the transmission. For received data, use `rx_data` and set `SPI_USE_RXDATA`. In both cases, do not touch the `tx_buffer` or `rx_buffer` members, because they use the same memory locations as `tx_data` and `rx_data`.

Application Example

Display graphics on the ILI9341-based 320x240 LCD: `peripherals/spi_master`.

API Reference - SPI Common

Header File

- `driver/include/driver/spi_common.h`

Functions

bool **spicommon_periph_claim** (*spi_host_device_t* host)

Try to claim a SPI peripheral.

Call this if your driver wants to manage a SPI peripheral.

Return True if peripheral is claimed successfully; false if peripheral already is claimed.

Parameters

- `host`: Peripheral to claim

bool **spicommon_periph_free** (*spi_host_device_t* host)

Return the SPI peripheral so another driver can claim it.

Return True if peripheral is returned successfully; false if peripheral was free to claim already.

Parameters

- `host`: Peripheral to claim

esp_err_t **spicommon_bus_initialize_io** (*spi_host_device_t* host, const *spi_bus_config_t* *bus_config, int dma_chan, int flags, bool *is_native)

Connect a SPI peripheral to GPIO pins.

This routine is used to connect a SPI peripheral to the IO-pads and DMA channel given in the arguments. Depending on the IO-pads requested, the routing is done either using the `IO_mux` or using the `GPIO` matrix.

Return

- `ESP_ERR_INVALID_ARG` if parameter is invalid

- ESP_OK on success

Parameters

- `host`: SPI peripheral to be routed
- `bus_config`: Pointer to a `spi_bus_config` struct detailing the GPIO pins
- `dma_chan`: DMA-channel (1 or 2) to use, or 0 for no DMA.
- `flags`: Combination of `SPICOMMON_BUSFLAG_*` flags
- `is_native`: A value of 'true' will be written to this address if the GPIOs can be routed using the `IO_mux`, 'false' if the GPIO matrix is used.

esp_err_t **spicommon_bus_free_io** (*spi_host_device_t host*)

Free the IO used by a SPI peripheral.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `host`: SPI peripheral to be freed

void **spicommon_cs_initialize** (*spi_host_device_t host*, int *cs_io_num*, int *cs_num*, int *force_gpio_matrix*)

Initialize a Chip Select pin for a specific SPI peripheral.

Parameters

- `host`: SPI peripheral
- `cs_io_num`: GPIO pin to route
- `cs_num`: CS id to route
- `force_gpio_matrix`: If true, CS will always be routed through the GPIO matrix. If false, if the GPIO number allows it, the routing will happen through the `IO_mux`.

void **spicommon_cs_free** (*spi_host_device_t host*, int *cs_num*)

Free a chip select line.

Parameters

- `host`: SPI peripheral
- `cs_num`: CS id to free

void **spicommon_setup_dma_desc_links** (*lldesc_t *dmdesc*, int *len*, const uint8_t **data*, bool *isrx*)

Setup a DMA link chain.

This routine will set up a chain of linked DMA descriptors in the array pointed to by `dmdesc`. Enough DMA descriptors will be used to fit the buffer of `len` bytes in, and the descriptors will point to the corresponding positions in `buffer` and linked together. The end result is that feeding `dmdesc[0]` into DMA hardware results in the entirety `len` bytes of `data` being read or written.

Parameters

- `dmdesc`: Pointer to array of DMA descriptors big enough to be able to convey `len` bytes

- `len`: Length of buffer
- `data`: Data buffer to use for DMA transfer
- `isrx`: True if data is to be written into `data`, false if it's to be read from `data`.

`spi_dev_t *spicommon_hw_for_host (spi_host_device_t host)`
Get the position of the hardware registers for a specific SPI host.

Return A register descriptor struct pointer, pointed at the hardware registers

Parameters

- `host`: The SPI host

`int spicommon_irqsource_for_host (spi_host_device_t host)`
Get the IRQ source for a specific SPI host.

Return The hosts IRQ source

Parameters

- `host`: The SPI host

`bool spicommon_dmaworkaround_req_reset (int dmachan, dmaworkaround_cb_t cb, void *arg)`
Request a reset for a certain DMA channel.

Essentially, when a reset is needed, a driver can request this using `spicommon_dmaworkaround_req_reset`. This is supposed to be called with an user-supplied function as an argument. If both DMA channels are idle, this call will reset the DMA subsystem and return true. If the other DMA channel is still busy, it will return false; as soon as the other DMA channel is done, however, it will reset the DMA subsystem and call the callback. The callback is then supposed to be used to continue the SPI drivers activity.

Note In some (well-defined) cases in the ESP32 (at least rev v.0 and v.1), a SPI DMA channel will get confused. This can be remedied by resetting the SPI DMA hardware in case this happens. Unfortunately, the reset knob used for this will reset *both* DMA channels, and as such can only be done safely when both DMA channels are idle. These functions coordinate this.

Return True when a DMA reset could be executed immediately. False when it could not; in this case the callback will be called with the specified argument when the logic can execute a reset, after that reset.

Parameters

- `dmachan`: DMA channel associated with the SPI host that needs a reset
- `cb`: Callback to call in case DMA channel cannot be reset immediately
- `arg`: Argument to the callback

`bool spicommon_dmaworkaround_reset_in_progress ()`
Check if a DMA reset is requested but has not completed yet.

Return True when a DMA reset is requested but hasn't completed yet. False otherwise.

`void spicommon_dmaworkaround_idle (int dmachan)`
Mark a DMA channel as idle.

A call to this function tells the workaround logic that this channel will not be affected by a global SPI DMA reset.

void **spicommon_dmaworkaround_transfer_active** (int *dmachan*)

Mark a DMA channel as active.

A call to this function tells the workaround logic that this channel will be affected by a global SPI DMA reset, and a reset like that should not be attempted.

Structures

struct spi_bus_config_t

This is a configuration structure for a SPI bus.

You can use this structure to specify the GPIO pins of the bus. Normally, the driver will use the GPIO matrix to route the signals. An exception is made when all signals either can be routed through the IO_MUX or are -1. In that case, the IO_MUX is used, allowing for >40MHz speeds.

Note Be advised that the slave driver does not use the quadwp/quadhd lines and fields in *spi_bus_config_t* referring to these lines will be ignored and can thus safely be left uninitialized.

Public Members

int **mosi_io_num**

GPIO pin for Master Out Slave In (=spi_d) signal, or -1 if not used.

int **miso_io_num**

GPIO pin for Master In Slave Out (=spi_q) signal, or -1 if not used.

int **sclk_io_num**

GPIO pin for Spi CLoCK signal, or -1 if not used.

int **quadwp_io_num**

GPIO pin for WP (Write Protect) signal which is used as D2 in 4-bit communication modes, or -1 if not used.

int **quadhd_io_num**

GPIO pin for HD (HoLD) signal which is used as D3 in 4-bit communication modes, or -1 if not used.

int **max_transfer_sz**

Maximum transfer size, in bytes. Defaults to 4094 if 0.

Macros

SPI_MAX_DMA_LEN (4096-4)

SPICOMMON_BUSFLAG_SLAVE 0

Initialize I/O in slave mode.

SPICOMMON_BUSFLAG_MASTER (1<<0)

Initialize I/O in master mode.

SPICOMMON_BUSFLAG_QUAD (1<<1)

Also initialize WP/HD pins, if specified.

Type Definitions

```
typedef void (*dmaworkaround_cb_t) (void *arg)
    Callback, to be called when a DMA engine reset is completed
```

Enumerations

```
enum spi_host_device_t
    Enum with the three SPI peripherals that are software-accessible in it.
```

Values:

```
SPI_HOST =0
    SPI1, SPI.
```

```
HSPI_HOST =1
    SPI2, HSPI.
```

```
VSPI_HOST =2
    SPI3, VSPI.
```

API Reference - SPI Master

Header File

- `driver/include/driver/spi_master.h`

Functions

```
esp_err_t spi_bus_initialize(spi_host_device_t host, const spi_bus_config_t *bus_config, int
    dma_chan)
```

Initialize a SPI bus.

Warning For now, only supports HSPI and VSPI.

Warning If a DMA channel is selected, any transmit and receive buffer used should be allocated in DMA-capable memory.

Return

- `ESP_ERR_INVALID_ARG` if configuration is invalid
- `ESP_ERR_INVALID_STATE` if host already is in use
- `ESP_ERR_NO_MEM` if out of memory
- `ESP_OK` on success

Parameters

- `host`: SPI peripheral that controls this bus
- `bus_config`: Pointer to a `spi_bus_config_t` struct specifying how the host should be initialized
- `dma_chan`: Either channel 1 or 2, or 0 in the case when no DMA is required. Selecting a DMA channel for a SPI bus allows transfers on the bus to have sizes only limited by the amount of internal memory. Selecting no DMA channel (by passing the value 0) limits the amount of bytes transferred to a maximum of 32.

esp_err_t **spi_bus_free** (*spi_host_device_t* host)

Free a SPI bus.

Warning In order for this to succeed, all devices have to be removed first.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_ERR_INVALID_STATE if not all devices on the bus are freed
- ESP_OK on success

Parameters

- host: SPI peripheral to free

esp_err_t **spi_bus_add_device** (*spi_host_device_t* host, *spi_device_interface_config_t* *dev_config, *spi_device_handle_t* *handle)

Allocate a device on a SPI bus.

This initializes the internal structures for a device, plus allocates a CS pin on the indicated SPI master peripheral and routes it to the indicated GPIO. All SPI master devices have three CS pins and can thus control up to three devices.

Note While in general, speeds up to 80MHz on the dedicated SPI pins and 40MHz on GPIO-matrix-routed pins are supported, full-duplex transfers routed over the GPIO matrix only support speeds up to 26MHz.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_ERR_NOT_FOUND if host doesn't have any free CS slots
- ESP_ERR_NO_MEM if out of memory
- ESP_OK on success

Parameters

- host: SPI peripheral to allocate device on
- dev_config: SPI interface protocol config for the device
- handle: Pointer to variable to hold the device handle

esp_err_t **spi_bus_remove_device** (*spi_device_handle_t* handle)

Remove a device from the SPI bus.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_ERR_INVALID_STATE if device already is freed
- ESP_OK on success

Parameters

- handle: Device handle to free

esp_err_t **spi_device_queue_trans** (*spi_device_handle_t* handle, *spi_transaction_t* *trans_desc, TickType_t ticks_to_wait)

Queue a SPI transaction for execution.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `handle`: Device handle obtained using `spi_host_add_dev`
- `trans_desc`: Description of transaction to execute
- `ticks_to_wait`: Ticks to wait until there's room in the queue; use `portMAX_DELAY` to never time out.

`esp_err_t spi_device_get_trans_result` (*spi_device_handle_t* `handle`, *spi_transaction_t* `**trans_desc`, *TickType_t* `ticks_to_wait`)

Get the result of a SPI transaction queued earlier.

This routine will wait until a transaction to the given device (queued earlier with `spi_device_queue_trans`) has successfully completed. It will then return the description of the completed transaction so software can inspect the result and e.g. free the memory or re-use the buffers.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `handle`: Device handle obtained using `spi_host_add_dev`
- `trans_desc`: Pointer to variable able to contain a pointer to the description of the transaction that is executed
- `ticks_to_wait`: Ticks to wait until there's a returned item; use `portMAX_DELAY` to never time out.

`esp_err_t spi_device_transmit` (*spi_device_handle_t* `handle`, *spi_transaction_t* `*trans_desc`)

Do a SPI transaction.

Essentially does the same as `spi_device_queue_trans` followed by `spi_device_get_trans_result`. Do not use this when there is still a transaction queued that hasn't been finalized using `spi_device_get_trans_result`.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `handle`: Device handle obtained using `spi_host_add_dev`
- `trans_desc`: Pointer to variable able to contain a pointer to the description of the transaction that is executed

Structures

`struct spi_device_interface_config_t`

This is a configuration for a SPI slave device that is connected to one of the SPI buses.

Public Members

`uint8_t command_bits`

Amount of bits in command phase (0-16)

`uint8_t address_bits`

Amount of bits in address phase (0-64)

`uint8_t dummy_bits`

Amount of dummy bits to insert between address and data phase.

`uint8_t mode`

SPI mode (0-3)

`uint8_t duty_cycle_pos`

Duty cycle of positive clock, in 1/256th increments (128 = 50%/50% duty). Setting this to 0 (=not setting it) is equivalent to setting this to 128.

`uint8_t cs_ena_pretrans`

Amount of SPI bit-cycles the cs should be activated before the transmission (0-16). This only works on half-duplex transactions.

`uint8_t cs_ena_posttrans`

Amount of SPI bit-cycles the cs should stay active after the transmission (0-16)

`int clock_speed_hz`

Clock speed, in Hz.

`int spics_io_num`

CS GPIO pin for this device, or -1 if not used.

`uint32_t flags`

Bitwise OR of `SPI_DEVICE_*` flags.

`int queue_size`

Transaction queue size. This sets how many transactions can be ‘in the air’ (queued using `spi_device_queue_trans` but not yet finished using `spi_device_get_trans_result`) at the same time.

`transaction_cb_t pre_cb`

Callback to be called before a transmission is started. This callback is called within interrupt context.

`transaction_cb_t post_cb`

Callback to be called after a transmission has completed. This callback is called within interrupt context.

`struct spi_transaction_t`

This structure describes one SPI transaction

Public Members

`uint32_t flags`

Bitwise OR of `SPI_TRANS_*` flags.

`uint16_t command`

Command data. Specific length was given when device was added to the bus.

`uint64_t address`

Address. Specific length was given when device was added to the bus.

`size_t length`

Total data length, in bits.

size_t rxlength
Total data length received, if different from length. (0 defaults this to the value of length)

void *user
User-defined variable. Can be used to store eg transaction ID.

const void *tx_buffer
Pointer to transmit buffer, or NULL for no MOSI phase.

uint8_t tx_data[4]
If SPI_USE_TXDATA is set, data set here is sent directly from this variable.

void *rx_buffer
Pointer to receive buffer, or NULL for no MISO phase.

uint8_t rx_data[4]
If SPI_USE_RXDATA is set, data is received directly to this variable.

Macros

SPI_DEVICE_TXBIT_LSBFIRST (1<<0)
Transmit command/address/data LSB first instead of the default MSB first.

SPI_DEVICE_RXBIT_LSBFIRST (1<<1)
Receive data LSB first instead of the default MSB first.

SPI_DEVICE_BIT_LSBFIRST (SPI_TXBIT_LSBFIRST|SPI_RXBIT_LSBFIRST);
Transmit and receive LSB first.

SPI_DEVICE_3WIRE (1<<2)
Use MOSI (=spid) for both sending and receiving data.

SPI_DEVICE_POSITIVE_CS (1<<3)
Make CS positive during a transaction instead of negative.

SPI_DEVICE_HALFDUPLEX (1<<4)
Transmit data before receiving it, instead of simultaneously.

SPI_DEVICE_CLK_AS_CS (1<<5)
Output clock on CS line if CS is active.

SPI_TRANS_MODE_DIO (1<<0)
Transmit/receive data in 2-bit mode.

SPI_TRANS_MODE_QIO (1<<1)
Transmit/receive data in 4-bit mode.

SPI_TRANS_MODE_DIOQIO_ADDR (1<<2)
Also transmit address in mode selected by SPI_MODE_DIO/SPI_MODE_QIO.

SPI_TRANS_USE_RXDATA (1<<2)
Receive into rx_data member of *spi_transaction_t* instead into memory at rx_buffer.

SPI_TRANS_USE_TXDATA (1<<3)
Transmit tx_data member of *spi_transaction_t* instead of data at tx_buffer. Do not set tx_buffer when using this.

Type Definitions

typedef struct spi_transaction_t spi_transaction_t

```
typedef void (*transaction_cb_t) (spi_transaction_t *trans)
```

```
typedef struct spi_device_t *spi_device_handle_t  
    Handle for a device on a SPI bus.
```

SPI Slave driver

Overview

The ESP32 has four SPI peripheral devices, called SPI0, SPI1, HSPI and VSPI. SPI0 is entirely dedicated to the flash cache the ESP32 uses to map the SPI flash device it is connected to into memory. SPI1 is connected to the same hardware lines as SPI0 and is used to write to the flash chip. HSPI and VSPI are free to use, and with the `spi_slave` driver, these can be used as a SPI slave, driven from a connected SPI master.

The `spi_slave` driver

The `spi_slave` driver allows using the HSPI and/or VSPI peripheral as a full-duplex SPI slave. It can make use of DMA to send/receive transactions of arbitrary length.

Terminology

The `spi_slave` driver uses the following terms:

- Host: The SPI peripheral inside the ESP32 initiating the SPI transmissions. One of HSPI or VSPI.
- Bus: The SPI bus, common to all SPI devices connected to a master. In general the bus consists of the `miso`, `mosi`, `sclk` and optionally `quadwp` and `quadhd` signals. The SPI slaves are connected to these signals in parallel. Each SPI slave is also connected to one CS signal.
 - `miso` - Also known as `q`, this is the output of the serial stream from the ESP32 to the SPI master
 - `mosi` - Also known as `d`, this is the output of the serial stream from the SPI master to the ESP32
 - `sclk` - Clock signal. Each data bit is clocked out or in on the positive or negative edge of this signal
 - `cs` - Chip Select. An active Chip Select delineates a single transaction to/from a slave.
- Transaction: One instance of CS going active, data transfer from and to a master happening, and CS going inactive again. Transactions are atomic, as in they will never be interrupted by another transaction.

SPI transactions

A full-duplex SPI transaction starts with the master pulling CS low. After this happens, the master starts sending out clock pulses on the CLK line: every clock pulse causes a data bit to be shifted from the master to the slave on the MOSI line and vice versa on the MISO line. At the end of the transaction, the master makes CS high again.

Using the `spi_slave` driver

- Initialize a SPI peripheral as a slave by calling `spi_slave_initialize`. Make sure to set the correct IO pins in the `bus_config` struct. Take care to set signals that are not needed to -1. A DMA channel (either 1 or 2) must be given if transactions will be larger than 32 bytes, if not the `dma_chan` parameter may be 0.

- To set up a transaction, fill one or more `spi_transaction_t` structure with any transaction parameters you need. Either queue all transactions by calling `spi_slave_queue_trans`, later quering the result using `spi_slave_get_trans_result`, or handle all requests synchronously by feeding them into `spi_slave_transmit`. The latter two functions will block until the master has initiated and finished a transaction, causing the queued data to be sent and received.
- Optional: to unload the SPI slave driver, call `spi_slave_free`.

Transaction data and master/slave length mismatches

Normally, data to be transferred to or from a device will be read from or written to a chunk of memory indicated by the `rx_buffer` and `tx_buffer` members of the transaction structure. The SPI driver may decide to use DMA for transfers, so these buffers should be allocated in DMA-capable memory using `pvPortMallocCaps(size, MALLOC_CAP_DMA)`.

The amount of data written to the buffers is limited by the `length` member of the transaction structure: the driver will never read/write more data than indicated there. The `length` cannot define the actual length of the SPI transaction; this is determined by the master as it drives the clock and CS lines. In case the length of the transmission is larger than the buffer length, only the start of the transmission will be sent and received. In case the transmission length is shorter than the buffer length, only data up to the length of the buffer will be exchanged.

Warning: Due to a design peculiarity in the ESP32, if the amount of bytes sent by the master or the length of the transmission queues in the slave driver, in bytes, is not both larger than eight and dividable by four, the SPI hardware can fail to write the last one to seven bytes to the receive buffer.

Application Example

Slave/master communication: [peripherals/spi_slave](#).

API Reference

Header File

- `driver/include/driver/spi_slave.h`

Functions

`esp_err_t spi_slave_initialize` (*spi_host_device_t* host, **const** *spi_bus_config_t* *bus_config, **const** *spi_slave_interface_config_t* *slave_config, int dma_chan)
Initialize a SPI bus as a slave interface.

Warning For now, only supports HSPI and VSPI.

Warning If a DMA channel is selected, any transmit and receive buffer used should be allocated in DMA-capable memory.

Return

- `ESP_ERR_INVALID_ARG` if configuration is invalid
- `ESP_ERR_INVALID_STATE` if host already is in use
- `ESP_ERR_NO_MEM` if out of memory
- `ESP_OK` on success

Parameters

- `host`: SPI peripheral to use as a SPI slave interface
- `bus_config`: Pointer to a `spi_bus_config_t` struct specifying how the host should be initialized
- `slave_config`: Pointer to a `spi_slave_interface_config_t` struct specifying the details for the slave interface
- `dma_chan`: Either 1 or 2. A SPI bus used by this driver must have a DMA channel associated with it. The SPI hardware has two DMA channels to share. This parameter indicates which one to use.

`esp_err_t spi_slave_free` (`spi_host_device_t host`)

Free a SPI bus claimed as a SPI slave interface.

Return

- `ESP_ERR_INVALID_ARG` if parameter is invalid
- `ESP_ERR_INVALID_STATE` if not all devices on the bus are freed
- `ESP_OK` on success

Parameters

- `host`: SPI peripheral to free

`esp_err_t spi_slave_queue_trans` (`spi_host_device_t host`, `const spi_slave_transaction_t *trans_desc`, `TickType_t ticks_to_wait`)

Queue a SPI transaction for execution.

Queues a SPI transaction to be executed by this slave device. (The transaction queue size was specified when the slave device was initialised via `spi_slave_initialize`.) This function may block if the queue is full (depending on the `ticks_to_wait` parameter). No SPI operation is directly initiated by this function, the next queued transaction will happen when the master initiates a SPI transaction by pulling down CS and sending out clock signals.

This function hands over ownership of the buffers in `trans_desc` to the SPI slave driver; the application is not to access this memory until `spi_slave_queue_trans` is called to hand ownership back to the application.

Return

- `ESP_ERR_INVALID_ARG` if parameter is invalid
- `ESP_OK` on success

Parameters

- `host`: SPI peripheral that is acting as a slave
- `trans_desc`: Description of transaction to execute. Not const because we may want to write status back into the transaction description.
- `ticks_to_wait`: Ticks to wait until there's room in the queue; use `portMAX_DELAY` to never time out.

`esp_err_t spi_slave_get_trans_result` (`spi_host_device_t host`, `spi_slave_transaction_t **trans_desc`, `TickType_t ticks_to_wait`)

Get the result of a SPI transaction queued earlier.

This routine will wait until a transaction to the given device (queued earlier with `spi_slave_queue_trans`) has successfully completed. It will then return the description of the completed transaction so software can inspect the result and e.g. free the memory or re-use the buffers.

It is mandatory to eventually use this function for any transaction queued by `spi_slave_queue_trans`.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `host`: SPI peripheral to that is acting as a slave
- `trans_desc`: Pointer to variable able to contain a pointer to the description of the transaction that is executed
- `ticks_to_wait`: Ticks to wait until there's a returned item; use `portMAX_DELAY` to never time out.

`esp_err_t spi_slave_transmit` (*spi_host_device_t* `host`, *spi_slave_transaction_t* *`trans_desc`, *TickType_t* `ticks_to_wait`)

Do a SPI transaction.

Essentially does the same as `spi_slave_queue_trans` followed by `spi_slave_get_trans_result`. Do not use this when there is still a transaction queued that hasn't been finalized using `spi_slave_get_trans_result`.

Return

- ESP_ERR_INVALID_ARG if parameter is invalid
- ESP_OK on success

Parameters

- `host`: SPI peripheral to that is acting as a slave
- `trans_desc`: Pointer to variable able to contain a pointer to the description of the transaction that is executed. Not const because we may want to write status back into the transaction description.
- `ticks_to_wait`: Ticks to wait until there's a returned item; use `portMAX_DELAY` to never time out.

Structures

struct spi_slave_interface_config_t

This is a configuration for a SPI host acting as a slave device.

Public Members

`int spics_io_num`
CS GPIO pin for this device.

`uint32_t flags`
Bitwise OR of `SPI_SLAVE_*` flags.

`int queue_size`
Transaction queue size. This sets how many transactions can be 'in the air' (queued using `spi_slave_queue_trans` but not yet finished using `spi_slave_get_trans_result`) at the same time.

`uint8_t mode`
SPI mode (0-3)

`slave_transaction_cb_t post_setup_cb`
Callback called after the SPI registers are loaded with new data.

slave_transaction_cb_t **post_trans_cb**
 Callback called after a transaction is done.

struct spi_slave_transaction_t
 This structure describes one SPI transaction

Public Members

size_t **length**
 Total data length, in bits.

const void ***tx_buffer**
 Pointer to transmit buffer, or NULL for no MOSI phase.

void ***rx_buffer**
 Pointer to receive buffer, or NULL for no MISO phase.

void ***user**
 User-defined variable. Can be used to store eg transaction ID.

Macros

SPI_SLAVE_TXBIT_LSBFIRST (1<<0)
 Transmit command/address/data LSB first instead of the default MSB first.

SPI_SLAVE_RXBIT_LSBFIRST (1<<1)
 Receive data LSB first instead of the default MSB first.

SPI_SLAVE_BIT_LSBFIRST (SPI_TXBIT_LSBFIRST|SPI_RXBIT_LSBFIRST);
 Transmit and receive LSB first.

Type Definitions

typedef struct *spi_slave_transaction_t* **spi_slave_transaction_t**

typedef void (***slave_transaction_cb_t**) (*spi_slave_transaction_t* *trans)

TIMER

Overview

ESP32 chip contains two hardware timer groups, each containing two general-purpose hardware timers. They are all 64-bit generic timers based on 16-bit prescalers and 64-bit auto-reload-capable up/down counters.

Application Example

64-bit hardware timer example: [peripherals/timer_group](#).

API Reference

Header File

- `driver/include/driver/timer.h`

Functions

`esp_err_t timer_get_counter_value` (*timer_group_t* group_num, *timer_idx_t* timer_num, `uint64_t` *timer_val)

Read the counter value of hardware timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group, 0 for `TIMERG0` or 1 for `TIMERG1`
- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `timer_val`: Pointer to accept timer counter value.

`esp_err_t timer_get_counter_time_sec` (*timer_group_t* group_num, *timer_idx_t* timer_num, `double` *time)

Read the counter value of hardware timer, in unit of a given scale.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group, 0 for `TIMERG0` or 1 for `TIMERG1`
- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `time`: Pointer, type of `double*`, to accept timer counter value, in seconds.

`esp_err_t timer_set_counter_value` (*timer_group_t* group_num, *timer_idx_t* timer_num, `uint64_t` load_val)

Set counter value to hardware timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group, 0 for `TIMERG0` or 1 for `TIMERG1`
- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `load_val`: Counter value to write to the hardware timer.

`esp_err_t timer_start(timer_group_t group_num, timer_idx_t timer_num)`
 Start the counter of hardware timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]

`esp_err_t timer_pause(timer_group_t group_num, timer_idx_t timer_num)`
 Pause the counter of hardware timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]

`esp_err_t timer_set_counter_mode(timer_group_t group_num, timer_idx_t timer_num, timer_count_dir_t counter_dir)`
 Set counting mode for hardware timer.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]
- counter_dir: Counting direction of timer, count-up or count-down

`esp_err_t timer_set_auto_reload(timer_group_t group_num, timer_idx_t timer_num, timer_autoreload_t reload)`
 Enable or disable counter reload function when alarm event occurs.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]
- reload: Counter reload mode.

`esp_err_t timer_set_divider` (*timer_group_t* group_num, *timer_idx_t* timer_num, *uint16_t* divider)
Set hardware timer source clock divider. Timer groups clock are divider from APB clock.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]
- divider: Timer clock divider value.

`esp_err_t timer_set_alarm_value` (*timer_group_t* group_num, *timer_idx_t* timer_num, *uint64_t* alarm_value)
Set timer alarm value.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]
- alarm_value: A 64-bit value to set the alarm value.

`esp_err_t timer_get_alarm_value` (*timer_group_t* group_num, *timer_idx_t* timer_num, *uint64_t* *alarm_value)
Get timer alarm value.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group, 0 for TIMERG0 or 1 for TIMERG1
- timer_num: Timer index, 0 for hw_timer[0] & 1 for hw_timer[1]
- alarm_value: Pointer of A 64-bit value to accept the alarm value.

`esp_err_t timer_set_alarm` (*timer_group_t* group_num, *timer_idx_t* timer_num, *timer_alarm_t* alarm_en)
Get timer alarm value.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- group_num: Timer group, 0 for TIMERG0 or 1 for TIMERG1

- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `alarm_en`: To enable or disable timer alarm function.

`esp_err_t timer_isr_register` (*timer_group_t* group_num, *timer_idx_t* timer_num, void (*fn)) void *, void *arg, int intr_alloc_flags, *timer_isr_handle_t* *handle register Timer interrupt handler, the handler is an ISR. The handler will be attached to the same CPU core that this function is running on.

Note In case the this is called with the INIRAM flag, code inside the handler function can only call functions in IRAM, so it cannot call other timer APIs. Use direct register access to access timers from inside the ISR in this case.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Function pointer error.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group number
- `timer_num`: Timer index of timer group
- `fn`: Interrupt handler function.

Parameters

- `arg`: Parameter for handler function
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `handle`: Pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

`esp_err_t timer_init` (*timer_group_t* group_num, *timer_idx_t* timer_num, **const** *timer_config_t* *config) Initializes and configure the timer.

Return

- `ESP_OK` Success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group number, 0 for `TIMERG0` or 1 for `TIMERG1`
- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `config`: Pointer to timer initialization parameters.

`esp_err_t timer_get_config` (*timer_group_t* group_num, *timer_idx_t* timer_num, *timer_config_t* *config) Get timer configure value.

Return

- `ESP_OK` Success

- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `group_num`: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- `timer_num`: Timer index, 0 for `hw_timer[0]` & 1 for `hw_timer[1]`
- `config`: Pointer of struct to accept timer parameters.

`esp_err_t timer_group_intr_enable` (*timer_group_t* `group_num`, `uint32_t` `en_mask`)
Enable timer group interrupt, by enable mask.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `group_num`: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- `en_mask`: Timer interrupt enable mask. Use `TIMG_T0_INT_ENA_M` to enable t0 interrupt Use `TIMG_T1_INT_ENA_M` to enable t1 interrupt

`esp_err_t timer_group_intr_disable` (*timer_group_t* `group_num`, `uint32_t` `disable_mask`)
Disable timer group interrupt, by disable mask.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `group_num`: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- `disable_mask`: Timer interrupt disable mask. Use `TIMG_T0_INT_ENA_M` to disable t0 interrupt Use `TIMG_T1_INT_ENA_M` to disable t1 interrupt

`esp_err_t timer_enable_intr` (*timer_group_t* `group_num`, *timer_idx_t* `timer_num`)
Enable timer interrupt.

Return

- ESP_OK Success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- `group_num`: Timer group number, 0 for TIMERG0 or 1 for TIMERG1
- `timer_num`: Timer index.

`esp_err_t timer_disable_intr` (*timer_group_t* `group_num`, *timer_idx_t* `timer_num`)
Disable timer interrupt.

Return

- ESP_OK Success

- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `group_num`: Timer group number, 0 for `TIMERG0` or 1 for `TIMERG1`
- `timer_num`: Timer index.

Structures

struct `timer_config_t`
timer configure struct

Public Members

bool **alarm_en**
Timer alarm enable

bool **counter_en**
Counter enable

timer_intr_mode_t **intr_type**
Interrupt mode

timer_count_dir_t **counter_dir**
Counter direction

bool **auto_reload**
Timer auto-reload

uint16_t **divider**
Counter clock divider

Macros

TIMER_BASE_CLK (`APB_CLK_FREQ`)

Type Definitions

typedef *intr_handle_t* **timer_isr_handle_t**
Interrupt handle, used in order to free the isr after use. Aliases to an int handle for now.

Enumerations

enum `timer_group_t`
Selects a Timer-Group out of 2 available groups.

Values:

TIMER_GROUP_0 = 0
Hw timer group 0

TIMER_GROUP_1 = 1
Hw timer group 1

TIMER_GROUP_MAX

enum timer_idx_t

Select a hardware timer from timer groups.

Values:

TIMER_0 = 0

Select timer0 of GROUPx

TIMER_1 = 1

Select timer1 of GROUPx

TIMER_MAX

enum timer_count_dir_t

Decides the direction of counter.

Values:

TIMER_COUNT_DOWN = 0

Descending Count from cnt.hightcnt.low

TIMER_COUNT_UP = 1

Ascending Count from Zero

TIMER_COUNT_MAX

enum timer_start_t

Decides whether timer is on or paused.

Values:

TIMER_PAUSE = 0

Pause timer counter

TIMER_START = 1

Start timer counter

enum timer_alarm_t

Decides whether to enable alarm mode.

Values:

TIMER_ALARM_DIS = 0

Disable timer alarm

TIMER_ALARM_EN = 1

Enable timer alarm

TIMER_ALARM_MAX

enum timer_intr_mode_t

Select interrupt type if running in alarm mode.

Values:

TIMER_INTR_LEVEL = 0

Interrupt mode: level mode

TIMER_INTR_MAX

enum timer_autoreload_t

Select if Alarm needs to be loaded by software or automatically reload by hardware.

Values:

TIMER_AUTORELOAD_DIS = 0

Disable auto-reload: hardware will not load counter value after an alarm event

TIMER_AUTORELOAD_EN = 1

Enable auto-reload: hardware will load counter value after an alarm event

TIMER_AUTORELOAD_MAX

UART

Overview

Instructions

Application Example

Configure uart settings and install uart driver to read/write using UART0 and UART1 interfaces: [peripherals/uart](#).

API Reference

Header File

- `driver/include/driver/uart.h`

Functions

`esp_err_t uart_set_word_length(uart_port_t uart_num, uart_word_length_t data_bit)`

Set UART data bits.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `data_bit`: UART data bits

`esp_err_t uart_get_word_length(uart_port_t uart_num, uart_word_length_t *data_bit)`

Get UART data bits.

Return

- ESP_FAIL Parameter error
- ESP_OK Success, result will be put in (`*data_bit`)

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `data_bit`: Pointer to accept value of UART data bits.

`esp_err_t uart_set_stop_bits (uart_port_t uart_num, uart_stop_bits_t stop_bits)`
Set UART stop bits.

Return

- ESP_OK Success
- ESP_FAIL Fail

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `stop_bits`: UART stop bits

`esp_err_t uart_get_stop_bits (uart_port_t uart_num, uart_stop_bits_t *stop_bits)`
Set UART stop bits.

Return

- ESP_FAIL Parameter error
- ESP_OK Success, result will be put in (*stop_bit)

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `stop_bits`: Pointer to accept value of UART stop bits.

`esp_err_t uart_set_parity (uart_port_t uart_num, uart_parity_t parity_mode)`
Set UART parity.

Return

- ESP_FAIL Parameter error
- ESP_OK Success

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `parity_mode`: the enum of uart parity configuration

`esp_err_t uart_get_parity (uart_port_t uart_num, uart_parity_t *parity_mode)`
Get UART parity mode.

Return

- ESP_FAIL Parameter error
- ESP_OK Success, result will be put in (*parity_mode)

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `parity_mode`: Pointer to accept value of UART parity mode.

`esp_err_t uart_set_baudrate (uart_port_t uart_num, uint32_t baudrate)`
Set UART baud rate.

Return

- ESP_FAIL Parameter error
- ESP_OK Success

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `baudrate`: UART baud rate.

`esp_err_t uart_get_baudrate (uart_port_t uart_num, uint32_t *baudrate)`
Get UART bit-rate.

Return

- ESP_FAIL Parameter error
- ESP_OK Success, result will be put in (*baudrate)

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `baudrate`: Pointer to accept value of UART baud rate

`esp_err_t uart_set_line_inverse (uart_port_t uart_num, uint32_t inverse_mask)`
Set UART line inverse mode.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `inverse_mask`: Choose the wires that need to be inverted. `inverse_mask` should be chosen from UART_INVERSE_RXD/UART_INVERSE_TXD/UART_INVERSE_RTS/UART_INVERSE_CTS, combine with OR operation.

`esp_err_t uart_set_hw_flow_ctrl (uart_port_t uart_num, uart_hw_flowcontrol_t flow_ctrl, uint8_t rx_thresh)`

Set hardware flow control.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `flow_ctrl`: Hardware flow control mode
- `rx_thresh`: Threshold of Hardware RX flow control(0 ~ UART_FIFO_LEN). Only when UART_HW_FLOWCTRL_RTS is set, will the `rx_thresh` value be set.

`esp_err_t uart_get_hw_flow_ctrl (uart_port_t uart_num, uart_hw_flowcontrol_t *flow_ctrl)`
Get hardware flow control mode.

Return

- ESP_FAIL Parameter error
- ESP_OK Success, result will be put in (*flow_ctrl)

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `flow_ctrl`: Option for different flow control mode.

`esp_err_t uart_clear_intr_status` (*uart_port_t* `uart_num`, `uint32_t` `clr_mask`)
Clear UART interrupt status.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `clr_mask`: Bit mask of the status that to be cleared. `enable_mask` should be chosen from the fields of register UART_INT_CLR_REG.

`esp_err_t uart_enable_intr_mask` (*uart_port_t* `uart_num`, `uint32_t` `enable_mask`)
Set UART interrupt enable.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `enable_mask`: Bit mask of the enable bits. `enable_mask` should be chosen from the fields of register UART_INT_ENA_REG.

`esp_err_t uart_disable_intr_mask` (*uart_port_t* `uart_num`, `uint32_t` `disable_mask`)
Clear UART interrupt enable bits.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `disable_mask`: Bit mask of the disable bits. `disable_mask` should be chosen from the fields of register UART_INT_ENA_REG.

`esp_err_t uart_enable_rx_intr` (*uart_port_t* `uart_num`)
Enable UART RX interrupt(RX_FULL & RX_TIMEOUT INTERRUPT)

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2

`esp_err_t uart_disable_rx_intr (uart_port_t uart_num)`
 Disable UART RX interrupt(RX_FULL & RX_TIMEOUT INTERRUPT)

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2

`esp_err_t uart_disable_tx_intr (uart_port_t uart_num)`
 Disable UART TX interrupt(RX_FULL & RX_TIMEOUT INTERRUPT)

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2

`esp_err_t uart_enable_tx_intr (uart_port_t uart_num, int enable, int thresh)`
 Enable UART TX interrupt(RX_FULL & RX_TIMEOUT INTERRUPT)

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `enable`: 1: enable; 0: disable
- `thresh`: Threshold of TX interrupt, 0 ~ UART_FIFO_LEN

`esp_err_t uart_isr_register (uart_port_t uart_num, void (*fn) void *, void *arg, int intr_alloc_flags, uart_isr_handle_t *handler)` register UART interrupt handler(ISR).

Note UART ISR handler will be attached to the same CPU core that this function is running on.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2

- `fn`: Interrupt handler function.
- `arg`: parameter for handler function
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info.
- `handle`: Pointer to return handle. If non-NULL, a handle for the interrupt will be returned here.

`esp_err_t uart_isr_free` (*uart_port_t* *uart_num*)

Free UART interrupt handler registered by `uart_isr_register`. Must be called on the same core as `uart_isr_register` was called.

Return

- `ESP_OK` Success
- `ESP_FAIL` Parameter error

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`

`esp_err_t uart_set_pin` (*uart_port_t* *uart_num*, *int* *tx_io_num*, *int* *rx_io_num*, *int* *rts_io_num*, *int* *cts_io_num*)

Set UART pin number.

Note Internal signal can be output to multiple GPIO pads. Only one GPIO pad can connect with input signal.

Return

- `ESP_OK` Success
- `ESP_FAIL` Parameter error

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`
- `tx_io_num`: UART TX pin GPIO number, if set to `UART_PIN_NO_CHANGE`, use the current pin.
- `rx_io_num`: UART RX pin GPIO number, if set to `UART_PIN_NO_CHANGE`, use the current pin.
- `rts_io_num`: UART RTS pin GPIO number, if set to `UART_PIN_NO_CHANGE`, use the current pin.
- `cts_io_num`: UART CTS pin GPIO number, if set to `UART_PIN_NO_CHANGE`, use the current pin.

`esp_err_t uart_set_rts` (*uart_port_t* *uart_num*, *int* *level*)

UART set RTS level (before inverse) UART rx hardware flow control should not be set.

Return

- `ESP_OK` Success
- `ESP_FAIL` Parameter error

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`
- `level`: 1: RTS output low(active); 0: RTS output high(block)

esp_err_t **uart_set_dtr** (*uart_port_t* uart_num, int level)
 UART set DTR level (before inverse)

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- uart_num: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- level: 1: DTR output low; 0: DTR output high

esp_err_t **uart_param_config** (*uart_port_t* uart_num, const *uart_config_t* *uart_config)
 UART parameter configure.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- uart_num: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- uart_config: UART parameter settings

esp_err_t **uart_intr_config** (*uart_port_t* uart_num, const *uart_intr_config_t* *intr_conf)
 UART interrupt configure.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- uart_num: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- intr_conf: UART interrupt settings

esp_err_t **uart_driver_install** (*uart_port_t* uart_num, int rx_buffer_size, int tx_buffer_size, int queue_size, QueueHandle_t *uart_queue, int intr_alloc_flags)
 Install UART driver.

Install UART driver.

UART ISR handler will be attached to the same CPU core that this function is running on.

Note tx_buffer_size should be greater than UART_FIFO_LEN.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- uart_num: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- rx_buffer_size: UART RX ring buffer size, rx_buffer_size should be greater than UART_FIFO_LEN.

- `tx_buffer_size`: UART TX ring buffer size. If set to zero, driver will not use TX buffer, TX function will block task until all data have been sent out..

Parameters

- `queue_size`: UART event queue size/depth.
- `uart_queue`: UART event queue handle (out param). On success, a new queue handle is written here to provide access to UART events. If set to NULL, driver will not use an event queue.
- `intr_alloc_flags`: Flags used to allocate the interrupt. One or multiple (ORred) `ESP_INTR_FLAG_*` values. See `esp_intr_alloc.h` for more info. Do not set `ESP_INTR_FLAG_IRAM` here (the driver's ISR handler is not located in IRAM)

`esp_err_t uart_driver_delete` (*uart_port_t* *uart_num*)

Uninstall UART driver.

Return

- `ESP_OK` Success
- `ESP_FAIL` Parameter error

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`

`esp_err_t uart_wait_tx_done` (*uart_port_t* *uart_num*, `TickType_t` *ticks_to_wait*)

Wait UART TX FIFO empty.

Return

- `ESP_OK` Success
- `ESP_FAIL` Parameter error
- `ESP_ERR_TIMEOUT` Timeout

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`
- `ticks_to_wait`: Timeout, count in RTOS ticks

`int uart_tx_chars` (*uart_port_t* *uart_num*, `const` `char` **buffer*, `uint32_t` *len*)

Send data to the UART port from a given buffer and length.

This function will not wait for the space in TX FIFO, just fill the TX FIFO and return when the FIFO is full.

Note This function should only be used when UART TX buffer is not enabled.

Return

- (-1) Parameter error
- OTHERS(>=0) The number of data that pushed to the TX FIFO

Parameters

- `uart_num`: `UART_NUM_0`, `UART_NUM_1` or `UART_NUM_2`
- `buffer`: data buffer address
- `len`: data length to send

int **uart_write_bytes** (*uart_port_t* *uart_num*, const char **src*, size_t *size*)

Send data to the UART port from a given buffer and length,.

If parameter `tx_buffer_size` is set to zero: This function will not return until all the data have been sent out, or at least pushed into TX FIFO.

Otherwise, if `tx_buffer_size > 0`, this function will return after copying all the data to tx ringbuffer, then, UART ISR will move data from ring buffer to TX FIFO gradually.

Return

- (-1) Parameter error
- OTHERS(>=0) The number of data that pushed to the TX FIFO

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `src`: data buffer address
- `size`: data length to send

int **uart_write_bytes_with_break** (*uart_port_t* *uart_num*, const char **src*, size_t *size*, int *brk_len*)

Send data to the UART port from a given buffer and length,.

If parameter `tx_buffer_size` is set to zero: This function will not return until all the data and the break signal have been sent out. After all data send out, send a break signal.

Otherwise, if `tx_buffer_size > 0`, this function will return after copying all the data to tx ringbuffer, then, UART ISR will move data from ring buffer to TX FIFO gradually. After all data send out, send a break signal.

Return

- (-1) Parameter error
- OTHERS(>=0) The number of data that pushed to the TX FIFO

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `src`: data buffer address
- `size`: data length to send
- `brk_len`: break signal length (unit: time of one data bit at `current_baudrate`)

int **uart_read_bytes** (*uart_port_t* *uart_num*, uint8_t **buf*, uint32_t *length*, TickType_t *ticks_to_wait*)

UART read bytes from UART buffer.

Return

- (-1) Error
- Others return a char data from uart fifo.

Parameters

- `uart_num`: UART_NUM_0, UART_NUM_1 or UART_NUM_2
- `buf`: pointer to the buffer.
- `length`: data length
- `ticks_to_wait`: sTimeout, count in RTOS ticks

esp_err_t **uart_flush**(*uart_port_t* *uart_num*)
UART ring buffer flush.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *uart_num*: UART_NUM_0, UART_NUM_1 or UART_NUM_2

esp_err_t **uart_get_buffered_data_len**(*uart_port_t* *uart_num*, *size_t* **size*)
UART get RX ring buffer cached data length.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *uart_num*: UART port number.
- *size*: Pointer of *size_t* to accept cached data length

esp_err_t **uart_disable_pattern_det_intr**(*uart_port_t* *uart_num*)
UART disable pattern detect function. Designed for applications like 'AT commands'. When the hardware detect a series of one same character, the interrupt will be triggered.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *uart_num*: UART port number.

esp_err_t **uart_enable_pattern_det_intr**(*uart_port_t* *uart_num*, *char* *pattern_chr*, *uint8_t* *chr_num*,
int *chr_tout*, *int* *post_idle*, *int* *pre_idle*)
UART enable pattern detect function. Designed for applications like 'AT commands'. When the hardware detect a series of one same character, the interrupt will be triggered.

Return

- ESP_OK Success
- ESP_FAIL Parameter error

Parameters

- *uart_num*: UART port number.
- *pattern_chr*: character of the pattern
- *chr_num*: number of the character, 8bit value.
- *chr_tout*: timeout of the interval between each pattern characters, 24bit value, unit is APB(80Mhz) clock cycle.
- *post_idle*: idle time after the last pattern character, 24bit value, unit is APB(80Mhz) clock cycle.

- `pre_idle`: idle time before the first pattern character, 24bit value, unit is APB(80Mhz) clock cycle.

Structures

struct `uart_config_t`

UART configuration parameters for `uart_param_config` function.

Public Members

`int` **`baud_rate`**

UART baudrate

uart_word_length_t **`data_bits`**

UART byte size

uart_parity_t **`parity`**

UART parity mode

uart_stop_bits_t **`stop_bits`**

UART stop bits

uart_hw_flowcontrol_t **`flow_ctrl`**

UART HW flow control mode(cts/rts)

`uint8_t` **`rx_flow_ctrl_thresh`**

UART HW RTS threshold

struct `uart_intr_config_t`

UART interrupt configuration parameters for `uart_intr_config` function.

Public Members

`uint32_t` **`intr_enable_mask`**

UART interrupt enable mask, choose from `UART_XXXX_INT_ENA_M` under `UART_INT_ENA_REG(i)`, connect with bit-or operator

`uint8_t` **`rx_timeout_thresh`**

UART timeout interrupt threshold(unit: time of sending one byte)

`uint8_t` **`txfifo_empty_intr_thresh`**

UART TX empty interrupt threshold.

`uint8_t` **`rxfifo_full_thresh`**

UART RX full interrupt threshold.

struct `uart_event_t`

Event structure used in UART event queue.

Public Members

uart_event_type_t **`type`**

UART event type

`size_t` **`size`**

UART data size for `UART_DATA` event

Macros

- UART_FIFO_LEN** (128)
Length of the hardware FIFO buffers
- UART_INTR_MASK** 0x1ff
mask of all UART interrupts
- UART_LINE_INV_MASK** (0x3f << 19)
TBD
- UART_BITRATE_MAX** 5000000
Max bit rate supported by UART
- UART_PIN_NO_CHANGE** (-1)
Constant for `uart_set_pin` function which indicates that UART pin should not be changed
- UART_INVERSE_DISABLE** (0x0)
Disable UART signal inverse
- UART_INVERSE_RXD** (UART_RXD_INV_M)
UART RXD input inverse
- UART_INVERSE_CTS** (UART_CTS_INV_M)
UART CTS input inverse
- UART_INVERSE_TXD** (UART_TXD_INV_M)
UART TXD output inverse
- UART_INVERSE_RTS** (UART_RTS_INV_M)
UART RTS output inverse

Type Definitions

`typedef intr_handle_t uart_isr_handle_t`

Enumerations

- enum uart_word_length_t**
UART word length constants.
- Values:*
- UART_DATA_5_BITS** = 0x0
word length: 5bits
- UART_DATA_6_BITS** = 0x1
word length: 6bits
- UART_DATA_7_BITS** = 0x2
word length: 7bits
- UART_DATA_8_BITS** = 0x3
word length: 8bits
- UART_DATA_BITS_MAX** = 0x4
- enum uart_stop_bits_t**
UART stop bits number.

Values:

UART_STOP_BITS_1 = 0x1
stop bit: 1bit

UART_STOP_BITS_1_5 = 0x2
stop bit: 1.5bits

UART_STOP_BITS_2 = 0x3
stop bit: 2bits

UART_STOP_BITS_MAX = 0x4

enum uart_port_t

UART peripheral number.

Values:

UART_NUM_0 = 0x0
UART base address 0x3ff40000

UART_NUM_1 = 0x1
UART base address 0x3ff50000

UART_NUM_2 = 0x2
UART base address 0x3ff6E000

UART_NUM_MAX

enum uart_parity_t

UART parity constants.

Values:

UART_PARITY_DISABLE = 0x0
Disable UART parity

UART_PARITY_EVEN = 0x2
Enable UART even parity

UART_PARITY_ODD = 0x3
Enable UART odd parity

enum uart_hw_flowcontrol_t

UART hardware flow control modes.

Values:

UART_HW_FLOWCTRL_DISABLE = 0x0
disable hardware flow control

UART_HW_FLOWCTRL_RTS = 0x1
enable RX hardware flow control (rts)

UART_HW_FLOWCTRL_CTS = 0x2
enable TX hardware flow control (cts)

UART_HW_FLOWCTRL_CTS_RTS = 0x3
enable hardware flow control

UART_HW_FLOWCTRL_MAX = 0x4

enum uart_event_type_t

UART event types used in the ringbuffer.

Values:

UART_DATA
UART data event

UART_BREAK
UART break event

UART_BUFFER_FULL
UART RX buffer full event

UART_FIFO_OVF
UART FIFO overflow event

UART_FRAME_ERR
UART RX frame error event

UART_PARITY_ERR
UART RX parity event

UART_DATA_BREAK
UART TX data and break event

UART_PATTERN_DET
UART pattern detected

UART_EVENT_MAX
UART event max index

Example code for this API section is provided in [peripherals](#) directory of ESP-IDF examples.

Protocols API

mDNS Service

Overview

mDNS is a multicast UDP service that is used to provide local network service and host discovery.

mDNS is installed by default on most operating systems or is available as separate package. On Mac OS it is installed by default and is called `Bonjour`. Apple releases an installer for Windows that can be found on [Apple's support page](#). On Linux, mDNS is provided by `avahi` and is usually installed by default.

mDNS Properties

- `hostname`: the hostname that the device will respond to. If not set, the `hostname` will be read from the interface. Example: `my-esp32` will resolve to `my-esp32.local`
- `default_instance`: friendly name for your device, like `Jhon's ESP32 Thing`. If not set, `hostname` will be used.

Example method to start mDNS for the STA interface and set `hostname` and `default_instance`:

```
mdns_server_t * mdns = NULL;

void start_mdns_service()
{
    //initialize mDNS service on STA interface
    esp_err_t err = mdns_init(TCPIP_ADAPTER_IF_STA, &mdns);
}
```

```

if (err) {
    printf("MDNS Init failed: %d\n", err);
    return;
}

//set hostname
mdns_set_hostname(mdns, "my-esp32");
//set default instance
mdns_set_instance(mdns, "Jhon's ESP32 Thing");
}

```

mDNS Services

mDNS can advertise information about network services that your device offers. Each service is defined by a few properties.

- **service:** (required) service type, prepended with underscore. Some common types can be found [here](#).
- **proto:** (required) protocol that the service runs on, prepended with underscore. Example: `_tcp` or `_udp`
- **port:** (required) network port that the service runs on
- **instance:** friendly name for your service, like Jhon's ESP32 Web Server. If not defined, `default_instance` will be used.
- **txt:** `var=val` array of strings, used to define properties for your service

Example method to add a few services and different properties:

```

void add_mdns_services()
{
    //add our services
    mdns_service_add(mdns, "_http", "_tcp", 80);
    mdns_service_add(mdns, "_arduino", "_tcp", 3232);
    mdns_service_add(mdns, "_myservice", "_udp", 1234);

    //NOTE: services must be added before their properties can be set
    //use custom instance for the web server
    mdns_service_instance_set(mdns, "_http", "_tcp", "Jhon's ESP32 Web Server");

    const char * arduTxtData[4] = {
        "board=esp32",
        "tcp_check=no",
        "ssh_upload=no",
        "auth_upload=no"
    };

    //set txt data for service (will free and replace current data)
    mdns_service_txt_set(mdns, "_arduino", "_tcp", 4, arduTxtData);

    //change service port
    mdns_service_port_set(mdns, "_myservice", "_udp", 4321);
}

```

mDNS Query

mDNS provides methods for browsing for services and resolving host's IP/IPv6 addresses.

Results are returned as a linked list of `mdns_result_t` objects. If the result is from host query, it will contain only `addr` and `addrv6` if found. Service queries will populate all fields in a result that were found.

Example method to resolve host IPs:

```
void resolve_mdns_host(const char * hostname)
{
    printf("mDNS Host Lookup: %s.local\n", hostname);
    //run search for 1000 ms
    if (mdns_query(mdns, hostname, NULL, 1000)) {
        //results were found
        const mdns_result_t * results = mdns_result_get(mdns, 0);
        //iterate through all results
        size_t i = 1;
        while(results) {
            //print result information
            printf("  %u: IP:" IPSTR ", IPv6:" IPV6STR "\n", i++
                IP2STR(&results->addr), IPV62STR(results->addrv6));
            //load next result. Will be NULL if this was the last one
            results = results->next;
        }
        //free the results from memory
        mdns_result_free(mdns);
    } else {
        //host was not found
        printf("  Host Not Found\n");
    }
}
```

Example method to resolve local services:

```
void find_mdns_service(const char * service, const char * proto)
{
    printf("mDNS Service Lookup: %s.%s\n", service, proto);
    //run search for 1000 ms
    if (mdns_query(mdns, service, proto, 1000)) {
        //results were found
        const mdns_result_t * results = mdns_result_get(mdns, 0);
        //iterate through all results
        size_t i = 1;
        while(results) {
            //print result information
            printf("  %u: hostname:%s, instance:\"%s\", IP:" IPSTR ", IPv6:" IPV6STR
                "\n", port:%u, txt:%s\n", i++,
                (results->host)?results->host:"NULL", (results->instance)?results->
                instance:"NULL",
                IP2STR(&results->addr), IPV62STR(results->addrv6),
                results->port, (results->txt)?results->txt:"\r");
            //load next result. Will be NULL if this was the last one
            results = results->next;
        }
        //free the results from memory
        mdns_result_free(mdns);
    } else {
        //service was not found
        printf("  Service Not Found\n");
    }
}
```

Example of using the methods above:

```
void my_app_some_method() {
    //search for esp32-mdns.local
    resolve_mdns_host("esp32-mdns");

    //search for HTTP servers
    find_mdns_service("_http", "_tcp");
    //or file servers
    find_mdns_service("_smb", "_tcp"); //windows sharing
    find_mdns_service("_afpovertcp", "_tcp"); //apple sharing
    find_mdns_service("_nfs", "_tcp"); //NFS server
    find_mdns_service("_ftp", "_tcp"); //FTP server
    //or networked printer
    find_mdns_service("_printer", "_tcp");
    find_mdns_service("_ipp", "_tcp");
}
```

Application Example

mDNS server/scanner example: [protocols/mdns](#).

API Reference

Header File

- [mdns/include/mdns.h](#)

Functions

`esp_err_t mdns_init (tcpip_adapter_if_t tcpip_if, mdns_server_t **server)`
Initialize mDNS on given interface.

Return

- ESP_OK on success
- ESP_ERR_INVALID_ARG when bad tcpip_if is given
- ESP_ERR_INVALID_STATE when the network returned error
- ESP_ERR_NO_MEM on memory error
- ESP_ERR_WIFI_NOT_INIT when WiFi is not initialized by `eps_wifi_init`

Parameters

- `tcpip_if`: Interface that the server will listen on
- `server`: Server pointer to populate on success

`void mdns_free (mdns_server_t *server)`
Stop and free mDNS server.

Parameters

- `server`: mDNS Server to free

`esp_err_t mdns_set_hostname (mdns_server_t *server, const char *hostname)`
Set the hostname for mDNS server.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NO_MEM memory error

Parameters

- server: mDNS Server
- hostname: Hostname to set

`esp_err_t mdns_set_instance (mdns_server_t *server, const char *instance)`
Set the default instance name for mDNS server.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NO_MEM memory error

Parameters

- server: mDNS Server
- instance: Instance name to set

`esp_err_t mdns_service_add (mdns_server_t *server, const char *service, const char *proto, uint16_t port)`
Add service to mDNS server.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NO_MEM memory error

Parameters

- server: mDNS Server
- service: service type (_http, _ftp, etc)
- proto: service protocol (_tcp, _udp)
- port: service port

`esp_err_t mdns_service_remove (mdns_server_t *server, const char *service, const char *proto)`
Remove service from mDNS server.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NOT_FOUND Service not found

- ESP_FAIL unknown error

Parameters

- server: mDNS Server
- service: service type (`_http`, `_ftp`, etc)
- proto: service protocol (`_tcp`, `_udp`)

`esp_err_t mdns_service_instance_set` (*mdns_server_t* *server, **const** char *service, **const** char *proto, **const** char *instance)

Set instance name for service.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NOT_FOUND Service not found
- ESP_ERR_NO_MEM memory error

Parameters

- server: mDNS Server
- service: service type (`_http`, `_ftp`, etc)
- proto: service protocol (`_tcp`, `_udp`)
- instance: instance name to set

`esp_err_t mdns_service_txt_set` (*mdns_server_t* *server, **const** char *service, **const** char *proto, `uint8_t num_items`, **const** char **txt)

Set TXT data for service.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NOT_FOUND Service not found
- ESP_ERR_NO_MEM memory error

Parameters

- server: mDNS Server
- service: service type (`_http`, `_ftp`, etc)
- proto: service protocol (`_tcp`, `_udp`)
- num_items: number of items in TXT data
- txt: string array of TXT data (eg. {"var=val","other=2"})

`esp_err_t mdns_service_port_set` (*mdns_server_t* *server, **const** char *service, **const** char *proto, `uint16_t port`)

Set service port.

Return

- ESP_OK success

- ESP_ERR_INVALID_ARG Parameter error
- ESP_ERR_NOT_FOUND Service not found

Parameters

- server: mDNS Server
- service: service type (_http, _ftp, etc)
- proto: service protocol (_tcp, _udp)
- port: service port

esp_err_t **mdns_service_remove_all** (*mdns_server_t* *server)

Remove and free all services from mDNS server.

Return

- ESP_OK success
- ESP_ERR_INVALID_ARG Parameter error

Parameters

- server: mDNS Server

size_t **mdns_query** (*mdns_server_t* *server, const char *service, const char *proto, uint32_t timeout)

Query mDNS for host or service.

Return the number of results found

Parameters

- server: mDNS Server
- service: service type or host name
- proto: service protocol or NULL if searching for host
- timeout: time to wait for answers. If 0, mdns_query_end MUST be called to end the search

size_t **mdns_query_end** (*mdns_server_t* *server)

Stop mDNS Query started with timeout = 0.

Return the number of results found

Parameters

- server: mDNS Server

size_t **mdns_result_get_count** (*mdns_server_t* *server)

get the number of results currently in memoty

Return the number of results

Parameters

- server: mDNS Server

const *mdns_result_t* ***mdns_result_get** (*mdns_server_t* *server, size_t num)

Get mDNS Search result with given index.

Return the result or NULL if error

Parameters

- `server`: mDNS Server
- `num`: the index of the result

`esp_err_t mdns_result_free` (*mdns_server_t* *server)
 Remove and free all search results from mDNS server.

Return

- `ESP_OK` success
- `ESP_ERR_INVALID_ARG` Parameter error

Parameters

- `server`: mDNS Server

Structures

`struct mdns_result_s`
 mDNS query result structure

Public Members

`const char *host`
 hostname

`const char *instance`
 instance

`const char *txt`
 txt data

`uint16_t priority`
 service priority

`uint16_t weight`
 service weight

`uint16_t port`
 service port

`struct ip4_addr addr`
 ip4 address

`struct ip6_addr addrv6`
 ip6 address

`const struct mdns_result_s *next`
 next result, or NULL for the last result in the list

Type Definitions

```
typedef struct mdns_server_s mdns_server_t
```

```
typedef struct mdns_result_s mdns_result_t  
    mDNS query result structure
```

Example code for this API section is provided in [protocols](#) directory of ESP-IDF examples.

Storage API

SPI Flash APIs

Overview

The `spi_flash` component contains APIs related to reading, writing, erasing, memory mapping data in the external SPI flash. It also has higher-level APIs which work with partitions defined in the *partition table*.

Note that all the functionality is limited to the “main” SPI flash chip, the same SPI flash chip from which program runs. For `spi_flash_*` functions, this is a software limitation. The underlying ROM functions which work with SPI flash do not have provisions for working with flash chips attached to SPI peripherals other than SPI0.

SPI flash access APIs

This is the set of APIs for working with data in flash:

- `spi_flash_read` used to read data from flash to RAM
- `spi_flash_write` used to write data from RAM to flash
- `spi_flash_erase_sector` used to erase individual sectors of flash
- `spi_flash_erase_range` used to erase range of addresses in flash
- `spi_flash_get_chip_size` returns flash chip size, in bytes, as configured in `menuconfig`

Generally, try to avoid using the raw SPI flash functions in favour of partition-specific functions.

SPI Flash Size

The SPI flash size is configured by writing a field in the software bootloader image header, flashed at offset 0x1000.

By default, the SPI flash size is detected by `esptool.py` when this bootloader is written to flash, and the header is updated with the correct size. Alternatively, it is possible to generate a fixed flash size by disabling detection in `make menuconfig` (under Serial Flasher Config).

If it is necessary to override the configured flash size at runtime, it is possible to set the `chip_size` member of `g_rom_flashchip` structure. This size is used by `spi_flash_*` functions (in both software & ROM) for bounds checking.

Concurrency Constraints

Because the SPI flash is also used for firmware execution (via the instruction & data caches), these caches must be disabled while reading/writing/erasing. This means that both CPUs must be running code from IRAM and only reading data from DRAM while flash write operations occur.

Refer to the *application memory layout* documentation for an explanation of the differences between IRAM, DRAM and flash cache.

To avoid reading flash cache accidentally, when one CPU commences a flash write or erase operation the other CPU is put into a blocked state and all non-IRAM-safe interrupts are disabled on both CPUs, until the flash operation completes.

IRAM-Safe Interrupt Handlers

If you have an interrupt handler that you want to execute even when a flash operation is in progress (for example, for low latency operations), set the `ESP_INTR_FLAG_IRAM` flag when the *interrupt handler is registered*.

You must ensure all data and functions accessed by these interrupt handlers are located in IRAM or DRAM. This includes any functions that the handler calls.

Use the `IRAM_ATTR` attribute for functions:

```
#include "esp_attr.h"

void IRAM_ATTR gpio_isr_handler(void* arg)
{
    // ...
}
```

Use the `DRAM_ATTR` and `DRAM_STR` attributes for constant data:

```
void IRAM_ATTR gpio_isr_handler(void* arg)
{
    const static DRAM_ATTR uint8_t INDEX_DATA[] = { 45, 33, 12, 0 };
    const static char *MSG = DRAM_STR("I am a string stored in RAM");
}
```

Note that knowing which data should be marked with `DRAM_ATTR` can be hard, the compiler will sometimes recognise that a variable or expression is constant (even if it is not marked `const`) and optimise it into flash, unless it is marked with `DRAM_ATTR`.

If a function or symbol is not correctly put into IRAM/DRAM and the interrupt handler reads from the flash cache during a flash operation, it will cause a crash due to Illegal Instruction exception (for code which should be in IRAM) or garbage data to be read (for constant data which should be in DRAM).

Partition table APIs

ESP-IDF projects use a partition table to maintain information about various regions of SPI flash memory (bootloader, various application binaries, data, filesystems). More information about partition tables can be found *here*.

This component provides APIs to enumerate partitions found in the partition table and perform operations on them. These functions are declared in `esp_partition.h`:

- `esp_partition_find` used to search partition table for entries with specific type, returns an opaque iterator
- `esp_partition_get` returns a structure describing the partition, for the given iterator
- `esp_partition_next` advances iterator to the next partition found
- `esp_partition_iterator_release` releases iterator returned by `esp_partition_find`
- `esp_partition_find_first` is a convenience function which returns structure describing the first partition found by `esp_partition_find`

- `esp_partition_read`, `esp_partition_write`, `esp_partition_erase_range` are equivalent to `spi_flash_read`, `spi_flash_write`, `spi_flash_erase_range`, but operate within partition boundaries

Most application code should use `esp_partition_*` APIs instead of lower level `spi_flash_*` APIs. Partition APIs do bounds checking and calculate correct offsets in flash based on data stored in partition table.

SPI Flash Encryption

It is possible to encrypt SPI flash contents, and have it transparently decrypted by hardware.

Refer to the *Flash Encryption documentation* for more details.

Memory mapping APIs

ESP32 features memory hardware which allows regions of flash memory to be mapped into instruction and data address spaces. This mapping works only for read operations, it is not possible to modify contents of flash memory by writing to mapped memory region. Mapping happens in 64KB pages. Memory mapping hardware can map up to 4 megabytes of flash into data address space, and up to 16 megabytes of flash into instruction address space. See the technical reference manual for more details about memory mapping hardware.

Note that some number of 64KB pages is used to map the application itself into memory, so the actual number of available 64KB pages may be less.

Reading data from flash using a memory mapped region is the only way to decrypt contents of flash when *flash encryption* is enabled. Decryption is performed at hardware level.

Memory mapping APIs are declared in `esp_spi_flash.h` and `esp_partition.h`:

- `spi_flash_mmap` maps a region of physical flash addresses into instruction space or data space of the CPU
- `spi_flash_munmap` unmaps previously mapped region
- `esp_partition_mmap` maps part of a partition into the instruction space or data space of the CPU

Differences between `spi_flash_mmap` and `esp_partition_mmap` are as follows:

- `spi_flash_mmap` must be given a 64KB aligned physical address
- `esp_partition_mmap` may be given an arbitrary offset within the partition, it will adjust returned pointer to mapped memory as necessary

Note that because memory mapping happens in 64KB blocks, it may be possible to read data outside of the partition provided to `esp_partition_mmap`.

See also

- *Partition Table documentation*
- *Over The Air Update (OTA) API* provides high-level API for updating app firmware stored in flash.
- *Non-Volatile Storage (NVS) API* provides a structured API for storing small items of data in SPI flash.

Implementation details

In order to perform some flash operations, we need to make sure both CPUs are not running any code from flash for the duration of the flash operation. In a single-core setup this is easy: we disable interrupts/scheduler and do the flash

operation. In the dual-core setup this is slightly more complicated. We need to make sure that the other CPU doesn't run any code from flash.

When SPI flash API is called on CPU A (can be PRO or APP), we start `spi_flash_op_block_func` function on CPU B using `esp_ipc_call` API. This API wakes up high priority task on CPU B and tells it to execute given function, in this case `spi_flash_op_block_func`. This function disables cache on CPU B and signals that cache is disabled by setting `s_flash_op_can_start` flag. Then the task on CPU A disables cache as well, and proceeds to execute flash operation.

While flash operation is running, interrupts can still run on CPUs A and B. We assume that all interrupt code is placed into RAM. Once interrupt allocation API is added, we should add a flag to request interrupt to be disabled for the duration of flash operations.

Once flash operation is complete, function on CPU A sets another flag, `s_flash_op_complete`, to let the task on CPU B know that it can re-enable cache and release the CPU. Then the function on CPU A re-enables the cache on CPU A as well and returns control to the calling code.

Additionally, all API functions are protected with a mutex (`s_flash_op_mutex`).

In a single core environment (`CONFIG_FREERTOS_UNICORE` enabled), we simply disable both caches, no inter-CPU communication takes place.

API Reference - SPI Flash

Header File

- `spi_flash/include/esp_spi_flash.h`

Functions

void **spi_flash_init** ()

Initialize SPI flash access driver.

This function must be called exactly once, before any other `spi_flash_*` functions are called. Currently this function is called from startup code. There is no need to call it from application code.

size_t **spi_flash_get_chip_size** ()

Get flash chip size, as set in binary image header.

Note This value does not necessarily match real flash size.

Return size of flash chip, in bytes

esp_err_t **spi_flash_erase_sector** (size_t *sector*)

Erase the Flash sector.

Return esp_err_t

Parameters

- `sector`: Sector number, the count starts at sector 0, 4KB per sector.

esp_err_t **spi_flash_erase_range** (size_t *start_address*, size_t *size*)

Erase a range of flash sectors.

Return esp_err_t

Parameters

- `start_address`: Address where erase operation has to start. Must be 4kB-aligned
- `size`: Size of erased range, in bytes. Must be divisible by 4kB.

`esp_err_t spi_flash_write` (`size_t dest_addr`, `const void *src`, `size_t size`)
Write data to Flash.

Note If source address is in DROM, this function will return `ESP_ERR_INVALID_ARG`.

Return `esp_err_t`

Parameters

- `dest_addr`: destination address in Flash. Must be a multiple of 4 bytes.
- `src`: pointer to the source buffer.
- `size`: length of data, in bytes. Must be a multiple of 4 bytes.

`esp_err_t spi_flash_write_encrypted` (`size_t dest_addr`, `const void *src`, `size_t size`)
Write data encrypted to Flash.

Note Flash encryption must be enabled for this function to work.

Note Flash encryption must be enabled when calling this function. If flash encryption is disabled, the function returns `ESP_ERR_INVALID_STATE`. Use `esp_flash_encryption_enabled()` function to determine if flash encryption is enabled.

Note Both `dest_addr` and `size` must be multiples of 16 bytes. For absolute best performance, both `dest_addr` and `size` arguments should be multiples of 32 bytes.

Return `esp_err_t`

Parameters

- `dest_addr`: destination address in Flash. Must be a multiple of 16 bytes.
- `src`: pointer to the source buffer.
- `size`: length of data, in bytes. Must be a multiple of 16 bytes.

`esp_err_t spi_flash_read` (`size_t src_addr`, `void *dest`, `size_t size`)
Read data from Flash.

Return `esp_err_t`

Parameters

- `src_addr`: source address of the data in Flash.
- `dest`: pointer to the destination buffer
- `size`: length of data

`esp_err_t spi_flash_read_encrypted` (`size_t src`, `void *dest`, `size_t size`)
Read data from Encrypted Flash.

If flash encryption is enabled, this function will transparently decrypt data as it is read. If flash encryption is not enabled, this function behaves the same as `spi_flash_read()`.

See `esp_flash_encryption_enabled()` for a function to check if flash encryption is enabled.

Return `esp_err_t`

Parameters

- `src`: source address of the data in Flash.
- `dest`: pointer to the destination buffer
- `size`: length of data

`esp_err_t spi_flash_mmap` (`size_t src_addr`, `size_t size`, `spi_flash_mmap_memory_t memory`, `const void **out_ptr`, `spi_flash_mmap_handle_t *out_handle`)

Map region of flash memory into data or instruction address space.

This function allocates sufficient number of 64k MMU pages and configures them to map request region of flash memory into data address space or into instruction address space. It may reuse MMU pages which already provide required mapping. As with any allocator, there is possibility of fragmentation of address space if mmap/munmap are heavily used. To troubleshoot issues with page allocation, use `spi_flash_mmap_dump` function.

Return `ESP_OK` on success, `ESP_ERR_NO_MEM` if pages can not be allocated

Parameters

- `src_addr`: Physical address in flash where requested region starts. This address *must* be aligned to 64kB boundary (`SPI_FLASH_MMU_PAGE_SIZE`).
- `size`: Size of region which has to be mapped. This size will be rounded up to a 64k boundary.
- `memory`: Memory space where the region should be mapped
- `out_ptr`: Output, pointer to the mapped memory region
- `out_handle`: Output, handle which should be used for `spi_flash_munmap` call

`esp_err_t spi_flash_mmap_pages` (`int *pages`, `size_t pagecount`, `spi_flash_mmap_memory_t memory`, `const void **out_ptr`, `spi_flash_mmap_handle_t *out_handle`)

Map sequences of pages of flash memory into data or instruction address space.

This function allocates sufficient number of 64k MMU pages and configures them to map the indicated pages of flash memory contiguously into data address space or into instruction address space. In this respect, it works in a similar way as `spi_flash_mmap` but it allows mapping a (maybe non-contiguous) set of pages into a contiguous region of memory.

Return `ESP_OK` on success, `ESP_ERR_NO_MEM` if pages can not be allocated

Parameters

- `pages`: An array of numbers indicating the 64K pages in flash to be mapped contiguously into memory. These indicate the indexes of the 64K pages, not the byte-size addresses as used in other functions.
- `pagecount`: Size of the pages array
- `memory`: Memory space where the region should be mapped
- `out_ptr`: Output, pointer to the mapped memory region
- `out_handle`: Output, handle which should be used for `spi_flash_munmap` call

`void spi_flash_munmap` (`spi_flash_mmap_handle_t handle`)

Release region previously obtained using `spi_flash_mmap`.

Note Calling this function will not necessarily unmap memory region. Region will only be unmapped when there are no other handles which reference this region. In case of partially overlapping regions it is possible that memory will be unmapped partially.

Parameters

- `handle`: Handle obtained from `spi_flash_mmap`

void **spi_flash_mmap_dump** ()

Display information about mapped regions.

This function lists handles obtained using `spi_flash_mmap`, along with range of pages allocated to each handle. It also lists all non-zero entries of MMU table and corresponding reference counts.

size_t **spi_flash_cache2phys** (const void **cached*)

Given a memory address where flash is mapped, return the corresponding physical flash offset.

Cache address does not have have been assigned via `spi_flash_mmap()`, any address in flash map space can be looked up.

Return

- `SPI_FLASH_CACHE2PHYS_FAIL` If cache address is outside flash cache region, or the address is not mapped.
- Otherwise, returns physical offset in flash

Parameters

- `cached`: Pointer to flashed cached memory.

const void ***spi_flash_phys2cache** (size_t *phys_offs*, *spi_flash_mmap_memory_t* *memory*)

Given a physical offset in flash, return the address where it is mapped in the memory space.

Physical address does not have to have been assigned via `spi_flash_mmap()`, any address in flash can be looked up.

Note Only the first matching cache address is returned. If MMU flash cache table is configured so multiple entries point to the same physical address, there may be more than one cache address corresponding to that physical address. It is also possible for a single physical address to be mapped to both the IROM and DROM regions.

Note This function doesn't impose any alignment constraints, but if memory argument is `SPI_FLASH_MMAP_INST` and `phys_offs` is not 4-byte aligned, then reading from the returned pointer will result in a crash.

Return

- NULL if the physical address is invalid or not mapped to flash cache of the specified memory type.
- Cached memory address (in IROM or DROM space) corresponding to `phys_offs`.

Parameters

- `phys_offs`: Physical offset in flash memory to look up.
- `memory`: Memory type to look up a flash cache address mapping for (IROM or DROM)

bool **spi_flash_cache_enabled** ()

Check at runtime if flash cache is enabled on both CPUs.

Return true if both CPUs have flash cache enabled, false otherwise.

void **spi_flash_guard_set** (const *spi_flash_guard_funcs_t* *funcs)
 Sets guard functions to access flash.

Note Pointed structure and corresponding guard functions should not reside in flash. For example structure can be placed in DRAM and functions in IRAM sections.

Parameters

- *funcs*: pointer to structure holding flash access guard functions.

Structures

struct spi_flash_guard_funcs_t

Structure holding SPI flash access critical sections management functions.

Flash API uses two types of flash access management functions: 1) Functions which prepare/restore flash cache and interrupts before calling appropriate ROM functions (SPIWrite, SPIRead and SPIEraseBlock):

- ‘start’ function should disables flash cache and non-IRAM interrupts and is invoked before the call to one of ROM function above.
- ‘end’ function should restore state of flash cache and non-IRAM interrupts and is invoked after the call to one of ROM function above. 2) Functions which synchronizes access to internal data used by flash API. This functions are mostly intended to synchronize access to flash API internal data in multithreaded environment and use OS primitives:
- ‘op_lock’ locks access to flash API internal data.
- ‘op_unlock’ unlocks access to flash API internal data. Different versions of the guarding functions should be used depending on the context of execution (with or without functional OS). In normal conditions when flash API is called from task the functions use OS primitives. When there is no OS at all or when it is not guaranteed that OS is functional (accessing flash from exception handler) these functions cannot use OS primitives or even does not need them (multithreaded access is not possible).

Note Structure and corresponding guard functions should not reside in flash. For example structure can be placed in DRAM and functions in IRAM sections.

Public Members

spi_flash_guard_start_func_t **start**
 critical section start func

spi_flash_guard_end_func_t **end**
 critical section end func

spi_flash_op_lock_func_t **op_lock**
 flash access API lock func

spi_flash_op_unlock_func_t **op_unlock**
 flash access API unlock func

Macros

ESP_ERR_FLASH_BASE 0x10010

ESP_ERR_FLASH_OP_FAIL (ESP_ERR_FLASH_BASE + 1)

ESP_ERR_FLASH_OP_TIMEOUT (ESP_ERR_FLASH_BASE + 2)

SPI_FLASH_SEC_SIZE 4096
SPI Flash sector size

SPI_FLASH_MMU_PAGE_SIZE 0x10000
Flash cache MMU mapping page size

SPI_FLASH_CACHE2PHYS_FAIL UINT32_MAX /*<! Result from spi_flash_cache2phys() if flash cache address is invalid */

Type Definitions

typedef uint32_t **spi_flash_mmap_handle_t**
Opaque handle for memory region obtained from spi_flash_mmap.

typedef void (***spi_flash_guard_start_func_t**) (void)
SPI flash critical section enter function.

typedef void (***spi_flash_guard_end_func_t**) (void)
SPI flash critical section exit function.

typedef void (***spi_flash_op_lock_func_t**) (void)
SPI flash operation lock function.

typedef void (***spi_flash_op_unlock_func_t**) (void)
SPI flash operation unlock function.

Enumerations

enum **spi_flash_mmap_memory_t**
Enumeration which specifies memory space requested in an mmap call.

Values:

SPI_FLASH_MMAP_DATA
map to data memory (Vaddr0), allows byte-aligned access, 4 MB total

SPI_FLASH_MMAP_INST
map to instruction memory (Vaddr1-3), allows only 4-byte-aligned access, 11 MB total

API Reference - Partition Table

Header File

- [spi_flash/include/esp_partition.h](#)

Functions

esp_partition_iterator_t **esp_partition_find**(*esp_partition_type_t* type, *esp_partition_subtype_t* subtype, **const** char *label)

Find partition based on one or more parameters.

Return iterator which can be used to enumerate all the partitions found, or NULL if no partitions were found. Iterator obtained through this function has to be released using `esp_partition_iterator_release` when not used any more.

Parameters

- `type`: Partition type, one of `esp_partition_type_t` values
- `subtype`: Partition subtype, one of `esp_partition_subtype_t` values. To find all partitions of given type, use `ESP_PARTITION_SUBTYPE_ANY`.
- `label`: (optional) Partition label. Set this value if looking for partition with a specific name. Pass `NULL` otherwise.

```
const esp_partition_t *esp_partition_find_first (esp_partition_type_t type,
                                             esp_partition_subtype_t subtype, const char
                                             *label)
```

Find first partition based on one or more parameters.

Return pointer to `esp_partition_t` structure, or `NULL` if no partition is found. This pointer is valid for the lifetime of the application.

Parameters

- `type`: Partition type, one of `esp_partition_type_t` values
- `subtype`: Partition subtype, one of `esp_partition_subtype_t` values. To find all partitions of given type, use `ESP_PARTITION_SUBTYPE_ANY`.
- `label`: (optional) Partition label. Set this value if looking for partition with a specific name. Pass `NULL` otherwise.

```
const esp_partition_t *esp_partition_get (esp_partition_iterator_t iterator)
Get esp_partition_t structure for given partition.
```

Return pointer to `esp_partition_t` structure. This pointer is valid for the lifetime of the application.

Parameters

- `iterator`: Iterator obtained using `esp_partition_find`. Must be non-`NULL`.

```
esp_partition_iterator_t esp_partition_next (esp_partition_iterator_t iterator)
Move partition iterator to the next partition found.
```

Any copies of the iterator will be invalid after this call.

Return `NULL` if no partition was found, valid `esp_partition_iterator_t` otherwise.

Parameters

- `iterator`: Iterator obtained using `esp_partition_find`. Must be non-`NULL`.

```
void esp_partition_iterator_release (esp_partition_iterator_t iterator)
Release partition iterator.
```

Parameters

- `iterator`: Iterator obtained using `esp_partition_find`. Must be non-`NULL`.

```
const esp_partition_t *esp_partition_verify (const esp_partition_t *partition)
Verify partition data.
```

Given a pointer to partition data, verify this partition exists in the partition table (all fields match.)

This function is also useful to take partition data which may be in a RAM buffer and convert it to a pointer to the permanent partition data stored in flash.

Pointers returned from this function can be compared directly to the address of any pointer returned from `esp_partition_get()`, as a test for equality.

Return

- If partition not found, returns NULL.
- If found, returns a pointer to the `esp_partition_t` structure in flash. This pointer is always valid for the lifetime of the application.

Parameters

- `partition`: Pointer to partition data to verify. Must be non-NULL. All fields of this structure must match the partition table entry in flash for this function to return a successful match.

`esp_err_t esp_partition_read(const esp_partition_t *partition, size_t src_offset, void *dst, size_t size)`
Read data from the partition.

Return ESP_OK, if data was read successfully; ESP_ERR_INVALID_ARG, if `src_offset` exceeds partition size; ESP_ERR_INVALID_SIZE, if read would go out of bounds of the partition; or one of error codes from lower-level flash driver.

Parameters

- `partition`: Pointer to partition structure obtained using `esp_partition_find_first` or `esp_partition_get`. Must be non-NULL.
- `dst`: Pointer to the buffer where data should be stored. Pointer must be non-NULL and buffer must be at least 'size' bytes long.
- `src_offset`: Address of the data to be read, relative to the beginning of the partition.
- `size`: Size of data to be read, in bytes.

`esp_err_t esp_partition_write(const esp_partition_t *partition, size_t dst_offset, const void *src, size_t size)`
Write data to the partition.

Before writing data to flash, corresponding region of flash needs to be erased. This can be done using `esp_partition_erase_range` function.

Partitions marked with an encryption flag will automatically be written via the `spi_flash_write_encrypted()` function. If writing to an encrypted partition, all write offsets and lengths must be multiples of 16 bytes. See the `spi_flash_write_encrypted()` function for more details. Unencrypted partitions do not have this restriction.

Note Prior to writing to flash memory, make sure it has been erased with `esp_partition_erase_range` call.

Return ESP_OK, if data was written successfully; ESP_ERR_INVALID_ARG, if `dst_offset` exceeds partition size; ESP_ERR_INVALID_SIZE, if write would go out of bounds of the partition; or one of error codes from lower-level flash driver.

Parameters

- `partition`: Pointer to partition structure obtained using `esp_partition_find_first` or `esp_partition_get`. Must be non-NULL.
- `dst_offset`: Address where the data should be written, relative to the beginning of the partition.
- `src`: Pointer to the source buffer. Pointer must be non-NULL and buffer must be at least 'size' bytes long.
- `size`: Size of data to be written, in bytes.

`esp_err_t esp_partition_erase_range` (`const esp_partition_t *partition`, `uint32_t start_addr`, `uint32_t size`)

Erase part of the partition.

Return ESP_OK, if the range was erased successfully; ESP_ERR_INVALID_ARG, if iterator or dst are NULL; ESP_ERR_INVALID_SIZE, if erase would go out of bounds of the partition; or one of error codes from lower-level flash driver.

Parameters

- `partition`: Pointer to partition structure obtained using `esp_partition_find_first` or `esp_partition_get`. Must be non-NULL.
- `start_addr`: Address where erase operation should start. Must be aligned to 4 kilobytes.
- `size`: Size of the range which should be erased, in bytes. Must be divisible by 4 kilobytes.

`esp_err_t esp_partition_mmap` (`const esp_partition_t *partition`, `uint32_t offset`, `uint32_t size`, `spi_flash_mmap_memory_t memory`, `const void **out_ptr`, `spi_flash_mmap_handle_t *out_handle`)

Configure MMU to map partition into data memory.

Unlike `spi_flash_mmap` function, which requires a 64kB aligned base address, this function doesn't impose such a requirement. If offset results in a flash address which is not aligned to 64kB boundary, address will be rounded to the lower 64kB boundary, so that mapped region includes requested range. Pointer returned via `out_ptr` argument will be adjusted to point to the requested offset (not necessarily to the beginning of mmap-ed region).

To release mapped memory, pass handle returned via `out_handle` argument to `spi_flash_munmap` function.

Return ESP_OK, if successful

Parameters

- `partition`: Pointer to partition structure obtained using `esp_partition_find_first` or `esp_partition_get`. Must be non-NULL.
- `offset`: Offset from the beginning of partition where mapping should start.
- `size`: Size of the area to be mapped.
- `memory`: Memory space where the region should be mapped
- `out_ptr`: Output, pointer to the mapped memory region
- `out_handle`: Output, handle which should be used for `spi_flash_munmap` call

Structures

`struct esp_partition_t`
partition information structure

This is not the format in flash, that format is `esp_partition_info_t`.

However, this is the format used by this API.

Public Members

`esp_partition_type_t` **type**
partition type (app/data)

esp_partition_subtype_t **subtype**
partition subtype

uint32_t **address**
starting address of the partition in flash

uint32_t **size**
size of the partition, in bytes

char **label**[17]
partition label, zero-terminated ASCII string

bool **encrypted**
flag is set to true if partition is encrypted

Macros

ESP_PARTITION_SUBTYPE_OTA(i) ((*esp_partition_subtype_t*)(**ESP_PARTITION_SUBTYPE_APP_OTA_MIN** + ((i) & 0xf)))
Convenience macro to get *esp_partition_subtype_t* value for the i-th OTA partition.

Type Definitions

typedef struct *esp_partition_iterator_opaque_** **esp_partition_iterator_t**
Opaque partition iterator type.

Enumerations

enum *esp_partition_type_t*
Partition type.

Note Keep this enum in sync with PartitionDefinition class *gen_esp32part.py*

Values:

ESP_PARTITION_TYPE_APP = 0x00
Application partition type.

ESP_PARTITION_TYPE_DATA = 0x01
Data partition type.

enum *esp_partition_subtype_t*
Partition subtype.

Note Keep this enum in sync with PartitionDefinition class *gen_esp32part.py*

Values:

ESP_PARTITION_SUBTYPE_APP_FACTORY = 0x00
Factory application partition.

ESP_PARTITION_SUBTYPE_APP_OTA_MIN = 0x10
Base for OTA partition subtypes.

ESP_PARTITION_SUBTYPE_APP_OTA_0 = **ESP_PARTITION_SUBTYPE_APP_OTA_MIN** + 0
OTA partition 0.

ESP_PARTITION_SUBTYPE_APP_OTA_1 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 1
OTA partition 1.

ESP_PARTITION_SUBTYPE_APP_OTA_2 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 2
OTA partition 2.

ESP_PARTITION_SUBTYPE_APP_OTA_3 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 3
OTA partition 3.

ESP_PARTITION_SUBTYPE_APP_OTA_4 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 4
OTA partition 4.

ESP_PARTITION_SUBTYPE_APP_OTA_5 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 5
OTA partition 5.

ESP_PARTITION_SUBTYPE_APP_OTA_6 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 6
OTA partition 6.

ESP_PARTITION_SUBTYPE_APP_OTA_7 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 7
OTA partition 7.

ESP_PARTITION_SUBTYPE_APP_OTA_8 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 8
OTA partition 8.

ESP_PARTITION_SUBTYPE_APP_OTA_9 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 9
OTA partition 9.

ESP_PARTITION_SUBTYPE_APP_OTA_10 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 10
OTA partition 10.

ESP_PARTITION_SUBTYPE_APP_OTA_11 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 11
OTA partition 11.

ESP_PARTITION_SUBTYPE_APP_OTA_12 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 12
OTA partition 12.

ESP_PARTITION_SUBTYPE_APP_OTA_13 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 13
OTA partition 13.

ESP_PARTITION_SUBTYPE_APP_OTA_14 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 14
OTA partition 14.

ESP_PARTITION_SUBTYPE_APP_OTA_15 = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 15
OTA partition 15.

ESP_PARTITION_SUBTYPE_APP_OTA_MAX = ESP_PARTITION_SUBTYPE_APP_OTA_MIN + 16
Max subtype of OTA partition.

ESP_PARTITION_SUBTYPE_APP_TEST = 0x20
Test application partition.

ESP_PARTITION_SUBTYPE_DATA_OTA = 0x00
OTA selection partition.

ESP_PARTITION_SUBTYPE_DATA_PHY = 0x01
PHY init data partition.

ESP_PARTITION_SUBTYPE_DATA_NVS = 0x02
NVS partition.

ESP_PARTITION_SUBTYPE_DATA_COREDUMP = 0x03
COREDUMP partition.

ESP_PARTITION_SUBTYPE_DATA_ESPHTTPD = 0x80
ESPHTTPD partition.

ESP_PARTITION_SUBTYPE_DATA_FAT = 0x81
FAT partition.

ESP_PARTITION_SUBTYPE_DATA_SPIFFS = 0x82
SPIFFS partition.

ESP_PARTITION_SUBTYPE_ANY = 0xff
Used to search for partitions with any subtype.

API Reference - Flash Encrypt

Header File

- `bootloader_support/include/esp_flash_encrypt.h`

Functions

static bool `esp_flash_encryption_enabled` (void)
Is flash encryption currently enabled in hardware?

Flash encryption is enabled if the FLASH_CRYPT_CNT efuse has an odd number of bits set.

Return true if flash encryption is enabled.

`esp_err_t` `esp_flash_encrypt_check_and_update` (void)

`esp_err_t` `esp_flash_encrypt_region` (uint32_t *src_addr*, size_t *data_length*)
Encrypt-in-place a block of flash sectors.

Return ESP_OK if all operations succeeded, ESP_ERR_FLASH_OP_FAIL if SPI flash fails, ESP_ERR_FLASH_OP_TIMEOUT if flash times out.

Parameters

- `src_addr`: Source offset in flash. Should be multiple of 4096 bytes.
- `data_length`: Length of data to encrypt in bytes. Will be rounded up to next multiple of 4096 bytes.

Non-volatile storage library

Introduction

Non-volatile storage (NVS) library is designed to store key-value pairs in flash. This sections introduces some concepts used by NVS.

Underlying storage

Currently NVS uses a portion of main flash memory through `spi_flash_{read|write|erase}` APIs. The library uses the first partition with `data` type and `nvs` subtype.

Future versions of this library may add other storage backends to keep data in another flash chip (SPI or I2C), RTC, FRAM, etc.

Note: if an NVS partition is truncated (for example, when the partition table layout is changed), its contents should be erased. ESP-IDF build system provides a `make erase_flash` target to erase all contents of the flash chip.

Note: NVS works best for storing many small values, rather than a few large values of type ‘string’ and ‘blob’. If storing large blobs or strings is required, consider using the facilities provided by the FAT filesystem on top of the wear levelling library.

Keys and values

NVS operates on key-value pairs. Keys are ASCII strings, maximum key length is currently 15 characters. Values can have one of the following types:

- integer types: `uint8_t`, `int8_t`, `uint16_t`, `int16_t`, `uint32_t`, `int32_t`, `uint64_t`, `int64_t`
- zero-terminated string
- variable length binary data (blob)

Note: String and blob values are currently limited to 1984 bytes. For strings, this includes the null terminator.

Additional types, such as `float` and `double` may be added later.

Keys are required to be unique. Writing a value for a key which already exists behaves as follows:

- if the new value is of the same type as old one, value is updated
- if the new value has different data type, an error is returned

Data type check is also performed when reading a value. An error is returned if data type of read operation doesn’t match the data type of the value.

Namespaces

To mitigate potential conflicts in key names between different components, NVS assigns each key-value pair to one of namespaces. Namespace names follow the same rules as key names, i.e. 15 character maximum length. Namespace name is specified in the `nvs_open` call. This call returns an opaque handle, which is used in subsequent calls to `nvs_read_*`, `nvs_write_*`, and `nvs_commit` functions. This way, handle is associated with a namespace, and key names will not collide with same names in other namespaces.

Security, tampering, and robustness

NVS library doesn’t implement tamper prevention measures. It is possible for anyone with physical access to the flash chip to alter, erase, or add key-value pairs.

NVS is compatible with the ESP32 flash encryption system, and it can store key-value pairs in an encrypted form. Some metadata, like page state and write/erase flags of individual entries can not be encrypted as they are represented as bits of flash memory for efficient access and manipulation. Flash encryption can prevent some forms of modification:

- replacing keys or values with arbitrary data
- changing data types of values

The following forms of modification are still possible when flash encryption is used:

- erasing a page completely, removing all key-value pairs which were stored in that page
- corrupting data in a page, which will cause the page to be erased automatically when such condition is detected
- rolling back the contents of flash memory to an earlier snapshot
- merging two snapshots of flash memory, rolling back some key-value pairs to an earlier state (although this is possible to mitigate with the current design — TODO)

The library does try to recover from conditions when flash memory is in an inconsistent state. In particular, one should be able to power off the device at any point and time and then power it back on. This should not result in loss of data, expect for the new key-value pair if it was being written at the moment of power off. The library should also be able to initialize properly with any random data present in flash memory.

Internals

Log of key-value pairs

NVS stores key-value pairs sequentially, with new key-value pairs being added at the end. When a value of any given key has to be updated, new key-value pair is added at the end of the log and old key-value pair is marked as erased.

Pages and entries

NVS library uses two main entities in its operation: pages and entries. Page is a logical structure which stores a portion of the overall log. Logical page corresponds to one physical sector of flash memory. Pages which are in use have a *sequence number* associated with them. Sequence numbers impose an ordering on pages. Higher sequence numbers correspond to pages which were created later. Each page can be in one of the following states:

Empty/uninitialized Flash storage for the page is empty (all bytes are `0xff`). Page isn't used to store any data at this point and doesn't have a sequence number.

Active Flash storage is initialized, page header has been written to flash, page has a valid sequence number. Page has some empty entries and data can be written there. At most one page can be in this state at any given moment.


Full Flash storage is in a consistent state and is filled with key-value pairs. Writing new key-value pairs into this page is not possible. It is still possible to mark some key-value pairs as erased.

Erasing Non-erased key-value pairs are being moved into another page so that the current page can be erased. This is a transient state, i.e. page should never stay in this state when any API call returns. In case of a sudden power off, move-and-erase process will be completed upon next power on.

Corrupted Page header contains invalid data, and further parsing of page data was canceled. Any items previously written into this page will not be accessible. Corresponding flash sector will not be erased immediately, and will be kept along with sectors in *uninitialized* state for later use. This may be useful for debugging.

Mapping from flash sectors to logical pages doesn't have any particular order. Library will inspect sequence numbers of pages found in each flash sector and organize pages in a list based on these numbers.

+-----+	+-----+	+-----+	+-----+	
Page 1	Page 2	Page 3	Page 4	
Full +---->	Full +---->	Active	Empty	<- states
#11 /	#12 /	#14 /	/	<- sequence numbers
+---+-----+	+---+-----+	+---+-----+	+---+-----+	

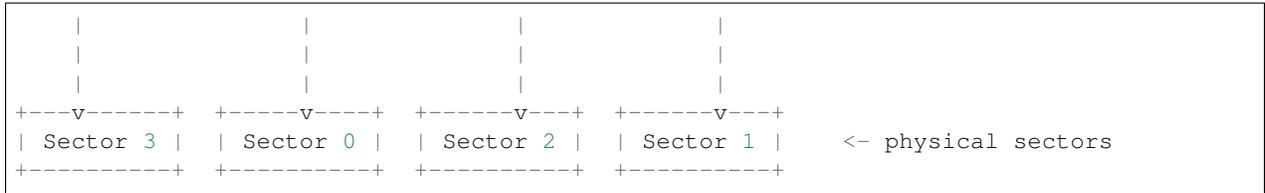


Structure of a page

For now we assume that flash sector size is 4096 bytes and that ESP32 flash encryption hardware operates on 32-byte blocks. It is possible to introduce some settings configurable at compile-time (e.g. via menuconfig) to accommodate flash chips with different sector sizes (although it is not clear if other components in the system, e.g. SPI flash driver and SPI flash cache can support these other sizes).

Page consists of three parts: header, entry state bitmap, and entries themselves. To be compatible with ESP32 flash encryption, entry size is 32 bytes. For integer types, entry holds one key-value pair. For strings and blobs, an entry holds part of key-value pair (more on that in the entry structure description).

The following diagram illustrates page structure. Numbers in parentheses indicate size of each part in bytes.

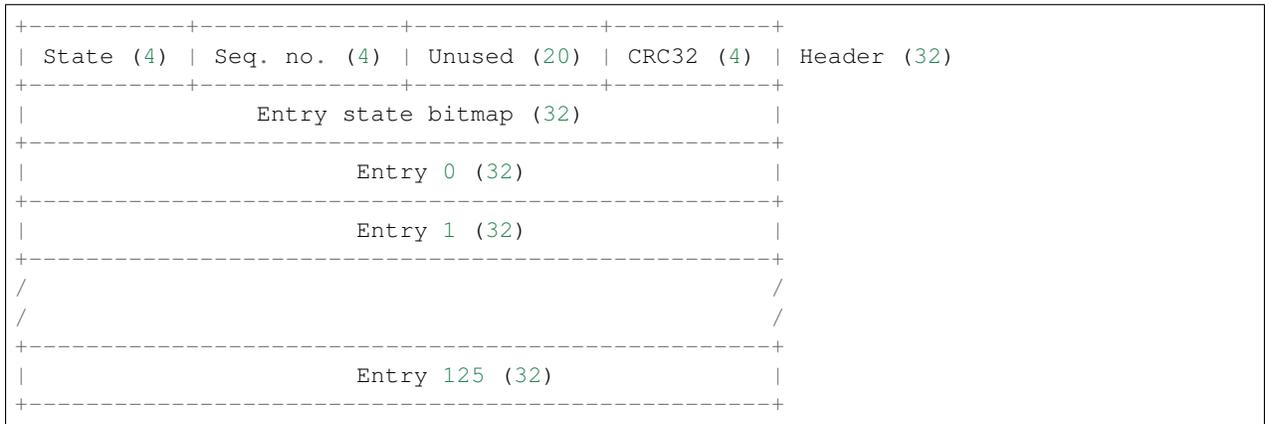

Page header and entry state bitmap are always written to flash unencrypted. Entries are encrypted if flash encryption feature of the ESP32 is used.

Page state values are defined in such a way that changing state is possible by writing 0 into some of the bits. Therefore it not necessary to erase the page to change page state, unless that is a change to *erased* state.

CRC32 value in header is calculated over the part which doesn't include state value (bytes 4 to 28). Unused part is currently filled with 0xff bytes. Future versions of the library may store format version there.

The following sections describe structure of entry state bitmap and entry itself.

Entry and entry state bitmap

Each entry can be in one of the following three states. Each state is represented with two bits in the entry state bitmap. Final four bits in the bitmap (256 - 2 * 126) are unused.


Empty (2'b11) Nothing is written into the specific entry yet. It is in an uninitialized state (all bytes 0xff).

Written (2'b10) A key-value pair (or part of key-value pair which spans multiple entries) has been written into the entry.

Erased (2'b00) A key-value pair in this entry has been discarded. Contents of this entry will not be parsed anymore.

Structure of entry

For values of primitive types (currently integers from 1 to 8 bytes long), entry holds one key-value pair. For string and blob types, entry holds part of the whole key-value pair. In case when a key-value pair spans multiple entries, all entries are stored in the same page.

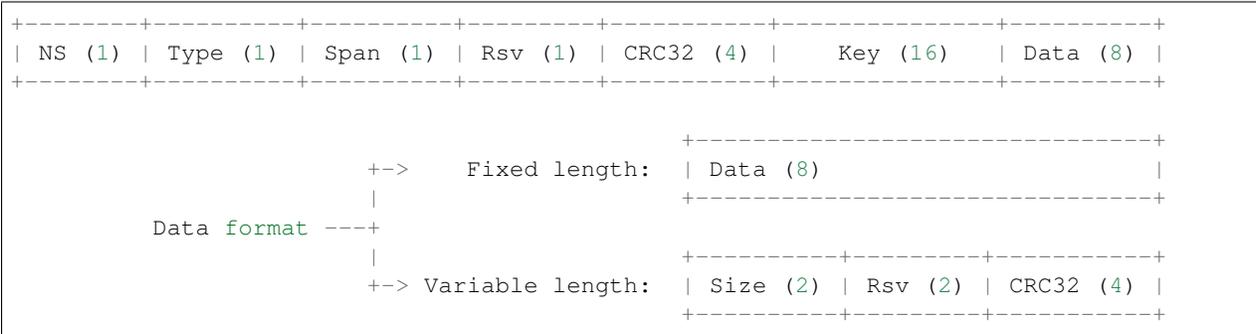

Individual fields in entry structure have the following meanings:

NS Namespace index for this entry. See section on namespaces implementation for explanation of this value.

Type One byte indicating data type of value. See `ItemType` enumeration in `nvs_types.h` for possible values.

Span Number of entries used by this key-value pair. For integer types, this is equal to 1. For strings and blobs this depends on value length.

Rsv Unused field, should be `0xff`.

CRC32 Checksum calculated over all the bytes in this entry, except for the CRC32 field itself.

Key Zero-terminated ASCII string containing key name. Maximum string length is 15 bytes, excluding zero terminator.

Data For integer types, this field contains the value itself. If the value itself is shorter than 8 bytes it is padded to the right, with unused bytes filled with `0xff`. For string and blob values, these 8 bytes hold additional data about the value, described next:


Size (Only for strings and blobs.) Size, in bytes, of actual data. For strings, this includes zero terminator.

CRC32 (Only for strings and blobs.) Checksum calculated over all bytes of data.

Variable length values (strings and blobs) are written into subsequent entries, 32 bytes per entry. *Span* field of the first entry indicates how many entries are used.

Namespaces

As mentioned above, each key-value pair belongs to one of the namespaces. Namespaces identifiers (strings) are stored as keys of key-value pairs in namespace with index 0. Values corresponding to these keys are indexes of these namespaces.

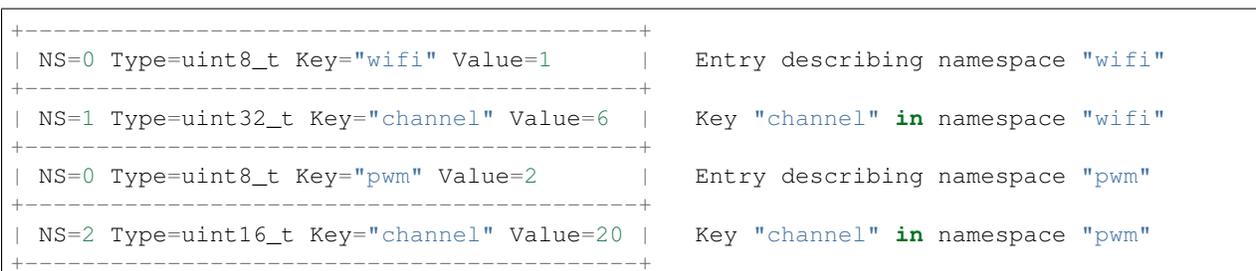

Item hash list

To reduce the number of reads performed from flash memory, each member of Page class maintains a list of pairs: (item index; item hash). This list makes searches much quicker. Instead of iterating over all entries, reading them from flash one at a time, `Page::findItem` first performs search for item hash in the hash list. This gives the item index within the page, if such an item exists. Due to a hash collision it is possible that a different item will be found. This is handled by falling back to iteration over items in flash.

Each node in hash list contains a 24-bit hash and 8-bit item index. Hash is calculated based on item namespace and key name. CRC32 is used for calculation, result is truncated to 24 bits. To reduce overhead of storing 32-bit entries in a linked list, list is implemented as a doubly-linked list of arrays. Each array holds 29 entries, for the total size of 128 bytes, together with linked list pointers and 32-bit count field. Minimal amount of extra RAM useage per page is therefore 128 bytes, maximum is 640 bytes.

Application Example

Two examples are provided in [storage](#) directory of ESP-IDF examples:

[storage/nvs_rw_value](#)

Demonstrates how to read and write a single integer value using NVS.

The value holds the number of ESP32 module restarts. Since it is written to NVS, the value is preserved between restarts.

Example also shows how to check if read / write operation was successful, or certain value is not initialized in NVS. Diagnostic is provided in plain text to help track program flow and capture any issues on the way.

[storage/nvs_rw_blob](#)

Demonstrates how to read and write a single integer value and a blob (binary large object) using NVS to preserve them between ESP32 module restarts.

- value - tracks number of ESP32 module soft and hard restarts.
- blob - contains a table with module run times. The table is read from NVS to dynamically allocated RAM. New run time is added to the table on each manually triggered soft restart and written back to NVS. Triggering is done by pulling down GPIO0.

Example also shows how to implement diagnostics if read / write operation was successful.

API Reference

Header File

- `nvs_flash/include/nvs_flash.h`

Functions

`esp_err_t nvs_flash_init` (void)

Initialize NVS flash storage with layout given in the partition table.

Return

- ESP_OK if storage was successfully initialized.
- ESP_ERR_NVS_NO_FREE_PAGES if the NVS storage contains no empty pages (which may happen if NVS partition was truncated)
- one of the error codes from the underlying flash storage driver

esp_err_t **nvs_flash_erase** (void)
Erase NVS partition.

This function erases all contents of NVS partition

Return

- ESP_OK on success
- ESP_ERR_NOT_FOUND if there is no NVS partition in the partition table

Header File

- [nvs_flash/include/nvs.h](#)

Functions

esp_err_t **nvs_set_i8** (*nvs_handle* handle, const char *key, int8_t value)
set value for given key

This family of functions set value for the key, given its name. Note that actual storage will not be updated until `nvs_commit` function is called.

Return

- ESP_OK if value was set successfully
- ESP_ERR_NVS_INVALID_HANDLE if handle has been closed or is NULL
- ESP_ERR_NVS_READ_ONLY if storage handle was opened as read only
- ESP_ERR_NVS_INVALID_NAME if key name doesn't satisfy constraints
- ESP_ERR_NVS_NOT_ENOUGH_SPACE if there is not enough space in the underlying storage to save the value
- ESP_ERR_NVS_REMOVE_FAILED if the value wasn't updated because flash write operation has failed. The value was written however, and update will be finished after re-initialization of nvs, provided that flash operation doesn't fail again.
- ESP_ERR_NVS_VALUE_TOO_LONG if the string value is too long

Parameters

- `handle`: Handle obtained from `nvs_open` function. Handles that were opened read only cannot be used.
- `key`: Key name. Maximal length is determined by the underlying implementation, but is guaranteed to be at least 15 characters. Shouldn't be empty.
- `value`: The value to set. For strings, the maximum length (including null character) is 1984 bytes.

esp_err_t **nvs_set_u8** (*nvs_handle* handle, const char *key, uint8_t value)

```

esp_err_t nvs_set_i16(nvs_handle handle, const char *key, int16_t value)
esp_err_t nvs_set_u16(nvs_handle handle, const char *key, uint16_t value)
esp_err_t nvs_set_i32(nvs_handle handle, const char *key, int32_t value)
esp_err_t nvs_set_u32(nvs_handle handle, const char *key, uint32_t value)
esp_err_t nvs_set_i64(nvs_handle handle, const char *key, int64_t value)
esp_err_t nvs_set_u64(nvs_handle handle, const char *key, uint64_t value)
esp_err_t nvs_set_str(nvs_handle handle, const char *key, const char *value)
esp_err_t nvs_get_i8(nvs_handle handle, const char *key, int8_t *out_value)
    get value for given key

```

These functions retrieve value for the key, given its name. If key does not exist, or the requested variable type doesn't match the type which was used when setting a value, an error is returned.

In case of any error, `out_value` is not modified.

All functions expect `out_value` to be a pointer to an already allocated variable of the given type.

```

// Example of using nvs_get_i32:
int32_t max_buffer_size = 4096; // default value
esp_err_t err = nvs_get_i32(my_handle, "max_buffer_size", &max_buffer_size);
assert(err == ESP_OK || err == ESP_ERR_NVS_NOT_FOUND);
// if ESP_ERR_NVS_NOT_FOUND was returned, max_buffer_size will still
// have its default value.

```

Return

- `ESP_OK` if the value was retrieved successfully
- `ESP_ERR_NVS_NOT_FOUND` if the requested key doesn't exist
- `ESP_ERR_NVS_INVALID_HANDLE` if handle has been closed or is `NULL`
- `ESP_ERR_NVS_INVALID_NAME` if key name doesn't satisfy constraints
- `ESP_ERR_NVS_INVALID_LENGTH` if length is not sufficient to store data

Parameters

- `handle`: Handle obtained from `nvs_open` function.
- `key`: Key name. Maximal length is determined by the underlying implementation, but is guaranteed to be at least 15 characters. Shouldn't be empty.
- `out_value`: Pointer to the output value. May be `NULL` for `nvs_get_str` and `nvs_get_blob`, in this case required length will be returned in length argument.

```

esp_err_t nvs_get_u8(nvs_handle handle, const char *key, uint8_t *out_value)
esp_err_t nvs_get_i16(nvs_handle handle, const char *key, int16_t *out_value)
esp_err_t nvs_get_u16(nvs_handle handle, const char *key, uint16_t *out_value)
esp_err_t nvs_get_i32(nvs_handle handle, const char *key, int32_t *out_value)
esp_err_t nvs_get_u32(nvs_handle handle, const char *key, uint32_t *out_value)
esp_err_t nvs_get_i64(nvs_handle handle, const char *key, int64_t *out_value)
esp_err_t nvs_get_u64(nvs_handle handle, const char *key, uint64_t *out_value)

```

`esp_err_t nvs_get_str` (*nvs_handle* handle, **const** char *key, char *out_value, size_t *length)
get value for given key

These functions retrieve value for the key, given its name. If key does not exist, or the requested variable type doesn't match the type which was used when setting a value, an error is returned.

In case of any error, out_value is not modified.

All functions expect out_value to be a pointer to an already allocated variable of the given type.

nvs_get_str and nvs_get_blob functions support WinAPI-style length queries. To get the size necessary to store the value, call nvs_get_str or nvs_get_blob with zero out_value and non-zero pointer to length. Variable pointed to by length argument will be set to the required length. For nvs_get_str, this length includes the zero terminator. When calling nvs_get_str and nvs_get_blob with non-zero out_value, length has to be non-zero and has to point to the length available in out_value. It is suggested that nvs_get/set_str is used for zero-terminated C strings, and nvs_get/set_blob used for arbitrary data structures.

```
// Example (without error checking) of using nvs_get_str to get a string into a
↳dynamic array:
size_t required_size;
nvs_get_str(my_handle, "server_name", NULL, &required_size);
char* server_name = malloc(required_size);
nvs_get_str(my_handle, "server_name", server_name, &required_size);

// Example (without error checking) of using nvs_get_blob to get a binary data
into a static array:
uint8_t mac_addr[6];
size_t size = sizeof(mac_addr);
nvs_get_blob(my_handle, "dst_mac_addr", mac_addr, &size);
```

Return

- ESP_OK if the value was retrieved successfully
- ESP_ERR_NVS_NOT_FOUND if the requested key doesn't exist
- ESP_ERR_NVS_INVALID_HANDLE if handle has been closed or is NULL
- ESP_ERR_NVS_INVALID_NAME if key name doesn't satisfy constraints
- ESP_ERR_NVS_INVALID_LENGTH if length is not sufficient to store data

Parameters

- handle: Handle obtained from nvs_open function.
- key: Key name. Maximal length is determined by the underlying implementation, but is guaranteed to be at least 15 characters. Shouldn't be empty.
- out_value: Pointer to the output value. May be NULL for nvs_get_str and nvs_get_blob, in this case required length will be returned in length argument.
- length: A non-zero pointer to the variable holding the length of out_value. In case out_value a zero, will be set to the length required to hold the value. In case out_value is not zero, will be set to the actual length of the value written. For nvs_get_str this includes zero terminator.

`esp_err_t nvs_get_blob` (*nvs_handle* handle, **const** char *key, void *out_value, size_t *length)

`esp_err_t nvs_open` (**const** char *name, *nvs_open_mode* open_mode, *nvs_handle* *out_handle)
Open non-volatile storage with a given namespace.

Multiple internal ESP-IDF and third party application modules can store their key-value pairs in the NVS module. In order to reduce possible conflicts on key names, each module can use its own namespace.

Return

- ESP_OK if storage handle was opened successfully
- ESP_ERR_NVS_NOT_INITIALIZED if the storage driver is not initialized
- ESP_ERR_NVS_NOT_FOUND if namespace doesn't exist yet and mode is NVS_READONLY
- ESP_ERR_NVS_INVALID_NAME if namespace name doesn't satisfy constraints
- other error codes from the underlying storage driver

Parameters

- *name*: Namespace name. Maximal length is determined by the underlying implementation, but is guaranteed to be at least 15 characters. Shouldn't be empty.
- *open_mode*: NVS_READWRITE or NVS_READONLY. If NVS_READONLY, will open a handle for reading only. All write requests will be rejected for this handle.
- *out_handle*: If successful (return code is zero), handle will be returned in this argument.

`esp_err_t nvs_set_blob(nvs_handle handle, const char *key, const void *value, size_t length)`
 set variable length binary value for given key

This family of functions set value for the key, given its name. Note that actual storage will not be updated until `nvs_commit` function is called.

Return

- ESP_OK if value was set successfully
- ESP_ERR_NVS_INVALID_HANDLE if handle has been closed or is NULL
- ESP_ERR_NVS_READ_ONLY if storage handle was opened as read only
- ESP_ERR_NVS_INVALID_NAME if key name doesn't satisfy constraints
- ESP_ERR_NVS_NOT_ENOUGH_SPACE if there is not enough space in the underlying storage to save the value
- ESP_ERR_NVS_REMOVE_FAILED if the value wasn't updated because flash write operation has failed. The value was written however, and update will be finished after re-initialization of nvs, provided that flash operation doesn't fail again.
- ESP_ERR_NVS_VALUE_TOO_LONG if the value is too long

Parameters

- *handle*: Handle obtained from `nvs_open` function. Handles that were opened read only cannot be used.
- *key*: Key name. Maximal length is 15 characters. Shouldn't be empty.
- *value*: The value to set.
- *length*: length of binary value to set, in bytes; Maximum length is 1984 bytes.

`esp_err_t nvs_erase_key(nvs_handle handle, const char *key)`
 Erase key-value pair with given key name.

Note that actual storage may not be updated until `nvs_commit` function is called.

Return

- ESP_OK if erase operation was successful

- `ESP_ERR_NVS_INVALID_HANDLE` if handle has been closed or is `NULL`
- `ESP_ERR_NVS_READ_ONLY` if handle was opened as read only
- `ESP_ERR_NVS_NOT_FOUND` if the requested key doesn't exist
- other error codes from the underlying storage driver

Parameters

- `handle`: Storage handle obtained with `nvs_open`. Handles that were opened read only cannot be used.
- `key`: Key name. Maximal length is determined by the underlying implementation, but is guaranteed to be at least 15 characters. Shouldn't be empty.

`esp_err_t nvs_erase_all` (*nvs_handle* handle)

Erase all key-value pairs in a namespace.

Note that actual storage may not be updated until `nvs_commit` function is called.

Return

- `ESP_OK` if erase operation was successful
- `ESP_ERR_NVS_INVALID_HANDLE` if handle has been closed or is `NULL`
- `ESP_ERR_NVS_READ_ONLY` if handle was opened as read only
- other error codes from the underlying storage driver

Parameters

- `handle`: Storage handle obtained with `nvs_open`. Handles that were opened read only cannot be used.

`esp_err_t nvs_commit` (*nvs_handle* handle)

Write any pending changes to non-volatile storage.

After setting any values, `nvs_commit()` must be called to ensure changes are written to non-volatile storage. Individual implementations may write to storage at other times, but this is not guaranteed.

Return

- `ESP_OK` if the changes have been written successfully
- `ESP_ERR_NVS_INVALID_HANDLE` if handle has been closed or is `NULL`
- other error codes from the underlying storage driver

Parameters

- `handle`: Storage handle obtained with `nvs_open`. Handles that were opened read only cannot be used.

`void nvs_close` (*nvs_handle* handle)

Close the storage handle and free any allocated resources.

This function should be called for each handle opened with `nvs_open` once the handle is not in use any more. Closing the handle may not automatically write the changes to nonvolatile storage. This has to be done explicitly using `nvs_commit` function. Once this function is called on a handle, the handle should no longer be used.

Parameters

- `handle`: Storage handle to close

Macros

ESP_ERR_NVS_BASE 0x1100

Starting number of error codes

ESP_ERR_NVS_NOT_INITIALIZED (ESP_ERR_NVS_BASE + 0x01)

The storage driver is not initialized

ESP_ERR_NVS_NOT_FOUND (ESP_ERR_NVS_BASE + 0x02)

Id namespace doesn't exist yet and mode is NVS_READONLY

ESP_ERR_NVS_TYPE_MISMATCH (ESP_ERR_NVS_BASE + 0x03)

The type of set or get operation doesn't match the type of value stored in NVS

ESP_ERR_NVS_READ_ONLY (ESP_ERR_NVS_BASE + 0x04)

Storage handle was opened as read only

ESP_ERR_NVS_NOT_ENOUGH_SPACE (ESP_ERR_NVS_BASE + 0x05)

There is not enough space in the underlying storage to save the value

ESP_ERR_NVS_INVALID_NAME (ESP_ERR_NVS_BASE + 0x06)

Namespace name doesn't satisfy constraints

ESP_ERR_NVS_INVALID_HANDLE (ESP_ERR_NVS_BASE + 0x07)

Handle has been closed or is NULL

ESP_ERR_NVS_REMOVE_FAILED (ESP_ERR_NVS_BASE + 0x08)

The value wasn't updated because flash write operation has failed. The value was written however, and update will be finished after re-initialization of nvs, provided that flash operation doesn't fail again.

ESP_ERR_NVS_KEY_TOO_LONG (ESP_ERR_NVS_BASE + 0x09)

Key name is too long

ESP_ERR_NVS_PAGE_FULL (ESP_ERR_NVS_BASE + 0x0a)

Internal error; never returned by nvs_ API functions

ESP_ERR_NVS_INVALID_STATE (ESP_ERR_NVS_BASE + 0x0b)

NVS is in an inconsistent state due to a previous error. Call `nvs_flash_init` and `nvs_open` again, then retry.

ESP_ERR_NVS_INVALID_LENGTH (ESP_ERR_NVS_BASE + 0x0c)

String or blob length is not sufficient to store data

ESP_ERR_NVS_NO_FREE_PAGES (ESP_ERR_NVS_BASE + 0x0d)

NVS partition doesn't contain any empty pages. This may happen if NVS partition was truncated. Erase the whole partition and call `nvs_flash_init` again.

ESP_ERR_NVS_VALUE_TOO_LONG (ESP_ERR_NVS_BASE + 0x0e)

String or blob length is longer than supported by the implementation

Type Definitions

typedef uint32_t nvs_handle

Opaque pointer type representing non-volatile storage handle

Enumerations

`enum nvs_open_mode`

Mode of opening the non-volatile storage.

Values:

`NVS_READONLY`

Read only

`NVS_READWRITE`

Read and write

Virtual filesystem component

Overview

Virtual filesystem (VFS) component provides a unified interface for drivers which can perform operations on file-like objects. This can be a real filesystems (FAT, SPIFFS, etc.), or device drivers which exposes file-like interface.

This component allows C library functions, such as `fopen` and `fprintf`, to work with FS drivers. At high level, each FS driver is associated with some path prefix. When one of C library functions needs to open a file, VFS component searches for the FS driver associated with the file's path, and forwards the call to that driver. VFS also forwards read, write, and other calls for the given file to the same FS driver.

For example, one can register a FAT filesystem driver with `/fat` prefix, and call `fopen("/fat/file.txt", "w")`. VFS component will then call `open` function of FAT driver and pass `/file.txt` argument to it (and appropriate mode flags). All subsequent calls to C library functions for the returned `FILE*` stream will also be forwarded to the FAT driver.

FS registration

To register an FS driver, application needs to define an instance of `esp_vfs_t` structure and populate it with function pointers to FS APIs:

```
esp_vfs_t myfs = {
    .fd_offset = 0,
    .flags = ESP_VFS_FLAG_DEFAULT,
    .write = &myfs_write,
    .open = &myfs_open,
    .fstat = &myfs_fstat,
    .close = &myfs_close,
    .read = &myfs_read,
};

ESP_ERROR_CHECK(esp_vfs_register("/data", &myfs, NULL));
```

Depending on the way FS driver declares its APIs, either `read`, `write`, etc., or `read_p`, `write_p`, etc. should be used.

Case 1: API functions are declared without an extra context pointer (FS driver is a singleton):

```
ssize_t myfs_write(int fd, const void * data, size_t size);

// In definition of esp_vfs_t:
    .flags = ESP_VFS_FLAG_DEFAULT,
```

```

    .write = &myfs_write,
// ... other members initialized

// When registering FS, context pointer (third argument) is NULL:
ESP_ERROR_CHECK(esp_vfs_register("/data", &myfs, NULL));

```

Case 2: API functions are declared with an extra context pointer (FS driver supports multiple instances):

```

ssize_t myfs_write(myfs_t* fs, int fd, const void * data, size_t size);

// In definition of esp_vfs_t:
    .flags = ESP_VFS_FLAG_CONTEXT_PTR,
    .write_p = &myfs_write,
// ... other members initialized

// When registering FS, pass the FS context pointer into the third argument
// (hypothetical myfs_mount function is used for illustrative purposes)
myfs_t* myfs_inst1 = myfs_mount(partition1->offset, partition1->size);
ESP_ERROR_CHECK(esp_vfs_register("/data1", &myfs, myfs_inst1));

// Can register another instance:
myfs_t* myfs_inst2 = myfs_mount(partition2->offset, partition2->size);
ESP_ERROR_CHECK(esp_vfs_register("/data2", &myfs, myfs_inst2));

```

Paths

Each registered FS has a path prefix associated with it. This prefix may be considered a “mount point” of this partition.

In case when mount points are nested, the mount point with the longest matching path prefix is used when opening the file. For instance, suppose that the following filesystems are registered in VFS:

- FS 1 on /data
- FS 2 on /data/static

Then:

- FS 1 will be used when opening a file called /data/log.txt
- FS 2 will be used when opening a file called /data/static/index.html
- Even if /index.html" doesn't exist in FS 2, FS 1 will *not* be searched for /static/index.html.

As a general rule, mount point names must start with the path separator (/) and must contain at least one character after path separator. However an empty mount point name is also supported, and may be used in cases when application needs to provide “fallback” filesystem, or override VFS functionality altogether. Such filesystem will be used if no prefix matches the path given.

VFS does not handle dots (.) in path names in any special way. VFS does not treat .. as a reference to the parent directory. I.e. in the above example, using a path /data/static/./log.txt will not result in a call to FS 1 to open /log.txt. Specific FS drivers (such as FATFS) may handle dots in file names differently.

When opening files, FS driver will only be given relative path to files. For example:

- myfs driver is registered with /data as path prefix
- and application calls `fopen("/data/config.json", ...)`
- then VFS component will call `myfs_open("/config.json", ...)`.
- myfs driver will open /config.json file

and return. I.e. doing `fscanf("%d\n", &var);` may not have desired results. This is a temporary limitation which will be removed once `fcntl` is added to the VFS interface.

Standard streams and FreeRTOS tasks

FILE objects for `stdin`, `stdout`, and `stderr` are shared between all FreeRTOS tasks, but the pointers to these objects are stored in per-task `struct _reent`. The following code:

```
fprintf(stderr, "42\n");
```

actually is translated to to this (by the preprocessor):

```
fprintf(__getreent()->_stderr, "42\n");
```

where the `__getreent()` function returns a per-task pointer to `struct _reent` ([newlib/include/sys/reent.h#L370-L417](#)). This structure is allocated on the TCB of each task. When a task is initialized, `_stdin`, `_stdout` and `_stderr` members of `struct _reent` are set to the values of `_stdin`, `_stdout` and `_stderr` of `_GLOBAL_REENT` (i.e. the structure which is used before FreeRTOS is started).

Such a design has the following consequences:

- It is possible to set `stdin`, `stdout`, and `stderr` for any given task without affecting other tasks, e.g. by doing `stdin = fopen("/dev/uart/1", "r")`.
- Closing default `stdin`, `stdout`, or `stderr` using `fclose` will close the FILE stream object — this will affect all other tasks.
- To change the default `stdin`, `stdout`, `stderr` streams for new tasks, modify `_GLOBAL_REENT->_stdin` (`_stdout`, `_stderr`) before creating the task.

Application Example

Instructions

API Reference

Header File

- `vfs/include/esp_vfs.h`

Functions

`ssize_t esp_vfs_write(struct _reent *r, int fd, const void *data, size_t size)`

These functions are to be used in newlib syscall table. They will be called by newlib when it needs to use any of the syscalls.

`off_t esp_vfs_lseek(struct _reent *r, int fd, off_t size, int mode)`

`ssize_t esp_vfs_read(struct _reent *r, int fd, void *dst, size_t size)`

`int esp_vfs_open(struct _reent *r, const char *path, int flags, int mode)`

`int esp_vfs_close(struct _reent *r, int fd)`

`int esp_vfs_fstat(struct _reent *r, int fd, struct stat *st)`

int **esp_vfs_stat** (struct _reent *r, const char *path, struct stat *st)

int **esp_vfs_link** (struct _reent *r, const char *n1, const char *n2)

int **esp_vfs_unlink** (struct _reent *r, const char *path)

int **esp_vfs_rename** (struct _reent *r, const char *src, const char *dst)

esp_err_t **esp_vfs_register** (const char *base_path, const esp_vfs_t *vfs, void *ctx)
Register a virtual filesystem for given path prefix.

Return ESP_OK if successful, ESP_ERR_NO_MEM if too many VFSes are registered.

Parameters

- `base_path`: file path prefix associated with the filesystem. Must be a zero-terminated C string, up to `ESP_VFS_PATH_MAX` characters long, and at least 2 characters long. Name must start with a `“/”` and must not end with `“/”`. For example, `“/data”` or `“/dev/spi”` are valid. These VFSes would then be called to handle file paths such as `“/data/myfile.txt”` or `“/dev/spi/0”`.
- `vfs`: Pointer to `esp_vfs_t`, a structure which maps syscalls to the filesystem driver functions. VFS component doesn't assume ownership of this pointer.
- `ctx`: If `vfs->flags` has `ESP_VFS_FLAG_CONTEXT_PTR` set, a pointer which should be passed to VFS functions. Otherwise, `NULL`.

esp_err_t **esp_vfs_unregister** (const char *base_path)
Unregister a virtual filesystem for given path prefix

Return ESP_OK if successful, ESP_ERR_INVALID_STATE if VFS for given prefix hasn't been registered

Parameters

- `base_path`: file prefix previously used in `esp_vfs_register` call

Structures

struct esp_vfs_t

VFS definition structure.

This structure should be filled with pointers to corresponding FS driver functions.

If the FS implementation has an option to use certain offset for all file descriptors, this value should be passed into `fd_offset` field. Otherwise VFS component will translate all FDs to start at zero offset.

Some FS implementations expect some state (e.g. pointer to some structure) to be passed in as a first argument. For these implementations, populate the members of this structure which have `_p` suffix, set `flags` member to `ESP_VFS_FLAG_CONTEXT_PTR` and provide the context pointer to `esp_vfs_register` function. If the implementation doesn't use this extra argument, populate the members without `_p` suffix and set `flags` member to `ESP_VFS_FLAG_DEFAULT`.

If the FS driver doesn't provide some of the functions, set corresponding members to `NULL`.

Public Members

int **fd_offset**

file descriptor offset, determined by the FS driver

```
int flags
    ESP_VFS_FLAG_CONTEXT_PTR or ESP_VFS_FLAG_DEFAULT
```

Macros

ESP_VFS_PATH_MAX 15
Maximum length of path prefix (not including zero terminator)

ESP_VFS_FLAG_DEFAULT 0
Default value of flags member in *esp_vfs_t* structure.

ESP_VFS_FLAG_CONTEXT_PTR 1
Flag which indicates that FS needs extra context pointer in syscalls.

Header File

- `vfs/include/esp_vfs_dev.h`

Functions

```
void esp_vfs_dev_uart_register ()
    add /dev/uart virtual filesystem driver
```

This function is called from startup code to enable serial output

FAT Filesystem Support

ESP-IDF uses `FatFs` library to work with FAT filesystems. `FatFs` library resides in `fatfs` component. Although it can be used directly, many of its features can be accessed via VFS using C standard library and POSIX APIs.

Additionally, `FatFs` has been modified to support run-time pluggable disk IO layer. This allows mapping of `FatFs` drives to physical disks at run-time.

Using FatFs with VFS

`esp_vfs_fat.h` header file defines functions to connect `FatFs` with VFS. `esp_vfs_fat_register` function allocates a `FATFS` structure, and registers a given path prefix in VFS. Subsequent operations on files starting with this prefix are forwarded to `FatFs` APIs. `esp_vfs_fat_unregister_path` function deletes the registration with VFS, and frees the `FATFS` structure.

Most applications will use the following flow when working with `esp_vfs_fat_` functions:

1. Call `esp_vfs_fat_register`, specifying path prefix where the filesystem has to be mounted (e.g. `"/sdcard"`, `"/spiflash"`), `FatFs` drive number, and a variable which will receive a pointer to `FATFS` structure.
2. Call `ff_diskio_register` function to register disk IO driver for the drive number used in step 1.
3. Call `f_mount` function (and optionally `f_fdisk`, `f_mkfs`) to mount the filesystem using the same drive number which was passed to `esp_vfs_fat_register`. See `FatFs` documentation for more details.
4. Call POSIX and C standard library functions to open, read, write, erase, copy files, etc. Use paths starting with the prefix passed to `esp_vfs_register` (such as `"/sdcard/hello.txt"`).

5. Optionally, call FatFs library functions directly. Use paths without a VFS prefix in this case ("/hello.txt").
6. Close all open files.
7. Call `f_mount` function for the same drive number, with `NULL FATFS*` argument, to unmount the filesystem.
8. Call `ff_diskio_register` with `NULL ff_diskio_impl_t*` argument and the same drive number.
9. Call `esp_vfs_fat_unregister_path` with the path where the file system is mounted to remove FatFs from VFS, and free the `FATFS` structure allocated on step 1.

Convenience functions, `esp_vfs_fat_sdmmc_mount` and `esp_vfs_fat_sdmmc_unmount`, which wrap these steps and also handle SD card initialization, are described in the next section.

`esp_err_t esp_vfs_fat_register` (`const char *base_path`, `const char *fat_drive`, `size_t max_files`, `FATFS **out_fs`)

Register FATFS with VFS component.

This function registers given FAT drive in VFS, at the specified base path. If only one drive is used, `fat_drive` argument can be an empty string. Refer to FATFS library documentation on how to specify FAT drive. This function also allocates FATFS structure which should be used for `f_mount` call.

Note This function doesn't mount the drive into FATFS, it just connects POSIX and C standard library IO function with FATFS. You need to mount desired drive into FATFS separately.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if `esp_vfs_fat_register` was already called
- `ESP_ERR_NO_MEM` if not enough memory or too many VFSes already registered

Parameters

- `base_path`: path prefix where FATFS should be registered
- `fat_drive`: FATFS drive specification; if only one drive is used, can be an empty string
- `max_files`: maximum number of files which can be open at the same time
- `out_fs`: pointer to FATFS structure which can be used for FATFS `f_mount` call is returned via this argument.

`esp_err_t esp_vfs_fat_unregister_path` (`const char *base_path`)

Un-register FATFS from VFS.

Note FATFS structure returned by `esp_vfs_fat_register` is destroyed after this call. Make sure to call `f_mount` function to unmount it before calling `esp_vfs_fat_unregister_path`. Difference between this function and the one above is that this one will release the correct drive, while the one above will release the last registered one

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if FATFS is not registered in VFS

Parameters

- `base_path`: path prefix where FATFS is registered. This is the same used when `esp_vfs_fat_register` was called

Using FatFs with VFS and SD cards

`esp_vfs_fat.h` header file also provides a convenience function to perform steps 1–3 and 7–9, and also handle SD card initialization: `esp_vfs_fat_sdmmc_mount`. This function does only limited error handling. Developers are encouraged to look at its source code and incorporate more advanced versions into production applications. `esp_vfs_fat_sdmmc_unmount` function unmounts the filesystem and releases resources acquired by `esp_vfs_fat_sdmmc_mount`.

```
esp_err_t esp_vfs_fat_sdmmc_mount (const char *base_path, const sdmmc_host_t *host_config,
                                  const sdmmc_slot_config_t *slot_config, const esp_vfs_fat_mount_config_t *mount_config, sdmmc_card_t
                                  **out_card)
```

Convenience function to get FAT filesystem on SD card registered in VFS.

This is an all-in-one function which does the following:

- initializes SD/MMC peripheral with configuration in `host_config`
- initializes SD/MMC card with configuration in `slot_config`
- mounts FAT partition on SD/MMC card using FATFS library, with configuration in `mount_config`
- registers FATFS library with VFS, with prefix given by `base_prefix` variable

This function is intended to make example code more compact. For real world applications, developers should implement the logic of probing SD card, locating and mounting partition, and registering FATFS in VFS, with proper error checking and handling of exceptional conditions.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if `esp_vfs_fat_sdmmc_mount` was already called
- `ESP_ERR_NO_MEM` if memory can not be allocated
- `ESP_FAIL` if partition can not be mounted
- other error codes from SDMMC host, SDMMC protocol, or FATFS drivers

Parameters

- `base_path`: path where partition should be registered (e.g. “/sdcard”)
- `host_config`: pointer to structure describing SDMMC host
- `slot_config`: pointer to structure with extra SDMMC slot configuration
- `mount_config`: pointer to structure with extra parameters for mounting FATFS
- `out_card`: if not `NULL`, pointer to the card information structure will be returned via this argument

```
struct esp_vfs_fat_mount_config_t
```

Configuration arguments for `esp_vfs_fat_sdmmc_mount` and `esp_vfs_fat_spiflash_mount` functions.

Public Members

```
bool format_if_mount_failed
```

If FAT partition can not be mounted, and this parameter is true, create partition table and format the filesystem.

```
int max_files
```

Max number of open files.

`esp_err_t esp_vfs_fat_sdmmc_unmount ()`

Unmount FAT filesystem and release resources acquired using `esp_vfs_fat_sdmmc_mount`.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if `esp_vfs_fat_sdmmc_mount` hasn't been called

FatFS disk IO layer

FatFs has been extended with an API to register disk IO driver at runtime.

Implementation of disk IO functions for SD/MMC cards is provided. It can be registered for the given FatFs drive number using `ff_diskio_register_sdmmc` function.

void `ff_diskio_register` (BYTE *pdrv*, const `ff_diskio_impl_t` **discio_impl*)

Register or unregister diskio driver for given drive number.

When FATFS library calls one of `disk_xxx` functions for driver number *pdrv*, corresponding function in `discio_impl` for given *pdrv* will be called.

Parameters

- *pdrv*: drive number
- *discio_impl*: pointer to `ff_diskio_impl_t` structure with diskio functions or NULL to unregister and free previously registered drive

struct `ff_diskio_impl_t`

Structure of pointers to disk IO driver functions.

See FatFs documentation for details about these functions

Public Members

DSTATUS (***init**) (BYTE *pdrv*)

disk initialization function

DSTATUS (***status**) (BYTE *pdrv*)

disk status check function

DRESULT (***read**) (BYTE *pdrv*, BYTE **buff*, DWORD *sector*, UINT *count*)

sector read function

DRESULT (***write**) (BYTE *pdrv*, const BYTE **buff*, DWORD *sector*, UINT *count*)

sector write function

DRESULT (***ioctl**) (BYTE *pdrv*, BYTE *cmd*, void **buff*)

function to get info about disk and do some misc operations

void `ff_diskio_register_sdmmc` (BYTE *pdrv*, `sdmmc_card_t` **card*)

Register SD/MMC diskio driver

Parameters

- *pdrv*: drive number
- *card*: pointer to `sdmmc_card_t` structure describing a card; card should be initialized before calling `f_mount`.

Wear Levelling APIs

Overview

Most of the flash devices and specially SPI flash devices that are used in ESP32 have sector based organization and have limited amount of erase/modification cycles per memory sector. To avoid situation when one sector reach the limit of erases when other sectors was used not often, we have made a component that avoid this situation. The wear levelling component share the amount of erases between all sectors in the memory without user interaction. The wear_levelling component contains APIs related to reading, writing, erasing, memory mapping data in the external SPI flash through the partition component. It also has higher-level APIs which work with FAT filesystem defined in the *FAT filesystem*.

The wear levelling component does not cache data in RAM. Write and erase functions modify flash directly, and flash contents is consistent when the function returns.

Wear Levelling access APIs

This is the set of APIs for working with data in flash:

- `wl_mount` mount wear levelling module for defined partition
- `wl_unmount` used to unmount levelling module
- `wl_erase_range` used to erase range of addresses in flash
- `wl_write` used to write data to the partition
- `wl_read` used to read data from the partition
- `wl_size` return size of available memory in bytes
- `wl_sector_size` returns size of one sector

Generally, try to avoid using the raw wear levelling functions in favor of filesystem-specific functions.

Memory Size

The memory size calculated in the wear Levelling module based on parameters of partition. The module use few sectors of flash for internal data.

See also

- *FAT Filesystem*
- *Partition Table documentation*

Application Example

An example which combines wear levelling driver with FATFS library is provided in `examples/storage/wear_levelling` directory. This example initializes the wear levelling driver, mounts FATFS partition, and writes and reads data from it using POSIX and C library APIs. See `README.md` file in the example directory for more information.

High level API Reference

Header Files

- `fatfs/src/esp_vfs_fat.h`

Functions

`esp_err_t esp_vfs_fat_spiflash_mount` (`const char *base_path`, `const char *partition_label`, `const esp_vfs_fat_mount_config_t *mount_config`, `wl_handle_t *wl_handle`)

Convenience function to initialize FAT filesystem in SPI flash and register it in VFS.

This is an all-in-one function which does the following:

- finds the partition with defined `partition_label`. Partition label should be configured in the partition table.
- initializes flash wear levelling library on top of the given partition
- mounts FAT partition using FATFS library on top of flash wear levelling library
- registers FATFS library with VFS, with prefix given by `base_prefix` variable

This function is intended to make example code more compact.

Return

- `ESP_OK` on success
- `ESP_ERR_NOT_FOUND` if the partition table does not contain FATFS partition with given label
- `ESP_ERR_INVALID_STATE` if `esp_vfs_fat_spiflash_mount` was already called
- `ESP_ERR_NO_MEM` if memory can not be allocated
- `ESP_FAIL` if partition can not be mounted
- other error codes from wear levelling library, SPI flash driver, or FATFS drivers

Parameters

- `base_path`: path where FATFS partition should be mounted (e.g. `"/spiflash"`)
- `partition_label`: label of the partition which should be used
- `mount_config`: pointer to structure with extra parameters for mounting FATFS
- `wl_handle`: wear levelling driver handle

`struct esp_vfs_fat_mount_config_t`

Configuration arguments for `esp_vfs_fat_sdmmc_mount` and `esp_vfs_fat_spiflash_mount` functions.

Public Members

bool `format_if_mount_failed`

If FAT partition can not be mounted, and this parameter is true, create partition table and format the filesystem.

int `max_files`

Max number of open files.

`esp_err_t esp_vfs_fat_spiflash_unmount` (`const char *base_path`, `wl_handle_t wl_handle`)
Unmount FAT filesystem and release resources acquired using `esp_vfs_fat_spiflash_mount`.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if `esp_vfs_fat_spiflash_mount` hasn't been called

Parameters

- `base_path`: path where partition should be registered (e.g. `"/spiflash"`)
- `wl_handle`: wear levelling driver handle returned by `esp_vfs_fat_spiflash_mount`

Mid level API Reference

Header File

- `wear_levelling/include/wear_levelling.h`

Functions

`esp_err_t wl_mount` (`const esp_partition_t *partition`, `wl_handle_t *out_handle`)
Mount WL for defined partition.

Return

- `ESP_OK`, if the allocation was successfully;
- `ESP_ERR_INVALID_ARG`, if WL allocation was unsuccessful;
- `ESP_ERR_NO_MEM`, if there was no memory to allocate WL components;

Parameters

- `partition`: that will be used for access
- `out_handle`: handle of the WL instance

`esp_err_t wl_unmount` (`wl_handle_t handle`)
Unmount WL for defined partition.

Return

- `ESP_OK`, if the operation completed successfully;
- or one of error codes from lower-level flash driver.

Parameters

- `handle`: WL partition handle

`esp_err_t wl_erase_range` (`wl_handle_t handle`, `size_t start_addr`, `size_t size`)
Erase part of the WL storage.

Return

- `ESP_OK`, if the range was erased successfully;

- ESP_ERR_INVALID_ARG, if iterator or dst are NULL;
- ESP_ERR_INVALID_SIZE, if erase would go out of bounds of the partition;
- or one of error codes from lower-level flash driver.

Parameters

- *handle*: WL handle that are related to the partition
- *start_addr*: Address where erase operation should start. Must be aligned to the result of function `wl_sector_size(...)`.
- *size*: Size of the range which should be erased, in bytes. Must be divisible by result of function `wl_sector_size(...)`.

`esp_err_t wl_write(wl_handle_t handle, size_t dest_addr, const void *src, size_t size)`

Write data to the WL storage.

Before writing data to flash, corresponding region of flash needs to be erased. This can be done using `wl_erase_range` function.

Note Prior to writing to WL storage, make sure it has been erased with `wl_erase_range` call.

Return

- ESP_OK, if data was written successfully;
- ESP_ERR_INVALID_ARG, if *dst_offset* exceeds partition size;
- ESP_ERR_INVALID_SIZE, if write would go out of bounds of the partition;
- or one of error codes from lower-level flash driver.

Parameters

- *handle*: WL handle that are related to the partition
- *dest_addr*: Address where the data should be written, relative to the beginning of the partition.
- *src*: Pointer to the source buffer. Pointer must be non-NULL and buffer must be at least 'size' bytes long.
- *size*: Size of data to be written, in bytes.

`esp_err_t wl_read(wl_handle_t handle, size_t src_addr, void *dest, size_t size)`

Read data from the WL storage.

Return

- ESP_OK, if data was read successfully;
- ESP_ERR_INVALID_ARG, if *src_offset* exceeds partition size;
- ESP_ERR_INVALID_SIZE, if read would go out of bounds of the partition;
- or one of error codes from lower-level flash driver.

Parameters

- *handle*: WL module instance that was initialized before
- *dest*: Pointer to the buffer where data should be stored. Pointer must be non-NULL and buffer must be at least 'size' bytes long.
- *src_addr*: Address of the data to be read, relative to the beginning of the partition.

- `size`: Size of data to be read, in bytes.

`size_t wl_size` (*wl_handle_t handle*)

Get size of the WL storage.

Return usable size, in bytes

Parameters

- `handle`: WL module handle that was initialized before

`size_t wl_sector_size` (*wl_handle_t handle*)

Get sector size of the WL instance.

Return sector size, in bytes

Parameters

- `handle`: WL module handle that was initialized before

Macros

`WL_INVALID_HANDLE` -1

Type Definitions

```
typedef int32_t wl_handle_t
    wear levelling handle
```

Example code for this API section is provided in [storage](#) directory of ESP-IDF examples.

System API

Memory allocation

Overview

The ESP32 has multiple types of RAM. Internally, there's IRAM, DRAM as well as RAM that can be used as both. It's also possible to connect external SPI flash to the ESP32; its memory can be integrated into the ESP32s memory map using the flash cache.

In order to make use of all this memory, esp-idf has a capabilities-based memory allocator. Basically, if you want to have memory with certain properties (for example, DMA-capable, or capable of executing code), you can create an OR-mask of the required capabilities and pass that to `pvPortMallocCaps`. For instance, the normal `malloc` code internally allocates memory with `heap_caps_malloc(size, MALLOC_CAP_8BIT)` in order to get data memory that is byte-addressable.

Because `malloc` uses this allocation system as well, memory allocated using `heap_caps_malloc()` can be freed by calling the standard `free()` function.

The “soc” component contains a list of memory regions for the chip, along with the type of each memory (aka its tag) and the associated capabilities for that memory type. On startup, a separate heap is initialised for each contiguous memory region. The capabilities-based allocator chooses the best heap for each allocation, based on the requested capabilities.

Special Uses

If a certain memory structure is only addressed in 32-bit units, for example an array of ints or pointers, it can be useful to allocate it with the `MALLOC_CAP_32BIT` flag. This also allows the allocator to give out IRAM memory; something which it can't do for a normal `malloc()` call. This can help to use all the available memory in the ESP32.

API Reference - Heap Allocation

API Reference - Heap Regions

Interrupt allocation

Overview

The ESP32 has two cores, with 32 interrupts each. Each interrupt has a certain priority level, most (but not all) interrupts are connected to the interrupt mux. Because there are more interrupt sources than interrupts, sometimes it makes sense to share an interrupt in multiple drivers. The `esp_intr_alloc` abstraction exists to hide all these implementation details.

A driver can allocate an interrupt for a certain peripheral by calling `esp_intr_alloc` (or `esp_intr_alloc_sintrstatus`). It can use the flags passed to this function to set the type of interrupt allocated, specifying a specific level or trigger method. The interrupt allocation code will then find an applicable interrupt, use the interrupt mux to hook it up to the peripheral, and install the given interrupt handler and ISR to it.

This code has two different types of interrupts it handles differently: Shared interrupts and non-shared interrupts. The simplest of the two are non-shared interrupts: a separate interrupt is allocated per `esp_intr_alloc` call and this interrupt is solely used for the peripheral attached to it, with only one ISR that will get called. Non-shared interrupts can have multiple peripherals triggering it, with multiple ISRs being called when one of the peripherals attached signals an interrupt. Thus, ISRs that are intended for shared interrupts should check the interrupt status of the peripheral they service in order to see if any action is required.

Non-shared interrupts can be either level- or edge-triggered. Shared interrupts can only be level interrupts (because of the chance of missed interrupts when edge interrupts are used.) (The logic behind this: DevA and DevB share an int. DevB signals an int. Int line goes high. ISR handler calls code for DevA -> does nothing. ISR handler calls code for DevB, but while doing that, DevA signals an int. ISR DevB is done, clears int for DevB, exits interrupt code. Now an interrupt for DevA is still pending, but because the int line never went low (DevA kept it high even when the int for DevB was cleared) the interrupt is never serviced.)

Multicore issues

Peripherals that can generate interrupts can be divided in two types:

- External peripherals, within the ESP32 but outside the Xtensa cores themselves. Most ESP32 peripherals are of this type.
- Internal peripherals, part of the Xtensa CPU cores themselves.

Interrupt handling differs slightly between these two types of peripherals.

Internal peripheral interrupts

Each Xtensa CPU core has its own set of six internal peripherals:

- Three timer comparators

- A performance monitor
- Two software interrupts.

Internal interrupt sources are defined in `esp_intr_alloc.h` as `ETS_INTERNAL_*_INTR_SOURCE`.

These peripherals can only be configured from the core they are associated with. When generating an interrupt, the interrupt they generate is hard-wired to their associated core; it's not possible to have e.g. an internal timer comparator of one core generate an interrupt on another core. That is why these sources can only be managed using a task running on that specific core. Internal interrupt sources are still allocatable using `esp_intr_alloc` as normal, but they cannot be shared and will always have a fixed interrupt level (namely, the one associated in hardware with the peripheral).

External Peripheral Interrupts

The remaining interrupt sources are from external peripherals. These are defined in `soc/soc.h` as `ETS_*_INTR_SOURCE`.

Non-internal interrupt slots in both CPU cores are wired to an interrupt multiplexer, which can be used to route any external interrupt source to any of these interrupt slots.

- Allocating an external interrupt will always allocate it on the core that does the allocation.
- Freeing an external interrupt must always happen on the same core it was allocated on.
- Disabling and enabling external interrupts from another core is allowed.
- Multiple external interrupt sources can share an interrupt slot by passing `ESP_INTR_FLAG_SHARED` as a flag to `esp_intr_alloc()`.

Care should be taken when calling `esp_intr_alloc()` from a task which is not pinned to a core. During task switching, these tasks can migrate between cores. Therefore it is impossible to tell which CPU the interrupt is allocated on, which makes it difficult to free the interrupt handle and may also cause debugging difficulties. It is advised to use `xTaskCreatePinnedToCore()` with a specific `CoreID` argument to create tasks that will allocate interrupts. In the case of internal interrupt sources, this is required.

IRAM-Safe Interrupt Handlers

The `ESP_INTR_FLAG_IRAM` flag registers an interrupt handler that always runs from IRAM (and reads all its data from DRAM), and therefore does not need to be disabled during flash erase and write operations.

This is useful for interrupts which need a guaranteed minimum execution latency, as flash write and erase operations can be slow (erases can take tens or hundreds of milliseconds to complete).

It can also be useful to keep an interrupt handler in IRAM if it is called very frequently, to avoid flash cache misses.

Refer to the *SPI flash API documentation* for more details.

API Reference

Header File

- `esp32/include/esp_intr_alloc.h`

Functions

`esp_err_t esp_intr_mark_shared` (int *intno*, int *cpu*, bool *is_in_iram*)

Mark an interrupt as a shared interrupt.

This will mark a certain interrupt on the specified CPU as an interrupt that can be used to hook shared interrupt handlers to.

Return ESP_ERR_INVALID_ARG if *cpu* or *intno* is invalid ESP_OK otherwise

Parameters

- *intno*: The number of the interrupt (0-31)
- *cpu*: CPU on which the interrupt should be marked as shared (0 or 1)
- *is_in_iram*: Shared interrupt is for handlers that reside in IRAM and the int can be left enabled while the flash cache is disabled.

`esp_err_t esp_intr_reserve` (int *intno*, int *cpu*)

Reserve an interrupt to be used outside of this framework.

This will mark a certain interrupt on the specified CPU as reserved, not to be allocated for any reason.

Return ESP_ERR_INVALID_ARG if *cpu* or *intno* is invalid ESP_OK otherwise

Parameters

- *intno*: The number of the interrupt (0-31)
- *cpu*: CPU on which the interrupt should be marked as shared (0 or 1)

`esp_err_t esp_intr_alloc` (int *source*, int *flags*, *intr_handler_t* *handler*, void **arg*, *intr_handle_t* **ret_handle*)

Allocate an interrupt with the given parameters.

This finds an interrupt that matches the restrictions as given in the *flags* parameter, maps the given interrupt source to it and hooks up the given interrupt handler (with optional argument) as well. If needed, it can return a handle for the interrupt as well.

The interrupt will always be allocated on the core that runs this function.

If ESP_INTR_FLAG_IRAM flag is used, and handler address is not in IRAM or RTC_FAST_MEM, then ESP_ERR_INVALID_ARG is returned.

Return ESP_ERR_INVALID_ARG if the combination of arguments is invalid. ESP_ERR_NOT_FOUND No free interrupt found with the specified flags ESP_OK otherwise

Parameters

- *source*: The interrupt source. One of the ETS*_INTR_SOURCE interrupt mux sources, as defined in soc/soc.h, or one of the internal ETS_INTERNAL*_INTR_SOURCE sources as defined in this header.
- *flags*: An ORred mask of the ESP_INTR_FLAG_* defines. These restrict the choice of interrupts that this routine can choose from. If this value is 0, it will default to allocating a non-shared interrupt of level 1, 2 or 3. If this is ESP_INTR_FLAG_SHARED, it will allocate a shared interrupt of level 1. Setting ESP_INTR_FLAG_INTRDISABLED will return from this function with the interrupt disabled.
- *handler*: The interrupt handler. Must be NULL when an interrupt of level >3 is requested, because these types of interrupts aren't C-callable.

- `arg`: Optional argument for passed to the interrupt handler
- `ret_handle`: Pointer to an `intr_handle_t` to store a handle that can later be used to request details or free the interrupt. Can be NULL if no handle is required.

`esp_err_t esp_intr_alloc_intrstatus` (`int source`, `int flags`, `uint32_t intrstatusreg`, `uint32_t intrstatusmask`, `intr_handler_t handler`, `void *arg`, `intr_handle_t *ret_handle`)

Allocate an interrupt with the given parameters.

This essentially does the same as `esp_intr_alloc`, but allows specifying a register and mask combo. For shared interrupts, the handler is only called if a read from the specified register, ANDed with the mask, returns non-zero. By passing an interrupt status register address and a fitting mask, this can be used to accelerate interrupt handling in the case a shared interrupt is triggered; by checking the interrupt statuses first, the code can decide which ISRs can be skipped

Return `ESP_ERR_INVALID_ARG` if the combination of arguments is invalid. `ESP_ERR_NOT_FOUND` No free interrupt found with the specified flags `ESP_OK` otherwise

Parameters

- `source`: The interrupt source. One of the `ETS_*_INTR_SOURCE` interrupt mux sources, as defined in `soc/soc.h`, or one of the internal `ETS_INTERNAL_*_INTR_SOURCE` sources as defined in this header.
- `flags`: An ORred mask of the `ESP_INTR_FLAG_*` defines. These restrict the choice of interrupts that this routine can choose from. If this value is 0, it will default to allocating a non-shared interrupt of level 1, 2 or 3. If this is `ESP_INTR_FLAG_SHARED`, it will allocate a shared interrupt of level 1. Setting `ESP_INTR_FLAG_INTRDISABLED` will return from this function with the interrupt disabled.
- `intrstatusreg`: The address of an interrupt status register
- `intrstatusmask`: A mask. If a read of address `intrstatusreg` has any of the bits that are 1 in the mask set, the ISR will be called. If not, it will be skipped.
- `handler`: The interrupt handler. Must be NULL when an interrupt of level >3 is requested, because these types of interrupts aren't C-callable.
- `arg`: Optional argument for passed to the interrupt handler
- `ret_handle`: Pointer to an `intr_handle_t` to store a handle that can later be used to request details or free the interrupt. Can be NULL if no handle is required.

`esp_err_t esp_intr_free` (`intr_handle_t handle`)

Disable and free an interrupt.

Use an interrupt handle to disable the interrupt and release the resources associated with it.

Return `ESP_ERR_INVALID_ARG` if handle is invalid, or `esp_intr_free` runs on another core than where the interrupt is allocated on. `ESP_OK` otherwise

Parameters

- `handle`: The handle, as obtained by `esp_intr_alloc` or `esp_intr_alloc_intrstatus`

`int esp_intr_get_cpu` (`intr_handle_t handle`)

Get CPU number an interrupt is tied to.

Return The core number where the interrupt is allocated

Parameters

- `handle`: The handle, as obtained by `esp_intr_alloc` or `esp_intr_alloc_intrstatus`

int **esp_intr_get_intno** (*intr_handle_t handle*)

Get the allocated interrupt for a certain handle.

Return The interrupt number

Parameters

- `handle`: The handle, as obtained by `esp_intr_alloc` or `esp_intr_alloc_intrstatus`

esp_err_t **esp_intr_disable** (*intr_handle_t handle*)

Disable the interrupt associated with the handle.

Note For local interrupts (ESP_INTERNAL_* sources), this function has to be called on the CPU the interrupt is allocated on. Other interrupts have no such restriction.

Return ESP_ERR_INVALID_ARG if the combination of arguments is invalid. ESP_OK otherwise

Parameters

- `handle`: The handle, as obtained by `esp_intr_alloc` or `esp_intr_alloc_intrstatus`

esp_err_t **esp_intr_enable** (*intr_handle_t handle*)

Enable the interrupt associated with the handle.

Note For local interrupts (ESP_INTERNAL_* sources), this function has to be called on the CPU the interrupt is allocated on. Other interrupts have no such restriction.

Return ESP_ERR_INVALID_ARG if the combination of arguments is invalid. ESP_OK otherwise

Parameters

- `handle`: The handle, as obtained by `esp_intr_alloc` or `esp_intr_alloc_intrstatus`

void **esp_intr_noniram_disable** ()

Disable interrupts that aren't specifically marked as running from IRAM.

void **esp_intr_noniram_enable** ()

Re-enable interrupts disabled by `esp_intr_noniram_disable`.

Macros

ESP_INTR_FLAG_LEVEL1 (1<<1)

Interrupt allocation flags.

These flags can be used to specify which interrupt qualities the code calling `esp_intr_alloc*` needs. Accept a Level 1 interrupt vector

ESP_INTR_FLAG_LEVEL2 (1<<2)

Accept a Level 2 interrupt vector.

ESP_INTR_FLAG_LEVEL3 (1<<3)

Accept a Level 3 interrupt vector.

ESP_INTR_FLAG_LEVEL4 (1<<4)

Accept a Level 4 interrupt vector.

ESP_INTR_FLAG_LEVEL5 (1<<5)

Accept a Level 5 interrupt vector.

ESP_INTR_FLAG_LEVEL6 (1<<6)

Accept a Level 6 interrupt vector.

ESP_INTR_FLAG_NMI (1<<7)

Accept a Level 7 interrupt vector.

ESP_INTR_FLAG_SHARED (1<<8)

Interrupt can be shared between ISRs.

ESP_INTR_FLAG_EDGE (1<<9)

Edge-triggered interrupt.

ESP_INTR_FLAG_IRAM (1<<10)

ISR can be called if cache is disabled.

ESP_INTR_FLAG_INTRDISABLED (1<<11)

Return with this interrupt disabled.

ESP_INTR_FLAG_LOWMED (*ESP_INTR_FLAG_LEVEL1*|*ESP_INTR_FLAG_LEVEL2*|*ESP_INTR_FLAG_LEVEL3*)

Low and medium prio interrupts. These can be handled in C.

ESP_INTR_FLAG_HIGH (*ESP_INTR_FLAG_LEVEL4*|*ESP_INTR_FLAG_LEVEL5*|*ESP_INTR_FLAG_LEVEL6*|*ESP_INTR_FLAG_NMI*)

High level interrupts. Need to be handled in assembly.

ESP_INTR_FLAG_LEVELMASK (*ESP_INTR_FLAG_LEVEL1*|*ESP_INTR_FLAG_LEVEL2*|*ESP_INTR_FLAG_LEVEL3*|*ESP_INTR_FLAG_LEVEL4*|*ESP_INTR_FLAG_LEVEL5*|*ESP_INTR_FLAG_LEVEL6*|*ESP_INTR_FLAG_NMI*)

Mask for all level flags.

ETS_INTERNAL_TIMER0_INTR_SOURCE -1

Xtensa timer 0 interrupt source.

The `esp_intr_alloc*` functions can allocate an int for all `ETS_*_INTR_SOURCE` interrupt sources that are routed through the interrupt mux. Apart from these sources, each core also has some internal sources that do not pass through the interrupt mux. To allocate an interrupt for these sources, pass these pseudo-sources to the functions.

ETS_INTERNAL_TIMER1_INTR_SOURCE -2

Xtensa timer 1 interrupt source.

ETS_INTERNAL_TIMER2_INTR_SOURCE -3

Xtensa timer 2 interrupt source.

ETS_INTERNAL_SW0_INTR_SOURCE -4

Software int source 1.

ETS_INTERNAL_SW1_INTR_SOURCE -5

Software int source 2.

ETS_INTERNAL_PROFILING_INTR_SOURCE -6

Int source for profiling.

ETS_INTERNAL_INTR_SOURCE_OFF (*-ETS_INTERNAL_PROFILING_INTR_SOURCE*)

Type Definitions

```
typedef void (*intr_handler_t)(void *arg)
```

```
typedef struct intr_handle_data_t intr_handle_data_t
```

```
typedef intr_handle_data_t *intr_handle_t
```

Watchdogs

Overview

Esp-idf has support for two types of watchdogs: a task watchdog as well as an interrupt watchdog. Both can be enabled using `make menuconfig` and selecting the appropriate options.

Interrupt watchdog

The interrupt watchdog makes sure the FreeRTOS task switching interrupt isn't blocked for a long time. This is bad because no other tasks, including potentially important ones like the WiFi task and the idle task, can't get any CPU runtime. A blocked task switching interrupt can happen because a program runs into an infinite loop with interrupts disabled or hangs in an interrupt.

The default action of the interrupt watchdog is to invoke the panic handler, causing a register dump and an opportunity for the programmer to find out, using either OpenOCD or gdbstub, what bit of code is stuck with interrupts disabled. Depending on the configuration of the panic handler, it can also blindly reset the CPU, which may be preferred in a production environment.

The interrupt watchdog is built around the hardware watchdog in timer group 1. If this watchdog for some reason cannot execute the NMI handler that invokes the panic handler (e.g. because IRAM is overwritten by garbage), it will hard-reset the SOC.

Task watchdog

Any tasks can elect to be watched by the task watchdog. If such a task does not feed the watchdog within the time specified by the task watchdog timeout (which is configurable using `make menuconfig`), the watchdog will print out a warning with information about which processes are running on the ESP32 CPUs and which processes failed to feed the watchdog.

By default, the task watchdog watches the idle tasks. The usual cause of idle tasks not feeding the watchdog is a higher-priority process looping without yielding to the lower-priority processes, and can be an indicator of badly-written code that spinloops on a peripheral or a task that is stuck in an infinite loop.

Other task can elect to be watched by the task watchdog by calling `esp_task_wdt_feed()`. Calling this routine for the first time will register the task to the task watchdog; calling it subsequent times will feed the watchdog. If a task does not want to be watched anymore (e.g. because it is finished and will call `vTaskDelete()` on itself), it needs to call `esp_task_wdt_delete()`.

The task watchdog is built around the hardware watchdog in timer group 0. If this watchdog for some reason cannot execute the interrupt handler that prints the task data (e.g. because IRAM is overwritten by garbage or interrupts are disabled entirely) it will hard-reset the SOC.

JTAG and watchdogs

While debugging using OpenOCD, if the CPUs are halted the watchdogs will keep running, eventually resetting the CPU. This makes it very hard to debug code; that is why the OpenOCD config will disable both watchdogs on startup. This does mean that you will not get any warnings or panics from either the task or interrupt watchdog when the ESP32 is connected to OpenOCD via JTAG.

API Reference

Header Files

- `esp32/include/esp_int_wdt.h`
- `esp32/include/esp_task_wdt.h`

Functions

void `esp_int_wdt_init` ()

Initialize the interrupt watchdog. This is called in the init code if the interrupt watchdog is enabled in `menuconfig`.

void `esp_task_wdt_init` ()

Initialize the task watchdog. This is called in the init code, if the task watchdog is enabled in `menuconfig`.

void `esp_task_wdt_feed` ()

Feed the watchdog. After the first feeding session, the watchdog will expect the calling task to keep feeding the watchdog until `task_wdt_delete`() is called.

void `esp_task_wdt_delete` ()

Delete the watchdog for the current task.

Over The Air Updates (OTA)

OTA Process Overview

The OTA update mechanism allows a device to update itself based on data received while the normal firmware is running (for example, over WiFi or Bluetooth.)

OTA requires configuring the *Partition Table* of the device with at least two “OTA app slot” partitions (ie `ota_0` and `ota_1`) and an “OTA Data Partition”.

The OTA operation functions write a new app firmware image to whichever OTA app slot is not currently being used for booting. Once the image is verified, the OTA Data partition is updated to specify that this image should be used for the next boot.

OTA Data Partition

An OTA data partition (type `data`, subtype `ota`) must be included in the *Partition Table* of any project which uses the OTA functions.

For factory boot settings, the OTA data partition should contain no data (all bytes erased to `0xFF`). In this case the `esp-idf` software bootloader will boot the factory app if it is present in the the partition table. If no factory app is included in the partition table, the first available OTA slot (usually `ota_0`) is booted.

After the first OTA update, the OTA data partition is updated to specify which OTA app slot partition should be booted next.

The OTA data partition is two flash sectors (`0x2000` bytes) in size, to prevent problems if there is a power failure while it is being written. Sectors are independently erased and written with matching data, and if they disagree a counter field is used to determine which sector was written more recently.

See also

- *Partition Table documentation*
- *Lower-Level SPI Flash/Partition API*

Application Example

End-to-end example of OTA firmware update workflow: [system/ota](#).

API Reference

Header File

- `app_update/include/esp_ota_ops.h`

Functions

`esp_err_t esp_ota_begin(const esp_partition_t *partition, size_t image_size, esp_ota_handle_t *out_handle)`

Commence an OTA update writing to the specified partition.

The specified partition is erased to the specified image size.

If image size is not yet known, pass `OTA_SIZE_UNKNOWN` which will cause the entire partition to be erased.

On success, this function allocates memory that remains in use until `esp_ota_end()` is called with the returned handle.

Return

- `ESP_OK`: OTA operation commenced successfully.
- `ESP_ERR_INVALID_ARG`: partition or out_handle arguments were NULL, or partition doesn't point to an OTA app partition.
- `ESP_ERR_NO_MEM`: Cannot allocate memory for OTA operation.
- `ESP_ERR_OTA_PARTITION_CONFLICT`: Partition holds the currently running firmware, cannot update in place.
- `ESP_ERR_NOT_FOUND`: Partition argument not found in partition table.
- `ESP_ERR_OTA_SELECT_INFO_INVALID`: The OTA data partition contains invalid data.
- `ESP_ERR_INVALID_SIZE`: Partition doesn't fit in configured flash size.
- `ESP_ERR_FLASH_OP_TIMEOUT` or `ESP_ERR_FLASH_OP_FAIL`: Flash write failed.

Parameters

- `partition`: Pointer to info for partition which will receive the OTA update. Required.
- `image_size`: Size of new OTA app image. Partition will be erased in order to receive this size of image. If 0 or `OTA_SIZE_UNKNOWN`, the entire partition is erased.
- `out_handle`: On success, returns a handle which should be used for subsequent `esp_ota_write()` and `esp_ota_end()` calls.

`esp_err_t esp_ota_write(esp_ota_handle_t handle, const void *data, size_t size)`

Write OTA update data to partition.

This function can be called multiple times as data is received during the OTA operation. Data is written sequentially to the partition.

Return

- `ESP_OK`: Data was written to flash successfully.
- `ESP_ERR_INVALID_ARG`: handle is invalid.
- `ESP_ERR_OTA_VALIDATE_FAILED`: First byte of image contains invalid app image magic byte.
- `ESP_ERR_FLASH_OP_TIMEOUT` or `ESP_ERR_FLASH_OP_FAIL`: Flash write failed.
- `ESP_ERR_OTA_SELECT_INFO_INVALID`: OTA data partition has invalid contents

Parameters

- `handle`: Handle obtained from `esp_ota_begin`
- `data`: Data buffer to write
- `size`: Size of data buffer in bytes.

`esp_err_t esp_ota_end(esp_ota_handle_t handle)`

Finish OTA update and validate newly written app image.

Note After calling `esp_ota_end()`, the handle is no longer valid and any memory associated with it is freed (regardless of result).

Return

- `ESP_OK`: Newly written OTA app image is valid.
- `ESP_ERR_NOT_FOUND`: OTA handle was not found.
- `ESP_ERR_INVALID_ARG`: Handle was never written to.
- `ESP_ERR_OTA_VALIDATE_FAILED`: OTA image is invalid (either not a valid app image, or - if secure boot is enabled - signature failed to verify.)
- `ESP_ERR_INVALID_STATE`: If flash encryption is enabled, this result indicates an internal error writing the final encrypted bytes to flash.

Parameters

- `handle`: Handle obtained from `esp_ota_begin()`.

`esp_err_t esp_ota_set_boot_partition(const esp_partition_t *partition)`

Configure OTA data for a new boot partition.

Note If this function returns `ESP_OK`, calling `esp_restart()` will boot the newly configured app partition.

Return

- `ESP_OK`: OTA data updated, next reboot will use specified partition.
- `ESP_ERR_INVALID_ARG`: partition argument was `NULL` or didn't point to a valid OTA partition of type "app".
- `ESP_ERR_OTA_VALIDATE_FAILED`: Partition contained invalid app image. Also returned if secure boot is enabled and signature validation failed.

- `ESP_ERR_NOT_FOUND`: OTA data partition not found.
- `ESP_ERR_FLASH_OP_TIMEOUT` or `ESP_ERR_FLASH_OP_FAIL`: Flash erase or write failed.

Parameters

- `partition`: Pointer to info for partition containing app image to boot.

const *esp_partition_t* ***esp_ota_get_boot_partition** (void)

Get partition info of currently configured boot app.

If `esp_ota_set_boot_partition()` has been called, the partition which was set by that function will be returned.

If `esp_ota_set_boot_partition()` has not been called, the result is equivalent to `esp_ota_get_running_partition()`.

Return Pointer to info for partition structure, or NULL if no partition is found or flash read operation failed.
Returned pointer is valid for the lifetime of the application.

const *esp_partition_t* ***esp_ota_get_running_partition** (void)

Get partition info of currently running app.

This function is different to `esp_ota_get_boot_partition()` in that it ignores any change of selected boot partition caused by `esp_ota_set_boot_partition()`. Only the app whose code is currently running will have its partition information returned.

Return Pointer to info for partition structure, or NULL if no partition is found or flash read operation failed.
Returned pointer is valid for the lifetime of the application.

const *esp_partition_t* ***esp_ota_get_next_update_partition** (**const** *esp_partition_t* **start_from*)

Return the next OTA app partition which should be written with a new firmware.

Call this function to find an OTA app partition which can be passed to `esp_ota_begin()`.

Finds next partition round-robin, starting from the current running partition.

Return Pointer to info for partition which should be updated next. NULL result indicates invalid OTA data partition, or that no eligible OTA app slot partition was found.

Parameters

- `start_from`: If set, treat this partition info as describing the current running partition. Can be NULL, in which case `esp_ota_get_running_partition()` is used to find the currently running partition. The result of this function is never the same as this argument.

Macros

OTA_SIZE_UNKNOWN 0xffffffff

Used for `esp_ota_begin()` if new image size is unknown

ESP_ERR_OTA_BASE 0x1500

Base error code for ota_ops api

ESP_ERR_OTA_PARTITION_CONFLICT (ESP_ERR_OTA_BASE + 0x01)

Error if request was to write or erase the current running partition

ESP_ERR_OTA_SELECT_INFO_INVALID (ESP_ERR_OTA_BASE + 0x02)

Error if OTA data partition contains invalid content

ESP_ERR_OTA_VALIDATE_FAILED (ESP_ERR_OTA_BASE + 0x03)

Error if OTA app image is invalid

Type Definitions

typedef uint32_t esp_ota_handle_t

Opaque handle for an application OTA update.

esp_ota_begin() returns a handle which is then used for subsequent calls to esp_ota_write() and esp_ota_end().

Deep Sleep

Overview

ESP32 is capable of deep sleep power saving mode. In this mode CPUs, most of the RAM, and all the digital peripherals which are clocked from APB_CLK are powered off. The only parts of the chip which can still be powered on are: RTC controller, RTC peripherals (including ULP coprocessor), and RTC memories (slow and fast).

Wakeup from deep sleep mode can be done using several sources. These sources can be combined, in this case the chip will wake up when any one of the sources is triggered. Wakeup sources can be enabled using esp_deep_sleep_enable_X_wakeup APIs. Next section describes these APIs in detail. Wakeup sources can be configured at any moment before entering deep sleep mode.

Additionally, the application can force specific powerdown modes for the RTC peripherals and RTC memories using esp_deep_sleep_pd_config API.

Once wakeup sources are configured, application can start deep sleep using esp_deep_sleep_start API. At this point the hardware will be configured according to the requested wakeup sources, and RTC controller will power down the CPUs and digital peripherals.

Wakeup sources

Timer

RTC controller has a built in timer which can be used to wake up the chip after a predefined amount of time. Time is specified at microsecond precision, but the actual resolution depends on the clock source selected for RTC SLOW_CLK. See chapter “Reset and Clock” of the ESP32 Technical Reference Manual for details about RTC clock options.

This wakeup mode doesn't require RTC peripherals or RTC memories to be powered on during deep sleep.

The following function can be used to enable deep sleep wakeup using a timer.

esp_err_t **esp_deep_sleep_enable_timer_wakeup** (uint64_t *time_in_us*)

Enable wakeup by timer.

Return

- ESP_OK on success
- ESP_ERR_INVALID_ARG if value is out of range (TBD)

Parameters

- *time_in_us*: time before wakeup, in microseconds

Touch pad

RTC IO module contains logic to trigger wakeup when a touch sensor interrupt occurs. You need to configure the touch pad interrupt before the chip starts deep sleep.

Revisions 0 and 1 of the ESP32 only support this wakeup mode when RTC peripherals are not forced to be powered on (i.e. `ESP_PD_DOMAIN_RTC_PERIPH` should be set to `ESP_PD_OPTION_AUTO`).

`esp_err_t esp_deep_sleep_enable_touchpad_wakeup ()`
Enable wakeup by touch sensor.

Note In revisions 0 and 1 of the ESP32, touch wakeup source can not be used when `RTC_PERIPH` power domain is forced to be powered on (`ESP_PD_OPTION_ON`) or when `ext0` wakeup source is used.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if wakeup triggers conflict

External wakeup (ext0)

RTC IO module contains logic to trigger wakeup when one of RTC GPIOs is set to a predefined logic level. RTC IO is part of RTC peripherals power domain, so RTC peripherals will be kept powered on during deep sleep if this wakeup source is requested.

Because RTC IO module is enabled in this mode, internal pullup or pulldown resistors can also be used. They need to be configured by the application using `rtc_gpio_pullup_en` and `rtc_gpio_pulldown_en` functions, before calling `esp_deep_sleep_start`.

In revisions 0 and 1 of the ESP32, this wakeup source is incompatible with ULP and touch wakeup sources.

Warning: After wake up from deep sleep, IO pad used for wakeup will be configured as RTC IO. Before using this pad as digital GPIO, reconfigure it using `rtc_gpio_deinit (gpio_num)` function.

`esp_err_t esp_deep_sleep_enable_ext0_wakeup (gpio_num_t gpio_num, int level)`
Enable wakeup using a pin.

This function uses external wakeup feature of `RTC_IO` peripheral. It will work only if RTC peripherals are kept on during deep sleep.

This feature can monitor any pin which is an RTC IO. Once the pin transitions into the state given by `level` argument, the chip will be woken up.

Note This function does not modify pin configuration. The pin is configured in `esp_deep_sleep_start`, immediately before entering deep sleep.

Note In revisions 0 and 1 of the ESP32, `ext0` wakeup source can not be used together with touch or ULP wakeup sources.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_ARG` if the selected GPIO is not an RTC GPIO, or the mode is invalid
- `ESP_ERR_INVALID_STATE` if wakeup triggers conflict

Parameters

- `gpio_num`: GPIO number used as wakeup source. Only GPIOs which are have RTC functionality can be used: 0,2,4,12-15,25-27,32-39.
- `level`: input level which will trigger wakeup (0=low, 1=high)

External wakeup (ext1)

RTC controller contains logic to trigger wakeup using multiple RTC GPIOs. One of the two logic functions can be used to trigger wakeup:

- wake up if any of the selected pins is high (`ESP_EXT1_WAKEUP_ANY_HIGH`)
- wake up if all the selected pins are low (`ESP_EXT1_WAKEUP_ALL_LOW`)

This wakeup source is implemented by the RTC controller. As such, RTC peripherals and RTC memories can be powered off in this mode. However, if RTC peripherals are powered down, internal pullup and pulldown resistors will be disabled. To use internal pullup or pulldown resistors, request RTC peripherals power domain to be kept on during deep sleep, and configure pullup/pulldown resistors using `rtc_gpio_` functions, before entering deep sleep:

```
esp_deep_sleep_pd_config(ESP_PD_DOMAIN_RTC_PERIPH, ESP_PD_OPTION_ON);
gpio_pullup_dis(gpio_num);
gpio_pulldown_en(gpio_num);
```

Warning: After wake up from deep sleep, IO pad(s) used for wakeup will be configured as RTC IO. Before using these pads as digital GPIOs, reconfigure them using `rtc_gpio_deinit(gpio_num)` function.

The following function can be used to enable this wakeup mode:

`esp_err_t esp_deep_sleep_enable_ext1_wakeup(uint64_t mask, esp_ext1_wakeup_mode_t mode)`
Enable wakeup using multiple pins.

This function uses external wakeup feature of RTC controller. It will work even if RTC peripherals are shut down during deep sleep.

This feature can monitor any number of pins which are in RTC IOs. Once any of the selected pins goes into the state given by mode argument, the chip will be woken up.

Note This function does not modify pin configuration. The pins are configured in `esp_deep_sleep_start`, immediately before entering deep sleep.

Note internal pullups and pulldowns don't work when RTC peripherals are shut down. In this case, external resistors need to be added. Alternatively, RTC peripherals (and pullups/pulldowns) may be kept enabled using `esp_deep_sleep_pd_config` function.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_ARG` if any of the selected GPIOs is not an RTC GPIO, or mode is invalid

Parameters

- `mask`: bit mask of GPIO numbers which will cause wakeup. Only GPIOs which are have RTC functionality can be used in this bit map: 0,2,4,12-15,25-27,32-39.
- `mode`: select logic function used to determine wakeup condition:
 - `ESP_EXT1_WAKEUP_ALL_LOW`: wake up when all selected GPIOs are low
 - `ESP_EXT1_WAKEUP_ANY_HIGH`: wake up when any of the selected GPIOs is high

enum `esp_ext1_wakeup_mode_t`

Logic function used for EXT1 wakeup mode.

Values:

`ESP_EXT1_WAKEUP_ALL_LOW = 0`

Wake the chip when all selected GPIOs go low.

`ESP_EXT1_WAKEUP_ANY_HIGH = 1`

Wake the chip when any of the selected GPIOs go high.

ULP coprocessor wakeup

ULP coprocessor can run while the chip is in deep sleep, and may be used to poll sensors, monitor ADC or touch sensor values, and wake up the chip when a specific event is detected. ULP coprocessor is part of RTC peripherals power domain, and it runs the program stored in RTC slow memory. RTC slow memory will be powered on during deep sleep if this wakeup mode is requested. RTC peripherals will be automatically powered on before ULP coprocessor starts running the program; once the program stops running, RTC peripherals are automatically powered down again.

Revisions 0 and 1 of the ESP32 only support this wakeup mode when RTC peripherals are not forced to be powered on (i.e. `ESP_PD_DOMAIN_RTC_PERIPH` should be set to `ESP_PD_OPTION_AUTO`).

The following function can be used to enable this wakeup mode:

`esp_err_t esp_deep_sleep_enable_ulp_wakeup ()`

Enable wakeup by ULP coprocessor.

Note In revisions 0 and 1 of the ESP32, ULP wakeup source can not be used when `RTC_PERIPH` power domain is forced to be powered on (`ESP_PD_OPTION_ON`) or when `ext0` wakeup source is used.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_STATE` if ULP co-processor is not enabled or if wakeup triggers conflict

Power-down of RTC peripherals and memories

By default, `esp_deep_sleep_start` function will power down all RTC power domains which are not needed by the enabled wakeup sources. To override this behaviour, the following function is provided:

Note: in revision 0 of the ESP32, RTC fast memory will always be kept enabled in deep sleep, so that the deep sleep stub can run after reset. This can be overridden, if the application doesn't need clean reset behaviour after deep sleep.

If some variables in the program are placed into RTC slow memory (for example, using `RTC_DATA_ATTR` attribute), RTC slow memory will be kept powered on by default. This can be overridden using `esp_deep_sleep_pd_config` function, if desired.

`esp_err_t esp_deep_sleep_pd_config (esp_deep_sleep_pd_domain_t domain, esp_deep_sleep_pd_option_t option)`

Set power down mode for an RTC power domain in deep sleep.

If not set using this API, all power domains default to `ESP_PD_OPTION_AUTO`.

Return

- `ESP_OK` on success
- `ESP_ERR_INVALID_ARG` if either of the arguments is out of range

Parameters

- `domain`: power domain to configure
- `option`: power down option (ESP_PD_OPTION_OFF, ESP_PD_OPTION_ON, or ESP_PD_OPTION_AUTO)

enum esp_deep_sleep_pd_domain_t

Power domains which can be powered down in deep sleep.

Values:

ESP_PD_DOMAIN_RTC_PERIPH

RTC IO, sensors and ULP co-processor.

ESP_PD_DOMAIN_RTC_SLOW_MEM

RTC slow memory.

ESP_PD_DOMAIN_RTC_FAST_MEM

RTC fast memory.

ESP_PD_DOMAIN_MAX

Number of domains.

enum esp_deep_sleep_pd_option_t

Power down options.

Values:

ESP_PD_OPTION_OFF

Power down the power domain in deep sleep.

ESP_PD_OPTION_ON

Keep power domain enabled during deep sleep.

ESP_PD_OPTION_AUTO

Keep power domain enabled in deep sleep, if it is needed by one of the wakeup options. Otherwise power it down.

Entering deep sleep

The following function can be used to enter deep sleep once wakeup sources are configured. It is also possible to go into deep sleep with no wakeup sources configured, in this case the chip will be in deep sleep mode indefinitely, until external reset is applied.

void **esp_deep_sleep_start** ()

Enter deep sleep with the configured wakeup options.

This function does not return.

Checking deep sleep wakeup cause

The following function can be used to check which wakeup source has triggered wakeup from deep sleep mode. For touch pad and ext1 wakeup sources, it is possible to identify pin or touch pad which has caused wakeup.

esp_deep_sleep_wakeup_cause_t **esp_deep_sleep_get_wakeup_cause** ()

Get the source which caused deep sleep wakeup.

Return wakeup cause, or ESP_DEEP_SLEEP_WAKEUP_UNDEFINED if reset reason is other than deep sleep reset.

enum esp_deep_sleep_wakeup_cause_t

Deep sleep wakeup cause.

Values:

ESP_DEEP_SLEEP_WAKEUP_UNDEFINED

ESP_DEEP_SLEEP_WAKEUP_EXT0

Wakeup was not caused by deep sleep.

ESP_DEEP_SLEEP_WAKEUP_EXT1

Wakeup caused by external signal using RTC_IO.

ESP_DEEP_SLEEP_WAKEUP_TIMER

Wakeup caused by external signal using RTC_CNTL.

ESP_DEEP_SLEEP_WAKEUP_TOUCHPAD

Wakeup caused by timer.

ESP_DEEP_SLEEP_WAKEUP_ULP

Wakeup caused by touchpad.

touch_pad_t esp_deep_sleep_get_touchpad_wakeup_status ()

Get the touch pad which caused wakeup.

If wakeup was caused by another source, this function will return TOUCH_PAD_MAX;

Return touch pad which caused wakeup

uint64_t esp_deep_sleep_get_ext1_wakeup_status ()

Get the bit mask of GPIOs which caused wakeup (ext1)

If wakeup was caused by another source, this function will return 0.

Return bit mask, if GPIO_n caused wakeup, BIT(n) will be set

Application Example

Implementation of basic functionality of deep sleep is shown in [protocols/sntp](#) example, where ESP module is periodically waken up to retrieve time from NTP server.

More extensive example in [system/deep_sleep](#) illustrates usage of various deep sleep wakeup triggers and ULP coprocessor programming.

Logging library

Overview

Log library has two ways of managing log verbosity: compile time, set via menuconfig; and runtime, using `esp_log_level_set` function.

At compile time, filtering is done using `CONFIG_LOG_DEFAULT_LEVEL` macro, set via menuconfig. All logging statements for levels higher than `CONFIG_LOG_DEFAULT_LEVEL` will be removed by the preprocessor.

At run time, all logs below `CONFIG_LOG_DEFAULT_LEVEL` are enabled by default. `esp_log_level_set` function may be used to set logging level per module. Modules are identified by their tags, which are human-readable ASCII zero-terminated strings.

How to use this library

In each C file which uses logging functionality, define TAG variable like this:

```
static const char* TAG = "MyModule";
```

then use one of logging macros to produce output, e.g:

```
ESP_LOGW(TAG, "Baud rate error %.1f%%. Requested: %d baud, actual: %d baud", error * 100, baud_req, baud_real);
```

Several macros are available for different verbosity levels:

- ESP_LOGE - error
- ESP_LOGW - warning
- ESP_LOGI - info
- ESP_LOGD - debug
- ESP_LOGV - verbose

Additionally there is an `_EARLY_` variant for each of these macros (e.g. `ESP_EARLY_LOGE`). These variants can run in startup code, before heap allocator and syscalls have been initialized. When compiling bootloader, normal `ESP_LOGx` macros fall back to the same implementation as `ESP_EARLY_LOGx` macros. So the only place where `ESP_EARLY_LOGx` have to be used explicitly is the early startup code, such as heap allocator initialization code.

(Note that such distinction would not have been necessary if we would have an `ets_vprintf` function in the ROM. Then it would be possible to switch implementation from `_EARLY_` version to normal version on the fly. Unfortunately, `ets_vprintf` in ROM has been inlined by the compiler into `ets_printf`, so it is not accessible outside.)

To override default verbosity level at file or component scope, define `LOG_LOCAL_LEVEL` macro. At file scope, define it before including `esp_log.h`, e.g.:

```
#define LOG_LOCAL_LEVEL ESP_LOG_VERBOSE
#include "esp_log.h"
```

At component scope, define it in component makefile:

```
CFLAGS += -D LOG_LOCAL_LEVEL=ESP_LOG_DEBUG
```

To configure logging output per module at runtime, add calls to `esp_log_level_set` function:

```
esp_log_level_set("*", ESP_LOG_ERROR);           // set all components to ERROR level
esp_log_level_set("wifi", ESP_LOG_WARN);        // enable WARN logs from WiFi stack
esp_log_level_set("dhcpc", ESP_LOG_INFO);       // enable INFO logs from DHCP client
```

Logging to Host via JTAG

By default logging library uses `vprintf`-like function to write formatted output to dedicated UART. In general it involves the following steps:

1. Format string is parsed to obtain type of each argument.
2. According to its type every argument is converted to string representation.
3. Format string combined with converted arguments is sent to UART.

Though implementation of `vprintf`-like function can be optimised to a certain level, all steps above have to be performed in any case and every step takes some time (especially item 3). So it is frequent situation when addition of extra logging to the program to diagnose some problem changes its behaviour and problem disappears or in the worst cases program can not work normally at all and ends up with an error or even hangs. Possible ways to overcome this problem are to use faster UART bitrates (or another faster interface) and/or move string formatting procedure to the host. ESP IDF has *Application Tracing* feature which allows to sent arbitrary application data to host via JTAG. This feature can also be used to transfer log information to host using `esp_appttrace_vprintf` function. This function does not perform full parsing of the format string and arguments, instead it just calculates number of arguments passed and sends them along with the format string address to the host. On the host log data are processed and printed out by a special Python script.

Config Options and Dependencies

Using of the feature depends on two components:

1. Host side: Application tracing is done over JTAG, so it needs OpenOCD to be set up and running on host machine. For instructions how to set it up, please, see [OpenOCD setup for ESP32](#) section for details. **NOTE:** *in order to achieve higher data rates you may need to modify JTAG adapter working frequency in OpenOCD config file. Maximum tested stable speed is 26MHz, so you need to have the following statement in your configuration file `adapter_khz 26000` instead of default `adapter_khz 200`. Actually maximum stable JTAG frequency can depend on host system configuration.*
2. Target side: Application tracing functionality can be enabled by `CONFIG_ESP32_APPTRACE_ENABLE` macro via menuconfig. This option enables the module and makes `esp_appttrace_vprintf` available for users.

Limitations

Curent implmentation of logging over JTAG has several limitations:

1. Tracing from `ESP_EARLY_LOGx` macros is not supported.
2. No support for `printf` arguments which size exceeds 4 bytes (e.g. `double` and `uint64_t`).
3. Only strings from `.rodata` section are supported as format strings and arguments.
4. Maximum number of `printf` arguments is 256.

How To Use It

To use logging via JTAG user needs to perform the following steps:

1. On target side special `vprintf`-like function needs to be installed. As it was mentioned earlier this function is `esp_appttrace_vprintf`. It sends log data to the host via JTAG. Example code is shown below.

```
#include "esp_app_trace.h"
...
void app_main()
{
    // set log vprintf handler
    esp_log_set_vprintf(esp_appttrace_vprintf);
    ...
    // user code using ESP_LOGx starts here
    // all data passed to ESP_LOGx are sent to host
    ...
}
```

```

// restore log vprintf handler
esp_log_set_vprintf(vprintf);
// flush last data to host
esp_apptrace_flush(ESP_APPTRACE_DEST_TRAX, 100000 /*tmo in us*/);
ESP_LOGI(TAG, "Tracing is finished."); // this will be printed out to UART
while (1);
}

```

2. Build the program image and download it to target as described in [Developing With the ESP-IDF](#) section.
3. Run OpenOCD (see [OpenOCD setup for ESP32](#) section).
4. Connect to OpenOCD telnet server. On Linux it can be done using the following command in terminal `telnet <oocd_host> 4444`. If telnet session is opened on the same machine which runs OpenOCD you can use `localhost` as `<oocd_host>` in the command.
5. Run the following command in OpenOCD telnet session: `esp108 apptrace start /path/to/trace/file -1 -1 0 0 1`. This command will wait for board reset and transfer tracing data at the highest possible rate.
6. Reset the board. Logging to host will start automatically.
7. `esp108 apptrace` command with given arguments will never return (see other command options below), so you must stop it manually by resetting the board or pressing CTRL+C in OpenOCD window (not one with the telnet session).
8. Reset board or press CTRL+C in OpenOCD window (not one with the telnet session) when tracing is completed (for the example code above after the message *"Tracing is finished."* appears on UART).
9. To print out collected log records run the following command in terminal: `$IDF_PATH/tools/esp_app_trace/logtrace_proc.py /path/to/trace/file /path/to/program/elf/file`.

OpenOCD Application Tracing Command Options

Command usage: `esp108 apptrace [start <outfile> [options] | [stop] | [status] | [dump <outfile>]`

Sub-commands:

- `start`. Start tracing (continuous streaming).
- `stop`. Stop tracing.
- `status`. Get tracing status.
- `dump`. Dump as much data as possible without waiting for trace memory block switch (post-mortem dump).

Start command syntax: `start <outfile> [trace_size [stop_tmo [skip_size [poll_period [wait4halt]]]]]`

Argument	Description
outfile	Path to log trace file to save data
trace_size	Maximum size of data to collect (in bytes). Tracing is stopped after specified amount of data is received. By default -1 (trace size stop trigger is disabled).
stop_time	Idle timeout (in ms). Tracing is stopped if there is no data for specified period of time. By default 10 s (-1 to disable this stop trigger).
skip_size	Number of bytes to skip at the start. By default 0.
poll_period	Data polling period (in ms). If greater than 0 then command runs in non-blocking mode, otherwise command line will not be available until tracing is stopped. By default 1 ms.
wait4halt	If 0 start tracing immediately, otherwise command waits for the target to be halted (after reset, by breakpoint etc) and then automatically resumes it and starts tracing. By default 0.

Log Trace Processor Command Options

Command usage: `logtrace_proc.py [-h] [--no-errors] <trace_file> <elf_file>`

Positional arguments:

Argument	Description
trace_file	Path to log trace file
elf_file	Path to program ELF file

Optional arguments:

Argument	Description
-h, -help	show this help message and exit
--no-errors, -n	Do not print errors

Application Example

Log library is commonly used by most of esp-idf components and examples. For demonstration of log functionality check `examples` folder of `espressif/esp-idf` repository, that among others, contains the following examples:

- `system/ota`
- `storage/sd_card`
- `protocols/https_request`

API Reference

Header File

- `log/include/esp_log.h`

Functions

void `esp_log_level_set` (`const char *tag, esp_log_level_t level`)
Set log level for given tag.

If logging for given component has already been enabled, changes previous setting.

Parameters

- `tag`: Tag of the log entries to enable. Must be a non-NULL zero terminated string. Value “*” resets log level for all tags to the given value.
- `level`: Selects log level to enable. Only logs at this and lower levels will be shown.

void **esp_log_set_vprintf** (*vprintf_like_t func*)

Set function used to output log entries.

By default, log output goes to UART0. This function can be used to redirect log output to some other destination, such as file or network.

Parameters

- `func`: Function used for output. Must have same signature as `vprintf`.

uint32_t **esp_log_timestamp** (void)

Function which returns timestamp to be used in log output.

This function is used in expansion of `ESP_LOGx` macros. In the 2nd stage bootloader, and at early application startup stage this function uses CPU cycle counter as time source. Later when FreeRTOS scheduler start running, it switches to FreeRTOS tick count.

For now, we ignore millisecond counter overflow.

Return timestamp, in milliseconds

uint32_t **esp_log_early_timestamp** (void)

Function which returns timestamp to be used in log output.

This function uses HW cycle counter and does not depend on OS, so it can be safely used after application crash.

Return timestamp, in milliseconds

void **esp_log_write** (*esp_log_level_t level*, **const** char **tag*, **const** char **format*, ...)

Write message into the log.

This function is not intended to be used directly. Instead, use one of `ESP_LOGE`, `ESP_LOGW`, `ESP_LOGI`, `ESP_LOGD`, `ESP_LOGV` macros.

This function or these macros should not be used from an interrupt.

void **esp_log_buffer_hex** (**const** char **tag*, **const** void **buffer*, uint16_t *buff_len*)

Log a buffer of hex bytes at Info level.

Parameters

- `tag`: description tag
- `buffer`: Pointer to the buffer array
- `buff_len`: length of buffer in bytes

void **esp_log_buffer_char** (**const** char **tag*, **const** void **buffer*, uint16_t *buff_len*)

Log a buffer of characters at Info level. Buffer should contain only printable characters.

Parameters

- `tag`: description tag
- `buffer`: Pointer to the buffer array

- `buff_len`: length of buffer in bytes

Macros

`LOG_COLOR_E`

`LOG_COLOR_W`

`LOG_COLOR_I`

`LOG_COLOR_D`

`LOG_COLOR_V`

`LOG_RESET_COLOR`

`LOG_FORMAT` (letter, format) `LOG_COLOR_ ## letter #letter " (%d) %s: " format` `LOG_RESET_COLOR`
" \n"

`LOG_LOCAL_LEVEL` ((`esp_log_level_t`) `CONFIG_LOG_DEFAULT_LEVEL`)

`ESP_EARLY_LOGE` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_ERROR`) {
 `ets_printf`(`LOG_FORMAT`(E, format), `esp_log_timestamp`(), tag, `##_VA_ARGS_`); }

`ESP_EARLY_LOGW` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_WARN`) {
 `ets_printf`(`LOG_FORMAT`(W, format), `esp_log_timestamp`(), tag, `##_VA_ARGS_`); }

`ESP_EARLY_LOGI` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_INFO`) {
 `ets_printf`(`LOG_FORMAT`(I, format), `esp_log_timestamp`(), tag, `##_VA_ARGS_`); }

`ESP_EARLY_LOGD` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_DEBUG`) {
 `ets_printf`(`LOG_FORMAT`(D, format), `esp_log_timestamp`(), tag, `##_VA_ARGS_`); }

`ESP_EARLY_LOGV` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_VERBOSE`) {
 `ets_printf`(`LOG_FORMAT`(V, format), `esp_log_timestamp`(), tag, `##_VA_ARGS_`); }

`ESP_LOGE` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_ERROR`) {
 `esp_log_write`(`ESP_LOG_ERROR`, tag, `LOG_FORMAT`(E, format), `esp_log_timestamp`(),
 tag, `##_VA_ARGS_`); }

`ESP_LOGW` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_WARN`) {
 `esp_log_write`(`ESP_LOG_WARN`, tag, `LOG_FORMAT`(W, format), `esp_log_timestamp`(),
 tag, `##_VA_ARGS_`); }

`ESP_LOGI` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_INFO`) {
 `esp_log_write`(`ESP_LOG_INFO`, tag, `LOG_FORMAT`(I, format), `esp_log_timestamp`(), tag,
 `##_VA_ARGS_`); }

`ESP_LOGD` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_DEBUG`) {
 `esp_log_write`(`ESP_LOG_DEBUG`, tag, `LOG_FORMAT`(D, format), `esp_log_timestamp`(),
 tag, `##_VA_ARGS_`); }

`ESP_LOGV` (tag, format, ...) if (`LOG_LOCAL_LEVEL` >= `ESP_LOG_VERBOSE`) {
 `esp_log_write`(`ESP_LOG_VERBOSE`, tag, `LOG_FORMAT`(V, format), `esp_log_timestamp`(),
 tag, `##_VA_ARGS_`); }

Type Definitions

`typedef int (*vprintf_like_t) (const char *, va_list)`

Enumerations

enum esp_log_level_t

Log level.

Values:

ESP_LOG_NONE

No log output

ESP_LOG_ERROR

Critical errors, software module can not recover on its own

ESP_LOG_WARN

Error conditions from which recovery measures have been taken

ESP_LOG_INFO

Information messages which describe normal flow of events

ESP_LOG_DEBUG

Extra information which is not necessary for normal use (values, pointers, sizes, etc).

ESP_LOG_VERBOSE

Bigger chunks of debugging information, or frequent messages which can potentially flood the output.

Base MAC address

Overview

Several MAC addresses (universally administered by IEEE) are uniquely assigned to the networking interfaces (WiFi/BT/Ethernet). The final octet of each universally administered MAC address increases by one. Only the first one which is called base MAC address of them is stored in EFUSE or external storage, the others are generated from it. Here, 'generate' means adding 0, 1, 2 and 3 (respectively) to the final octet of the base MAC address.

If the universally administered MAC addresses are not enough for all of the networking interfaces. Local administered MAC addresses which are derived from universally administered MAC addresses are assigned to the reset of networking interfaces.

A definition of local vs universal MAC address can be found on [Wikipedia](#).

The number of universally administered MAC address can be configured using `make menuconfig`.

Base MAC address

If using the default base MAC address factory programmed by Espressif in BLK0 of EFUSE, nothing needs to be done.

If using a custom base MAC address stored in BLK3 of EFUSE, call API `esp_efuse_mac_get_custom()` to get the base MAC address which is stored in BLK3 of EFUSE. If correct MAC address is returned, then call `esp_base_mac_addr_set()` to set the base MAC address for system to generate the MAC addresses used by the networking interfaces(WiFi/BT/Ethernet). There are 192 bits storage spaces for custom to store base MAC address in BLK3 of EFUSE. They are `EFUSE_BLK3_RDATA0`, `EFUSE_BLK3_RDATA1`, `EFUSE_BLK3_RDATA2`, `EFUSE_BLK3_RDATA3`, `EFUSE_BLK3_RDATA4` and `EFUSE_BLK3_RDATA5`, each of them is 32 bits register. The format of the 192 bits storage spaces is:

Field	Bits	Range	Description
version	8	[[191:184]	1: useful. 0: useless
reserve	112	[[183:72]	reserved
mac address	64	[[71:8]	base MAC address
mac crc	8	[[7:0]	crc of base MAC address

If using base MAC address stored in external storage, firstly get the base MAC address stored in external storage, then call API `esp_base_mac_addr_set()` to set the base MAC address for system to generate the MAC addresses used by the networking interfaces(WiFi/BT/Ethernet).

All of the steps must be done before initializing the networking interfaces(WiFi/BT/Ethernet). It is recommended to do it in `app_main()` which can be referenced in `system/base_mac_address`.

Number of universally administered MAC address

If the number of universal MAC addresses is two, only two interfaces (WiFi station and Bluetooth) receive a universally administered MAC address. These are generated sequentially by adding 0 and 1 (respectively) to the base MAC address. The remaining two interfaces (WiFi softap and Ethernet) receive local MAC addresses. These are derived from the universal WiFi station and Bluetooth MAC addresses, respectively.

If the number of universal MAC addresses is four, all four interfaces (WiFi station, WiFi softap, Bluetooth and Ethernet) receive a universally administered MAC address. These are generated sequentially by adding 0, 1, 2 and 3 (respectively) to the final octet of the base MAC address.

When using the default (Espressif-assigned) base MAC address, either setting can be used. When using a custom universal MAC address range, the correct setting will depend on the allocation of MAC addresses in this range (either 2 or 4 per device.)

API Reference

Header Files

- `esp32/include/esp_system.h`

Functions

`esp_err_t esp_base_mac_addr_set (uint8_t *mac)`

Set base MAC address with the MAC address which is stored in BLK3 of EFUSE or external storage e.g. flash and EEPROM.

Base MAC address is used to generate the MAC addresses used by the networking interfaces. If using base MAC address stored in BLK3 of EFUSE or external storage, call this API to set base MAC address with the MAC address which is stored in BLK3 of EFUSE or external storage before initializing WiFi/BT/Ethernet.

Return ESP_OK on success

Parameters

- `mac`: base MAC address, length: 6 bytes.

`esp_err_t esp_efuse_mac_get_custom (uint8_t *mac)`

Return base MAC address which was previously written to BLK3 of EFUSE.

Base MAC address is used to generate the MAC addresses used by the networking interfaces. This API returns the custom base MAC address which was previously written to BLK3 of EFUSE. Writing this EFUSE allows setting of a different (non-Espressif) base MAC address. It is also possible to store a custom base MAC address elsewhere, see `esp_base_mac_addr_set()` for details.

Return ESP_OK on success ESP_ERR_INVALID_VERSION An invalid MAC version field was read from BLK3 of EFUSE ESP_ERR_INVALID_CRC An invalid MAC CRC was read from BLK3 of EFUSE

Parameters

- `mac`: base MAC address, length: 6 bytes.

Application Level Tracing

Overview

IDF provides useful feature for program behaviour analysis: application level tracing. It is implemented in the corresponding library and can be enabled via `menuconfig`. This feature allows to transfer arbitrary data between host and ESP32 via JTAG interface with small overhead on program execution. Developers can use this library to send application specific state of execution to the host and receive commands or other type of info in the opposite direction at runtime. The main use cases of this library are:

1. System behaviour analysis.
2. Lightweight logging to the host.
3. Collecting application specific data.

API Reference

Header Files

- `app_trace/include/esp_app_trace.h`

Macros

ESP_APPTRACE_TMO_INFINITE ((uint32_t)-1)

Infinite waiting timeout

Enumerations

enum esp_apptrace_dest_t

Application trace data destinations bits.

Values:

ESP_APPTRACE_DEST_TRAX = 0x1

JTAG destination.

ESP_APPTRACE_DEST_UART0 = 0x2

UART destination.

Functions

`esp_err_t esp_appttrace_init ()`
Initializes application tracing module.

Note Should be called before any `esp_appttrace_xxx` call.

Return ESP_OK on success, otherwise see `esp_err_t`

`uint8_t* esp_appttrace_buffer_get (esp_appttrace_dest_t dest, size_t size, uint32_t tmo)`
Allocates buffer for trace data. After data in buffer are ready to be sent off `esp_appttrace_buffer_put` must be called to indicate it.

Return non-NULL on success, otherwise NULL.

Parameters

- `dest`: Indicates HW interface to send data.
- `size`: Size of data to write to trace buffer.
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

`esp_err_t esp_appttrace_buffer_put (esp_appttrace_dest_t dest, uint8_t *ptr, uint32_t tmo)`
Indicates that the data in buffer are ready to be sent off. This function is a counterpart of must be preceded by `esp_appttrace_buffer_get`.

Return ESP_OK on success, otherwise see `esp_err_t`

Parameters

- `dest`: Indicates HW interface to send data. Should be identical to the same parameter in call to `esp_appttrace_buffer_get`.
- `ptr`: Address of trace buffer to release. Should be the value returned by call to `esp_appttrace_buffer_get`.
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

`esp_err_t esp_appttrace_write (esp_appttrace_dest_t dest, const void *data, size_t size, uint32_t tmo)`
Writes data to trace buffer.

Return ESP_OK on success, otherwise see `esp_err_t`

Parameters

- `dest`: Indicates HW interface to send data.
- `data`: Address of data to write to trace buffer.
- `size`: Size of data to write to trace buffer.
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

`int esp_appttrace_vprintf_to (esp_appttrace_dest_t dest, uint32_t tmo, const char *fmt, va_list ap)`
vprintf-like function to sent log messages to host via specified HW interface.

Return Number of bytes written.

Parameters

- `dest`: Indicates HW interface to send data.

- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.
- `fmt`: Address of format string.
- `ap`: List of arguments.

int **esp_appttrace_vprintf** (`const char *fmt, va_list ap`)
 vprintf-like function to sent log messages to host.

Return Number of bytes written.

Parameters

- `fmt`: Address of format string.
- `ap`: List of arguments.

esp_err_t **esp_appttrace_read** (`esp_appttrace_dest_t dest, void *data, size_t *size, uint32_t tmo`)
 Reads host data from trace buffer.

Return `ESP_OK` on success, otherwise see `esp_err_t`

Parameters

- `dest`: Indicates HW interface to read the data on.
- `data`: Address of buffer to put data from trace buffer.
- `size`: Pointer to store size of read data. Before call to this function pointed memory must hold requested size of data
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

esp_err_t **esp_appttrace_flush** (`esp_appttrace_dest_t dest, uint32_t tmo`)
 Flushes remaining data in trace buffer to host.

Return `ESP_OK` on success, otherwise see `esp_err_t`

Parameters

- `dest`: Indicates HW interface to flush data on.
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

esp_err_t **esp_appttrace_flush_nolock** (`esp_appttrace_dest_t dest, uint32_t min_sz, uint32_t tmo`)
 Flushes remaining data in trace buffer to host without locking internal data. This is special version of `esp_appttrace_flush` which should be called from panic handler.

Return `ESP_OK` on success, otherwise see `esp_err_t`

Parameters

- `dest`: Indicates HW interface to flush data on.
- `min_sz`: Threshold for flushing data. If current filling level is above this value, data will be flushed. TRAX destinations only.
- `tmo`: Timeout for operation (in us). Use `ESP_APPTRACE_TMO_INFINITE` to wait indefinitely.

Example code for this API section is provided in [system](#) directory of ESP-IDF examples.

ESP32 Modules and Boards

Espressif designed and manufactured several development modules and boards to help users evaluate functionality of ESP32 chip. Development boards, depending on intended functionality, have exposed GPIO pins headers, provide USB programming interface, JTAG interface as well as peripherals like touch pads, LCD screen, SD card slot, camera module header, etc.

For details please refer to documentation below, provided together with description of particular boards.

ESP-WROOM-32

The smallest module intended for installation in final products. Can be also used for evaluation after adding extra components like programming interface, boot strapping resistors and break out headers.

- [Schematic \(PDF\)](#)
- [Datasheet \(PDF\)](#)
- [ESP32 Module Reference Design \(ZIP\)](#) containing OrCAD schematic, PCB layout, gerbers and BOM

ESP32 Core Board V2 / ESP32 DevKitC

Small and convenient development board with break out pin headers and minimum additional components. Includes USB to serial programming interface, that also provides power supply for the board. Has press buttons to reset the board and put it in upload mode.

- [Schematic \(PDF\)](#)
- [ESP32 Development Board Reference Design \(ZIP\)](#) containing OrCAD schematic, PCB layout, gerbers and BOM
- [ESP32-DevKitC Getting Started Guide](#)
- [CP210x USB to UART Bridge VCP Drivers](#)

ESP32 Demo Board V2

One of first feature rich evaluation boards that contains several pin headers, dip switches, USB to serial programming interface, reset and boot mode press buttons, power switch, 10 touch pads and separate header to connect LCD screen.

- [Schematic \(PDF\)](#)
- [FTDI Virtual COM Port Drivers](#)

ESP32 WROVER KIT V1 / ESP32 DevKitJ V1

Development board that has dual port USB to serial converter for programming and JTAG interface for debugging. Power supply is provided by USB interface or from standard 5 mm power supply jack. Power supply selection is done with a jumper and may be put on/off with a separate switch. Has SD card slot, 3.2" SPI LCD screen and dedicated header to connect a camera. Provides RGB diode for diagnostics. Also, includes 32.768 kHz XTAL for internal RTC to operate it in low power modes.

- [Schematic \(PDF\)](#)
- [JTAG Debugging for ESP32 \(PDF\)](#)
- [FTDI Virtual COM Port Drivers](#)

ESP32 WROVER KIT V2

This is updated version of ESP32 DevKitJ V1 described above with design improvements identified when DevKitJ was in use.

Comparing to previous version, this board has a shiny black finish and a male camera header.

- [Schematic V2 \(PDF\)](#)
- [JTAG Debugging for ESP32 \(PDF\)](#)
- [FTDI Virtual COM Port Drivers](#)

ESP32 WROVER KIT V3

This revision of ESP32 WROVER KIT introduced several changes to conditioning and interlocking of signals to the bootstrapping pins. A zero Ohm resistor (R166) has been added between WROVER/WROOM module and VDD33 net, which can be desoldered or replaced with a shunt resistor for current measurement. This should facilitate power consumption analysis in various operation modes of ESP32. Refer to schematic - the changes are enclosed in green border.

The camera header has been changed from male back to female. The board soldermask is matte black.

All versions of ESP32 WROVER KIT are ready to accommodate an ESP-WROOM-32 or ESP32-WROVER module. On picture above ESP32-WROVER is installed.

- [Schematic V3 \(PDF\)](#)
- [ESP-WROVER-KIT Getting Started Guide](#)
- [JTAG Debugging for ESP32 \(PDF\)](#)
- [FTDI Virtual COM Port Drivers](#)

General Notes About ESP-IDF Programming

Application startup flow

This note explains various steps which happen before `app_main` function of an ESP-IDF application is called.

The high level view of startup process is as follows:

1. First-stage bootloader in ROM loads second-stage bootloader image to RAM (IRAM & DRAM) from flash offset 0x1000.
2. Second-stage bootloader loads partition table and main app image from flash. Main app incorporates both RAM segments and read-only segments mapped via flash cache.
3. Main app image executes. At this point the second CPU and RTOS scheduler can be started.

This process is explained in detail in the following sections.

First stage bootloader

After SoC reset, PRO CPU will start running immediately, executing reset vector code, while APP CPU will be held in reset. During startup process, PRO CPU does all the initialization. APP CPU reset is de-asserted in the `call_start_cpu0` function of application startup code. Reset vector code is located at address 0x40000400 in the mask ROM of the ESP32 chip and can not be modified.

Startup code called from the reset vector determines the boot mode by checking `GPIO_STRAP_REG` register for bootstrap pin states. Depending on the reset reason, the following takes place:

1. Reset from deep sleep: if the value in `RTC_CNTL_STORE6_REG` is non-zero, and CRC value of RTC memory in `RTC_CNTL_STORE7_REG` is valid, use `RTC_CNTL_STORE6_REG` as an entry point address and jump immediately to it. If `RTC_CNTL_STORE6_REG` is zero, or `RTC_CNTL_STORE7_REG` contains invalid CRC, or once the code called via `RTC_CNTL_STORE6_REG` returns, proceed with boot as if it was a power-on reset. **Note:** to run customized code at this point, a deep sleep stub mechanism is provided. Please see [deep sleep](#) documentation for this.

2. For power-on reset, software SOC reset, and watchdog SOC reset: check the `GPIO_STRAP_REG` register if UART or SDIO download mode is requested. If this is the case, configure UART or SDIO, and wait for code to be downloaded. Otherwise, proceed with boot as if it was due to software CPU reset.
3. For software CPU reset and watchdog CPU reset: configure SPI flash based on EFUSE values, and attempt to load the code from flash. This step is described in more detail in the next paragraphs. If loading code from flash fails, unpack BASIC interpreter into the RAM and start it. Note that RTC watchdog is still enabled when this happens, so unless any input is received by the interpreter, watchdog will reset the SOC in a few hundred milliseconds, repeating the whole process. If the interpreter receives any input from the UART, it disables the watchdog.

Application binary image is loaded from flash starting at address 0x1000. First 4kB sector of flash is used to store secure boot IV and signature of the application image. Please check secure boot documentation for details about this.

Second stage bootloader

In ESP-IDF, the binary image which resides at offset 0x1000 in flash is the second stage bootloader. Second stage bootloader source code is available in `components/bootloader` directory of ESP-IDF. Note that this arrangement is not the only one possible with the ESP32 chip. It is possible to write a fully featured application which would work when flashed to offset 0x1000, but this is out of scope of this document. Second stage bootloader is used in ESP-IDF to add flexibility to flash layout (using partition tables), and allow for various flows associated with flash encryption, secure boot, and over-the-air updates (OTA) to take place.

When the first stage bootloader is finished checking and loading the second stage bootloader, it jumps to the second stage bootloader entry point found in the binary image header.

Second stage bootloader reads the partition table found at offset 0x8000. See [partition tables](#) documentation for more information. The bootloader finds factory and OTA partitions, and decides which one to boot based on data found in *OTA info* partition.

For the selected partition, second stage bootloader copies data and code sections which are mapped into IRAM and DRAM to their load addresses. For sections which have load addresses in DROM and IROM regions, flash MMU is configured to provide the correct mapping. Note that the second stage bootloader configures flash MMU for both PRO and APP CPUs, but it only enables flash MMU for PRO CPU. Reason for this is that second stage bootloader code is loaded into the memory region used by APP CPU cache. The duty of enabling cache for APP CPU is passed on to the application. Once code is loaded and flash MMU is set up, second stage bootloader jumps to the application entry point found in the binary image header.

Currently it is not possible to add application-defined hooks to the bootloader to customize application partition selection logic. This may be required to load different application image depending on a state of a GPIO, for example. Such customization features will be added to ESP-IDF in the future. For now, bootloader can be customized by copying bootloader component into application directory and making necessary changes there. ESP-IDF build system will compile the component in application directory instead of ESP-IDF components directory in this case.

Application startup

ESP-IDF application entry point is `call_start_cpu0` function found in `components/esp32/cpu_start.c`. Two main things this function does are to enable heap allocator and to make APP CPU jump to its entry point, `call_start_cpu1`. The code on PRO CPU sets the entry point for APP CPU, de-asserts APP CPU reset, and waits for a global flag to be set by the code running on APP CPU, indicating that it has started. Once this is done, PRO CPU jumps to `start_cpu0` function, and APP CPU jumps to `start_cpu1` function.

Both `start_cpu0` and `start_cpu1` are weak functions, meaning that they can be overridden in the application, if some application-specific change to initialization sequence is needed. Default implementation of `start_cpu0` enables or initializes components depending on choices made in `menuconfig`. Please see source code of this function in `components/esp32/cpu_start.c` for an up to date list of steps performed. Note that any C++ global

constructors present in the application will be called at this stage. Once all essential components are initialized, *main task* is created and FreeRTOS scheduler is started.

While PRO CPU does initialization in `start_cpu0` function, APP CPU spins in `start_cpu1` function, waiting for the scheduler to be started on the PRO CPU. Once the scheduler is started on the PRO CPU, code on the APP CPU starts the scheduler as well.

Main task is the task which runs `app_main` function. Main task stack size and priority can be configured in `menuconfig`. Application can use this task for initial application-specific setup, for example to launch other tasks. Application can also use main task for event loops and other general purpose activities. If `app_main` function returns, main task is deleted.

Application memory layout

ESP32 chip has flexible memory mapping features. This section describes how ESP-IDF uses these features by default. Application code in ESP-IDF can be placed into one of the following memory regions.

IRAM (instruction RAM)

ESP-IDF allocates part of *Internal SRAM0* region (defined in the Technical Reference Manual) for instruction RAM. Except for the first 64 kB block which is used for PRO and APP CPU caches, the rest of this memory range (i.e. from `0x40080000` to `0x400A0000`) is used to store parts of application which need to run from RAM.

A few components of ESP-IDF and parts of WiFi stack are placed into this region using the linker script.

If some application code needs to be placed into IRAM, it can be done using `IRAM_ATTR` define:

```
#include "esp_attr.h"

void IRAM_ATTR gpio_isr_handler(void* arg)
{
    // ...
}
```

Here are the cases when parts of application may or should be placed into IRAM.

- Interrupt handlers must be placed into IRAM if `ESP_INTR_FLAG_IRAM` is used when registering the interrupt handler. In this case, ISR may only call functions placed into IRAM or functions present in ROM. *Note 1:* all FreeRTOS APIs are currently placed into IRAM, so are safe to call from interrupt handlers. If the ISR is placed into IRAM, all constant data used by the ISR and functions called from ISR (including, but not limited to, `const char` arrays), must be placed into DRAM using `DRAM_ATTR`.
- Some timing critical code may be placed into IRAM to reduce the penalty associated with loading the code from flash. ESP32 reads code and data from flash via a 32 kB cache. In some cases, placing a function into IRAM may reduce delays caused by a cache miss.

IROM (code executed from Flash)

If a function is not explicitly placed into IRAM or RTC memory, it is placed into flash. The mechanism by which Flash MMU is used to allow code execution from flash is described in the Technical Reference Manual. ESP-IDF places the code which should be executed from flash starting from the beginning of `0x400D0000` — `0x40400000` region. Upon startup, second stage bootloader initializes Flash MMU to map the location in flash where code is located into the beginning of this region. Access to this region is transparently cached using two 32kB blocks in `0x40070000` — `0x40080000` range.

Note that the code outside `0x40000000 -- 0x40400000` region may not be reachable with Window ABI `CALLx` instructions, so special care is required if `0x40400000 -- 0x40800000` or `0x40800000 -- 0x40C00000` regions are used by the application. ESP-IDF doesn't use these regions by default.

RTC fast memory

The code which has to run after wake-up from deep sleep mode has to be placed into RTC memory. Please check detailed description in [deep sleep](#) documentation.

DRAM (data RAM)

Non-constant static data and zero-initialized data is placed by the linker into the 256 kB `0x3FFB0000 -- 0x3FFF0000` region. Note that this region is reduced by 64kB (by shifting start address to `0x3FFC0000`) if Bluetooth stack is used. Length of this region is also reduced by 16 kB or 32kB if trace memory is used. All space which is left in this region after placing static data there is used for the runtime heap.

Constant data may also be placed into DRAM, for example if it is used in an ISR (see notes in IRAM section above). To do that, `DRAM_ATTR` define can be used:

```
DRAM_ATTR const char[] format_string = "%p %x";
char buffer[64];
sprintf(buffer, format_string, ptr, val);
```

Needless to say, it is not advised to use `printf` and other output functions in ISRs. For debugging purposes, use `ESP_EARLY_LOGx` macros when logging from ISRs. Make sure that both `TAG` and format string are placed into DRAM in that case.

DROM (data stored in Flash)

By default, constant data is placed by the linker into a 4 MB region (`0x3F400000 -- 0x3F800000`) which is used to access external flash memory via Flash MMU and cache. Exceptions to this are literal constants which are embedded by the compiler into application code.

RTC slow memory

Global and static variables used by code which runs from RTC memory (i.e. deep sleep stub code) must be placed into RTC slow memory. Please check detailed description in [deep sleep](#) documentation.

Build System

This document explains the Espressif IoT Development Framework build system and the concept of “components”

Read this document if you want to know how to organise a new ESP-IDF project.

We recommend using the [esp-idf-template](#) project as a starting point for your project.

Using the Build System

The `esp-idf` README file contains a description of how to use the build system to build your project.

Overview

An ESP-IDF project can be seen as an amalgamation of a number of components. For example, for a webserver that shows the current humidity, there could be:

- The ESP32 base libraries (libc, rom bindings etc)
- The WiFi drivers
- A TCP/IP stack
- The FreeRTOS operating system
- A webserver
- A driver for the humidity sensor
- Main code tying it all together

ESP-IDF makes these components explicit and configurable. To do that, when a project is compiled, the build environment will look up all the components in the ESP-IDF directories, the project directories and (optionally) in additional custom component directories. It then allows the user to configure the ESP-IDF project using a text-based menu system to customize each component. After the components in the project are configured, the build process will compile the project.

Concepts

- A “project” is a directory that contains all the files and configuration to build a single “app” (executable), as well as additional supporting output such as a partition table, data/filesystem partitions, and a bootloader.
- “Project configuration” is held in a single file called `sdkconfig` in the root directory of the project. This configuration file is modified via `make menuconfig` to customise the configuration of the project. A single project contains exactly one project configuration.
- An “app” is an executable which is built by `esp-idf`. A single project will usually build two apps - a “project app” (the main executable, ie your custom firmware) and a “bootloader app” (the initial bootloader program which launches the project app).
- “components” are modular pieces of standalone code which are compiled into static libraries (`.a` files) and linked into an app. Some are provided by `esp-idf` itself, others may be sourced from other places.

Some things are not part of the project:

- “ESP-IDF” is not part of the project. Instead it is standalone, and linked to the project via the `IDF_PATH` environment variable which holds the path of the `esp-idf` directory. This allows the IDF framework to be decoupled from your project.
- The toolchain for compilation is not part of the project. The toolchain should be installed in the system command line `PATH`, or the path to the toolchain can be set as part of the compiler prefix in the project configuration.

Example Project

An example project directory tree might look like this:

```

- myProject/
  - Makefile
  - sdkconfig
  - components/
    - component1/
      - component.mk
      - Kconfig
      - src1.c

```

```
        - component2/ - component.mk
                        - Kconfig
                        - src1.c
                        - include/ - component2.h
- main/      - src1.c
              - src2.c
              - component.mk

- build/
```

This example “myProject” contains the following elements:

- A top-level project Makefile. This Makefile set the `PROJECT_NAME` variable and (optionally) defines other project-wide make variables. It includes the core `$(IDF_PATH)/make/project.mk` makefile which implements the rest of the ESP-IDF build system.
- “sdkconfig” project configuration file. This file is created/updated when “make menuconfig” runs, and holds configuration for all of the components in the project (including esp-idf itself). The “sdkconfig” file may or may not be added to the source control system of the project.
- Optional “components” directory contains components that are part of the project. A project does not have to contain custom components of this kind, but it can be useful for structuring reusable code or including third party components that aren’t part of ESP-IDF.
- “main” directory is a special “pseudo-component” that contains source code for the project itself. “main” is a default name, the Makefile variable `COMPONENT_DIRS` includes this component but you can modify this variable (or set `EXTRA_COMPONENT_DIRS`) to look for components in other places.
- “build” directory is where build output is created. After the make process is run, this directory will contain interim object files and libraries as well as final binary output files. This directory is usually not added to source control or distributed with the project source code.

Component directories contain a component makefile - `component.mk`. This may contain variable definitions to control the build process of the component, and its integration into the overall project. See *Component Makefiles* for more details.

Each component may also include a `Kconfig` file defining the *component configuration* options that can be set via the project configuration. Some components may also include `Kconfig.projbuild` and `Makefile.projbuild` files, which are special files for *overriding parts of the project*.

Project Makefiles

Each project has a single Makefile that contains build settings for the entire project. By default, the project Makefile can be quite minimal.

Minimal Example Makefile

```
PROJECT_NAME := myProject

include $(IDF_PATH)/make/project.mk
```

Mandatory Project Variables

- `PROJECT_NAME`: Name of the project. Binary output files will use this name - ie `myProject.bin`, `myProject.elf`.

Optional Project Variables

These variables all have default values that can be overridden for custom behaviour. Look in `make/project.mk` for all of the implementation details.

- `PROJECT_PATH`: Top-level project directory. Defaults to the directory containing the Makefile. Many other project variables are based on this variable. The project path cannot contain spaces.
- `BUILD_DIR_BASE`: The build directory for all objects/libraries/binaries. Defaults to `$(PROJECT_PATH)/build`.
- `COMPONENT_DIRS`: Directories to search for components. Defaults to `$(IDF_PATH)/components`, `$(PROJECT_PATH)/components`, `$(PROJECT_PATH)/main` and `EXTRA_COMPONENT_DIRS`. Override this variable if you don't want to search for components in these places.
- `EXTRA_COMPONENT_DIRS`: Optional list of additional directories to search for components.
- `COMPONENTS`: A list of component names to build into the project. Defaults to all components found in the `COMPONENT_DIRS` directories.

Any paths in these Makefile variables should be absolute paths. You can convert relative paths using `$(PROJECT_PATH)/xxx`, `$(IDF_PATH)/xxx`, or use the Make function `$(abspath xxx)`.

These variables should all be set before the line `include $(IDF_PATH)/make/project.mk` in the Makefile.

Component Makefiles

Each project contains one or more components, which can either be part of `esp-idf` or added from other component directories.

A component is any directory that contains a `component.mk` file.

Searching for Components

The list of directories in `COMPONENT_DIRS` is searched for the project's components. Directories in this list can either be components themselves (ie they contain a `component.mk` file), or they can be top-level directories whose subdirectories are components.

Running the `make list-components` target dumps many of these variables and can help debug the discovery of component directories.

Multiple components with the same name

When `esp-idf` is collecting all the components to compile, it will do this in the order specified by `COMPONENT_DIRS`; by default, this means the `idf` components first, the project components second and optionally the components in `EXTRA_COMPONENT_DIRS` last. If two or more of these directories contain component subdirectories with the same name, the component in the last place searched is used. This allows, for example, overriding `esp-idf` components with a modified version by simply copying the component from the `esp-idf` component directory to the project component tree and then modifying it there. If used in this way, the `esp-idf` directory itself can remain untouched.

Minimal Component Makefile

The minimal `component.mk` file is an empty file(!). If the file is empty, the default component behaviour is set:

- All source files in the same directory as the makefile (`*.c`, `*.cpp`, `*.S`) will be compiled into the component library
- A sub-directory “include” will be added to the global include search path for all other components.
- The component library will be linked into the project app.

See *example component makefiles* for more complete component makefile examples.

Note that there is a difference between an empty `component.mk` file (which invokes default component build behaviour) and no `component.mk` file (which means no default component build behaviour will occur.) It is possible for a component to have no `component.mk` file, if it only contains other files which influence the project configuration or build process.

Preset Component Variables

The following component-specific variables are available for use inside `component.mk`, but should not be modified:

- `COMPONENT_PATH`: The component directory. Evaluates to the absolute path of the directory containing `component.mk`. The component path cannot contain spaces.
- `COMPONENT_NAME`: Name of the component. Defaults to the name of the component directory.
- `COMPONENT_BUILD_DIR`: The component build directory. Evaluates to the absolute path of a directory inside `$(BUILD_DIR_BASE)` where this component’s source files are to be built. This is also the Current Working Directory any time the component is being built, so relative paths in make targets, etc. will be relative to this directory.
- `COMPONENT_LIBRARY`: Name of the static library file (relative to the component build directory) that will be built for this component. Defaults to `$(COMPONENT_NAME).a`.

The following variables are set at the project level, but exported for use in the component build:

- `PROJECT_NAME`: Name of the project, as set in project Makefile
- `PROJECT_PATH`: Absolute path of the project directory containing the project Makefile.
- `COMPONENTS`: Name of all components that are included in this build.
- `CONFIG_*`: Each value in the project configuration has a corresponding variable available in make. All names begin with `CONFIG_`.
- `CC`, `LD`, `AR`, `OBJCOPY`: Full paths to each tool from the `gcc xtensa` cross-toolchain.
- `HOSTCC`, `HOSTLD`, `HOSTAR`: Full names of each tool from the host native toolchain.
- `IDF_VER`: Git version of ESP-IDF (produced by `git describe`)

If you modify any of these variables inside `component.mk` then this will not prevent other components from building but it may make your component hard to build and/or debug.

Optional Project-Wide Component Variables

The following variables can be set inside `component.mk` to control build settings across the entire project:

- `COMPONENT_ADD_INCLUDEDIRS`: Paths, relative to the component directory, which will be added to the include search path for all components in the project. Defaults to `include` if not overridden. If an include directory is only needed to compile this specific component, add it to `COMPONENT_PRIV_INCLUDEDIRS` instead.

- `COMPONENT_ADD_LDFLAGS`: Add linker arguments to the `LDFLAGS` for the app executable. Defaults to `-l$(COMPONENT_NAME)`. If adding pre-compiled libraries to this directory, add them as absolute paths - ie `$(COMPONENT_PATH)/libwhatever.a`
- `COMPONENT_DEPENDS`: Optional list of component names that should be compiled before this component. This is not necessary for link-time dependencies, because all component include directories are available at all times. It is necessary if one component generates an include file which you then want to include in another component. Most components do not need to set this variable.
- `COMPONENT_ADD_LINKER_DEPS`: Optional list of component-relative paths to files which should trigger a re-link of the ELF file if they change. Typically used for linker script files and binary libraries. Most components do not need to set this variable.

The following variable only works for components that are part of esp-idf itself:

- `COMPONENT_SUBMODULES`: Optional list of git submodule paths (relative to `COMPONENT_PATH`) used by the component. These will be checked (and initialised if necessary) by the build process. This variable is ignored if the component is outside the `IDF_PATH` directory.

Optional Component-Specific Variables

The following variables can be set inside `component.mk` to control the build of that component:

- `COMPONENT_PRIV_INCLUDEDIRS`: Directory paths, must be relative to the component directory, which will be added to the include search path for this component's source files only.
- `COMPONENT_EXTRA_INCLUDES`: Any extra include paths used when compiling the component's source files. These will be prefixed with `'-I'` and passed as-is to the compiler. Similar to the `COMPONENT_PRIV_INCLUDEDIRS` variable, except these paths are not expanded relative to the component directory.
- `COMPONENT_SRCDIRS`: Directory paths, must be relative to the component directory, which will be searched for source files (`*.cpp`, `*.c`, `*.S`). Defaults to `'.'`, ie the component directory itself. Override this to specify a different list of directories which contain source files.
- `COMPONENT_OBJS`: Object files to compile. Default value is a `.o` file for each source file that is found in `COMPONENT_SRCDIRS`. Overriding this list allows you to exclude source files in `COMPONENT_SRCDIRS` that would otherwise be compiled. See *Specifying source files*
- `COMPONENT_EXTRA_CLEAN`: Paths, relative to the component build directory, of any files that are generated using custom make rules in the `component.mk` file and which need to be removed as part of `make clean`. See *Source Code Generation* for an example.
- `COMPONENT_OWNBUILDTARGET` & `COMPONENT_OWNCLEANTARGET`: These targets allow you to fully override the default build behaviour for the component. See *Fully Overriding The Component Makefile* for more details.
- `COMPONENT_CONFIG_ONLY`: If set, this flag indicates that the component produces no built output at all (ie `COMPONENT_LIBRARY` is not built), and most other component variables are ignored. This flag is used for IDF internal components which contain only `KConfig.projbuild` and/or `Makefile.projbuild` files to configure the project, but no source files.
- `CFLAGS`: Flags passed to the C compiler. A default set of `CFLAGS` is defined based on project settings. Component-specific additions can be made via `CFLAGS +=`. It is also possible (although not recommended) to override this variable completely for a component.
- `CPPFLAGS`: Flags passed to the C preprocessor (used for `.c`, `.cpp` and `.S` files). A default set of `CPPFLAGS` is defined based on project settings. Component-specific additions can be made via `CPPFLAGS +=`. It is also possible (although not recommended) to override this variable completely for a component.

- `CXXFLAGS`: Flags passed to the C++ compiler. A default set of `CXXFLAGS` is defined based on project settings. Component-specific additions can be made via `CXXFLAGS +=`. It is also possible (although not recommended) to override this variable completely for a component.

To apply compilation flags to a single source file, you can add a variable override as a target, ie:

```
apps/dhcpserver.o: CFLAGS += -Wno-unused-variable
```

This can be useful if there is upstream code that emits warnings.

Component Configuration

Each component can also have a `Kconfig` file, alongside `component.mk`. This contains configuration settings to add to the “make menuconfig” for this component.

These settings are found under the “Component Settings” menu when `menuconfig` is run.

To create a component `KConfig` file, it is easiest to start with one of the `KConfig` files distributed with `esp-idf`.

For an example, see *Adding conditional configuration*.

Preprocessor Definitions

ESP-IDF build systems adds the following C preprocessor definitions on the command line:

- `ESP_PLATFORM` — Can be used to detect that build happens within ESP-IDF.
- `IDF_VER` — Defined to a git version string. E.g. `v2.0` for a tagged release or `v1.0-275-g0efaa4f` for an arbitrary commit.

Build Process Internals

Top Level: Project Makefile

- “make” is always run from the project directory and the project makefile, typically named `Makefile`.
- The project makefile sets `PROJECT_NAME` and optionally customises other *optional project variables*
- The project makefile includes `$(IDF_PATH)/make/project.mk` which contains the project-level Make logic.
- `project.mk` fills in default project-level make variables and includes make variables from the project configuration. If the generated makefile containing project configuration is out of date, then it is regenerated (via targets in `project_config.mk`) and then the make process restarts from the top.
- `project.mk` builds a list of components to build, based on the default component directories or a custom list of components set in *optional project variables*.
- Each component can set some *optional project-wide component variables*. These are included via generated makefiles named `component_project_vars.mk` - there is one per component. These generated makefiles are included into `project.mk`. If any are missing or out of date, they are regenerated (via a recursive make call to the component makefile) and then the make process restarts from the top.
- *Makefile.projbuild* files from components are included into the make process, to add extra targets or configuration.
- By default, the project makefile also generates top-level build & clean targets for each component and sets up *app* and *clean* targets to invoke all of these sub-targets.

- In order to compile each component, a recursive make is performed for the component makefile.

To better understand the project make process, have a read through the `project.mk` file itself.

Second Level: Component Makefiles

- Each call to a component makefile goes via the `$(IDF_PATH)/make/component_wrapper.mk` wrapper makefile.
- The `component_wrapper.mk` is called with the current directory set to the component build directory, and the `COMPONENT_MAKEFILE` variable is set to the absolute path to `component.mk`.
- `component_wrapper.mk` sets default values for all *component variables*, then includes the *component.mk* file which can override or modify these.
- If `COMPONENT_OWNBUILDTARGET` and `COMPONENT_OWNCLEANTARGET` are not defined, default build and clean targets are created for the component's source files and the prerequisite `COMPONENT_LIBRARY` static library file.
- The `component_project_vars.mk` file has its own target in `component_wrapper.mk`, which is evaluated from `project.mk` if this file needs to be rebuilt due to changes in the component makefile or the project configuration.

To better understand the component make process, have a read through the `component_wrapper.mk` file and some of the `component.mk` files included with `esp-idf`.

Running Make Non-Interactively

When running `make` in a situation where you don't want interactive prompts (for example: inside an IDE or an automated build system) append `BATCH_BUILD=1` to the make arguments (or set it as an environment variable).

Setting `BATCH_BUILD` implies the following:

- Verbose output (same as `V=1`, see below). If you don't want verbose output, also set `V=0`.
- If the project configuration is missing new configuration items (from new components or `esp-idf` updates) then the project use the default values, instead of prompting the user for each item.
- If the build system needs to invoke `menuconfig`, an error is printed and the build fails.

Debugging The Make Process

Some tips for debugging the `esp-idf` build system:

- Appending `V=1` to the make arguments (or setting it as an environment variable) will cause `make` to echo all commands executed, and also each directory as it is entered for a sub-make.
- Running `make -w` will cause `make` to echo each directory as it is entered for a sub-make - same as `V=1` but without also echoing all commands.
- Running `make --trace` (possibly in addition to one of the above arguments) will print out every target as it is built, and the dependency which caused it to be built.
- Running `make -p` prints a (very verbose) summary of every generated target in each makefile.

For more debugging tips and general `make` information, see the *GNU Make Manual*.

Overriding Parts of the Project

Makefile.projbuild

For components that have build requirements that must be evaluated in the top-level project make pass, you can create a file called `Makefile.projbuild` in the component directory. This makefile is included when `project.mk` is evaluated.

For example, if your component needs to add to `CFLAGS` for the entire project (not just for its own source files) then you can set `CFLAGS +=` in `Makefile.projbuild`.

`Makefile.projbuild` files are used heavily inside `esp-idf`, for defining project-wide build features such as `esptool.py` command line arguments and the `bootloader` “special app”.

Note that `Makefile.projbuild` isn’t necessary for the most common component uses - such as adding include directories to the project, or `LDFLAGS` to the final linking step. These values can be customised via the `component.mk` file itself. See *Optional Project-Wide Component Variables* for details.

Take care when setting variables or targets in this file. As the values are included into the top-level project makefile pass, they can influence or break functionality across all components!

KConfig.projbuild

This is an equivalent to `Makefile.projbuild` for *component configuration* `KConfig` files. If you want to include configuration options at the top-level of `menuconfig`, rather than inside the “Component Configuration” sub-menu, then these can be defined in the `KConfig.projbuild` file alongside the `component.mk` file.

Take care when adding configuration values in this file, as they will be included across the entire project configuration. Where possible, it’s generally better to create a `KConfig` file for *component configuration*.

Configuration-Only Components

Some special components which contain no source files, only `Kconfig.projbuild` and `Makefile.projbuild`, may set the flag `COMPONENT_CONFIG_ONLY` in the `component.mk` file. If this flag is set, most other component variables are ignored and no build step is run for the component.

Example Component Makefiles

Because the build environment tries to set reasonable defaults that will work most of the time, `component.mk` can be very small or even empty (see *Minimal Component Makefile*). However, overriding *component variables* is usually required for some functionality.

Here are some more advanced examples of `component.mk` makefiles:

Adding source directories

By default, sub-directories are ignored. If your project has sources in sub-directories instead of in the root of the component then you can tell that to the build system by setting `COMPONENT_SRCDIRS`:

```
COMPONENT_SRCDIRS := src1 src2
```

This will compile all source files in the `src1/` and `src2/` sub-directories instead.

Specifying source files

The standard component.mk logic adds all .S and .c files in the source directories as sources to be compiled unconditionally. It is possible to circumvent that logic and hard-code the objects to be compiled by manually setting the COMPONENT_OBJJS variable to the name of the objects that need to be generated:

```
COMPONENT_OBJJS := file1.o file2.o thing/filea.o thing/fileb.o anotherthing/main.o
COMPONENT_SRCDIRS := . thing anotherthing
```

Note that COMPONENT_SRCDIRS must be set as well.

Adding conditional configuration

The configuration system can be used to conditionally compile some files depending on the options selected in make menuconfig. For this, ESP-IDF has the compile_only_if and compile_only_if_not macros:

Kconfig:

```
config FOO_ENABLE_BAR
    bool "Enable the BAR feature."
    help
        This enables the BAR feature of the FOO component.
```

component.mk:

```
$(call compile_only_if,$(CONFIG_FOO_ENABLE_BAR),bar.o)
```

As can be seen in the example, the compile_only_if macro takes a condition and a list of object files as parameters. If the condition is true (in this case: if the BAR feature is enabled in menuconfig) the object files (in this case: bar.o) will always be compiled. The opposite goes as well: if the condition is not true, bar.o will never be compiled. compile_only_if_not does the opposite: compile if the condition is false, not compile if the condition is true.

This can also be used to select or stub out an implementation, as such:

Kconfig:

```
config ENABLE_LCD_OUTPUT
    bool "Enable LCD output."
    help
        Select this if your board has a LCD.

config ENABLE_LCD_CONSOLE
    bool "Output console text to LCD"
    depends on ENABLE_LCD_OUTPUT
    help
        Select this to output debugging output to the lcd

config ENABLE_LCD_PLOT
    bool "Output temperature plots to LCD"
    depends on ENABLE_LCD_OUTPUT
    help
        Select this to output temperature plots
```

component.mk:

```
# If LCD is enabled, compile interface to it, otherwise compile dummy interface
$(call compile_only_if,$(CONFIG_ENABLE_LCD_OUTPUT),lcd-real.o lcd-spi.o)
```

```
$(call compile_only_if_not,$(CONFIG_ENABLE_LCD_OUTPUT),lcd-dummy.o)

#We need font if either console or plot is enabled
$(call compile_only_if,$(or $(CONFIG_ENABLE_LCD_CONSOLE),$(CONFIG_ENABLE_LCD_PLOT)),_
↪font.o)
```

Note the use of the Make ‘or’ function to include the font file. Other substitution functions, like ‘and’ and ‘if’ will also work here. Variables that do not come from menuconfig can also be used: ESP-IDF uses the default Make policy of judging a variable which is empty or contains only whitespace to be false while a variable with any non-whitespace in it is true.

(Note: Older versions of this document advised conditionally adding object file names to `COMPONENT_OBJS`. While this still is possible, this will only work when all object files for a component are named explicitly, and will not clean up deselected object files in a `make clean` pass.)

Source Code Generation

Some components will have a situation where a source file isn’t supplied with the component itself but has to be generated from another file. Say our component has a header file that consists of the converted binary data of a BMP file, converted using a hypothetical tool called `bmp2h`. The header file is then included in as C source file called `graphics_lib.c`:

```
COMPONENT_EXTRA_CLEAN := logo.h

graphics_lib.o: logo.h

logo.h: $(COMPONENT_PATH)/logo.bmp
    bmp2h -i $^ -o $@
```

In this example, `graphics_lib.o` and `logo.h` will be generated in the current directory (the build directory) while `logo.bmp` comes with the component and resides under the component path. Because `logo.h` is a generated file, it needs to be cleaned when `make clean` is called which why it is added to the `COMPONENT_EXTRA_CLEAN` variable.

Cosmetic Improvements

Because `logo.h` is a generated file, it needs to be cleaned when `make clean` is called which why it is added to the `COMPONENT_EXTRA_CLEAN` variable.

Adding `logo.h` to the `graphics_lib.o` dependencies causes it to be generated before `graphics_lib.c` is compiled.

If a source file in another component included `logo.h`, then this component’s name would have to be added to the other component’s `COMPONENT_DEPENDS` list to ensure that the components were built in-order.

Embedding Binary Data

Sometimes you have a file with some binary or text data that you’d like to make available to your component - but you don’t want to reformat the file as C source.

You can set a variable `COMPONENT_EMBED_FILES` in `component.mk`, giving the names of the files to embed in this way:

```
COMPONENT_EMBED_FILES := server_root_cert.der
```

Or if the file is a string, you can use the variable `COMPONENT_EMBED_TXTFILES`. This will embed the contents of the text file as a null-terminated string:

```
COMPONENT_EMBED_TXTFILES := server_root_cert.pem
```

The file's contents will be added to the `.rodata` section in flash, and are available via symbol names as follows:

```
extern const uint8_t server_root_cert_pem_start[] asm("_binary_server_root_cert_pem_
↪start");
extern const uint8_t server_root_cert_pem_end[]   asm("_binary_server_root_cert_pem_
↪end");
```

The names are generated from the full name of the file, as given in `COMPONENT_EMBED_FILES`. Characters `/`, `.`, etc. are replaced with underscores. The `_binary` prefix in the symbol name is added by `objcopy` and is the same for both text and binary files.

For an example of using this technique, see [protocols/https_request](#) - the certificate file contents are loaded from the text `.pem` file at compile time.

Fully Overriding The Component Makefile

Obviously, there are cases where all these recipes are insufficient for a certain component, for example when the component is basically a wrapper around another third-party component not originally intended to be compiled under this build system. In that case, it's possible to forego the `esp-idf` build system entirely by setting `COMPONENT_OWNBUILDTARGET` and possibly `COMPONENT_OWNCLEANTARGET` and defining your own targets named `build` and `clean` in `component.mk` target. The build target can do anything as long as it creates `$(COMPONENT_LIBRARY)` for the project make process to link into the app binary.

(Actually, even this is not strictly necessary - if the `COMPONENT_ADD_LDFLAGS` variable is overridden then the component can instruct the linker to link other binaries instead.)

Custom sdkconfig defaults

For example projects or other projects where you don't want to specify a full `sdkconfig` configuration, but you do want to override some key values from the `esp-idf` defaults, it is possible to create a file `sdkconfig.defaults` in the project directory. This file will be used when running `make defconfig`, or creating a new config from scratch.

To override the name of this file, set the `SDKCONFIG_DEFAULTS` environment variable.

Save flash arguments

There're some scenarios that we want to flash the target board without IDF. For this case we want to save the built binaries, `esptool.py` and `esptool write_flash` arguments. It's simple to write a script to save binaries and `esptool.py`. For flash arguments, we can add the following code to application project makefile:

```
print_flash_cmd:
    echo $(ESPTOOL_WRITE_FLASH_OPTIONS) $(ESPTOOL_ALL_FLASH_ARGS) | sed -e 's:'$(PWD)/
↪build/':'g'
```

the original `ESPTOOL_ALL_FLASH_ARGS` are absolute file name. Usually we want to save relative file name so we can move the bin folder to somewhere else. For this case we can use `sed` to convert to relative file name, like what we did in the example above.

When running `make print_flash_cmd`, it will print the flash arguments:

```
--flash_mode dio --flash_freq 40m --flash_size detect 0x1000 bootloader/bootloader.  
↪bin 0x10000 example_app.bin 0x8000 partition_table_unit_test_app.bin
```

Then use flash arguments as the arguments for `esptool write_flash` arguments:

```
python esptool.py --chip esp32 --port /dev/ttyUSB0 --baud 921600 --before default_  
↪reset --after hard_reset write_flash -z --flash_mode dio --flash_freq 40m --flash_  
↪size detect 0x1000 bootloader/bootloader.bin 0x10000 example_app.bin 0x8000_  
↪partition_table_unit_test_app.bin
```

Building the Bootloader

The bootloader is built by default as part of “make all”, or can be built standalone via “make bootloader-clean”. There is also “make bootloader-list-components” to see the components included in the bootloader build.

The component in IDF components/bootloader is special, as the second stage bootloader is a separate .ELF and .BIN file to the main project. However it shares its configuration and build directory with the main project.

This is accomplished by adding a subproject under components/bootloader/subproject. This subproject has its own Makefile, but it expects to be called from the project’s own Makefile via some glue in the components/bootloader/Makefile.projectbuild file. See these files for more details.

Debugging

OpenOCD setup for ESP32

The ESP31 and ESP32 have two powerful Xtensa cores, allowing for a great variety of program architectures. The FreeRTOS OS that comes with ESP-IDF is capable of multi-core pre-emptive multithreading, allowing for an intuitive way of writing software.

The downside of the ease of programming is that debugging without the right tools is harder: figuring out a bug that is caused by two threads, maybe even running simultaneously on two different CPU cores, can take a long time when all you have are printf statements. A better and in many cases quicker way to debug such problems is by using a debugger, connected to the processors over a debug port.

Espressif has ported OpenOCD to support the ESP32 processor and the multicore FreeRTOS that will be the foundation of most ESP32 apps, and has written some tools to help with features OpenOCD does not support natively. These are all available for free, and this document describes how to install and use them.

JTAG adapter hardware

You will need a JTAG adapter that is compatible with both the voltage levels on the ESP32 as well as with the OpenOCD software. The JTAG port on the ESP32 is an industry-standard JTAG port which lacks (and does not need) the TRST pin. The JTAG I/O pins all are powered from the VDD_3P3_RTC pin (which normally would be powered by a 3.3V rail) so the JTAG adapter needs to be able to work with JTAG pins in that voltage range. On the software side, OpenOCD supports a fair amount of JTAG adapters. See <http://openocd.org/doc/html/Debug-Adapter-Hardware.html> for an (unfortunately slightly incomplete) list of the adapters OpenOCD works with. This page lists SWD-compatible adapters as well; take note that the ESP32 does not support SWD.

At Espressif, we have tested the TIAO USB Multi-protocol Adapter board as well as the Flyswatter2, which are both USB2.0 high-speed devices and give a good throughput. We also tested a J-link-compatible and an EasyOpenJTAG adapter; both worked as well but are somewhat slower.

The minimal signalling to get a working JTAG connection are TDI, TDO, TCK, TMS and Gnd. Some JTAG debuggers also need a connection from the ESP32 power line to a line called e.g. Vtar to set the working voltage. SRST can optionally be connected to the CH_PD of the ESP32, although for now, support in OpenOCD for that line is pretty minimal.

Installing OpenOCD

The sources for the ESP32-enabled variant of OpenOCD are available from [Espressifs Github](#). To download the source, use the following commands:

```
git clone --recursive https://github.com/espressif/openocd-esp32.git
cd openocd-esp32
```

For compilation of OpenOCD, please refer to the README, README.OSX and README.Windows file in the openocd-esp32 directory. You can skip the `make install` step if you want.

Configuring the ESP32 target in OpenOCD

After OpenOCD is compiled (and optionally installed) and the JTAG adapter is connected to the ESP32 board, everything is ready to invoke OpenOCD for the first time. To do this, OpenOCD needs to be told what JTAG adapter to use as well as what type of board and processor the JTAG adapter is connected to. It is the easiest to do both using a configuration file. A template configuration file (`esp32.cfg`) is included in the same directory as this file. A way to use this would be:

- Copy `esp32.cfg` to the `openocd-esp32` directory
- Edit the copied `esp32.cfg` file. Most importantly, change the `source [find interface/ftdi/tumpa.cfg]` line to reflect the physical JTAG adapter connected.
- Open a terminal and `cd` to the `openocd-esp32` directory.
- Run `./src/openocd -s ./tcl -f ./esp32.cfg` to start OpenOCD

You should now see something like this:

```
user@machine:~/esp32/openocd-esp32$ ./src/openocd -s ./tcl/ -f ../openocd-esp32-tools/
↳ esp32.cfg
Open On-Chip Debugger 0.10.0-dev-00446-g6e13a97-dirty (2016-08-23-16:36)
Licensed under GNU GPL v2
For bug reports, read
http://openocd.org/doc/doxygen/bugs.html
none separate
adapter speed: 200 kHz
Info : clock speed 200 kHz
Info : JTAG tap: esp32.cpu0 tap/device found: 0x120034e5 (mfg: 0x272 (Tensilica),
↳ part: 0x2003, ver: 0x1)
Info : JTAG tap: esp32.cpu1 tap/device found: 0x120034e5 (mfg: 0x272 (Tensilica),
↳ part: 0x2003, ver: 0x1)
Info : esp32.cpu0: Debug controller was reset (pwrstat=0x5F, after clear 0x0F).
Info : esp32.cpu0: Core was reset (pwrstat=0x5F, after clear 0x0F).
```

- If you see an error indicating permission problems, please see the ‘Permissions delegation’ bit in the OpenOCD README

- If you see JTAG errors (...all ones/...all zeroes) please check your connections and see if everything is powered on.

Connecting a debugger to OpenOCD

OpenOCD should now be ready to accept gdb connections. If you have compiled the ESP32 toolchain using Crosstool-NG, or if you have downloaded a precompiled toolchain from the Espressif website, you should already have `xtensa-esp32-elf-gdb`, a version of gdb that can be used for this. First, make sure the project you want to debug is compiled and flashed into the ESP32's SPI flash. Then, in a different console than OpenOCD is running in, invoke gdb. For example, for the template app, you would do this like such:

```
cd esp-idf-template
xtensa-esp32-elf-gdb -ex 'target remote localhost:3333' ./build/app-template.elf
```

This should give you a gdb prompt.

FreeRTOS support

OpenOCD has explicit support for the ESP-IDF FreeRTOS; FreeRTOS detection can be disabled in `esp32.conf`. When enabled, gdb can see FreeRTOS tasks as threads. Viewing them all can be done using the `gdb i threads` command, changing to a certain task is done with `thread x`, with `x` being the number of the thread. All threads can be switched to except for a thread actually running on the other CPU, please see `ESP32 quirks` for more information.

ESP32 quirks

Normal gdb breakpoints (`b myFunction`) can only be set in IRAM, because that memory is writable. Setting these types of breakpoints in code in flash will not work. Instead, use a hardware breakpoint (`hb myFunction`). The esp32 supports 2 hardware breakpoints. It also supports two watchpoint, so two variables can be watched for change or read by the gdb command `watch myVariable`.

Connecting gdb to the APP or PRO cpu happens by changing the port gdb connects to. `target remote localhost:3333` connects to the PRO CPU, `target remote localhost:3334` to the APP CPU. Hardware-wise, when one CPU is halted because of debugging reasons, the other one will be halted as well; resuming also happens simultaneously.

Because gdb only sees the system from the point of view of the selected CPU, only the FreeRTOS tasks that are suspended and the task running on the CPU gdb is connected to, will be shown correctly. The task that was active on the other cpu can be inspected, but its state may be wildly inconsistent.

The ESP-IDF code has the option of compiling in various support options for OpenOCD: it can stop execution when the first thread is started and break the system if a panic or unhandled exception is thrown. Both options are enabled by default but can be disabled using the esp-idf configuration menu. Please see the `make menuconfig` menu for more details.

Normally, under OpenOCD, a board can be reset by entering 'mon reset' or 'mon reset halt' into gdb. For the ESP32, these commands work more or less, but have side effects. First of all, an OpenOCD reset only resets the CPU cores, not the peripherals, which may lead to undefined behaviour if software assumes the after-reset state of peripherals. Secondly, 'mon reset halt' stops before FreeRTOS is initialized. OpenOCD assumes (in the default configuration, you can change this by editing `esp32.cfg`) a running FreeRTOS and may get confused.

ESP32 Core Dump

Overview

ESP-IDF provides support to generate core dumps on unrecoverable software errors. This useful technique allows post-mortem analysis of software state at the moment of failure. Upon the crash system enters panic state, prints some information and halts or reboots depending configuration. User can choose to generate core dump in order to analyse the reason of failure on PC later on. Core dump contains snapshots of all tasks in the system at the moment of failure. Snapshots include tasks control blocks (TCB) and stacks. So it is possible to find out what task, at what instruction (line of code) and what callstack of that task lead to the crash. ESP-IDF provides special script *espcoredump.py* to help users to retrieve and analyse core dumps. This tool provides two commands for core dumps analysis:

- `info_corefile` - prints crashed task's registers, callstack, list of available tasks in the system, memory regions and contents of memory stored in core dump (TCBs and stacks)
- `dbg_corefile` - creates core dump ELF file and runs GDB debug session with this file. User can examine memory, variables and tasks states manually. Note that since not all memory is saved in core dump only values of variables allocated on stack will be meaningful

Configuration

There are a number of core dump related configuration options which user can choose in configuration menu of the application (*make menuconfig*).

1. Core dump data destination (*Components -> ESP32-specific config -> Core dump destination*):
 - Disable core dump generation
 - Save core dump to flash
 - Print core dump to UART
2. Logging level of core dump module (*Components -> ESP32-specific config -> Core dump module logging level*). Value is a number from 0 (no output) to 5 (most verbose).
3. Delay before core dump will be printed to UART (*Components -> ESP32-specific config -> Core dump print to UART delay*). Value is in ms.

Save core dump to flash

When this option is selected core dumps are saved to special partition on flash. When using default partition table files which are provided with ESP-IDF it automatically allocates necessary space on flash, But if user wants to use its own layout file together with core dump feature it should define separate partition for core dump as it is shown below:

```
# Name, Type, SubType, Offset, Size
# Note: if you change the phy_init or app partition offset, make sure to change the_
↳offset in Kconfig.projbuild
nvs, data, nvs, 0x9000, 0x6000
phy_init, data, phy, 0xf000, 0x1000
factory, app, factory, 0x10000, 1M
coredump, data, coredump,, 64K
```

There are no special requirements for partition name. It can be chosen according to the user application needs, but partition type should be 'data' and sub-type should be 'coredump'. Also when choosing partition size note that core dump data structure introduces constant overhead of 20 bytes and per-task overhead of 12 bytes. This overhead does

not include size of TCB and stack for every task. So partition size should be at least $20 + \text{max tasks number} \times (12 + \text{TCB size} + \text{max task stack size})$ bytes.

The example of generic command to analyze core dump from flash is: `espcoredump.py -p </path/to/serial/port> info_corefile </path/to/program/elf/file>` or `espcoredump.py -p </path/to/serial/port> dbg_corefile </path/to/program/elf/file>`

Print core dump to UART

When this option is selected base64-encoded core dumps are printed on UART upon system panic. In this case user should save core dump text body to some file manually and then run the following command: `espcoredump.py info_corefile -t b64 -c </path/to/saved/base64/text> </path/to/program/elf/file>` or `espcoredump.py dbg_corefile -t b64 -c </path/to/saved/base64/text> </path/to/program/elf/file>`

Base64-encoded body of core dump will be between the following header and footer:

```
===== CORE DUMP START =====  
<body of base64-encoded core dump, save it to file on disk>  
===== CORE DUMP END =====
```

Running ‘espcoredump.py’

Generic command syntax:

`espcoredump.py [options] command [args]`

Script Options

- `-chip,-c {auto,esp32}`. Target chip type. Supported values are *auto* and *esp32*.
- `-port,-p PORT`. Serial port device.
- `-baud,-b BAUD`. Serial port baud rate used when flashing/reading.

Commands

- `info_corefile`. Retrieve core dump and print useful info.
- `dbg_corefile`. Retrieve core dump and start GDB session with it.

Command Arguments

- `-gdb,-g GDB`. Path to gdb to use for data retrieval.
- `-core,-c CORE`. Path to core dump file to use (if skipped core dump will be read from flash).
- `-core-format,-t CORE_FORMAT`. Specifies that file passed with “-c” is an ELF (“elf”), dumped raw binary (“raw”) or base64-encoded (“b64”) format.
- `-off,-o OFF`. Offset of coredump partition in flash (type “make partition_table” to see it).
- `-save-core,-s SAVE_CORE`. Save core to file. Otherwise temporary core file will be deleted. Ignored with “-c”.
- `-print-mem,-m` Print memory dump. Used only with “info_corefile”.

Partition Tables

Overview

A single ESP32's flash can contain multiple apps, as well as many different kinds of data (calibration data, filesystems, parameter storage, etc). For this reason a partition table is flashed to offset 0x8000 in the flash.

Partition table length is 0xC00 bytes (maximum 95 partition table entries). If the partition table is signed due to *secure boot*, the signature is appended after the table data.

Each entry in the partition table has a name (label), type (app, data, or something else), subtype and the offset in flash where the partition is loaded.

The simplest way to use the partition table is to *make menuconfig* and choose one of the simple predefined partition tables:

- “Single factory app, no OTA”
- “Factory app, two OTA definitions”

In both cases the factory app is flashed at offset 0x10000. If you *make partition_table* then it will print a summary of the partition table.

Built-in Partition Tables

Here is the summary printed for the “Single factory app, no OTA” configuration:

```
# Espressif ESP32 Partition Table
# Name,   Type, SubType, Offset, Size
nvs,      data, nvs,      0x9000, 0x6000
phy_init, data, phy,      0xf000, 0x1000
factory,  app,  factory, 0x10000, 1M
```

- At a 0x10000 (64KB) offset in the flash is the app labelled “factory”. The bootloader will run this app by default.
- There are also two data regions defined in the partition table for storing NVS library partition and PHY init data.

Here is the summary printed for the “Factory app, two OTA definitions” configuration:

```
# Espressif ESP32 Partition Table
# Name,   Type, SubType, Offset, Size
nvs,      data, nvs,      0x9000, 0x4000
otadata,  data, ota,      0xd000, 0x2000
phy_init, data, phy,      0xf000, 0x1000
factory,  0,    0,          0x10000, 1M
ota_0,    0,    ota_0,     ,        1M
ota_1,    0,    ota_1,     ,        1M
```

- There are now three app partition definitions.
- The type of all three are set as “app”, but the subtype varies between the factory app at 0x10000 and the next two “OTA” apps.
- There is also a new “ota data” slot, which holds the data for OTA updates. The bootloader consults this data in order to know which app to execute. If “ota data” is empty, it will execute the factory app.

Creating Custom Tables

If you choose “Custom partition table CSV” in menuconfig then you can also enter the name of a CSV file (in the project directory) to use for your partition table. The CSV file can describe any number of definitions for the table you need.

The CSV format is the same format as printed in the summaries shown above. However, not all fields are required in the CSV. For example, here is the “input” CSV for the OTA partition table:

```
# Name, Type, SubType, Offset, Size
nvs, data, nvs, 0x9000, 0x4000
otadata, data, ota, 0xd000, 0x2000
phy_init, data, phy, 0xf000, 0x1000
factory, app, factory, 0x10000, 1M
ota_0, app, ota_0, , 1M
ota_1, app, ota_1, , 1M
```

- Whitespace between fields is ignored, and so is any line starting with # (comments).
- Each non-comment line in the CSV file is a partition definition.
- Only the offset for the first partition is supplied. The `gen_esp32part.py` tool fills in each remaining offset to start after the preceding partition.

Name field

Name field can be any meaningful name. It is not significant to the ESP32. Names longer than 16 characters will be truncated.

Type field

Partition type field can be specified as `app` (0) or `data` (1). Or it can be a number 0-254 (or as hex 0x00-0xFE). Types 0x00-0x3F are reserved for esp-idf core functions.

If your application needs to store data, please add a custom partition type in the range 0x40-0xFE.

The bootloader ignores any partition types other than `app` (0) & `data` (1).

Subtype

The 8-bit subtype field is specific to a given partition type.

esp-idf currently only specifies the meaning of the subtype field for “app” and “data” partition types.

App Subtypes

When type is “app”, the subtype field can be specified as `factory` (0), `ota_0` (0x10) ... `ota_15` (0x1F) or `test` (0x20).

- `factory` (0) is the default app partition. The bootloader will execute the factory app unless there it sees a partition of type `data/ota`, in which case it reads this partition to determine which OTA image to boot.
 - OTA never updates the factory partition.
 - If you want to conserve flash usage in an OTA project, you can remove the factory partition and use `ota_0` instead.

- ota_0 (0x10) ... ota_15 (0x1F) are the OTA app slots. Refer to the *OTA documentation* for more details, which then use the OTA data partition to configure which app slot the bootloader should boot. If using OTA, an application should have at least two OTA application slots (ota_0 & ota_1). Refer to the *OTA documentation* for more details.
- test (0x2) is a reserved subtype for factory test procedures. It is not currently supported by the esp-idf bootloader.

Data Subtypes

When type is “data”, the subtype field can be specified as ota (0), phy (1), nvs (2).

- ota (0) is the *OTA data partition* which stores information about the currently selected OTA application. This partition should be 0x2000 bytes in size. Refer to the *OTA documentation* for more details.
- phy (1) is for storing PHY initialisation data. This allows PHY to be configured per-device, instead of in firmware.
 - In the default configuration, the phy partition is not used and PHY initialisation data is compiled into the app itself. As such, this partition can be removed from the partition table to save space.
 - To load PHY data from this partition, run `make menuconfig` and enable “Component Config” -> “PHY” -> “Use a partition to store PHY init data”. You will also need to flash your devices with phy init data as the esp-idf build system does not do this automatically.
- nvs (2) is for the *Non-Volatile Storage (NVS) API*.
 - NVS is used to store per-device PHY calibration data (different to initialisation data).
 - NVS is used to store WiFi data if the `esp_wifi_set_storage(WIFI_STORAGE_FLASH)` initialisation function is used.
 - The NVS API can also be used for other application data.
 - It is strongly recommended that you include an NVS partition of at least 0x3000 bytes in your project.
 - If using NVS API to store a lot of data, increase the NVS partition size from the default 0x6000 bytes.

Other data subtypes are reserved for future esp-idf uses.

Offset & Size

Only the first offset field is required (we recommend using 0x10000). Partitions with blank offsets will start after the previous partition.

App partitions have to be at offsets aligned to 0x10000 (64K). If you leave the offset field blank, the tool will automatically align the partition. If you specify an unaligned offset for an app partition, the tool will return an error.

Sizes and offsets can be specified as decimal numbers, hex numbers with the prefix 0x, or size multipliers K or M (1024 and 1024*1024 bytes).

Generating Binary Partition Table

The partition table which is flashed to the ESP32 is in a binary format, not CSV. The tool `partition_table/gen_esp32part.py` is used to convert between CSV and binary formats.

If you configure the partition table CSV name in `make menuconfig` and then `make partition_table`, this conversion is done as part of the build process.

To convert CSV to Binary manually:

```
python gen_esp32part.py --verify input_partitions.csv binary_partitions.bin
```

To convert binary format back to CSV:

```
python gen_esp32part.py --verify binary_partitions.bin input_partitions.csv
```

To display the contents of a binary partition table on stdout (this is how the summaries displayed when running *make partition_table* are generated:

```
python gen_esp32part.py binary_partitions.bin
```

`gen_esp32part.py` takes one optional argument, `--verify`, which will also verify the partition table during conversion (checking for overlapping partitions, unaligned partitions, etc.)

Flashing the partition table

- `make partition_table-flash`: will flash the partition table with `esptool.py`.
- `make flash`: Will flash everything including the partition table.

A manual flashing command is also printed as part of `make partition_table`.

Note that updating the partition table doesn't erase data that may have been stored according to the old partition table. You can use `make erase_flash` (or `esptool.py erase_flash`) to erase the entire flash contents.

Flash Encryption

Flash Encryption is a feature for encrypting the contents of the ESP32's attached SPI flash. When flash encryption is enabled, physical readout of the SPI flash is not sufficient to recover most flash contents.

Flash Encryption is separate from the *Secure Boot* feature, and you can use flash encryption without enabling secure boot. However we recommend using both features together for a secure environment.

IMPORTANT: Enabling flash encryption limits your options for further updates of your ESP32. Make sure to read this document (including [:ref:'flash-encryption-limitations'](#)) and understand the implications of enabling flash encryption.

Background

- The contents of the flash are encrypted using AES with a 256 bit key. The flash encryption key is stored in efuse internal to the chip, and is (by default) protected from software access.
- Flash access is transparent via the flash cache mapping feature of ESP32 - any flash regions which are mapped to the address space will be transparently decrypted when read.
- Encryption is applied by flashing the ESP32 with plaintext data, and (if encryption is enabled) the bootloader encrypts the data in place on first boot.
- Not all of the flash is encrypted. The following kinds of flash data are encrypted:
 - Bootloader
 - Secure boot bootloader digest (if secure boot is enabled)
 - Partition Table
 - All “app” type partitions

- Any partition marked with the “encrypt” flag in the partition table

It may be desirable for some data partitions to remain unencrypted for ease of access, or to use flash-friendly update algorithms that are ineffective if the data is encrypted. “NVS” partitions for non-volatile storage cannot be encrypted.

- The flash encryption key is stored in efuse key block 1, internal to the ESP32 chip. By default, this key is read- and write-protected so software cannot access it or change it.
- The *flash encryption algorithm* is AES-256, where the key is “tweaked” with the offset address of each 32 byte block of flash. This means every 32 byte block (two consecutive 16 byte AES blocks) is encrypted with a unique key derived from the flash encryption key.
- Although software running on the chip can transparently decrypt flash contents, by default it is made impossible for the UART bootloader to decrypt (or encrypt) data when flash encryption is enabled.
- If flash encryption may be enabled, the programmer must take certain precautions when writing code that *uses encrypted flash*.

Flash Encryption Initialisation

This is the default (and recommended) flash encryption initialisation process. It is possible to customise this process for development or other purposes, see *Flash Encryption Advanced Features* for details.

IMPORTANT: Once flash encryption is enabled on first boot, the hardware allows a maximum of 3 subsequent flash updates via serial re-flashing. A special procedure (documented in *Serial Flashing*) must be followed to perform these updates.

- If secure boot is enabled, no physical re-flashes are possible.
- OTA updates can be used to update flash content without counting towards this limit.
- When enabling flash encryption in development, use a *pregenerated flash encryption key* to allow physically re-flashing an unlimited number of times with pre-encrypted data.**

Process to enable flash encryption:

- The bootloader must be compiled with flash encryption support enabled. In `make menuconfig`, navigate to “Security Features” and select “Yes” for “Enable flash encryption on boot”.
- If enabling Secure Boot at the same time, it is best to simultaneously select those options now. Read the *Secure Boot* documentation first.
- Build and flash the bootloader, partition table and factory app image as normal. These partitions are initially written to the flash unencrypted.
- On first boot, the bootloader sees `FLASH_CRYPT_CNT` efuse is set to 0 (factory default) so it generates a flash encryption key using the hardware random number generator. This key is stored in efuse. The key is read and write protected against further software access.
- All of the encrypted partitions are then encrypted in-place by the bootloader. Encrypting in-place can take some time (up to a minute for large partitions.)

IMPORTANT: Do not interrupt power to the ESP32 while the first boot encryption pass is running. If power is interrupted, the flash contents will be corrupted and require flashing with unencrypted data again. A reflash like this will not count towards the flashing limit.

- Once flashing is complete. efuses are blown (by default) to disable encrypted flash access while the UART bootloader is running. See *Enabling UART Bootloader Encryption/Decryption* for advanced details.
- The `FLASH_CRYPT_CONFIG` efuse is also burned to the maximum value (0xF) to maximise the number of key bits which are tweaked in the flash algorithm. See *Setting FLASH_CRYPT_CONFIG* for advanced details.

- Finally, the `FLASH_CRYPT_CNT` efuse is burned with the initial value 1. It is this efuse which activates the transparent flash encryption layer, and limits the number of subsequent reflashes. See the *Updating Encrypted Flash* section for details about `FLASH_CRYPT_CNT` efuse.
- The bootloader resets itself to reboot from the newly encrypted flash.

Using Encrypted Flash

ESP32 app code can check if flash encryption is currently enabled by calling `esp_flash_encryption_enabled()`.

Once flash encryption is enabled, some care needs to be taken when accessing flash contents from code.

Scope of Flash Encryption

Whenever the `FLASH_CRYPT_CNT` efuse is set to a value with an odd number of bits set, all flash content which is accessed via the MMU's flash cache is transparently decrypted. This includes:

- Executable application code in flash (IROM).
- All read-only data stored in flash (DROM).
- Any data accessed via `esp_spi_flash_mmap()`.
- The software bootloader image when it is read by the ROM bootloader.

IMPORTANT: The MMU flash cache unconditionally decrypts all data. Data which is stored unencrypted in the flash will be “transparently decrypted” via the flash cache and appear to software like random garbage.

Reading Encrypted Flash

To read data without using a flash cache MMU mapping, we recommend using the partition read function `esp_partition_read()`. When using this function, data will only be decrypted when it is read from an encrypted partition. Other partitions will be read unencrypted. In this way, software can access encrypted and non-encrypted flash in the same way.

Data which is read via other SPI read APIs are not decrypted:

- Data read via `esp_spi_flash_read()` is not decrypted
- Data read via ROM function `SPIRead()` is not decrypted (this function is not supported in esp-idf apps).
- Data stored using the Non-Volatile Storage (NVS) API is always stored and read decrypted.

Writing Encrypted Flash

Where possible, we recommend using the partition write function `esp_partition_write`. When using this function, data will only be encrypted when writing to encrypted partitions. Data will be written to other partitions unencrypted. In this way, software can access encrypted and non-encrypted flash in the same way.

The `esp_spi_flash_write` function will write data when the `write_encrypted` parameter is set to true. Otherwise, data will be written unencrypted.

The ROM function `esp_rom_spiflash_write_encrypted` will write encrypted data to flash, the ROM function `SPIWrite` will write unencrypted to flash. (these function are not supported in esp-idf apps).

The minimum write size for unencrypted data is 4 bytes (and the alignment is 4 bytes). Because data is encrypted in blocks, the minimum write size for encrypted data is 16 bytes (and the alignment is 16 bytes.)

Updating Encrypted Flash

OTA Updates

OTA updates to encrypted partitions will automatically write encrypted, as long as the `esp_partition_write` function is used.

Serial Flashing

Provided secure boot is not used, the `FLASH_CRYPT_CNT` *efuse* allows the flash to be updated with new plaintext data via serial flashing (or other physical methods), up to 3 additional times.

The process involves flashing plaintext data, and then bumping the value of `FLASH_CRYPT_CNT` *efuse* which causes the bootloader to re-encrypt this data.

Limited Updates

Only 4 serial flash update cycles of this kind are possible, including the initial encrypted flash.

After the fourth time encryption is disabled, `FLASH_CRYPT_CNT` *efuse* has the maximum value `0xFF` and encryption is permanently disabled.

Using *OTA Updates* or *Reflashing via Pregenerated Flash Encryption Key* allows you to exceed this limit.

Cautions With Serial Flashing

- When reflashing via serial, reflash every partition that was initially written with plaintext data (including bootloader). It is possible to skip app partitions which are not the “currently selected” OTA partition (these will not be re-encrypted unless a plaintext app image is found there.) However any partition marked with the “encrypt” flag will be unconditionally re-encrypted, meaning that any already encrypted data will be encrypted twice and corrupted.
 - Using `make flash` should flash all partitions which need to be flashed.
- If secure boot is enabled, you can’t reflash via serial at all unless you used the “Reflashable” option for Secure Boot, pre-generated a key and burned it to the ESP32 (refer to *Secure Boot* docs.). In this case you can re-flash a plaintext secure boot digest and bootloader image at offset `0x0`. It is necessary to re-flash this digest before flashing other plaintext data.

Serial Re-Flashing Procedure

- Build the application as usual.
- Flash the device with plaintext data as usual (`make flash` or `esptool.py` commands.) Flash all previously encrypted partitions, including the bootloader (see previous section).
- At this point, the device will fail to boot (message is `flash read err, 1000`) because it expects to see an encrypted bootloader, but the bootloader is plaintext.
- Burn the `FLASH_CRYPT_CNT` *efuse* by running the command `espefuse.py burn_efuse FLASH_CRYPT_CNT`. `espefuse.py` will automatically increment the bit count by 1, which disables encryption.
- Reset the device and it will re-encrypt plaintext partitions, then burn the `FLASH_CRYPT_CNT` *efuse* again to re-enable encryption.

Disabling Serial Updates

To prevent further plaintext updates via serial, use `espefuse.py` to write protect the `FLASH_CRYPT_CNT` efuse after flash encryption has been enabled (ie after first boot is complete):

```
espefuse.py --port PORT write_protect_efuse FLASH_CRYPT_CNT
```

This prevents any further modifications to disable or re-enable flash encryption.

Reflashing via Pregenerated Flash Encryption Key

It is possible to pregenerate a flash encryption key on the host computer and burn it into the ESP32's efuse key block. This allows data to be pre-encrypted on the host and flashed to the ESP32 without needing a plaintext flash update.

This is useful for development, because it removes the 4 time reflashing limit. It also allows reflashing with secure boot enabled, because the bootloader doesn't need to be reflashed each time.

IMPORTANT This method is intended to assist with development only, not for production devices. If pre-generating flash encryption for production, ensure the keys are generated from a high quality random number source and do not share the same flash encryption key across multiple devices.

Pregenerating a Flash Encryption Key

Flash encryption keys are 32 bytes of random data. You can generate a random key with `espssecure.py`:

```
espssecure.py generate_flash_encryption_key my_flash_encryption_key.bin
```

(The randomness of this data is only as good as the OS and it's Python installation's random data source.)

Alternatively, if you're using `secure boot` and have a secure boot signing key then you can generate a deterministic SHA-256 digest of the secure boot private signing key and use this as the flash encryption key:

```
espssecure.py digest_private-key --keyfile secure_boot_signing_key.pem my_flash_
→encryption_key.bin
```

(The same 32 bytes is used as the secure boot digest key if you enable `reflashable mode` for secure boot.)

Generating the flash encryption key from the secure boot signing key in this way means that you only need to store one key file. However this method is **not at all suitable** for production devices.

Burning Flash Encryption Key

Once you have generated a flash encryption key, you need to burn it to the ESP32's efuse key block. **This must be done before first encrypted boot**, otherwise the ESP32 will generate a random key that software can't access or modify.

To burn a key to the device (one time only):

```
espefuse.py --port PORT burn_key flash_encryption my_flash_encryption_key.bin
```

First Flash with pregenerated key

After flashing the key, follow the same steps as for default `Flash Encryption Initialisation` and flash a plaintext image for the first boot. The bootloader will enable flash encryption using the pre-burned key and encrypt all partitions.

Reflashing with pregenerated key

After encryption is enabled on first boot, reflashing an encrypted image requires an additional manual step. This is where we pre-encrypt the data that we wish to update in flash.

Suppose that this is the normal command used to flash plaintext data:

```
esptool.py --port /dev/ttyUSB0 --baud 115200 write_flash 0x10000 build/my-app.bin
```

Binary app image `build/my-app.bin` is written to offset `0x10000`. This file name and offset need to be used to encrypt the data, as follows:

```
espsecure.py encrypt_flash_data --keyfile my_flash_encryption_key.bin --address_
↪0x10000 -o build/my-app-encrypted.bin build/my-app.bin
```

This example command will encrypts `my-app.bin` using the supplied key, and produce an encrypted file `my-app-encrypted.bin`. Be sure that the address argument matches the address where you plan to flash the binary.

Then, flash the encrypted binary with `esptool.py`:

```
esptool.py --port /dev/ttyUSB0 --baud 115200 write_flash 0x10000 build/my-app-
↪encrypted.bin
```

No further steps or efuse manipulation is necessary, because the data is already encrypted when we flash it.

Disabling Flash Encryption

If you've accidentally enabled flash encryption for some reason, the next flash of plaintext data will soft-brick the ESP32 (the device will reboot continuously, printing the error `flash read err, 1000`).

You can disable flash encryption again by writing `FLASH_CRYPT_CNT` efuse:

- First, run `make menuconfig` and uncheck “Enable flash encryption boot” under “Security Features”.
- Exit `menuconfig` and save the new configuration.
- Run `make menuconfig` again and double-check you really disabled this option! *If this option is left enabled, the bootloader will immediately re-enable encryption when it boots.*
- Run `make flash` to build and flash a new bootloader and app, without flash encryption enabled.
- **Run `espefuse.py` (in `components/esptool_py/esptool`) to disable the `FLASH_CRYPT_CNT` efuse)::**
`espefuse.py burn_efuse FLASH_CRYPT_CNT`

Reset the ESP32 and flash encryption should be disabled, the bootloader will boot as normal.

Limitations of Flash Encryption

Flash Encryption prevents plaintext readout of the encrypted flash, to protect firmware against unauthorised readout and modification. It is important to understand the limitations of the flash encryption system:

- Flash encryption is only as strong as the key. For this reason, we recommend keys are generated on the device during first boot (default behaviour). If generating keys off-device (see [Reflashing via Pregenerated Flash Encryption Key](#)), ensure proper procedure is followed.
- Not all data is stored encrypted. If storing data on flash, check if the method you are using (library, API, etc.) supports flash encryption.

- Flash encryption does not prevent an attacker from understanding the high-level layout of the flash. This is because the same AES key is used for every pair of adjacent 16 byte AES blocks. When these adjacent 16 byte blocks contain identical content (such as empty or padding areas), these blocks will encrypt to produce matching pairs of encrypted blocks. This may allow an attacker to make high-level comparisons between encrypted devices (ie to tell if two devices are probably running the same firmware version).
- For the same reason, an attacker can always tell when a pair of adjacent 16 byte blocks (32 byte aligned) contain identical content. Keep this in mind if storing sensitive data on the flash, design your flash storage so this doesn't happen (using a counter byte or some other non-identical value every 16 bytes is sufficient).
- Flash encryption alone may not prevent an attacker from modifying the firmware of the device. To prevent unauthorised firmware from running on the device, use flash encryption in combination with *Secure Boot*.

Flash Encryption Advanced Features

The following information is useful for advanced use of flash encryption:

Encrypted Partition Flag

Some partitions are encrypted by default. Otherwise, it is possible to mark any partition as requiring encryption:

In the *partition table* description CSV files, there is a field for flags.

Usually left blank, if you write “encrypted” in this field then the partition will be marked as encrypted in the partition table, and data written here will be treated as encrypted (same as an app partition):

```
# Name, Type, SubType, Offset, Size, Flags
nvs, data, nvs, 0x9000, 0x6000
phy_init, data, phy, 0xf000, 0x1000
factory, app, factory, 0x10000, 1M
secret_data, 0x40, 0x01, 0x20000, 256K, encrypted
```

- None of the default partition tables include any encrypted data partitions.
- It is not necessary to mark “app” partitions as encrypted, they are always treated as encrypted.
- The “encrypted” flag does nothing if flash encryption is not enabled.
- It is possible to mark the optional `phy` partition with `phy_init` data as encrypted, if you wish to protect this data from physical access readout or modification.
- It is not possible to mark the `nvs` partition as encrypted.

Enabling UART Bootloader Encryption/Decryption

By default, on first boot the flash encryption process will burn efuses `DISABLE_DL_ENCRYPT`, `DISABLE_DL_DECRYPT` and `DISABLE_DL_CACHE`:

- `DISABLE_DL_ENCRYPT` disables the flash encryption operations when running in UART bootloader boot mode.
- `DISABLE_DL_DECRYPT` disables transparent flash decryption when running in UART bootloader mode, even if `FLASH_CRYPT_CNT` *efuse* is set to enable it in normal operation.
- `DISABLE_DL_CACHE` disables the entire MMU flash cache when running in UART bootloader mode.

It is possible to burn only some of these efuses, and write-protect the rest (with unset value 0) before the first boot, in order to preserve them. For example:

```
espefuse.py --port PORT burn_efuse DISABLE_DL_DECRYPT
espefuse.py --port PORT write_protect_efuse DISABLE_DL_ENCRYPT
```

(Note that all 3 of these efuses are disabled via one write protect bit, so write protecting one will write protect all of them. For this reason, it's necessary to set any bits before write-protecting.)

IMPORTANT: Write protecting these efuses to keep them unset is not currently very useful, as `esptool.py` does not support writing or reading encrypted flash.

IMPORTANT: If `DISABLE_DL_DECRYPT` is left unset (0) this effectively makes flash encryption useless, as an attacker with physical access can use UART bootloader mode (with custom stub code) to read out the flash contents.

Setting FLASH_CRYPT_CONFIG

The `FLASH_CRYPT_CONFIG` efuse determines the number of bits in the flash encryption key which are “tweaked” with the block offset. See *Flash Encryption Algorithm* for details.

First boot of the bootloader always sets this value to the maximum `0xF`.

It is possible to write these efuse manually, and write protect it before first boot in order to select different tweak values. This is not recommended.

It is strongly recommended to never write protect `FLASH_CRYPT_CONFIG` when it the value is zero. If this efuse is set to zero, no bits in the flash encryption key are tweaked and the flash encryption algorithm is equivalent to AES ECB mode.

Technical Details

The following sections provide some reference information about the operation of flash encryption.

FLASH_CRYPT_CNT efuse

`FLASH_CRYPT_CNT` is an 8-bit efuse field which controls flash encryption. Flash encryption enables or disables based on the number of bits in this efuse which are set to “1”:

- When an even number of bits (0,2,4,6,8) are set: Flash encryption is disabled, any encrypted data cannot be decrypted.
 - If the bootloader was built with “Enable flash encryption on boot” then it will see this situation and immediately re-encrypt the flash wherever it finds unencrypted data. Once done, it sets another bit in the efuse to ‘1’ meaning an odd number of bits are now set.
 1. On first plaintext boot, bit count has brand new value 0 and bootloader changes it to bit count 1 (value `0x01`) following encryption.
 2. After next plaintext flash update, bit count is manually updated to 2 (value `0x03`). After re-encrypting the bootloader changes efuse bit count to 3 (value `0x07`).
 3. After next plaintext flash, bit count is manually updated to 4 (value `0x0F`). After re-encrypting the bootloader changes efuse bit count to 5 (value `0x1F`).
 4. After final plaintext flash, bit count is manually updated to 6 (value `0x3F`). After re-encrypting the bootloader changes efuse bit count to 7 (value `0x7F`).
- When an odd number of bits (1,3,5,7) are set: Transparent reading of encrypted flash is enabled.

- After all 8 bits are set (efuse value 0xFF): Transparent reading of encrypted flash is disabled, any encrypted data is permanently inaccessible. Bootloader will normally detect this condition and halt. To avoid use of this state to load unauthorised code, secure boot must be used or `FLASH_CRYPT_CNT` efuse must be write-protected.

Flash Encryption Algorithm

- AES-256 operates on 16 byte blocks of data. The flash encryption engine encrypts and decrypts data in 32 byte blocks, two AES blocks in series.
- AES algorithm is used inverted in flash encryption, so the flash encryption “encrypt” operation is AES decrypt and the “decrypt” operation is AES encrypt. This is for performance reasons and does not alter the effectiveness of the algorithm.
- The main flash encryption key is stored in efuse (BLOCK1) and by default is protected from further writes or software readout.
- Each 32 byte block (two adjacent 16 byte AES blocks) is encrypted with a unique key. The key is derived from the main flash encryption key in efuse, XORed with the offset of this block in the flash (a “key tweak”).
- The specific tweak depends on the setting of `FLASH_CRYPT_CONFIG` efuse. This is a 4 bit efuse, where each bit enables XORing of a particular range of the key bits:
 - Bit 1, bits 0-66 of the key are XORed.
 - Bit 2, bits 67-131 of the key are XORed.
 - Bit 3, bits 132-194 of the key are XORed.
 - Bit 4, bits 195-256 of the key are XORed.

It is recommended that `FLASH_CRYPT_CONFIG` is always left to set the default value `0xF`, so that all key bits are XORed with the block offset. See [Setting FLASH_CRYPT_CONFIG](#) for details.

- The high 19 bits of the block offset (bit 5 to bit 23) are XORed with the main flash encryption key. This range is chosen for two reasons: the maximum flash size is 16MB (24 bits), and each block is 32 bytes so the least significant 5 bits are always zero.
- There is a particular mapping from each of the 19 block offset bits to the 256 bits of the flash encryption key, to determine which bit is XORed with which. See the variable `_FLASH_ENCRYPTION_TWEAK_PATTERN` in the `espsecure.py` source code for the complete mapping.
- To see the full flash encryption algorithm implemented in Python, refer to the `_flash_encryption_operation()` function in the `espsecure.py` source code.

Secure Boot

Secure Boot is a feature for ensuring only your code can run on the chip. Data loaded from flash is verified on each reset.

Secure Boot is separate from the [Flash Encryption](#) feature, and you can use secure boot without encrypting the flash contents. However we recommend using both features together for a secure environment.

Important: Enabling secure boot limits your options for further updates of your ESP32. Make sure to read this document thoroughly and understand the implications of enabling secure boot.

Background

- Most data is stored in flash. Flash access does not need to be protected from physical access in order for secure boot to function, because critical data is stored (non-software-accessible) in Efuses internal to the chip.
- Efuses are used to store the secure bootloader key (in efuse BLOCK2), and also a single Efuse bit (ABS_DONE_0) is burned (written to 1) to permanently enable secure boot on the chip. For more details about efuse, see Chapter 11 “eFuse Controller” in the Technical Reference Manual.
- To understand the secure boot process, first familiarise yourself with the standard *ESP-IDF boot process*.
- Both stages of the boot process (initial software bootloader load, and subsequent partition & app loading) are verified by the secure boot process, in a “chain of trust” relationship.

Secure Boot Process Overview

This is a high level overview of the secure boot process. Step by step instructions are supplied under *How To Enable Secure Boot*. Further in-depth details are supplied under *Technical Details*:

1. The options to enable secure boot are provided in the `make menuconfig` hierarchy, under “Secure Boot Configuration”.
2. Secure Boot defaults to signing images and partition table data during the build process. The “Secure boot private signing key” config item is a file path to a ECDSA public/private key pair in a PEM format file.
3. The software bootloader image is built by `esp-idf` with secure boot support enabled and the public key (signature verification) portion of the secure boot signing key compiled in. This software bootloader image is flashed at offset 0x1000.
4. On first boot, the software bootloader follows the following process to enable secure boot:
 - Hardware secure boot support generates a device secure bootloader key (generated via hardware RNG, then stored read/write protected in efuse), and a secure digest. The digest is derived from the key, an IV, and the bootloader image contents.
 - The secure digest is flashed at offset 0x0 in the flash.
 - Depending on Secure Boot Configuration, efuses are burned to disable JTAG and the ROM BASIC interpreter (it is strongly recommended these options are turned on.)
 - Bootloader permanently enables secure boot by burning the ABS_DONE_0 efuse. The software bootloader then becomes protected (the chip will only boot a bootloader image if the digest matches.)
5. On subsequent boots the ROM bootloader sees that the secure boot efuse is burned, reads the saved digest at 0x0 and uses hardware secure boot support to compare it with a newly calculated digest. If the digest does not match then booting will not continue. The digest and comparison are performed entirely by hardware, and the calculated digest is not readable by software. For technical details see *Secure Boot Hardware Support*.
6. When running in secure boot mode, the software bootloader uses the secure boot signing key (the public key of which is embedded in the bootloader itself, and therefore validated as part of the bootloader) to verify the signature appended to all subsequent partition tables and app images before they are booted.

Keys

The following keys are used by the secure boot process:

- “secure bootloader key” is a 256-bit AES key that is stored in Efuse block 2. The bootloader can generate this key itself from the internal hardware random number generator, the user does not need to supply it (it is

optionally possible to supply this key, see *Re-Flashable Software Bootloader*). The Efuse holding this key is read & write protected (preventing software access) before secure boot is enabled.

- “secure boot signing key” is a standard ECDSA public/private key pair (see *Image Signing Algorithm*) in PEM format.
 - The public key from this key pair (for signature verification but not signature creation) is compiled into the software bootloader and used to verify the second stage of booting (partition table, app image) before booting continues. The public key can be freely distributed, it does not need to be kept secret.
 - The private key from this key pair *must be securely kept private*, as anyone who has this key can authenticate to any bootloader that is configured with secure boot and the matching public key.

How To Enable Secure Boot

1. Run `make menuconfig`, navigate to “Secure Boot Configuration” and select the option “One-time Flash”. (To understand the alternative “Reflashable” choice, see *Re-Flashable Software Bootloader*.)
2. Select a name for the secure boot signing key. This option will appear after secure boot is enabled. The file can be anywhere on your system. A relative path will be evaluated from the project directory. The file does not need to exist yet.
3. Set other menuconfig options (as desired). Pay particular attention to the “Bootloader Config” options, as you can only flash the bootloader once. Then exit menuconfig and save your configuration
4. The first time you run `make`, if the signing key is not found then an error message will be printed with a command to generate a signing key via `espsecure.py generate_signing_key`.

IMPORTANT A signing key generated this way will use the best random number source available to the OS and its Python installation (`/dev/urandom` on OSX/Linux and `CryptGenRandom()` on Windows). If this random number source is weak, then the private key will be weak.

IMPORTANT For production environments, we recommend generating the keypair using openssl or another industry standard encryption program. See *Generating Secure Boot Signing Key* for more details.

5. Run `make bootloader` to build a secure boot enabled bootloader. The output of `make` will include a prompt for a flashing command, using `esptool.py write_flash`.
6. When you’re ready to flash the bootloader, run the specified command (you have to enter it yourself, this step is not performed by `make`) and then wait for flashing to complete. **Remember this is a one time flash, you can’t change the bootloader after this!**
7. Run `make flash` to build and flash the partition table and the just-built app image. The app image will be signed using the signing key you generated in step 4.

NOTE: `make flash` doesn’t flash the bootloader if secure boot is enabled.

8. Reset the ESP32 and it will boot the software bootloader you flashed. The software bootloader will enable secure boot on the chip, and then it verifies the app image signature and boots the app. You should watch the serial console output from the ESP32 to verify that secure boot is enabled and no errors have occurred due to the build configuration.

NOTE Secure boot won’t be enabled until after a valid partition table and app image have been flashed. This is to prevent accidents before the system is fully configured.

9. On subsequent boots, the secure boot hardware will verify the software bootloader has not changed (using the secure bootloader key) and then the software bootloader will verify the signed partition table and app image (using the public key portion of the secure boot signing key).

Re-Flashable Software Bootloader

Configuration “Secure Boot: One-Time Flash” is the recommended configuration for production devices. In this mode, each device gets a unique key that is never stored outside the device.

However, an alternative mode “Secure Boot: Reflashable” is also available. This mode allows you to supply a 256-bit key file that is used for the secure bootloader key. As you have the key file, you can generate new bootloader images and secure boot digests for them.

In the esp-idf build process, this 256-bit key file is derived from the app signing key generated during the `generate_signing_key` step above. The private key’s SHA-256 digest is used as the 256-bit secure bootloader key. This is a convenience so you only need to generate/protect a single private key.

NOTE: Although it’s possible, we strongly recommend not generating one secure boot key and flashing it to every device in a production environment. The “One-Time Flash” option is recommended for production environments.

To enable a reflashable bootloader:

1. In the `make menuconfig` step, select “Bootloader Config” -> “Secure Boot” -> “Reflashable”.
2. Follow the steps shown above to choose a signing key file, and generate the key file.
3. Run `make bootloader`. A 256-bit key file will be created, derived from the private key that is used for signing. Two sets of flashing steps will be printed - the first set of steps includes an `espefuse.py burn_key` command which is used to write the bootloader key to efuse. (Flashing this key is a one-time-only process.) The second set of steps can be used to reflash the bootloader with a pre-calculated digest (generated during the build process).
4. Resume from *Step 6 of the one-time flashing process*, to flash the bootloader and enable secure boot. Watch the console log output closely to ensure there were no errors in the secure boot configuration.

Generating Secure Boot Signing Key

The build system will prompt you with a command to generate a new signing key via `espsecure.py generate_signing_key`. This uses the `python-ecdsa` library, which in turn uses Python’s `os.urandom()` as a random number source.

The strength of the signing key is proportional to (a) the random number source of the system, and (b) the correctness of the algorithm used. For production devices, we recommend generating signing keys from a system with a quality entropy source, and using the best available EC key generation utilities.

For example, to generate a signing key using the `openssl` command line:

```
` openssl ecparam -name prime256v1 -genkey -noout -out my_secure_boot_signing_key.pem `
```

Remember that the strength of the secure boot system depends on keeping the signing key private.

Remote Signing of Images

For production builds, it can be good practice to use a remote signing server rather than have the signing key on the build machine (which is the default esp-idf secure boot configuration). The `espsecure.py` command line program can be used to sign app images & partition table data for secure boot, on a remote system.

To use remote signing, disable the option “Sign binaries during build”. The private signing key does not need to be present on the build system. However, the public (signature verification) key is required because it is compiled into the bootloader (and can be used to verify image signatures during OTA updates).

To extract the public key from the private key:

```
espsecure.py extract_public_key --keyfile PRIVATE_SIGNING_KEY PUBLIC_VERIFICATION_KEY
```

The path to the public signature verification key needs to be specified in the menuconfig under “Secure boot public signature verification key” in order to build the secure bootloader.

After the app image and partition table are built, the build system will print signing steps using espsecure.py:

```
espsecure.py sign_data --keyfile PRIVATE_SIGNING_KEY BINARY_FILE
```

The above command appends the image signature to the existing binary. You can use the `-output` argument to write the signed binary to a separate file:

```
espsecure.py sign_data --keyfile PRIVATE_SIGNING_KEY --output SIGNED_BINARY_FILE_
↪BINARY_FILE
```

Secure Boot Best Practices

- Generate the signing key on a system with a quality source of entropy.
- Keep the signing key private at all times. A leak of this key will compromise the secure boot system.
- Do not allow any third party to observe any aspects of the key generation or signing process using espsecure.py. Both processes are vulnerable to timing or other side-channel attacks.
- Enable all secure boot options in the Secure Boot Configuration. These include flash encryption, disabling of JTAG, disabling BASIC ROM interpreter, and disabling the UART bootloader encrypted flash access.
- Use secure boot in combination with *flash encryption* to prevent local readout of the flash contents.

Technical Details

The following sections contain low-level reference descriptions of various secure boot elements:

Secure Boot Hardware Support

The first stage of secure boot verification (checking the software bootloader) is done via hardware. The ESP32’s Secure Boot support hardware can perform three basic operations:

1. Generate a random sequence of bytes from a hardware random number generator.
2. Generate a digest from data (usually the bootloader image from flash) using a key stored in Efuse block 2. The key in Efuse can (& should) be read/write protected, which prevents software access. For full details of this algorithm see *Secure Bootloader Digest Algorithm*. The digest can only be read back by software if Efuse ABS_DONE_0 is *not* burned (ie still 0).
3. Generate a digest from data (usually the bootloader image from flash) using the same algorithm as step 2 and compare it to a pre-calculated digest supplied in a buffer (usually read from flash offset 0x0). The hardware returns a true/false comparison without making the digest available to software. This function is available even when Efuse ABS_DONE_0 is burned.

Secure Bootloader Digest Algorithm

Starting with an “image” of binary data as input, this algorithm generates a digest as output. The digest is sometimes referred to as an “abstract” in hardware documentation.

For a Python version of this algorithm, see the `espsecure.py` tool in the `components/esptool_py` directory (specifically, the `digest_secure_bootloader` command).

Items marked with (^) are to fulfill hardware restrictions, as opposed to cryptographic restrictions.

1. Prefix the image with a 128 byte randomly generated IV.
2. If the image length is not modulo 128, pad the image to a 128 byte boundary with 0xFF. (^)
3. For each 16 byte plaintext block of the input image:
 - Reverse the byte order of the plaintext input block (^) -
 - Apply AES256 in ECB mode to the plaintext block. - Reverse the byte order of the ciphertext output block. (^)
 - Append to the overall ciphertext output.
4. Byte-swap each 4 byte word of the ciphertext (^)
5. Calculate SHA-512 of the ciphertext.

Output digest is 192 bytes of data: The 128 byte IV, followed by the 64 byte SHA-512 digest.

Image Signing Algorithm

Deterministic ECDSA as specified by [RFC 6979](#).

- Curve is NIST256p (openssl calls this curve “prime256v1”, it is also sometimes called secp256r1).
- Hash function is SHA256.
- Key format used for storage is PEM.
 - In the bootloader, the public key (for signature verification) is flashed as 64 raw bytes.
- Image signature is 68 bytes - a 4 byte version word (currently zero), followed by a 64 bytes of signature data. These 68 bytes are appended to an app image or partition table data.

Manual Commands

Secure boot is integrated into the `esp-idf` build system, so `make` will automatically sign an app image if secure boot is enabled. `make bootloader` will produce a bootloader digest if `menuconfig` is configured for it.

However, it is possible to use the `espsecure.py` tool to make standalone signatures and digests.

To sign a binary image:

```
espsecure.py sign_data --keyfile ./my_signing_key.pem --output ./image_signed.bin_
↪image-unsigned.bin
```

Keyfile is the PEM file containing an ECDSA private signing key.

To generate a bootloader digest:

```
espsecure.py digest_secure_bootloader --keyfile ./securebootkey.bin --output ./
↪bootloader-digest.bin build/bootloader/bootloader.bin
```

Keyfile is the 32 byte raw secure boot key for the device. To flash this digest onto the device:

```
esptool.py write_flash 0x0 bootloader-digest.bin
```

Deep Sleep Wake Stubs

ESP32 supports running a “deep sleep wake stub” when coming out of deep sleep. This function runs immediately as soon as the chip wakes up - before any normal initialisation, bootloader, or ESP-IDF code has run. After the wake stub runs, the SoC can go back to sleep or continue to start ESP-IDF normally.

Deep sleep wake stub code is loaded into “RTC Fast Memory” and any data which it uses must also be loaded into RTC memory. RTC memory regions hold their contents during deep sleep.

Rules for Wake Stubs

Wake stub code must be carefully written:

- As the SoC has freshly woken from sleep, most of the peripherals are in reset states. The SPI flash is unmapped.
- The wake stub code can only call functions implemented in ROM or loaded into RTC Fast Memory (see below.)
- The wake stub code can only access data loaded in RTC memory. All other RAM will be uninitialised and have random contents. The wake stub can use other RAM for temporary storage, but the contents will be overwritten when the SoC goes back to sleep or starts ESP-IDF.
- RTC memory must include any read-only data (.rodata) used by the stub.
- Data in RTC memory is initialised whenever the SoC restarts, except when waking from deep sleep. When waking from deep sleep, the values which were present before going to sleep are kept.
- Wake stub code is a part of the main esp-idf app. During normal running of esp-idf, functions can call the wake stub functions or access RTC memory. It is as if these were regular parts of the app.

Implementing A Stub

The wake stub in esp-idf is called `esp_wake_deep_sleep()`. This function runs whenever the SoC wakes from deep sleep. There is a default version of this function provided in esp-idf, but the default function is weak-linked so if your app contains a function named `esp_wake_deep_sleep()` then this will override the default.

If supplying a custom wake stub, the first thing it does should be to call `esp_default_wake_deep_sleep()`.

It is not necessary to implement `esp_wake_deep_sleep()` in your app in order to use deep sleep. It is only necessary if you want to have special behaviour immediately on wake.

If you want to swap between different deep sleep stubs at runtime, it is also possible to do this by calling the `esp_set_deep_sleep_wake_stub()` function. This is not necessary if you only use the default `esp_wake_deep_sleep()` function.

All of these functions are declared in the `esp_deepsleep.h` header under `components/esp32`.

Loading Code Into RTC Memory

Wake stub code must be resident in RTC Fast Memory. This can be done in one of two ways.

The first way is to use the `RTC_IRAM_ATTR` attribute to place a function into RTC memory:

```
void RTC_IRAM_ATTR esp_wake_deep_sleep(void) {
    esp_default_wake_deep_sleep();
    // Add additional functionality here
}
```

The second way is to place the function into any source file whose name starts with `rtc_wake_stub`. Files names `rtc_wake_stub*` have their contents automatically put into RTC memory by the linker.

The first way is simpler for very short and simple code, or for source files where you want to mix “normal” and “RTC” code. The second way is simpler when you want to write longer pieces of code for RTC memory.

Loading Data Into RTC Memory

Data used by stub code must be resident in RTC Slow Memory. This memory is also used by the ULP.

Specifying this data can be done in one of two ways:

The first way is to use the `RTC_DATA_ATTR` and `RTC_RODATA_ATTR` to specify any data (writeable or read-only, respectively) which should be loaded into RTC slow memory:

```
RTC_DATA_ATTR int wake_count;

void RTC_IRAM_ATTR esp_wake_deep_sleep(void) {
    esp_default_wake_deep_sleep();
    static RTC_RODATA_ATTR const char fmt_str[] = "Wake count %d\n";
    ets_printf(fmt_str, wake_count++);
}
```

Unfortunately, any string constants used in this way must be declared as arrays and marked with `RTC_RODATA_ATTR`, as shown in the example above.

The second way is to place the data into any source file whose name starts with `rtc_wake_stub`.

For example, the equivalent example in `rtc_wake_stub_counter.c`:

```
int wake_count;

void RTC_IRAM_ATTR esp_wake_deep_sleep(void) {
    esp_default_wake_deep_sleep();
    ets_printf("Wake count %d\n", wake_count++);
}
```

The second way is a better option if you need to use strings, or write other more complex code.

ULP coprocessor programming

ULP coprocessor instruction set

This document provides details about the instructions used by ESP32 ULP coprocessor assembler.

ULP coprocessor has 4 16-bit general purpose registers, labeled R0, R1, R2, R3. It also has an 8-bit counter register (`stage_cnt`) which can be used to implement loops. Stage count register is accessed using special instructions.

ULP coprocessor can access 8k bytes of `RTC_SLOW_MEM` memory region. Memory is addressed in 32-bit word units. It can also access peripheral registers in `RTC_CNTL`, `RTC_IO`, and `SENS` peripherals.

All instructions are 32-bit. Jump instructions, ALU instructions, peripheral register and memory access instructions are executed in 1 cycle. Instructions which work with peripherals (TSENS, ADC, I2C) take variable number of cycles, depending on peripheral operation.

The instruction syntax is case insensitive. Upper and lower case letters can be used and intermixed arbitrarily. This is true both for register names and instruction names.

Note about addressing

ESP32 ULP coprocessor's `JUMP`, `ST`, `LD` instructions which take register as an argument (jump address, store/load base address) expect the argument to be expressed in 32-bit words.

Consider the following example program:

```
entry:
    NOP
    NOP
    NOP
    NOP
loop:
    MOVE R1, loop
    JUMP R1
```

When this program is assembled and linked, address of label `loop` will be equal to 16 (expressed in bytes). However `JUMP` instruction expects the address stored in register to be expressed in 32-bit words. To account for this common use case, assembler will convert the address of label `loop` from bytes to words, when generating `MOVE` instruction, so the code generated code will be equivalent to:

```
0000    NOP
0004    NOP
0008    NOP
000c    NOP
0010    MOVE R1, 4
0014    JUMP R1
```

The other case is when the argument of `MOVE` instruction is not a label but a constant. In this case assembler will use the value as is, without any conversion:

```
.set     val, 0x10
MOVE    R1, val
```

In this case, value loaded into `R1` will be `0x10`.

Similar considerations apply to `LD` and `ST` instructions. Consider the following code:

```
.global array
array: .long 0
       .long 0
       .long 0
       .long 0

MOVE R1, array
MOVE R2, 0x1234
ST R2, R1, 0    // write value of R2 into the first array element,
                // i.e. array[0]

ST R2, R1, 4    // write value of R2 into the second array element
                // (4 byte offset), i.e. array[1]

ADD R1, R1, 2   // this increments address by 2 words (8 bytes)
ST R2, R1, 0    // write value of R2 into the third array element,
                // i.e. array[2]
```

NOP - no operation

Syntax: NOP

Operands: None

Description: No operation is performed. Only the PC is incremented.

Example:

1: NOP

ADD - Add to register

Syntax: ADD *Rdst*, *Rsrc1*, *Rsrc2*

 ADD *Rdst*, *Rsrc1*, *imm*

Operands:

- *Rdst* - Register R[0..3]
- *Rsrc1* - Register R[0..3]
- *Rsrc2* - Register R[0..3]
- *Imm* - 16-bit signed value

Description: The instruction adds source register to another source register or to a 16-bit signed value and stores result to the destination register.

Examples:

1:	ADD R1, R2, R3	//R1 = R2 + R3
2:	Add R1, R2, 0x1234	//R1 = R2 + 0x1234
3:	.set value1, 0x03	//constant value1=0x03
	Add R1, R2, value1	//R1 = R2 + value1
4:	.global label	//declaration of variable label
	Add R1, R2, label	//R1 = R2 + label
	...	
	label: nop	//definition of variable label

SUB - Subtract from register

Syntax: SUB *Rdst*, *Rsrc1*, *Rsrc2*

 SUB *Rdst*, *Rsrc1*, *imm*

Operands:

- *Rdst* - Register R[0..3]
- *Rsrc1* - Register R[0..3]
- *Rsrc2* - Register R[0..3]
- *Imm* - 16-bit signed value

Description: The instruction subtracts the source register from another source register or subtracts 16-bit signed value from a source register, and stores result to the destination register.

Examples::

```
1:      SUB R1, R2, R3           //R1 = R2 - R3
2:      sub R1, R2, 0x1234      //R1 = R2 - 0x1234
3:      .set value1, 0x03       //constant value1=0x03
      SUB R1, R2, value1       //R1 = R2 - value1
4:      .global label          //declaration of variable label
      SUB R1, R2, label        //R1 = R2 - label
      . . . .
label:  nop                    //definition of variable label
```

AND - Logical AND of two operands

Syntax: `AND Rdst, Rsrc1, Rsrc2`

`AND Rdst, Rsrc1, imm`

Operands:

- *Rdst* - Register R[0..3]
- *Rsrc1* - Register R[0..3]
- *Rsrc2* - Register R[0..3]
- *Imm* - 16-bit signed value

Description: The instruction does logical AND of a source register and another source register or 16-bit signed value and stores result to the destination register.

Example:

```
1:      AND R1, R2, R3          //R1 = R2 & R3
2:      AND R1, R2, 0x1234     //R1 = R2 & 0x1234
3:      .set value1, 0x03      //constant value1=0x03
      AND R1, R2, value1      //R1 = R2 & value1
4:      .global label         //declaration of variable label
      AND R1, R2, label       //R1 = R2 & label
      . . . .
label:  nop                    //definition of variable label
```

OR - Logical OR of two operands

Syntax `OR Rdst, Rsrc1, Rsrc2`

`OR Rdst, Rsrc1, imm`

Operands

- *Rdst* - Register R[0..3]
- *Rsrc1* - Register R[0..3]

- *Rsrc2* - Register R[0..3]
- *Imm* - 16-bit signed value

Description The instruction does logical OR of a source register and another source register or 16-bit signed value and stores result to the destination register.

Examples:

```
1:      OR R1, R2, R3           //R1 = R2 \| R3
2:      OR R1, R2, 0x1234      //R1 = R2 \| 0x1234
3:      .set value1, 0x03      //constant value1=0x03
      OR R1, R2, value1       //R1 = R2 \| value1
4:      .global label         //declaration of variable label
      OR R1, R2, label        //R1 = R2 \| label
      ...
label: nop                    //definition of variable label
```

LSH - Logical Shift Left

Syntax **LSH** *Rdst, Rsrc1, Rsrc2*

LSH *Rdst, Rsrc1, imm*

Operands

- *Rdst* - Register R[0..3]
- *Rsrc1* - Register R[0..3]
- *Rsrc2* - Register R[0..3]
- *Imm* - 16-bit signed value

Description The instruction does logical shift to left of source register to number of bits from another source register or 16-bit signed value and store result to the destination register.

Examples:

```
1:      LSH R1, R2, R3         //R1 = R2 << R3
2:      LSH R1, R2, 0x03      //R1 = R2 << 0x03
3:      .set value1, 0x03     //constant value1=0x03
      LSH R1, R2, value1     //R1 = R2 << value1
4:      .global label        //declaration of variable label
      LSH R1, R2, label      //R1 = R2 << label
      ...
label: nop                    //definition of variable label
```

RSH - Logical Shift Right

Syntax **RSH** *Rdst, Rsrc1, Rsrc2*

RSH *Rdst, Rsrc1, imm*

Operands *Rdst* - Register R[0..3] *Rsrc1* - Register R[0..3] *Rsrc2* - Register R[0..3] *Imm* - 16-bit signed value

Description The instruction does logical shift to right of source register to number of bits from another source register or 16-bit signed value and store result to the destination register.

Examples:

```

1:      RSH R1, R2, R3           //R1 = R2 >> R3
2:      RSH R1, R2, 0x03        //R1 = R2 >> 0x03
3:      .set value1, 0x03        //constant value1=0x03
        RSH R1, R2, value1      //R1 = R2 >> value1
4:      .global label           //declaration of variable label
        RSH R1, R2, label       //R1 = R2 >> label
label:  nop                     //definition of variable label
    
```

MOVE – Move to register

Syntax **MOVE** *Rdst*, *Rsrc*

MOVE *Rdst*, *imm*

Operands

- *Rdst* – Register R[0..3]
- *Rsrc* – Register R[0..3]
- *Imm* – 16-bit signed value

Description The instruction move to destination register value from source register or 16-bit signed value.

Note that when a label is used as an immediate, the address of the label will be converted from bytes to words. This is because LD, ST, and JUMP instructions expect the address register value to be expressed in words rather than bytes. To avoid using an extra instruction

Examples:

```

1:      MOVE      R1, R2           //R1 = R2 >> R3
2:      MOVE      R1, 0x03        //R1 = R2 >> 0x03
3:      .set      value1, 0x03    //constant value1=0x03
        MOVE      R1, value1     //R1 = value1
4:      .global   label          //declaration of label
        MOVE      R1, label      //R1 = address_of(label) / 4
        ...
label:  nop                     //definition of label
    
```

ST – Store data to the memory

Syntax **ST** *Rsrc*, *Rdst*, *offset*

Operands

- *Rsrc* – Register R[0..3], holds the 16-bit value to store

- *Rdst* – Register R[0..3], address of the destination, in 32-bit words
- *Offset* – 10-bit signed value, offset in bytes

Description The instruction stores the 16-bit value of *Rsrc* to the lower half-word of memory with address *Rdst*+*offset*. The upper half-word is written with the current program counter (PC), expressed in words, shifted left by 5 bits:

```
Mem[Rdst + offset / 4]{31:0} = {PC[10:0], 5'b0, Rsrc[15:0]}
```

The application can use higher 16 bits to determine which instruction in the ULP program has written any particular word into memory.

Examples:

```
1:      ST   R1, R2, 0x12      //MEM[R2+0x12] = R1

2:      .data                  //Data section definition
Addr1:  .word    123           // Define label Addr1 16 bit
        .set     offs, 0x00    // Define constant offs
        .text                  //Text section definition
        MOVE    R1, 1         // R1 = 1
        MOVE    R2, Addr1     // R2 = Addr1
        ST      R1, R2, offs  // MEM[R2 + 0] = R1
                                // MEM[Addr1 + 0] will be 32'h600001
```

LD – Load data from the memory

Syntax LD *Rdst*, *Rsrc*, *offset*

Operands *Rdst* – Register R[0..3], destination

Rsrc – Register R[0..3], holds address of destination, in 32-bit words

Offset – 10-bit signed value, offset in bytes

Description The instruction loads lower 16-bit half-word from memory with address *Rsrc*+*offset* into the destination register *Rdst*:

```
Rdst[15:0] = Mem[Rsrc + offset / 4][15:0]
```

Examples:

```
1:      LD   R1, R2, 0x12      //R1 = MEM[R2+0x12]

2:      .data                  //Data section definition
Addr1:  .word    123           // Define label Addr1 16 bit
        .set     offs, 0x00    // Define constant offs
        .text                  //Text section definition
        MOVE    R1, 1         // R1 = 1
        MOVE    R2, Addr1     // R2 = Addr1 / 4 (address of label is_
↳converted into words)
        LD      R1, R2, offs  // R1 = MEM[R2 + 0]
                                // R1 will be 123
```

JUMP – Jump to an absolute address

Syntax JUMP *Rdst*

JUMP *ImmAddr*

JUMP *Rdst, Condition*

JUMP *ImmAddr, Condition*

Operands

- *Rdst* – Register R[0..3] containing address to jump to (expressed in 32-bit words)
- *ImmAddr* – 13 bits address (expressed in bytes), aligned to 4 bytes
- **Condition:**
 - EQ – jump if last ALU operation result was zero
 - OV – jump if last ALU has set overflow flag

Description The instruction makes jump to the specified address. Jump can be either unconditional or based on an ALU flag.

Examples:

```

1:      JUMP      R1          // Jump to address in R1 (address in R1 is in 32-
↳bit words)
2:      JUMP      0x120, EQ   // Jump to address 0x120 (in bytes) if ALU result_
↳is zero
3:      JUMP      label      // Jump to label
      ...
label:  nop                // Definition of label
4:      .global   label      // Declaration of global label
      MOVE      R1, label    // R1 = label (value loaded into R1 is in words)
      JUMP      R1          // Jump to label
      ...
label:  nop                // Definition of label

```

JUMPR – Jump to a relative offset (condition based on R0)

Syntax **JUMPR** *Step, Threshold, Condition*

Operands

- *Step* – relative shift from current position, in bytes
- *Threshold* – threshold value for branch condition
- **Condition:**
 - GE (greater or equal) – jump if value in R0 >= threshold
 - LT (less than) – jump if value in R0 < threshold

Description The instruction makes a jump to a relative address if condition is true. Condition is the result of comparison of R0 register value and the threshold value.

Examples:

```

1:pos:    JUMPR      16, 20, GE    // Jump to address (position + 16 bytes) if value_
↳in R0 >= 20

2:        // Down counting loop using R0 register
          MOVE      R0, 16        // load 16 into R0
label:    SUB       R0, R0, 1     // R0--
          NOP       // do something
          JUMPR    label, 1, GE  // jump to label if R0 >= 1

```

JUMPS – Jump to a relative address (condition based on stage count)

Syntax JUMPS *Step, Threshold, Condition*

Operands

- *Step* – relative shift from current position, in bytes
- *Threshold* – threshold value for branch condition
- **Condition:**
 - *EQ* (equal) – jump if value in stage_cnt == threshold
 - *LT* (less than) – jump if value in stage_cnt < threshold
 - *GT* (greater than) – jump if value in stage_cnt > threshold

Description The instruction makes a jump to a relative address if condition is true. Condition is the result of comparison of count register value and threshold value.

Examples:

```

1:pos:    JUMPS     16, 20, EQ     // Jump to (position + 16 bytes) if stage_cnt == 20

2:        // Up counting loop using stage count register
          STAGE_RST // set stage_cnt to 0
label:    STAGE_INC 1             // stage_cnt++
          NOP       // do something
          JUMPS    label, 16, LT  // jump to label if stage_cnt < 16

```

STAGE_RST – Reset stage count register

Syntax STAGE_RST

Operands No operands

Description The instruction sets the stage count register to 0

Examples:

```

1:        STAGE_RST // Reset stage count register

```

STAGE_INC – Increment stage count register

Syntax STAGE_INC *Value*

Operands

- *Value* – 8 bits value

Description The instruction increments stage count register by given value.

Examples:

```
1:      STAGE_INC      10          // stage_cnt += 10

2:      // Up counting loop example:
        STAGE_RST          // set stage_cnt to 0
label:  STAGE_INC  1          // stage_cnt++
        NOP                // do something
        JUMPS      label, 16, LT // jump to label if stage_cnt < 16
```

STAGE_DEC – Decrement stage count register

Syntax STAGE_DEC *Value*

Operands

- *Value* – 8 bits value

Description The instruction decrements stage count register by given value.

Examples:

```
1:      STAGE_DEC      10          // stage_cnt -= 10;

2:      // Down counting loop exaple
        STAGE_RST          // set stage_cnt to 0
        STAGE_INC  16          // increment stage_cnt to 16
label:  STAGE_DEC  1          // stage_cnt--;
        NOP                // do something
        JUMPS      label, 0, GT // jump to label if stage_cnt > 0
```

HALT – End the program

Syntax HALT

Operands No operands

Description The instruction halt the processor to the power down mode

Examples:

```
1:      HALT          // Move chip to powerdown
```

WAKE – wakeup the chip

Syntax WAKE

Operands No operands

Description The instruction sends an interrupt from ULP to RTC controller.

- If the SoC is in deep sleep mode, and ULP wakeup is enabled, this causes the SoC to wake up.
- If the SoC is not in deep sleep mode, and ULP interrupt bit (RTC_CNTL_ULP_CP_INT_ENA) is set in RTC_CNTL_INT_ENA_REG register, RTC interrupt will be triggered.

Examples:

```

1:      WAKE                // Trigger wake up
      REG_WR 0x006, 24, 24, 0 // Stop ULP timer (clear RTC_CNTL_ULP_CP_SLP_
↳TIMER_EN)
      HALT                  // Stop the ULP program
      // After these instructions, SoC will wake up,
      // and ULP will not run again until started by the main program.

```

SLEEP – set ULP wakeup timer period**Syntax** SLEEP *sleep_reg***Operands**

- *sleep_reg* – 0..4, selects one of SENS_ULP_CP_SLEEP_CYCx_REG registers.

Description The instruction selects which of the SENS_ULP_CP_SLEEP_CYCx_REG (x = 0..4) register values is to be used by the ULP wakeup timer as wakeup period. By default, the value from SENS_ULP_CP_SLEEP_CYC0_REG is used.

Examples:

```

1:      SLEEP      1          // Use period set in SENS_ULP_CP_SLEEP_CYC1_REG
2:      .set sleep_reg, 4    // Set constant
      SLEEP sleep_reg      // Use period set in SENS_ULP_CP_SLEEP_CYC4_REG

```

WAIT – wait some number of cycles**Syntax** WAIT *Cycles***Operands**

- *Cycles* – number of cycles for wait

Description The instruction delays for given number of cycles.

Examples:

```

1:      WAIT      10         // Do nothing for 10 cycles
2:      .set wait_cnt, 10    // Set a constant
      WAIT wait_cnt        // wait for 10 cycles

```

TSENS – do measurement with temperature sensor**Syntax**

- TSENS *Rdst*, *Wait_Delay*

Operands

- *Rdst* – Destination Register R[0..3], result will be stored to this register
- *Wait_Delay* – number of cycles used to perform the measurement

Description The instruction performs measurement using TSENS and stores the result into a general purpose register.

Examples:

```
1:      TSNS      R1, 1000    // Measure temperature sensor for 1000 cycles,
                        // and store result to R1
```

ADC – do measurement with ADC

Syntax

- **ADC** *Rdst, Sar_sel, Mux*
- **ADC** *Rdst, Sar_sel, Mux, 0* — deprecated form

Operands

- *Rdst* – Destination Register R[0..3], result will be stored to this register
- *Sar_sel* – Select ADC: 0 = SARADC1, 1 = SARADC2
- *Mux* - selected PAD, SARADC Pad[Mux+1] is enabled

Description The instruction makes measurements from ADC.

Examples:

```
1:      ADC      R1, 0, 1    // Measure value using ADC1 pad 2 and store result_
↳into R1
```

REG_RD – read from peripheral register

Syntax **REG_RD** *Addr, High, Low*

Operands

- *Addr* – register address, in 32-bit words
- *High* – High part of R0
- *Low* – Low part of R0

Description The instruction reads up to 16 bits from a peripheral register into a general purpose register: R0 = REG[Addr] [High:Low].

This instruction can access registers in RTC_CNTL, RTC_IO, and SENS peripherals. Address of the the register, as seen from the ULP, can be calculated from the address of the same register on the DPORT bus as follows:

$$\text{addr_ulp} = (\text{addr_dport} - \text{DR_REG_RTCCNTL_BASE}) / 4$$

Examples:

```
1:      REG_RD    0x120, 2, 0    // load 4 bits: R0 = {12'b0, REG[0x120][7:4]}
```

REG_WR – write to peripheral register

Syntax **REG_WR** *Addr, High, Low, Data*

Operands

- *Addr* – register address, in 32-bit words.

- *High* – High part of R0
- *Low* – Low part of R0
- *Data* – value to write, 8 bits

Description The instruction writes up to 8 bits from a general purpose register into a peripheral register.
`REG[Addr][High:Low] = data`

This instruction can access registers in RTC_CNTL, RTC_IO, and SENS peripherals. Address of the the register, as seen from the ULP, can be calculated from the address of the same register on the DPORT bus as follows:

```
addr_ulp = (addr_dport - DR_REG_RTC_CNTL_BASE) / 4
```

Examples:

```
1:          REG_WR          0x120, 7, 0, 0x10 // set 8 bits: REG[0x120][7:0] = 0x10
```

Convenience macros for peripheral registers access

ULP source files are passed through C preprocessor before the assembler. This allows certain macros to be used to facilitate access to peripheral registers.

Some existing macros are defined in `soc/soc_ulp.h` header file. These macros allow access to the fields of peripheral registers by their names. Peripheral registers names which can be used with these macros are the ones defined in `soc/rtc_cntl_reg.h`, `soc/rtc_io_reg.h`, and `soc/sens_reg.h`.

READ_RTC_REG(*rtc_reg*, *low_bit*, *bit_width*) Read up to 16 bits from `rtc_reg[low_bit + bit_width - 1 : low_bit]` into R0. For example:

```
#include "soc/soc_ulp.h"
#include "soc/rtc_cntl_reg.h"

/* Read 16 lower bits of RTC_CNTL_TIME0_REG into R0 */
READ_RTC_REG(RTC_CNTL_TIME0_REG, 0, 16)
```

READ_RTC_FIELD(*rtc_reg*, *field*) Read from a field in `rtc_reg` into R0, up to 16 bits. For example:

```
#include "soc/soc_ulp.h"
#include "soc/sens_reg.h"

/* Read 8-bit SENS_TSENS_OUT field of SENS_SAR_SLAVE_ADDR3_REG into R0 */
READ_RTC_FIELD(SENS_SAR_SLAVE_ADDR3_REG, SENS_TSENS_OUT)
```

WRITE_RTC_REG(*rtc_reg*, *low_bit*, *bit_width*, *value*) Write immediate value into `rtc_reg[low_bit + bit_width - 1 : low_bit]`, `bit_width <= 8`. For example:

```
#include "soc/soc_ulp.h"
#include "soc/rtc_io_reg.h"

/* Set BIT(2) of RTC_GPIO_OUT_DATA_W1TS field in RTC_GPIO_OUT_W1TS_REG */
WRITE_RTC_REG(RTC_GPIO_OUT_W1TS_REG, RTC_GPIO_OUT_DATA_W1TS_S + 2, 1, 1)
```

WRITE_RTC_FIELD(*rtc_reg*, *field*, *value*) Write immediate value into a field in `rtc_reg`, up to 8 bits. For example:

```
#include "soc/soc_ulp.h"
#include "soc/rtc_cntl_reg.h"
```

```
/* Set RTC_CNTL_ULP_CP_SLP_TIMER_EN field of RTC_CNTL_STATE0_REG to 0 */
WRITE_RTC_FIELD(RTC_CNTL_STATE0_REG, RTC_CNTL_ULP_CP_SLP_TIMER_EN, 0)
```

Programming ULP coprocessor using C macros

In addition to the existing binutils port for the ESP32 ULP coprocessor, it is possible to generate programs for the ULP by embedding assembly-like macros into an ESP32 application. Here is an example how this can be done:

```
const ulp_insn_t program[] = {
    I_MOVI(R3, 16),          // R3 <- 16
    I_LD(R0, R3, 0),        // R0 <- RTC_SLOW_MEM[R3 + 0]
    I_LD(R1, R3, 1),        // R1 <- RTC_SLOW_MEM[R3 + 1]
    I_ADDR(R2, R0, R1),     // R2 <- R0 + R1
    I_ST(R2, R3, 2),        // R2 -> RTC_SLOW_MEM[R2 + 2]
    I_HALT(),
};
size_t load_addr = 0;
size_t size = sizeof(program)/sizeof(ulp_insn_t);
ulp_process_macros_and_load(load_addr, program, &size);
ulp_run(load_addr);
```

The program array is an array of `ulp_insn_t`, i.e. ULP coprocessor instructions. Each `I_XXX` preprocessor define translates into a single 32-bit instruction. Arguments of these preprocessor defines can be register numbers (R0 -- R3) and literal constants. See [ULP coprocessor instruction defines](#) section for descriptions of instructions and arguments they take.

Load and store instructions use addresses expressed in 32-bit words. Address 0 corresponds to the first word of `RTC_SLOW_MEM` (which is address 0x50000000 as seen by the main CPUs).

To generate branch instructions, special `M_` preprocessor defines are used. `M_LABEL` define can be used to define a branch target. Label identifier is a 16-bit integer. `M_Bxxx` defines can be used to generate branch instructions with target set to a particular label.

Implementation note: these `M_` preprocessor defines will be translated into two `ulp_insn_t` values: one is a token value which contains label number, and the other is the actual instruction. `ulp_process_macros_and_load` function resolves the label number to the address, modifies the branch instruction to use the correct address, and removes the the extra `ulp_insn_t` token which contains the label numer.

Here is an example of using labels and branches:

```
const ulp_insn_t program[] = {
    I_MOVI(R0, 34),          // R0 <- 34
    M_LABEL(1),             // label_1
    I_MOVI(R1, 32),          // R1 <- 32
    I_LD(R1, R1, 0),        // R1 <- RTC_SLOW_MEM[R1]
    I_MOVI(R2, 33),          // R2 <- 33
    I_LD(R2, R2, 0),        // R2 <- RTC_SLOW_MEM[R2]
    I_SUBR(R3, R1, R2),     // R3 <- R1 - R2
    I_ST(R3, R0, 0),        // R3 -> RTC_SLOW_MEM[R0 + 0]
    I_ADDI(R0, R0, 1),      // R0++
    M_BL(1, 64),           // if (R0 < 64) goto label_1
    I_HALT(),
};
RTC_SLOW_MEM[32] = 42;
RTC_SLOW_MEM[33] = 18;
size_t load_addr = 0;
size_t size = sizeof(program)/sizeof(ulp_insn_t);
```

```
ulp_process_macros_and_load(load_addr, program, &size);
ulp_run(load_addr);
```

Functions

`esp_err_t ulp_process_macros_and_load` (uint32_t *load_addr*, const ulp_insn_t **program*, size_t **psize*)

Resolve all macro references in a program and load it into RTC memory.

Return

- ESP_OK on success
- ESP_ERR_NO_MEM if auxiliary temporary structure can not be allocated
- one of ESP_ERR_ULP_xxx if program is not valid or can not be loaded

Parameters

- *load_addr*: address where the program should be loaded, expressed in 32-bit words
- *program*: ulp_insn_t array with the program
- *psize*: size of the program, expressed in 32-bit words

`esp_err_t ulp_run` (uint32_t *entry_point*)

Run the program loaded into RTC memory.

Return ESP_OK on success

Parameters

- *entry_point*: entry point, expressed in 32-bit words

Error codes

ESP_ERR_ULP_BASE 0x1200

Offset for ULP-related error codes

ESP_ERR_ULP_SIZE_TOO_BIG (*ESP_ERR_ULP_BASE* + 1)

Program doesn't fit into RTC memory reserved for the ULP

ESP_ERR_ULP_INVALID_LOAD_ADDR (*ESP_ERR_ULP_BASE* + 2)

Load address is outside of RTC memory reserved for the ULP

ESP_ERR_ULP_DUPLICATE_LABEL (*ESP_ERR_ULP_BASE* + 3)

More than one label with the same number was defined

ESP_ERR_ULP_UNDEFINED_LABEL (*ESP_ERR_ULP_BASE* + 4)

Branch instructions references an undefined label

ESP_ERR_ULP_BRANCH_OUT_OF_RANGE (*ESP_ERR_ULP_BASE* + 5)

Branch target is out of range of B instruction (try replacing with BX)

ULP coprocessor registers

ULP co-processor has 4 16-bit general purpose registers. All registers have same functionality, with one exception. R0 register is used by some of the compare-and-branch instructions as a source register.

These definitions can be used for all instructions which require a register.

R0 0
 general purpose register 0

R1 1
 general purpose register 1

R2 2
 general purpose register 2

R3 3
 general purpose register 3

ULP coprocessor instruction defines

I_DELAY (cycles_) { .delay = { \ .opcode = OPCODE_DELAY, \ .unused = 0, \ .cycles = cycles_ } }
 Delay (nop) for a given number of cycles

I_HALT { .halt = { \ .unused = 0, \ .opcode = OPCODE_HALT } }
 Halt the coprocessor.

This instruction halts the coprocessor, but keeps ULP timer active. As such, ULP program will be restarted again by timer. To stop the program and prevent the timer from restarting the program, use I_END(0) instruction.

I_END I_WR_REG_BIT(RTC_CNTL_STATE0_REG, RTC_CNTL_ULP_CP_SLP_TIMER_EN_S, 0)
 Stop ULP program timer.

This is a convenience macro which disables the ULP program timer. Once this instruction is used, ULP program will not be restarted anymore until ulp_run function is called.

ULP program will continue running after this instruction. To stop the currently running program, use I_HALT().

I_ST (reg_val, reg_addr, offset_) { .st = { \ .dreg = reg_val, \ .sreg = reg_addr, \ .unused1 = 0, \ .offset = offset_, \ .unused2 = 0, \ .sub_opcode = SUB_OPCODE_ST, \ .opcode = OPCODE_ST } }
 Store value from register reg_val into RTC memory.

The value is written to an offset calculated by adding value of reg_addr register and offset_ field (this offset is expressed in 32-bit words). 32 bits written to RTC memory are built as follows:

- bits [31:21] hold the PC of current instruction, expressed in 32-bit words
- bits [20:16] = 5'b1
- bits [15:0] are assigned the contents of reg_val

RTC_SLOW_MEM[addr + offset_] = { 5'b0, insn_PC[10:0], val[15:0] }

I_LD (reg_dest, reg_addr, offset_) { .ld = { \ .dreg = reg_dest, \ .sreg = reg_addr, \ .unused1 = 0, \ .offset = offset_, \ .unused2 = 0, \ .opcode = OPCODE_LD } }
 Load value from RTC memory into reg_dest register.

Loads 16 LSBs from RTC memory word given by the sum of value in reg_addr and value of offset_.

I_WR_REG (reg, low_bit, high_bit, val) { .wr_reg = { \ .addr = (reg & 0xff) / sizeof(uint32_t), \ .periph_sel = SOC_REG_TO_ULP_PERIPH_SEL(reg), \ .data = val, \ .low = low_bit, \ .high = high_bit, \ .opcode = OPCODE_WR_REG } }
 Write literal value to a peripheral register

reg[high_bit : low_bit] = val This instruction can access RTC_CNTL_, RTC_IO_, and SENS_ peripheral registers.

```
I_RD_REG (reg, low_bit, high_bit) { .rd_reg = { \ .addr = (reg & 0xff) / sizeof(uint32_t), \ .periph_sel =
    SOC_REG_TO_ULP_PERIPH_SEL(reg), \ .unused = 0, \ .low = low_bit, \ .high = high_bit, \
    .opcode = OPCODE_RD_REG } }
```

Read from peripheral register into R0

R0 = reg[high_bit : low_bit] This instruction can access RTC_CNTL_, RTC_IO_, and SENS_ peripheral registers.

```
I_BL (pc_offset, imm_value) { .b = { \ .imm = imm_value, \ .cmp = B_CMP_L, \ .offset = abs(pc_offset), \
    .sign = (pc_offset >= 0) ? 0 : 1, \ .sub_opcode = SUB_OPCODE_B, \ .opcode = OPCODE_BRANCH }
}
```

Branch relative if R0 less than immediate value.

pc_offset is expressed in words, and can be from -127 to 127 imm_value is a 16-bit value to compare R0 against

```
I_BGE (pc_offset, imm_value) { .b = { \ .imm = imm_value, \ .cmp = B_CMP_GE, \ .offset = abs(pc_offset), \
    .sign = (pc_offset >= 0) ? 0 : 1, \ .sub_opcode = SUB_OPCODE_B, \ .opcode = OPCODE_BRANCH
} }
```

Branch relative if R0 greater or equal than immediate value.

pc_offset is expressed in words, and can be from -127 to 127 imm_value is a 16-bit value to compare R0 against

```
I_BXR (reg_pc) { .bx = { \ .dreg = reg_pc, \ .addr = 0, \ .unused = 0, \ .reg = 1, \ .type =
    BX_JUMP_TYPE_DIRECT, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Unconditional branch to absolute PC, address in register.

reg_pc is the register which contains address to jump to. Address is expressed in 32-bit words.

```
I_BXI (imm_pc) { .bx = { \ .dreg = 0, \ .addr = imm_pc, \ .unused = 0, \ .reg = 0, \ .type =
    BX_JUMP_TYPE_DIRECT, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Unconditional branch to absolute PC, immediate address.

Address imm_pc is expressed in 32-bit words.

```
I_BXZR (reg_pc) { .bx = { \ .dreg = reg_pc, \ .addr = 0, \ .unused = 0, \ .reg = 1, \ .type =
    BX_JUMP_TYPE_ZERO, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Branch to absolute PC if ALU result is zero, address in register.

reg_pc is the register which contains address to jump to. Address is expressed in 32-bit words.

```
I_BXZI (imm_pc) { .bx = { \ .dreg = 0, \ .addr = imm_pc, \ .unused = 0, \ .reg = 0, \ .type =
    BX_JUMP_TYPE_ZERO, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Branch to absolute PC if ALU result is zero, immediate address.

Address imm_pc is expressed in 32-bit words.

```
I_BXFR (reg_pc) { .bx = { \ .dreg = reg_pc, \ .addr = 0, \ .unused = 0, \ .reg = 1, \ .type =
    BX_JUMP_TYPE_OVF, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Branch to absolute PC if ALU overflow, address in register

reg_pc is the register which contains address to jump to. Address is expressed in 32-bit words.

```
I_BXFI (imm_pc) { .bx = { \ .dreg = 0, \ .addr = imm_pc, \ .unused = 0, \ .reg = 0, \ .type =
    BX_JUMP_TYPE_OVF, \ .sub_opcode = SUB_OPCODE_BX, \ .opcode = OPCODE_BRANCH
} }
```

Branch to absolute PC if ALU overflow, immediate address

Address `imm_pc` is expressed in 32-bit words.

I_ADDR (`reg_dest`, `reg_src1`, `reg_src2`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src1`, `\ .treg` = `reg_src2`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_ADD`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Addition: `dest = src1 + src2`

I_SUBR (`reg_dest`, `reg_src1`, `reg_src2`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src1`, `\ .treg` = `reg_src2`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_SUB`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Subtraction: `dest = src1 - src2`

I_ANDR (`reg_dest`, `reg_src1`, `reg_src2`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src1`, `\ .treg` = `reg_src2`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_AND`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Logical AND: `dest = src1 & src2`

I_ORR (`reg_dest`, `reg_src1`, `reg_src2`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src1`, `\ .treg` = `reg_src2`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_OR`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Logical OR: `dest = src1 | src2`

I_MOVR (`reg_dest`, `reg_src`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .treg` = 0, `\ .unused` = 0, `\ .sel` = `ALU_SEL_MOV`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Copy: `dest = src`

I_LSHR (`reg_dest`, `reg_src`, `reg_shift`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .treg` = `reg_shift`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_LSH`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Logical shift left: `dest = src << shift`

I_RSHR (`reg_dest`, `reg_src`, `reg_shift`) { `.alu_reg` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .treg` = `reg_shift`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_RSH`, `\ .sub_opcode` = `SUB_OPCODE_ALU_REG`, `\ .opcode` = `OPCODE_ALU` } }

Logical shift right: `dest = src >> shift`

I_ADDI (`reg_dest`, `reg_src`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_ADD`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Add register and an immediate value: `dest = src1 + imm`

I_SUBI (`reg_dest`, `reg_src`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_SUB`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Subtract register and an immediate value: `dest = src - imm`

I_ANDI (`reg_dest`, `reg_src`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_AND`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Logical AND register and an immediate value: `dest = src & imm`

I_ORI (`reg_dest`, `reg_src`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_OR`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Logical OR register and an immediate value: `dest = src | imm`

I_MOVI (`reg_dest`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = 0, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_MOV`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Copy an immediate value into register: `dest = imm`

I_LSHI (`reg_dest`, `reg_src`, `imm_`) { `.alu_imm` = { `\ .dreg` = `reg_dest`, `\ .sreg` = `reg_src`, `\ .imm` = `imm_`, `\ .unused` = 0, `\ .sel` = `ALU_SEL_LSH`, `\ .sub_opcode` = `SUB_OPCODE_ALU_IMM`, `\ .opcode` = `OPCODE_ALU` } }

Logical shift left register value by an immediate: `dest = src << imm`

```
I_RSHI (reg_dest, reg_src, imm_) { .alu_imm = { \ .dreg = reg_dest, \ .sreg = reg_src, \ .imm = imm_, \
    .unused = 0, \ .sel = ALU_SEL_RSH, \ .sub_opcode = SUB_OPCODE_ALU_IMM, \ .opcode =
    OPCODE_ALU } }
```

Logical shift right register value by an immediate: `dest = val >> imm`

```
M_LABEL (label_num) { .macro = { \ .label = label_num, \ .unused = 0, \ .sub_opcode =
    SUB_OPCODE_MACRO_LABEL, \ .opcode = OPCODE_MACRO } }
```

Define a label with number `label_num`.

This is a macro which doesn't generate a real instruction. The token generated by this macro is removed by `ulp_process_macros_and_load` function. Label defined using this macro can be used in branch macros defined below.

```
M_BL (label_num, imm_value) M_BRANCH(label_num), \ I_BL(0, imm_value)
```

Macro: branch to label `label_num` if R0 is less than immediate value.

This macro generates two `ulp_insn_t` values separated by a comma, and should be used when defining contents of `ulp_insn_t` arrays. First value is not a real instruction; it is a token which is removed by `ulp_process_macros_and_load` function.

```
M_BGE (label_num, imm_value) M_BRANCH(label_num), \ I_BGE(0, imm_value)
```

Macro: branch to label `label_num` if R0 is greater or equal than immediate value

This macro generates two `ulp_insn_t` values separated by a comma, and should be used when defining contents of `ulp_insn_t` arrays. First value is not a real instruction; it is a token which is removed by `ulp_process_macros_and_load` function.

```
M_BX (label_num) M_BRANCH(label_num), \ I_BXI(0)
```

Macro: unconditional branch to label

This macro generates two `ulp_insn_t` values separated by a comma, and should be used when defining contents of `ulp_insn_t` arrays. First value is not a real instruction; it is a token which is removed by `ulp_process_macros_and_load` function.

```
M_BXZ (label_num) M_BRANCH(label_num), \ I_BXZI(0)
```

Macro: branch to label if ALU result is zero

This macro generates two `ulp_insn_t` values separated by a comma, and should be used when defining contents of `ulp_insn_t` arrays. First value is not a real instruction; it is a token which is removed by `ulp_process_macros_and_load` function.

```
M_BXF (label_num) M_BRANCH(label_num), \ I_BXFI(0)
```

Macro: branch to label if ALU overflow

This macro generates two `ulp_insn_t` values separated by a comma, and should be used when defining contents of `ulp_insn_t` arrays. First value is not a real instruction; it is a token which is removed by `ulp_process_macros_and_load` function.

Defines

```
RTC_SLOW_MEM ((uint32_t*) 0x50000000)
```

RTC slow memory, 8k size

ULP (Ultra Low Power) coprocessor is a simple FSM which is designed to perform measurements using ADC, temperature sensor, and external I2C sensors, while main processors are in deep sleep mode. ULP coprocessor can access `RTC_SLOW_MEM` memory region, and registers in `RTC_CNTL`, `RTC_IO`, and `SARADC` peripherals. ULP coprocessor uses fixed-width 32-bit instructions, 32-bit memory addressing, and has 4 general purpose 16-bit registers.

Installing the toolchain

ULP coprocessor code is written in assembly and compiled using the `binutils-esp32ulp` toolchain.

1. Download the toolchain using the links listed on this page: <https://github.com/espressif/binutils-esp32ulp/wiki/downloads>
2. Extract the toolchain into a directory, and add the path to the `bin/` directory of the toolchain to the `PATH` environment variable.

Compiling ULP code

To compile ULP code as part of a component, the following steps must be taken:

1. ULP code, written in assembly, must be added to one or more files with `.S` extension. These files must be placed into a separate directory inside component directory, for instance `ulp/`.
2. Modify the component makefile, adding the following:

```
ULP_APP_NAME ?= ulp_$(COMPONENT_NAME)
ULP_S_SOURCES = $(COMPONENT_PATH)/ulp/ulp_source_file.S
ULP_EXP_DEP_OBJECTS := main.o
include $(IDF_PATH)/components/ulp/component_ulp_common.mk
```

Here is each line explained:

ULP_APP_NAME Name of the generated ULP application, without an extension. This name is used for build products of the ULP application: ELF file, map file, binary file, generated header file, and generated linker export file.

ULP_S_SOURCES List of assembly files to be passed to the ULP assembler. These must be absolute paths, i.e. start with `$(COMPONENT_PATH)`. Consider using `$(addprefix)` function if more than one file needs to be listed. Paths are relative to component build directory, so prefixing them is not necessary.

ULP_EXP_DEP_OBJECTS List of object files names within the component which include the generated header file. This list is needed to build the dependencies correctly and ensure that the generated header file is created before any of these files are compiled. See section below explaining the concept of generated header files for ULP applications.

include `$(IDF_PATH)/components/ulp/component_ulp_common.mk` Includes common definitions of ULP build steps. Defines build targets for ULP object files, ELF file, binary file, etc.

3. Build the application as usual (e.g. `make app`)

Inside, the build system will take the following steps to build ULP program:

- (a) **Run each assembly file (foo.S) through C preprocessor.** This step generates the preprocessed assembly files (`foo.ulp.pS`) in the component build directory. This step also generates dependency files (`foo.ulp.d`).
- (b) **Run preprocessed assembly sources through assembler.** This produces objects (`foo.ulp.o`) and listing (`foo.ulp.lst`) files. Listing files are generated for debugging purposes and are not used at later stages of build process.
- (c) **Run linker script template through C preprocessor.** The template is located in `components/ulp/ld` directory.
- (d) **Link object files into an output ELF file (`ulp_app_name.elf`).** Map file (`ulp_app_name.map`) generated at this stage may be useful for debugging purposes.
- (e) **Dump contents of the ELF file into binary (`ulp_app_name.bin`)** for embedding into the application.
- (f) **Generate list of global symbols (`ulp_app_name.sym`)** in the ELF file using `esp32ulp-elf-nm`.

- (g) **Create LD export script and header file** (`ulp_app_name.ld` and `ulp_app_name.h`) containing the symbols from `ulp_app_name.sym`. This is done using `esp32ulp_mapgen.py` utility.
- (h) **Add the generated binary to the list of binary files** to be emedded into the application.

Accessing ULP program variables

Global symbols defined in the ULP program may be used inside the main program.

For example, ULP program may define a variable `measurement_count` which will define the number of ADC measurements the program needs to make before waking up the chip from deep sleep:

```

.global measurement_count
measurement_count: .long 0

/* later, use measurement_count */
move r3, measurement_count
ld r3, r3, 0

```

Main program needs to initialize this variable before ULP program is started. Build system makes this possible by generating a `$(ULP_APP_NAME).h` and `$(ULP_APP_NAME).ld` files which define global symbols present in the ULP program. This files include each global symbol defined in the ULP program, prefixed with `ulp_`.

The header file contains declaration of the symbol:

```
extern uint32_t ulp_measurement_count;
```

Note that all symbols (variables, arrays, functions) are declared as `uint32_t`. For functions and arrays, take address of the symbol and cast to the appropriate type.

The generated linker script file defines locations of symbols in `RTC_SLOW_MEM`:

```
PROVIDE ( ulp_measurement_count = 0x50000060 );
```

To access ULP program variables from the main program, include the generated header file and use variables as one normally would:

```

#include "ulp_app_name.h"

// later
void init_ulp_vars() {
    ulp_measurement_count = 64;
}

```

Note that ULP program can only use lower 16 bits of each 32-bit word in RTC memory, because the registers are 16-bit, and there is no instruction to load from high part of the word.

Likewise, ULP store instruction writes register value into the lower 16 bit part of the 32-bit word. Upper 16 bits are written with a value which depends on the address of the store instruction, so when reading variables written by the ULP, main application needs to mask upper 16 bits, e.g.:

```
printf("Last measurement value: %d\n", ulp_last_measurement & UINT16_MAX);
```

Starting the ULP program

To run a ULP program, main application needs to load the ULP program into RTC memory using `ulp_load_binary` function, and then start it using `ulp_run` function.

Note that “Enable Ultra Low Power (ULP) Coprocessor” option must be enabled in menuconfig in order to reserve memory for the ULP. “RTC slow memory reserved for coprocessor” option must be set to a value sufficient to store ULP code and data. If the application components contain multiple ULP programs, then the size of the RTC memory must be sufficient to hold the largest one.

Each ULP program is embedded into the ESP-IDF application as a binary blob. Application can reference this blob and load it in the following way (suppose ULP_APP_NAME was defined to `ulp_app_name`):

```
extern const uint8_t bin_start[] asm("_binary_ulp_app_name_bin_start");
extern const uint8_t bin_end[]   asm("_binary_ulp_app_name_bin_end");

void start_ulp_program() {
    ESP_ERROR_CHECK( ulp_load_binary(
        0 /* load address, set to 0 when using default linker scripts */,
        bin_start,
        (bin_end - bin_start) / sizeof(uint32_t) );
}
```

`esp_err_t ulp_load_binary` (`uint32_t load_addr`, `const uint8_t *program_binary`, `size_t program_size`)
Load ULP program binary into RTC memory.

ULP program binary should have the following format (all values little-endian):

- 1.MAGIC, (value 0x00706c75, 4 bytes)
- 2.TEXT_OFFSET, offset of .text section from binary start (2 bytes)
- 3.TEXT_SIZE, size of .text section (2 bytes)
- 4.DATA_SIZE, size of .data section (2 bytes)
- 5.BSS_SIZE, size of .bss section (2 bytes)
- 6.(TEXT_OFFSET - 16) bytes of arbitrary data (will not be loaded into RTC memory)
- 7..text section
- 8..data section

Linker script in `components/ulp/ld/esp32.ulp.ld` produces ELF files which correspond to this format. This linker script produces binaries with `load_addr == 0`.

Return

- ESP_OK on success
- ESP_ERR_INVALID_ARG if `load_addr` is out of range
- ESP_ERR_INVALID_SIZE if `program_size` doesn't match (`TEXT_OFFSET + TEXT_SIZE + DATA_SIZE`)
- ESP_ERR_NOT_SUPPORTED if the magic number is incorrect

Parameters

- `load_addr`: address where the program should be loaded, expressed in 32-bit words
- `program_binary`: pointer to program binary
- `program_size`: size of the program binary

Once the program is loaded into RTC memory, application can start it, passing the address of the entry point to `ulp_run` function:

```
ESP_ERROR_CHECK( ulp_run(( &ulp_entry - RTC_SLOW_MEM) / sizeof(uint32_t)) );
```

`esp_err_t ulp_run` (`uint32_t entry_point`)

Run the program loaded into RTC memory.

Return ESP_OK on success

Parameters

- `entry_point`: entry point, expressed in 32-bit words

Declaration of the entry point symbol comes from the above mentioned generated header file, `$(ULP_APP_NAME).h`. In assembly source of the ULP application, this symbol must be marked as `.global`:

```
.global entry
entry:
    /* code starts here */
```

ULP program flow

ULP coprocessor is started by a timer. The timer is started once `ulp_run` is called. The timer counts a number of `RTC_SLOW_CLK` ticks (by default, produced by an internal 150kHz RC oscillator). The number of ticks is set using `SENS_ULP_CP_SLEEP_CYCx_REG` registers ($x = 0..4$). When starting the ULP for the first time, `SENS_ULP_CP_SLEEP_CYC0_REG` will be used to set the number of timer ticks. Later the ULP program can select another `SENS_ULP_CP_SLEEP_CYCx_REG` register using `sleep` instruction.

The application can set ULP timer period values (`SENS_ULP_CP_SLEEP_CYCx_REG`, $x = 0..4$) using `ulp_wakeup_period_set` function.

`esp_err_t ulp_set_wakeup_period` (`size_t period_index`, `uint32_t period_us`)

Set one of ULP wakeup period values.

ULP coprocessor starts running the program when the wakeup timer counts up to a given value (called period). There are 5 period values which can be programmed into `SENS_ULP_CP_SLEEP_CYCx_REG` registers, $x = 0..4$. By default, wakeup timer will use the period set into `SENS_ULP_CP_SLEEP_CYC0_REG`, i.e. period number 0. ULP program code can use `SLEEP` instruction to select which of the `SENS_ULP_CP_SLEEP_CYCx_REG` should be used for subsequent wakeups.

Return

- ESP_OK on success
- ESP_ERR_INVALID_ARG if `period_index` is out of range

Parameters

- `period_index`: wakeup period setting number (0 - 4)
- `period_us`: wakeup period, us

Once the timer counts the number of ticks set in the selected `SENS_ULP_CP_SLEEP_CYCx_REG` register, ULP coprocessor powers up and starts running the program from the entry point set in the call to `ulp_run`.

The program runs until it encounters a `halt` instruction or an illegal instruction. Once the program halts, ULP coprocessor powers down, and the timer is started again.

To disable the timer (effectively preventing the ULP program from running again), clear the `RTC_CNTL_ULP_CP_SLP_TIMER_EN` bit in the `RTC_CNTL_STATE0_REG` register. This can be done both from ULP code and from the main program.

Unit Testing in ESP32

ESP-IDF comes with a unit test app based on Unity - unit test framework. Unit tests are integrated in the ESP-IDF repository and are placed in `test` subdirectory of each component respectively.

Adding unit tests

Unit tests are added in the `test` subdirectory of the respective component. Tests are added in C files, a single C file can include multiple test cases. Test files start with the word “test”.

The test file should include `unity.h` and the header for the C module to be tested.

Tests are added in a function in the C file as follows:

```
TEST_CASE("test name", "[module name]"
{
    // Add test here
}
```

First argument is a descriptive name for the test, second argument is an identifier in square brackets. Identifiers are used to group related test, or tests with specific properties.

There is no need to add a main function with `UNITY_BEGIN()` and `UNITY_END()` in each test case. `unity_platform.c` will run `UNITY_BEGIN()`, run the tests cases, and then call `UNITY_END()`.

Each `test` subdirectory needs to include `component.mk` file with at least the following line of code:

```
COMPONENT_ADD_LDFLAGS = -Wl,--whole-archive -l$(COMPONENT_NAME) -Wl,--no-whole-archive
```

See <http://www.throwtheswitch.org/unity> for more information about writing tests in Unity.

Building unit test app

Follow the setup instructions in the top-level `esp-idf` README. Make sure that `IDF_PATH` environment variable is set to point to the path of `esp-idf` top-level directory.

Change into `tools/unit-test-app` directory to configure and build it:

- `make menuconfig` - configure unit test app.
- `make TESTS_ALL=1` - build unit test app with tests for each component having tests in the `test` subdirectory.
- `make TEST_COMPONENTS='xxx'` - build unit test app with tests for specific components.

When the build finishes, it will print instructions for flashing the chip. You can simply run `make flash` to flash all build output.

You can also run `make flash TESTS_ALL=1` or `make TEST_COMPONENTS='xxx'` to build and flash. Everything needed will be rebuilt automatically before flashing.

Use `menuconfig` to set the serial port for flashing.

Running unit tests

After flashing reset the ESP32 and it will boot the unit test app.

Unit test app prints a test menu with all available tests.

Test cases can be run by inputting one of the following:

- Test case name in quotation marks to run a single test case
- Test case index to run a single test case
- Module name in square brackets to run all test cases for a specific module
- An asterisk to run all test cases

Application Level Tracing library

Overview

IDF provides useful feature for program behaviour analysis: application level tracing. It is implemented in the corresponding library and can be enabled via menuconfig. This feature allows to transfer arbitrary data between host and ESP32 via JTAG interface with small overhead on program execution. Developers can use this library to send application specific state of execution to the host and receive commands or other type of info in the opposite direction at runtime. The main use cases of this library are:

1. System behaviour analysis. See *System Behaviour Analysis with SEGGER SystemView*.
2. Lightweight logging to the host. See *Logging to Host*.
3. Collecting application specific data. See *Application Specific Tracing*.

Tracing components when working over JTAG interface are shown in the figure below.

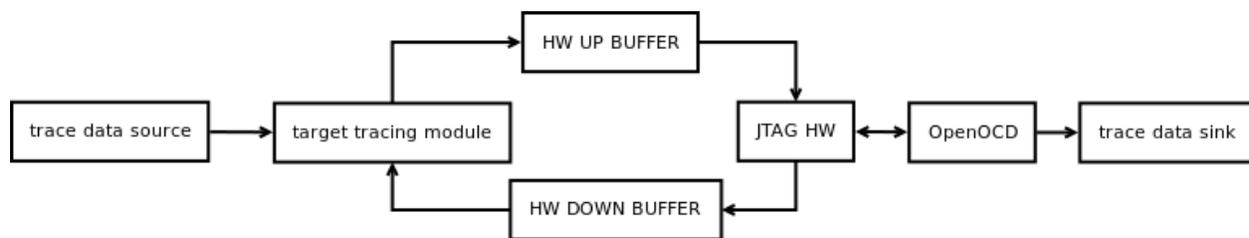


Fig. 4.1: Tracing Components when Working Over JTAG

Note: Currently only JTAG interface is supported as transport.

Modes of operation

The library supports two modes of operation:

- **Post-mortem mode.** This is the default mode. The mode does not need interaction from the host side. In this mode tracing module does not check whether host has read all the data from *HW UP BUFFER* buffer and overwrites old data with the new ones. This mode is useful when only the latest trace data are interesting to the user, e.g. for analyzing program's behaviour just before the crash. Host can read the data later on upon user request, e.g. via special OpenOCD command in case of working via JTAG interface.
- **Streaming mode.** Tracing module enters this mode when host connects to ESP32. In this mode before writing new data to *HW UP BUFFER* tracing module checks that there is enough space in it and if necessary waits for the host to read data and free enough memory. Maximum waiting time is controlled via timeout values passed by

users to corresponding API routines. So when application tries to write data to trace buffer using finite value of the maximum waiting time it is possible situation that this data will be dropped. Especially this is true for tracing from time critical code (ISRs, OS scheduler code etc.) when infinite timeouts can lead to system malfunction. In order to avoid loss of such critical data developers can enable additional data buffering via menuconfig option `CONFIG_ESP32_APPTRACE_PENDING_DATA_SIZE_MAX`. This macro specifies the size of data which can be buffered in above conditions. The option can also help to overcome situation when data transfer to the host is temporarily slowed down, e.g due to USB bus congestions etc. But it will not help when average bitrate of trace data stream exceeds HW interface capabilities.

Config Options and Dependencies

Using of this feature depends on two components:

1. **Host side:** Application tracing is done over JTAG, so it needs OpenOCD to be set up and running on host machine. For instructions how to set it up, please, see *Debugging* for details.
2. **Target side:** Application tracing functionality can be enabled by `CONFIG_ESP32_APPTRACE_ENABLE` macro via menuconfig. This option enables the module and makes tracing API available for users. Actually there is menu which allows selecting destination for the trace data (HW interface for transport). So choosing one of the destinations automatically enables `CONFIG_ESP32_APPTRACE_ENABLE` option.

Note: In order to achieve higher data rates and minimize number of dropped packets it is recommended to modify JTAG adapter working frequency in OpenOCD config file `$IDF_PATH/docs/esp32.cfg`. Maximum tested stable speed on ESP-WROVER-KIT board is 26MHz, so for this board you need to have the following statement in your configuration file `adapter_khz 26000` instead of the default `adapter_khz 200`. Actually maximum stable JTAG frequency can depend on the host system configuration. In general JTAG clock should not exceed APB clock / 4.

There are two additional menuconfig options not mentioned above:

1. `CONFIG_ESP32_APPTRACE_POSTMORTEM_FLUSH_TRAX_THRESH`. This option is necessary due to the nature of working over JTAG. In that mode trace data are exposed to the host in 16KB blocks. In post-mortem mode when one block is filled it is exposed to the host and the previous one becomes unavailable. In other words trace data are overwritten in 16KB granularity. On panic the latest data from the current input block are exposed to host and host can read them for post-analysis. It can happen that system panic occurs when there are very small amount of data which are not exposed to the host yet. In this case the previous 16KB of collected data will be lost and host will see the latest, but very small piece of the trace. It can be insufficient to diagnose the problem. This menuconfig option allows avoiding such situations. It controls the threshold for flushing data in case of panic. For example user can decide that it needs not less than 512 bytes of the recent trace data, so if there is less than 512 bytes of pending data at the moment of panic they will not be flushed and will not overwrite previous 16KB. The option is only meaningful in post-mortem mode and when working over JTAG.
2. `CONFIG_ESP32_APPTRACE_ONPANIC_HOST_FLUSH_TMO`. The option is only meaningful in streaming mode and controls the maximum time tracing module will wait for the host to read the last data in case of panic.

How to use this library

This library provides API for transferring arbitrary data between host and ESP32. When enabled in menuconfig target application tracing module is initialized automatically at the system startup, so all what the user needs to do is to call corresponding API to send, receive or flush the data.

Application Specific Tracing

In general user should decide what type of data should be transferred in every direction and how these data must be interpreted (processed). The following steps must be performed to transfer data between target and host:

1. On target side user should implement algorithms for writing trace data to the host. Piece of code below shows an example how to do this.

```
#include "esp_app_trace.h"
...
char buf[] = "Hello World!";
esp_err_t res = esp_apprace_write(ESP_APPTRACE_DEST_TRAX, buf, strlen(buf), ESP_
↳APPTRACE_TMO_INFINITE);
if (res != ESP_OK) {
    ESP_LOGE(TAG, "Failed to write data to host!");
    return res;
}
```

`esp_apprace_write()` function uses `memcpy` to copy user data to the internal buffer. In some cases it can be more optimal to use `esp_apprace_buffer_get()` and `esp_apprace_buffer_put()` functions. They allow developers to allocate buffer and fill it themselves. The following piece of code shows how to do this.

```
#include "esp_app_trace.h"
...
int number = 10;
char *ptr = (char *)esp_apprace_buffer_get(32, 100/*tmo in us*/);
if (ptr == NULL) {
    ESP_LOGE("Failed to get buffer!");
    return ESP_FAIL;
}
sprintf(ptr, "Here is the number %d", number);
esp_err_t res = esp_apprace_buffer_put(ptr, 100/*tmo in us*/);
if (res != ESP_OK) {
    /* in case of error host tracing tool (e.g. OpenOCD) will report incomplete user_
↳buffer */
    ESP_LOGE("Failed to put buffer!");
    return res;
}
```

Also according to his needs user may want to receive data from the host. Piece of code below shows an example how to do this.

```
#include "esp_app_trace.h"
...
char buf[32];
size_t sz = sizeof(buf);
/* check for incoming data and read them if any */
esp_err_t res = esp_apprace_read(ESP_APPTRACE_DEST_TRAX, buf, &sz, 0/*do not wait*/);
if (res != ESP_OK) {
    ESP_LOGE(TAG, "Failed to read data from host!");
    return res;
}
if (sz > 0) {
    /* we have data, process them */
    ...
}
```

2. The next step is to build the program image and download it to the target as described in *Build and Flash*.

3. Run OpenOCD (see *Debugging*).
4. Connect to OpenOCD telnet server. On Linux it can be done using the following command in terminal `telnet <ocd_host> 4444`. If telnet session is opened on the same machine which runs OpenOCD you can use `localhost` as `<ocd_host>` in the command above.
5. Start trace data collection using special OpenOCD command. This command will transfer tracing data and redirect them to specified file or socket (currently only files are supported as trace data destination). For description of the corresponding commands see *OpenOCD Application Level Tracing Commands*.
6. The final step is to process received data. Since format of data is defined by user the processing stage is out of the scope of this document. Good starting points for data processor are python scripts in `$IDF_PATH/tools/esp_app_trace: appttrace_proc.py` (used for feature tests) and `logtrace_proc.py` (see more details in section *Logging to Host*).

OpenOCD Application Level Tracing Commands

HW UP BUFFER is shared between user data blocks and filling of the allocated memory is performed on behalf of the API caller (in task or ISR context). In multithreading environment it can happen that task/ISR which fills the buffer is preempted by another high prio task/ISR. So it is possible situation that user data preparation process is not completed at the moment when that chunk is read by the host. To handle such conditions tracing module prepends all user data chunks with header which contains allocated user buffer size (2 bytes) and length of actually written data (2 bytes). So total length of the header is 4 bytes. OpenOCD command which reads trace data reports error when it reads incomplete user data chunk, but in any case it puts contents of the whole user chunk (including unfilled area) to output file. Below is the description of available OpenOCD application tracing commands.

Note: Currently OpenOCD does not provide commands to send arbitrary user data to the target.

Command usage:

```
esp108 appttrace [start <options>] | [stop] | [status] | [dump <cores_num> <outfile>]
```

Sub-commands:

Sub-command	Description
start	Start tracing (continuous streaming).
stop	Stop tracing.
status	Get tracing status.
dump	Dump all data from <i>HW UP BUFFER</i> (post-mortem dump).

Start command syntax:

```
start <outfile1> [outfile2] [poll_period [trace_size [stop_tmo [wait4halt [skip_size]]]]]
```

Argument	Description
out-file1	Path to file to save data from PRO CPU. This argument should have the following format: <code>file://path/to/file</code> .
out-file2	Path to file to save data from APP CPU. This argument should have the following format: <code>file://path/to/file</code> .
poll_period	Data polling period (in ms). If greater then 0 then command runs in non-blocking mode. By default 1 ms.
trace_size	Maximum size of data to collect (in bytes). Tracing is stopped after specified amount of data is received. By default -1 (trace size stop trigger is disabled).
stop_tm	Idle timeout (in sec). Tracing is stopped if there is no data for specified period of time. By default -1 (disable this stop trigger).
wait4halt	If 0 start tracing immediately, otherwise command waits for the target to be halted (after reset, by breakpoint etc.) and then automatically resumes it and starts tracing. By default 0.
skip_size	Number of bytes to skip at the start. By default 0.

Note: If `poll_period` is 0 OpenOCD telnet command line will not be available until tracing is stopped. You must stop it manually by resetting the board or pressing CTRL+C in OpenOCD window (not one with the telnet session).

Logging to Host

IDF implements useful feature: logging to host via application level tracing library. This is a kind of semihosting when all `ESP_LOGx` calls sends strings to be printed to the host instead of UART. This can be useful because “printing to host” eliminates some steps performed when logging to UART. The most part of work is done on the host. By default IDF’s logging library uses `vprintf`-like function to write formatted output to dedicated UART. In general it involves the following steps:

1. Format string is parsed to obtain type of each argument.
2. According to its type every argument is converted to string representation.
3. Format string combined with converted arguments is sent to UART.

Though implementation of `vprintf`-like function can be optimised to a certain level, all steps above have to be performed in any case and every step takes some time (especially item 3). So it is frequent situation when addition of extra logging to the program to diagnose some problem changes its behaviour and problem disappears or in the worst cases program can not work normally at all and ends up with an error or even hangs. Possible ways to overcome this problem are to use higher UART bitrates (or another faster interface) and/or move string formatting procedure to the host. Application level tracing feature can be used to transfer log information to host using `esp_apprace_vprintf` function. This function does not perform full parsing of the format string and arguments, instead it just calculates number of arguments passed and sends them along with the format string address to the host. On the host log data are processed and printed out by a special Python script.

Limitations

Curent implementation of logging over JTAG has several limitations:

1. Tracing from `ESP_EARLY_LOGx` macros is not supported.
2. No support for `printf` arguments which size exceeds 4 bytes (e.g. `double` and `uint64_t`).
3. Only strings from `.rodata` section are supported as format strings and arguments.
4. Maximum number of `printf` arguments is 256.

How To Use It

In order to use logging via trace module user needs to perform the following steps:

1. On target side special vprintf-like function needs to be installed. As it was mentioned earlier this function is `esp_apprtrace_vprintf`. It sends log data to the host. Example code is shown below.

```
#include "esp_app_trace.h"
...
void app_main()
{
    // set log vprintf handler
    esp_log_set_vprintf(esp_apprtrace_vprintf);
    ...
    // user code using ESP_LOGx starts here
    // all data passed to ESP_LOGx are sent to host
    ...
    // restore log vprintf handler
    esp_log_set_vprintf(vprintf);
    // flush last data to host
    esp_apprtrace_flush(ESP_APPTRACE_DEST_TRAX, 100000 /*tmo in us*/);
    ESP_LOGI(TAG, "Tracing is finished."); // this will be printed out to UART
    while (1);
}
```

2. Follow instructions in items 2-5 in *Application Specific Tracing*.
3. To print out collected log records run the following command in terminal: `$IDF_PATH/tools/esp_app_trace/logtrace_proc.py /path/to/trace/file /path/to/program/elf/file`.

Log Trace Processor Command Options

Command usage:

```
logtrace_proc.py [-h] [--no-errors] <trace_file> <elf_file>
```

Positional arguments:

Argument	Description
trace_file	Path to log trace file
elf_file	Path to program ELF file

Optional arguments:

Argument	Description
-h, -help	show this help message and exit
-no-errors, -n	Do not print errors

System Behaviour Analysis with SEGGER SystemView

Another useful IDF feature built on top of application tracing library is the system level tracing which produces traces compatible with SEGGER SystemView tool (see [SystemView](#)). SEGGER SystemView is a real-time recording and visualization tool that allows to analyze runtime behavior of an application.

Note: Currently IDF-based application is able to generate SystemView compatible traces, but tracing process can not be controlled using that tool.

How To Use It

Support for this feature is enabled by `CONFIG_SYSVIEW_ENABLE` menuconfig option. It also enables a bunch of options related to that type of tracing:

1. `CONFIG_SYSVIEW_TS_SOURCE` selects the source of timestamps for SystemView events. In single core mode timestamps are generated using ESP32 internal cycle counter running at maximum 240 Mhz (~4ns granularity). In dual-core mode external timer working at 40Mhz is used, so timestamp granularity is 25 ns.
2. `CONFIG_SYSVIEW_EVT_XXX` enables or disables particular SystemView event.

IDF has all the code required to produce SystemView compatible traces, so user can just configure necessary project options (see above), build, download the image to target and use OpenOCD to collect data as described in the previous sections.

OpenOCD SystemView Tracing Command Options

Command usage:

```
esp108 sysview [start <options>] | [stop] | [status]
```

Sub-commands:

Sub-command	Description
start	Start tracing (continuous streaming).
stop	Stop tracing.
status	Get tracing status.

Start command syntax:

```
start <outfile1> [outfile2] [poll_period [trace_size [stop_tmo]]]
```

Argument	Description
out-file1	Path to file to save data from PRO CPU. This argument should have the following format: file://path/to/file.
out-file2	Path to file to save data from APP CPU. This argument should have the following format: file://path/to/file.
poll_period	Data polling period (in ms). If greater then 0 then command runs in non-blocking mode. By default 1 ms.
trace_size	Maximum size of data to collect (in bytes). Tracing is stopped after specified amount of data is received. By default -1 (trace size stop trigger is disabled).
stop_tmo	Idle timeout (in sec). Tracing is stopped if there is no data for specified period of time. By default -1 (disable this stop trigger).

Note: If `poll_period` is 0 OpenOCD telnet command line will not be available until tracing is stopped. You must stop it manually by resetting the board or pressing CTRL+C in OpenOCD window (not one with the telnet session).

Data Visualization

After trace data are collected user can use special tool to visualize the results and inspect behaviour of the program. Unfortunately SystemView does not support tracing from multiple cores. So when tracing from ESP32 working in dual-core mode two files are generated: one for PRO CPU and another one for APP CPU. User can load every file into separate instance of the tool. It is uneasy and awkward to analyze data for every core in separate instance of the tool. Fortunately there is Eclipse plugin called *Impulse* which can load several trace files and makes it possible to inspect events from both cores in one view. Also this plugin has no limitation of 1000000 events as compared to free version of SystemView.

Good instruction on how to install, configure and visualize data in Impulse from one core can be found [here](#).

Note: IDF uses its own mapping for SystemView FreeRTOS events IDs, so user needs to replace original file with mapping `$SYSVIEW_INSTALL_DIR/Description/SYSVIEW_FreeRTOS.txt` with `$IDF_PATH/docs/api-guides/SYSVIEW_FreeRTOS.txt`. Also contents of that IDF specific file should be used when configuring SystemView serializer using above link.

Configure Impulse for Dual Core Traces

After installing Impulse and ensuring that it can successfully load trace files for each core in separate tabs user can add special Multi Adapter port and load both files into one view. To do this user needs to do the following in Eclipse:

1. Open 'Signal Ports' view. Go to Windows->Show View->Other menu. Find 'Signal Ports' view in Impulse folder and double-click on it.
2. In 'Signal Ports' view right-click on 'Ports' and select 'Add ...'->New Multi Adapter Port
3. In open dialog Press 'Add' button and select 'New Pipe/File'.
4. In open dialog select 'SystemView Serializer' as Serializer and set path to PRO CPU trace file. Press OK.
5. Repeat steps 3-4 for APP CPU trace file.
6. Double-click on created port. View for this port should open.
7. Click Start/Stop Streaming button. Data should be loaded.
8. Use 'Zoom Out', 'Zoom In' and 'Zoom Fit' button to inspect data.
9. For settings measurement cursors and other features please see [Impulse documentation](#)).

Note: If you have problems with visualization (no data are shown or strange behaviour of zoom action is observed) you can try to delete current signal hierarchy and double click on necessary file or port. Eclipse will ask you to create new signal hierarchy.

ESP32 ROM console

When an ESP32 is unable to boot from flash ROM (and the fuse disabling it hasn't been blown), it boots into a rom console. The console is based on TinyBasic, and statements entered should be in the form of BASIC statements. As is common in the BASIC language, without a preceding line number, commands entered are executed immediately; lines with a prefixed line number are stored as part of a program.

Full list of supported statements and functions

System

- **BYE** - exits Basic, reboots ESP32, retries booting from flash
- **END** - stops execution from the program, also “STOP”
- **MEM** - displays memory usage statistics
- **NEW** - clears the current program
- **RUN** - executes the current program

IO, Documentation

- **PEEK(address)** - get a 32-bit value from a memory address
- **POKE** - write a 32-bit value to memory
- **USR(addr, arg1, ..)** - Execute a machine language function
- **PRINT expression** - print out the expression, also “?”
- **PHEX expression** - print expression as a hex number
- **REM stuff** - remark/comment, also “”

Expressions, Math

- **A=V, LET A=V** - assign value to a variable
- **+, -, *, /** - Math
- **<, <=, =, <>, !=, >=, >** - Comparisons
- **ABS(expression)** - returns the absolute value of the expression
- **RSEED(v)** - sets the random seed to v
- **RND(m)** - returns a random number from 0 to m
- **A=1234 - * Assign a decimal value***
- **A=&h1A2 - * Assign a hex value***
- **A=&b1001 - Assign a binary value**

Control

- **IF expression THEN statement** - perform statement if expression is true
- **FOR variable = start TO end** - start for block
- **FOR variable = start TO end STEP value** - start for block with step
- **NEXT** - end of for block
- **GOTO linenummer** - continue execution at this line number
- **GOSUB linenummer** - call a subroutine at this line number
- **RETURN** - return from a subroutine

- DELAY - *Delay a given number of milliseconds*

Pin IO

- IODIR - *Set a GPIO-pin as an output (1) or input (0)*
- IOSET - *Set a GPIO-pin, configured as output, to high (1) or low (0)*
- IOGET - *Get the value of a GPIO-pin*

Example programs

Here are a few example commands and programs to get you started...

Read UART_DATE register of uart0

```
> PHEX PEEK(&h3FF40078)
15122500
```

Set GPIO2 using memory writes to GPIO_OUT_REG

Note: you can do this easier with the IOSET command

```
> POKE &h3FF44004,PEEK(&h3FF44004) OR &b100
```

Get value of GPIO0

```
> IODIR 0,0
> PRINT IOGET(0)
0
```

Blink LED

Hook up an LED between GPIO2 and ground. When running the program, the LED should blink 10 times.

```
10 IODIR 2,1
20 FOR A=1 TO 10
30 IOSET 2,1
40 DELAY 250
50 IOSET 2,0
60 DELAY 250
70 NEXT A
RUN
```

Credits

The ROM console is based on “TinyBasicPlus” by Mike Field and Scott Lawrence, which is based on “68000 Tiny-Basic” by Gordon Brandyly

We welcome contributions to the esp-idf project!

How to Contribute

Contributions to esp-idf - fixing bugs, adding features, adding documentation - are welcome. We accept contributions via [Github Pull Requests](#).

Before Contributing

Before sending us a Pull Request, please consider this list of points:

- Is the contribution entirely your own work, or already licensed under an Apache License 2.0 compatible Open Source License? If not then we unfortunately cannot accept it.
- Does any new code conform to the esp-idf *Style Guide*?
- Does the code documentation follow requirements in *Documenting Code*?
- Is the code adequately commented for people to understand how it is structured?
- Is there documentation or examples that go with code contributions? There are additional suggestions for writing good examples in [examples](#) readme.
- Are comments and documentation written in clear English, with no spelling or grammar errors?
- If the contribution contains multiple commits, are they grouped together into logical changes (one major change per pull request)? Are any commits with names like “fixed typo” [squashed into previous commits](#)?
- If you’re unsure about any of these points, please open the Pull Request anyhow and then ask us for feedback.

Pull Request Process

After you open the Pull Request, there will probably be some discussion in the comments field of the request itself.

Once the Pull Request is ready to merge, it will first be merged into our internal git system for in-house automated testing.

If this process passes, it will be merged onto the public github repository.

Legal Part

Before a contribution can be accepted, you will need to sign our *Contributor Agreement*. You will be prompted for this automatically as part of the Pull Request process.

Related Documents

Espressif IoT Development Framework Style Guide

About this guide

Purpose of this style guide is to encourage use of common coding practices within the ESP-IDF.

Style guide is a set of rules which are aimed to help create readable, maintainable, and robust code. By writing code which looks the same way across the code base we help others read and comprehend the code. By using same conventions for spaces and newlines we reduce chances that future changes will produce huge unreadable diffs. By following common patterns for module structure and by using language features consistently we help others understand code behavior.

We try to keep rules simple enough, which means that they can not cover all potential cases. In some cases one has to bend these simple rules to achieve readability, maintainability, or robustness.

When doing modifications to third-party code used in ESP-IDF, follow the way that particular project is written. That will help propose useful changes for merging into upstream project.

C code formatting

Indentation

Use 4 spaces for each indentation level. Don't use tabs for indentation. Configure the editor to emit 4 spaces each time you press tab key.

Vertical space

Place one empty line between functions. Don't begin or end a function with an empty line.

```
void function1()
{
    do_one_thing();
    do_another_thing();
    // INCORRECT, don't place empty line here
```

```

}
// place empty line here
void function2()
{
// INCORRECT, don't use an empty line here
    int var = 0;
    while (var < SOME_CONSTANT) {
        do_stuff(&var);
    }
}

```

Horizontal space

Always add single space after conditional and loop keywords:

```

if (condition) { // correct
    // ...
}

switch (n) { // correct
    case 0:
        // ...
}

for(int i = 0; i < CONST; ++i) { // INCORRECT
    // ...
}

```

Add single space around binary operators. No space is necessary for unary operators. It is okay to drop space around multiply and divide operators:

```

const int y = y0 + (x - x0) * (y1 - y0) / (x1 - x0); // correct

const int y = y0 + (x - x0)*(y1 - y0)/(x1 - x0); // also okay

int y_cur = -y; // correct
++y_cur;

const int y = y0+(x-x0)*(y1-y0)/(x1-x0); // INCORRECT

```

No space is necessary around `.` and `->` operators.

Sometimes adding horizontal space within a line can help make code more readable. For example, you can add space to align function arguments:

```

gpio_matrix_in(PIN_CAM_D6, I2S0I_DATA_IN14_IDX, false);
gpio_matrix_in(PIN_CAM_D7, I2S0I_DATA_IN15_IDX, false);
gpio_matrix_in(PIN_CAM_HREF, I2S0I_H_ENABLE_IDX, false);
gpio_matrix_in(PIN_CAM_PCLK, I2S0I_DATA_IN15_IDX, false);

```

Note however that if someone goes to add new line with a longer identifier as first argument (e.g. `PIN_CAM_VSYNC`), it will not fit. So other lines would have to be realigned, adding meaningless changes to the commit.

Therefore, use horizontal alignment sparingly, especially if you expect new lines to be added to the list later.

Never use TAB characters for horizontal alignment.

Never add trailing whitespace at the end of the line.

Braces

- Function definition should have a brace on a separate line:

```
// This is correct:
void function(int arg)
{
}

// NOT like this:
void function(int arg) {
}
```

- Within a function, place opening brace on the same line with conditional and loop statements:

```
if (condition) {
    do_one();
} else if (other_condition) {
    do_two();
}
```

Comments

Use `//` for single line comments. For multi-line comments it is okay to use either `//` on each line or a `/* */` block.

Although not directly related to formatting, here are a few notes about using comments effectively.

- Don't use single comments to disable some functionality:

```
void init_something()
{
    setup_dma();
    // load_resources();           // WHY is this thing commented, asks the_
    ↪reader?
    start_timer();
}
```

- If some code is no longer required, remove it completely. If you need it you can always look it up in git history of this file. If you disable some call because of temporary reasons, with an intention to restore it in the future, add explanation on the adjacent line:

```
void init_something()
{
    setup_dma();
    // TODO: we should load resources here, but loader is not fully integrated_
    ↪yet.
    // load_resources();
    start_timer();
}
```

- Same goes for `#if 0 ... #endif` blocks. Remove code block completely if it is not used. Otherwise, add comment explaining why the block is disabled. Don't use `#if 0 ... #endif` or comments to store code snippets which you may need in the future.

- Don't add trivial comments about authorship and change date. You can always look up who modified any given line using git. E.g. this comment adds clutter to the code without adding any useful information:

```
void init_something()
{
    setup_dma();
    // XXX add 2016-09-01
    init_dma_list();
    fill_dma_item(0);
    // end XXX add
    start_timer();
}
```

Formatting your code

You can use `astyle` program to format your code according to the above recommendations.

If you are writing a file from scratch, or doing a complete rewrite, feel free to re-format the entire file. If you are changing a small portion of file, don't re-format the code you didn't change. This will help others when they review your changes.

To re-format a file, run:

```
tools/format.sh components/my_component/file.c
```

Documenting code

Please see the guide here: [Documenting Code](#).

Structure and naming

Language features

To be written.

Documenting Code

The purpose of this description is to provide quick summary on documentation style used in [espressif/esp-idf](#) repository and how to add new documentation.

Introduction

When documenting code for this repository, please follow [Doxygen style](#). You are doing it by inserting special commands, for instance `@param`, into standard comments blocks, for example:

```
/**
 * @param ratio this is oxygen to air ratio
 */
```

Doxygen is phrasing the code, extracting the commands together with subsequent text, and building documentation out of it.

Typical comment block, that contains documentation of a function, looks like below.

```
348
349 /**
350  * @brief disable GPIO wake-up function.
351  * @param gpio_num: GPIO number
352  * @return ESP_OK: success
353  *         ESP_ERR_INVALID_ARG: parameter error
354  */
355 esp_err_t gpio_wakeup_disable(gpio_num_t gpio_num);
356
```

The diagram shows three callout boxes: 'commands' pointing to the `/**` line, 'documentation' pointing to the `@brief` line, and 'function prototype' pointing to the `esp_err_t gpio_wakeup_disable(gpio_num_t gpio_num);` line.

Doxygen supports couple of formatting styles. It also gives you great flexibility on level of details to include in documentation. To get familiar with available features, please check data reach and very well organized [Doxygen Manual](#).

Why we need it?

The ultimate goal is to ensure that all the code is consistently documented, so we can use tools like [Sphinx](#) and [Breathe](#) to aid preparation and automatic updates of API documentation when the code changes.

With these tools the above piece of code renders like below:

```
348
349 /**
350  * @brief disable GPIO wake-up function.
351  * @param gpio_num: GPIO number
352  * @return ESP_OK: success
353  *         ESP_ERR_INVALID_ARG: parameter error
354  */
355 esp_err_t gpio_wakeup_disable(gpio_num_t gpio_num);
356
```

The rendered documentation shows the function signature `esp_err_t gpio_wakeup_disable(gpio_num_t gpio_num)` in a blue box. Below it is the brief description "disable GPIO wake-up function." followed by a "Return" section with values "ESP_OK: success" and "ESP_ERR_INVALID_ARG: parameter error". A "Parameters" section lists the parameter `gpio_num` as "GPIO number".

Go for it!

When writing code for this repository, please follow guidelines below.

1. Document all building blocks of code: functions, structs, typedefs, enums, macros, etc. Provide enough information on purpose, functionality and limitations of documented items, as you would like to see them documented when reading the code by others.

- Documentation of function should describe what this function does. If it accepts input parameters and returns some value, all of them should be explained.
- Do not add a data type before parameter or any other characters besides spaces. All spaces and line breaks are compressed into a single space. If you like to break a line, then break it twice.

The diagram illustrates the rendering process for a C function signature and its documentation. It shows a source code snippet with callouts explaining formatting rules, and then the resulting rendered HTML output.

Source Code Snippet:

```

41 /**
42  * @brief Set log level for given tag
43  *
44  * If logging for given component has already been enabled, changes previous setting.
45  *
46  * @param tag Tag of the log entries to enable. Must be a non-NULL zero terminated string.
47  *          Value "" resets log level for all tags to the given value.
48  *
49  * @param level Selects log level to enable.
50  *            Only logs at this and lower levels will be shown.
51  */
52 void esp_log_level_set(const char* tag, esp_log_level_t level);
    
```

Callouts:

- do not add data type:** Points to the `void` in the function signature.
- white spaces are compressed:** Points to the spaces between `const` and `char` in the signature.
- a line break that will render this line break will not render:** Points to the line break between the two parameters in the signature.

Rendered HTML Output:

```

void esp_log_level_set(const char *tag, esp_log_level_t level)
    
```

Set log level for given tag.

If logging for given component has already been enabled, changes previous setting.

Parameters

- tag** - Tag of the log entries to enable. Must be a non-NULL zero terminated string. Value "" resets log level for all tags to the given value.
- level** - Selects log level to enable. Only logs at this and lower levels will be shown.

- If function has void input or does not return any value, then skip @param or @return

The diagram illustrates the rendering process for a C function signature and its documentation. It shows a source code snippet with callouts explaining formatting rules, and then the resulting rendered HTML output.

Source Code Snippet:

```

26 /**
27  * @brief Initialize BT controller
28  *
29  * This function should be called only once,
30  * before any other BT functions are called.
31  */
32 void bt_controller_init(void);
    
```

Rendered HTML Output:


```

void bt_controller_init(void)
    
```

Initialize BT controller.

This function should be called only once, before any other BT functions are called.

- When documenting a define as well as members of a struct or enum, place specific comment like below after each member.

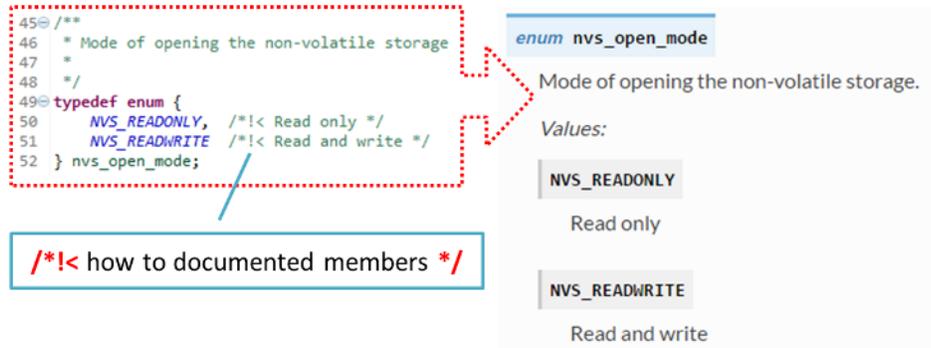

6. To provide well formatted lists, break the line after command (like @return in example below).

```

*
* @return
*   - ESP_OK if erase operation was successful
*   - ESP_ERR_NVS_INVALID_HANDLE if handle has been closed or is NULL
*   - ESP_ERR_NVS_READ_ONLY if handle was opened as read only
*   - ESP_ERR_NVS_NOT_FOUND if the requested key doesn't exist
*   - other error codes from the underlying storage driver
*
    
```

7. Overview of functionality of documented header file, or group of files that make a library, should be placed in the same directory in a separate README.rst file. If directory contains header files for different APIs, then the file name should be apiname-readme.rst.

Go one extra mile

There is couple of tips, how you can make your documentation even better and more useful to the reader.

1. Add code snippets to illustrate implementation. To do so, enclose snippet using @code{c} and @endcode commands.

```

*
* @code{c}
* // Example of using nvs_get_i32:
* int32_t max_buffer_size = 4096; // default value
* esp_err_t err = nvs_get_i32(my_handle, "max_buffer_size", &max_buffer_size);
* assert(err == ESP_OK || err == ESP_ERR_NVS_NOT_FOUND);
* // if ESP_ERR_NVS_NOT_FOUND was returned, max_buffer_size will still
* // have its default value.
* @endcode
*
    
```

The code snippet should be enclosed in a comment block of the function that it illustrates.

2. To highlight some important information use command @attention or @note.

```

*
* @attention
*   1. This API only impact WIFI_MODE_STA or WIFI_MODE_APSTA mode
*   2. If the ESP32 is connected to an AP, call esp_wifi_disconnect to_
*   ↪disconnect.
*
    
```

Above example also shows how to use a numbered list.

3. To provide common description to a group of similar functions, enclose them using `/**@{ */` and `/**@} */` markup commands:

```
/**@{ */
/**
 * @brief common description of similar functions
 *
 */
void first_similar_function (void);
void second_similar_function (void);
/**@} */
```

For practical example see [nvs_flash/include/nvs.h](#).

4. You may want to go even further and skip some code like e.g. repetitive defines or enumerations. In such case enclose the code within `/** @cond */` and `/** @endcond */` commands. Example of such implementation is provided in [driver/include/driver/gpio.h](#).
5. Use markdown to make your documentation even more readable. You will add headers, links, tables and more.

```
*
* [ESP32 Technical Reference] (http://espressif.com/sites/default/files/
* ↪ documentation/esp32\_technical\_reference\_manual\_en.pdf)
*
```

Note: Code snippets, notes, links, etc. will not make it to the documentation, if not enclosed in a comment block associated with one of documented objects.

6. Prepare one or more complete code examples together with description. Place description in a separate file `README.md` in specific folder of [examples](#) directory.

Linking Examples

When linking to examples on GitHub do not use absolute / hardcoded URLs. Instead, use docutils custom roles that will generate links for you. These auto-generated links point to the tree or blob for the git commit ID (or tag) of the repository. This is needed to ensure that links do not get broken when files in master branch are moved around or deleted.

The following roles are provided:

- `:idf:`path`` - points to directory inside ESP-IDF
- `:idf_file:`path`` - points to file inside ESP-IDF
- `:idf_raw:`path`` - points to raw view of the file inside ESP-IDF
- `:component:`path`` - points to directory inside ESP-IDF components dir
- `:component_file:`path`` - points to file inside ESP-IDF components dir
- `:component_raw:`path`` - points to raw view of the file inside ESP-IDF components dir
- `:example:`path`` - points to directory inside ESP-IDF examples dir
- `:example_file:`path`` - points to file inside ESP-IDF examples dir
- `:example_raw:`path`` - points to raw view of the file inside ESP-IDF examples dir

A check is added to the CI build script, which searches RST files for presence of hard-coded links (identified by `tree/master`, `blob/master`, or `raw/master` part of the URL). This check can be run manually: `cd docs` and then `make gh-linkcheck`.

Put it all together

Once documentation is ready, follow instruction in *API Documentation Template* and create a single file, that will merge all individual pieces of prepared documentation. Finally add a link to this file to respective `.. toctree::` in `index.rst` file located in `/docs` folder or subfolders.

OK, but I am new to Sphinx!

1. No worries. All the software you need is well documented. It is also open source and free. Start by checking [Sphinx](#) documentation. If you are not clear how to write using rst markup language, see [reStructuredText Primer](#).
2. Check the source files of this documentation to understand what is behind of what you see now on the screen. Sources are maintained on GitHub in [espressif/esp-idf](#) repository in `docs` folder. You can go directly to the source file of this page by scrolling up and clicking the link in the top right corner. When on GitHub, see what's really inside, open source files by clicking `Raw` button.
3. You will likely want to see how documentation builds and looks like before posting it on the GitHub. There are two options to do so:
 - Install [Sphinx](#), [Breathe](#) and [Doxygen](#) to build it locally. You would need a Linux machine for that.
 - Set up an account on [Read the Docs](#) and build documentation in the cloud. Read the Docs provides document building and hosting for free and their service works really quick and great.
4. To preview documentation before building use [Sublime Text](#) editor together with [OmniMarkupPreviewer](#) plugin.

Wrap up

We love good code that is doing cool things. We love it even better, if it is well documented, so we can quickly make it run and also do the cool things.

Go ahead, contribute your code and documentation!

Related Documents

- *API Documentation Template*

API Documentation Template

Note: INSTRUCTIONS

1. Use this file (`docs/api-reference/template.rst`) as a template to document API.
2. Change the file name to the name of the header file that represents documented API.
3. Include respective files with descriptions from the API folder using `.. include::`
 - `README.rst`
 - `example.rst`

- ...
4. Optionally provide description right in this file.
 5. Once done, remove all instructions like this one and any superfluous headers.
-

Overview

Note: *INSTRUCTIONS*

1. Provide overview where and how this API may be used.
 2. Where applicable include code snippets to illustrate functionality of particular functions.
 3. To distinguish between sections, use the following heading levels:
 - # with overline, for parts
 - * with overline, for chapters
 - =, for sections
 - -, for subsections
 - ^, for subsubsections
 - ", for paragraphs
-

Application Example

Note: *INSTRUCTIONS*

1. Prepare one or more practical examples to demonstrate functionality of this API.
 2. Each example should follow pattern of projects located in `esp-idf/examples/` folder.
 3. Place example in this folder complete with `README.md` file.
 4. Provide overview of demonstrated functionality in `README.md`.
 5. With good overview reader should be able to understand what example does without opening the source code.
 6. Depending on complexity of example, break down description of code into parts and provide overview of functionality of each part.
 7. Include flow diagram and screenshots of application output if applicable.
 8. Finally add in this section synopsis of each example together with link to respective folder in `esp-idf/examples/`.
-

API Reference

Note: *INSTRUCTIONS*

1. This repository provides for automatic update of API reference documentation using *code markup retrieved by Doxygen from header files*.
-

2. Update is done on each documentation build by invoking script `docs/gen-dxd.py` for all header files listed in the INPUT statement of `docs/Doxyfile`.
3. Each line of the INPUT statement (other than a comment that begins with `##`) contains a path to header file `*.h` that will be used to generate corresponding `*.inc` files:

```
##
## Wi-Fi - API Reference
##
../components/esp32/include/esp_wifi.h \
../components/esp32/include/esp_smartconfig.h \
```

4. The `*.inc` files contain formatted reference of API members generated automatically on each documentation build. All `*.inc` files are placed in `Sphinx_build` directory. To see directives generated for e.g. `esp_wifi.h`, run `python gen-dxd.py esp32/include/esp_wifi.h`.
5. To show contents of `*.inc` file in documentation, include it as follows:

```
.. include:: ../_build/inc/esp_wifi.inc
```

For example see `docs/api-reference/wifi/esp_wifi.rst`

6. Optionally, rather than using `*.inc` files, you may want to describe API in your own way. See `docs/api-reference/system/deep_sleep.rst` for example.

Below is the list of common `.. doxygen...::` directives:

- Functions - `.. doxygenfunction:: name_of_function`
- Unions - `.. doxygenunion:: name_of_union`
- Structures - `.. doxygenstruct:: name_of_structure together with :members:`
- Macros - `.. doxygendefine:: name_of_define`
- Type Definitions - `.. doxygentypedef:: name_of_type`
- Enumerations - `.. doxygenenum:: name_of_enumeration`

See [Breathe documentation](#) for additional information.

To provide a link to header file, use the *link custom role* as follows:

```
* :component_file:`path_to/header_file.h`
```

7. In any case, to generate API reference, the file `docs/Doxyfile` should be updated with paths to `*.h` headers that are being documented.
 8. When changes are committed and documentation is built, check how this section has been rendered. *Correct annotations* in respective header files, if required.
-

Contributor Agreement

Individual Contributor Non-Exclusive License Agreement

including the Traditional Patent License OPTION

Thank you for your interest in contributing to Espressif IoT Development Framework (esp-idf) (“We” or “Us”).

The purpose of this contributor agreement (“Agreement”) is to clarify and document the rights granted by contributors to Us. To make this document effective, please follow the instructions at [CONTRIBUTING.rst](#)

1. DEFINITIONS

“**You**” means the Individual Copyright owner who submits a Contribution to Us. If You are an employee and submit the Contribution as part of your employment, You have had Your employer approve this Agreement or sign the Entity version of this document.

“**Contribution**” means any original work of authorship (software and/or documentation) including any modifications or additions to an existing work, Submitted by You to Us, in which You own the Copyright. If You do not own the Copyright in the entire work of authorship, please contact Us at angus@espressif.com.

“**Copyright**” means all rights protecting works of authorship owned or controlled by You, including copyright, moral and neighboring rights, as appropriate, for the full term of their existence including any extensions by You.

“**Material**” means the software or documentation made available by Us to third parties. When this Agreement covers more than one software project, the Material means the software or documentation to which the Contribution was Submitted. After You Submit the Contribution, it may be included in the Material.

“**Submit**” means any form of physical, electronic, or written communication sent to Us, including but not limited to electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, Us, but excluding communication that is conspicuously marked or otherwise designated in writing by You as “Not a Contribution.”

“**Submission Date**” means the date You Submit a Contribution to Us.

“**Documentation**” means any non-software portion of a Contribution.

2. LICENSE GRANT

2.1 Copyright License to Us

Subject to the terms and conditions of this Agreement, You hereby grant to Us a worldwide, royalty-free, NON-exclusive, perpetual and irrevocable license, with the right to transfer an unlimited number of non-exclusive licenses or to grant sublicenses to third parties, under the Copyright covering the Contribution to use the Contribution by all means, including, but not limited to:

- to publish the Contribution,
- to modify the Contribution, to prepare derivative works based upon or containing the Contribution and to combine the Contribution with other software code,
- to reproduce the Contribution in original or modified form,
- to distribute, to make the Contribution available to the public, display and publicly perform the Contribution in original or modified form.

2.2 Moral Rights remain unaffected to the extent they are recognized and not waivable by applicable law. Notwithstanding, You may add your name in the header of the source code files of Your Contribution and We will respect this attribution when using Your Contribution.

3. PATENTS

3.1 Patent License

Subject to the terms and conditions of this Agreement You hereby grant to us a worldwide, royalty-free, non-exclusive, perpetual and irrevocable (except as stated in Section 3.2) patent license, with the right to transfer an unlimited number of non-exclusive licenses or to grant sublicenses to third parties, to make, have made, use, sell, offer for sale, import and otherwise transfer the Contribution and the Contribution in combination with the Material (and portions of such combination). This license applies to all patents owned or controlled by You, whether already acquired or hereafter acquired, that would be infringed by making, having made, using, selling, offering for sale, importing or otherwise transferring of Your Contribution(s) alone or by combination of Your Contribution(s) with the Material.

3.2 Revocation of Patent License

You reserve the right to revoke the patent license stated in section 3.1 if we make any infringement claim that is targeted at your Contribution and not asserted for a Defensive Purpose. An assertion of claims of the Patents shall be considered for a “Defensive Purpose” if the claims are asserted against an entity that has filed, maintained, threatened, or voluntarily participated in a patent infringement lawsuit against Us or any of Our licensees.

4. DISCLAIMER

THE CONTRIBUTION IS PROVIDED “AS IS”. MORE PARTICULARLY, ALL EXPRESS OR IMPLIED WARRANTIES INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT ARE EXPRESSLY DISCLAIMED BY YOU TO US AND BY US TO YOU. TO THE EXTENT THAT ANY SUCH WARRANTIES CANNOT BE DISCLAIMED, SUCH WARRANTY IS LIMITED IN DURATION TO THE MINIMUM PERIOD PERMITTED BY LAW.

5. Consequential Damage Waiver

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL YOU OR US BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF ANTICIPATED SAVINGS, LOSS OF DATA, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL AND EXEMPLARY DAMAGES ARISING OUT OF THIS AGREEMENT REGARDLESS OF THE LEGAL OR EQUITABLE THEORY (CONTRACT, TORT OR OTHERWISE) UPON WHICH THE CLAIM IS BASED.

6. Approximation of Disclaimer and Damage Waiver

IF THE DISCLAIMER AND DAMAGE WAIVER MENTIONED IN SECTION 4 AND SECTION 5 CANNOT BE GIVEN LEGAL EFFECT UNDER APPLICABLE LOCAL LAW, REVIEWING COURTS SHALL APPLY LOCAL LAW THAT MOST CLOSELY APPROXIMATES AN ABSOLUTE WAIVER OF ALL CIVIL LIABILITY IN CONNECTION WITH THE CONTRIBUTION.

7. Term

7.1 This Agreement shall come into effect upon Your acceptance of the terms and conditions.

7.2 In the event of a termination of this Agreement Sections 4, 5, 6, 7 and 8 shall survive such termination and shall remain in full force thereafter. For the avoidance of doubt, Contributions that are already licensed under a free and open source license at the date of the termination shall remain in full force after the termination of this Agreement.

8. Miscellaneous

8.1 This Agreement and all disputes, claims, actions, suits or other proceedings arising out of this agreement or relating in any way to it shall be governed by the laws of People’s Republic of China excluding its private international law

provisions.

8.2 This Agreement sets out the entire agreement between You and Us for Your Contributions to Us and overrides all other agreements or understandings.

8.3 If any provision of this Agreement is found void and unenforceable, such provision will be replaced to the extent possible with a provision that comes closest to the meaning of the original provision and that is enforceable. The terms and conditions set forth in this Agreement shall apply notwithstanding any failure of essential purpose of this Agreement or any limited remedy to the maximum extent possible under law.

8.4 You agree to notify Us of any facts or circumstances of which you become aware that would make this Agreement inaccurate in any respect.

You

Date:	
Name:	
Title:	
Address:	

Us

Date:	
Name:	
Title:	
Address:	

CHAPTER 6

Resources

- The [esp32.com forum](#) is a place to ask questions and find community resources.
- Check the [Issues](#) section on GitHub if you find a bug or have a feature request. Please check existing [Issues](#) before opening a new one.
- If you're interested in contributing to ESP-IDF, please check the [Contributions Guide](#).
- To develop applications using Arduino platform, refer to [Arduino core for ESP32 WiFi chip](#).
- For additional ESP32 product related information, please refer to [documentation](#) section of [Espressif](#) site.
- Mirror of this documentation is available under: <https://dl.espressif.com/doc/esp-idf/latest/>.

Software Copyrights

All original source code in this repository is Copyright (C) 2015-2016 Espressif Systems. This source code is licensed under the Apache License 2.0 as described in the file LICENSE.

Additional third party copyrighted code is included under the following licenses:

- **Newlib** (components/newlib) is licensed under the BSD License and is Copyright of various parties, as described in the file components/newlib/COPYING.NEWLIB.
- Xtensa header files (components/esp32/include/xtensa) are Copyright (C) 2013 Tensilica Inc and are licensed under the MIT License as reproduce in the individual header files.
- **esptool.py** (components/esptool_py/esptool) is Copyright (C) 2014-2016 Fredrik Ahlberg, Angus Gratton and is licensed under the GNU General Public License v2, as described in the file components/esptool_py/LICENSE.
- Original parts of **FreeRTOS** (components/freertos) are Copyright (C) 2015 Real Time Engineers Ltd and is licensed under the GNU General Public License V2 with the FreeRTOS Linking Exception, as described in the file components/freertos/license.txt.
- Original parts of **LWIP** (components/lwip) are Copyright (C) 2001, 2002 Swedish Institute of Computer Science and are licensed under the BSD License as described in the file components/lwip/COPYING.
- **KConfig** (tools/kconfig) is Copyright (C) 2002 Roman Zippel and others, and is licensed under the GNU General Public License V2.
- **wpa_supplicant** Copyright (c) 2003-2005 Jouni Malinen and licensed under the BSD license.
- **FreeBSD net80211** Copyright (c) 2004-2008 Sam Leffler, Errno Consulting and licensed under the BSD license.
- **JSMN JSON Parser** (components/jsmn) Copyright (c) 2010 Serge A. Zaitsev and licensed under the MIT license.

Where source code headers specify Copyright & License information, this information takes precedence over the summaries made here.

ROM Source Code Copyrights

ESP32 mask ROM hardware includes binaries compiled from portions of the following third party software:

- **Newlib**, as licensed under the BSD License and Copyright of various parties, as described in the file components/newlib/COPYING.NEWLIB.
- **Xtensa libhal**, Copyright (c) Tensilica Inc and licensed under the MIT license (see below).
- **TinyBasic Plus**, Copyright Mike Field & Scott Lawrence and licensed under the MIT license (see below).
- **miniz**, by Rich Geldreich - placed into the public domain.
- **wpa_supplicant** Copyright (c) 2003-2005 Jouni Malinen and licensed under the BSD license.
- **TJpgDec** Copyright (C) 2011, ChaN, all right reserved. See below for license.

Xtensa libhal MIT License

Copyright (c) 2003, 2006, 2010 Tensilica Inc.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

TinyBasic Plus MIT License

Copyright (c) 2012-2013

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the “Software”), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED “AS IS”, WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

TJpgDec License

TJpgDec - Tiny JPEG Decompressor R0.01 (C)ChaN, 2011 The TJpgDec is a generic JPEG decompressor module for tiny embedded systems. This is a free software that opened for education, research and commercial developments under license policy of following terms.

Copyright (C) 2011, ChaN, all right reserved.

- The TJpgDec module is a free software and there is NO WARRANTY.
- No restriction on use. You can use, modify and redistribute it for personal, non-profit or commercial products UNDER YOUR RESPONSIBILITY.
- Redistributions of source code must retain the above copyright notice.

This is documentation of **ESP-IDF**, the framework to develop applications for **ESP32** chip by **Espressif**.
The **ESP32** is 2.4 GHz Wi-Fi and Bluetooth combo, 32 bit dual core chip with 600 DMIPS processing power.

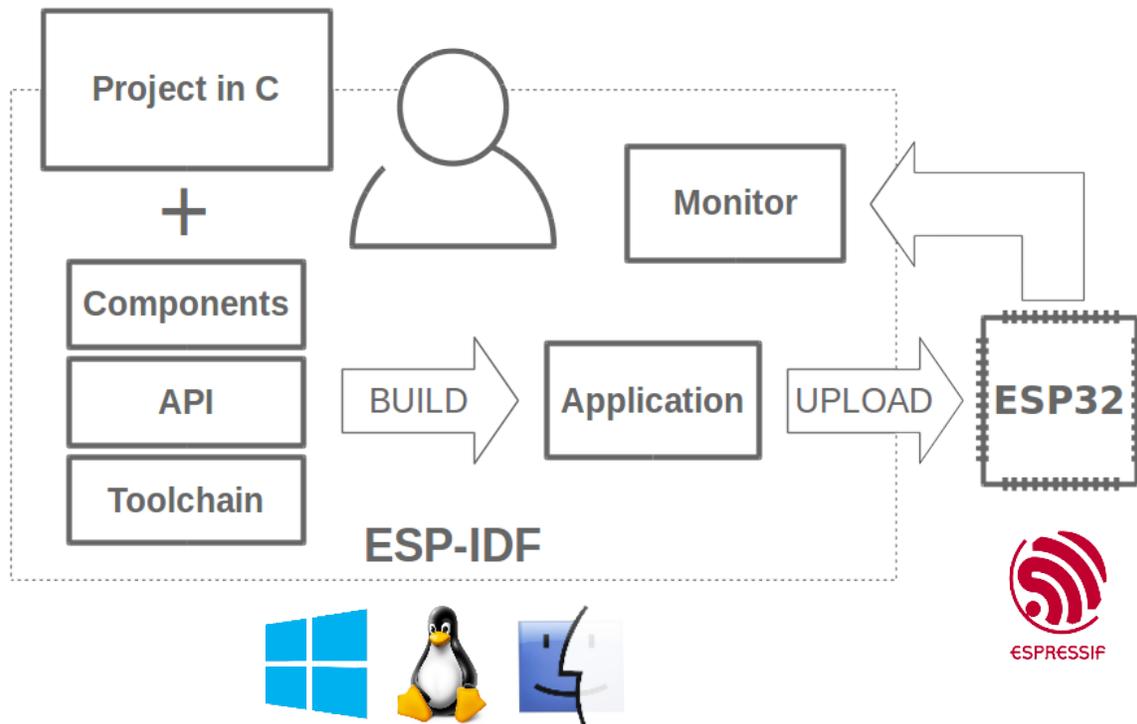


Fig. 8.1: Espressif IoT Integrated Development Framework

The ESP-IDF, Espressif IoT Integrated Development Framework, provides toolchain, API, components and workflows to develop applications for ESP32 using Windows, Linux and Mac OS operating systems.

- `genindex`

A

ADC1_CHANNEL_0 (C++ class), 152
 ADC1_CHANNEL_1 (C++ class), 152
 ADC1_CHANNEL_2 (C++ class), 152
 ADC1_CHANNEL_3 (C++ class), 152
 ADC1_CHANNEL_4 (C++ class), 152
 ADC1_CHANNEL_5 (C++ class), 152
 ADC1_CHANNEL_6 (C++ class), 152
 ADC1_CHANNEL_7 (C++ class), 152
 ADC1_CHANNEL_MAX (C++ class), 152
 adc1_channel_t (C++ type), 152
 adc1_config_channel_atten (C++ function), 150
 adc1_config_width (C++ function), 150
 adc1_get_voltage (C++ function), 151
 adc1_ulp_enable (C++ function), 151
 ADC_ATTEN_0db (C++ class), 152
 ADC_ATTEN_11db (C++ class), 152
 ADC_ATTEN_2_5db (C++ class), 152
 ADC_ATTEN_6db (C++ class), 152
 adc_atten_t (C++ type), 152
 adc_bits_width_t (C++ type), 152
 ADC_WIDTH_10Bit (C++ class), 152
 ADC_WIDTH_11Bit (C++ class), 152
 ADC_WIDTH_12Bit (C++ class), 152
 ADC_WIDTH_9Bit (C++ class), 152
 ADV_CHNL_37 (C++ class), 83
 ADV_CHNL_38 (C++ class), 83
 ADV_CHNL_39 (C++ class), 83
 ADV_CHNL_ALL (C++ class), 83
 ADV_FILTER_ALLOW_SCAN_ANY_CON_ANY
 (C++ class), 83
 ADV_FILTER_ALLOW_SCAN_ANY_CON_WLST
 (C++ class), 83
 ADV_FILTER_ALLOW_SCAN_WLST_CON_ANY
 (C++ class), 83
 ADV_FILTER_ALLOW_SCAN_WLST_CON_WLST
 (C++ class), 83
 ADV_TYPE_DIRECT_IND_HIGH (C++ class), 83
 ADV_TYPE_DIRECT_IND_LOW (C++ class), 83

ADV_TYPE_IND (C++ class), 83
 ADV_TYPE_NONCONN_IND (C++ class), 83
 ADV_TYPE_SCAN_IND (C++ class), 83

B

BLE_ADDR_TYPE_PUBLIC (C++ class), 62
 BLE_ADDR_TYPE_RANDOM (C++ class), 62
 BLE_ADDR_TYPE_RPA_PUBLIC (C++ class), 63
 BLE_ADDR_TYPE_RPA_RANDOM (C++ class), 63
 BLE_SCAN_FILTER_ALLOW_ALL (C++ class), 84
 BLE_SCAN_FILTER_ALLOW_ONLY_WLST
 (C++ class), 84
 BLE_SCAN_FILTER_ALLOW_UND_RPA_DIR
 (C++ class), 84
 BLE_SCAN_FILTER_ALLOW_WLIST_PRA_DIR
 (C++ class), 84
 BLE_SCAN_TYPE_ACTIVE (C++ class), 84
 BLE_SCAN_TYPE_PASSIVE (C++ class), 84
 BT_CONTROLLER_INIT_CONFIG_DEFAULT
 (C++ macro), 58

D

DAC_CHANNEL_1 (C++ class), 154
 DAC_CHANNEL_2 (C++ class), 154
 DAC_CHANNEL_MAX (C++ class), 154
 dac_channel_t (C++ type), 154
 dac_i2s_disable (C++ function), 154
 dac_i2s_enable (C++ function), 154
 dac_output_disable (C++ function), 154
 dac_output_enable (C++ function), 153
 dac_output_voltage (C++ function), 153
 dmaworkaround_cb_t (C++ type), 248

E

ESP_A2D_AUDIO_CFG_EVT (C++ class), 139
 ESP_A2D_AUDIO_STATE_EVT (C++ class), 138
 ESP_A2D_AUDIO_STATE_REMOTE_SUSPEND
 (C++ class), 138
 ESP_A2D_AUDIO_STATE_STARTED (C++ class), 138

ESP_A2D_AUDIO_STATE_STOPPED (C++ class), 138
 esp_a2d_audio_state_t (C++ type), 138
 esp_a2d_cb_event_t (C++ type), 138
 esp_a2d_cb_param_t (C++ type), 136
 esp_a2d_cb_param_t::a2d_audio_cfg_param (C++ class), 136
 esp_a2d_cb_param_t::a2d_audio_cfg_param::mcc (C++ member), 136
 esp_a2d_cb_param_t::a2d_audio_cfg_param::remote_bda (C++ member), 136
 esp_a2d_cb_param_t::a2d_audio_stat_param (C++ class), 136
 esp_a2d_cb_param_t::a2d_audio_stat_param::remote_bda (C++ member), 136
 esp_a2d_cb_param_t::a2d_audio_stat_param::state (C++ member), 136
 esp_a2d_cb_param_t::a2d_conn_stat_param (C++ class), 136
 esp_a2d_cb_param_t::a2d_conn_stat_param::disc_rsn (C++ member), 137
 esp_a2d_cb_param_t::a2d_conn_stat_param::remote_bda (C++ member), 136
 esp_a2d_cb_param_t::a2d_conn_stat_param::state (C++ member), 136
 esp_a2d_cb_param_t::audio_cfg (C++ member), 136
 esp_a2d_cb_param_t::audio_stat (C++ member), 136
 esp_a2d_cb_param_t::conn_stat (C++ member), 136
 esp_a2d_cb_t (C++ type), 137
 ESP_A2D_CIE_LEN_ATRAC (C macro), 137
 ESP_A2D_CIE_LEN_M12 (C macro), 137
 ESP_A2D_CIE_LEN_M24 (C macro), 137
 ESP_A2D_CIE_LEN_SBC (C macro), 137
 ESP_A2D_CONNECTION_STATE_CONNECTED (C++ class), 138
 ESP_A2D_CONNECTION_STATE_CONNECTING (C++ class), 138
 ESP_A2D_CONNECTION_STATE_DISCONNECTED (C++ class), 138
 ESP_A2D_CONNECTION_STATE_DISCONNECTING (C++ class), 138
 ESP_A2D_CONNECTION_STATE_EVT (C++ class), 138
 esp_a2d_connection_state_t (C++ type), 138
 esp_a2d_data_cb_t (C++ type), 138
 ESP_A2D_DISC_RSN_ABNORMAL (C++ class), 138
 ESP_A2D_DISC_RSN_NORMAL (C++ class), 138
 esp_a2d_disc_rsn_t (C++ type), 138
 esp_a2d_mcc_t (C++ class), 137
 esp_a2d_mcc_t::type (C++ member), 137
 ESP_A2D_MCT_ATRAC (C macro), 137
 ESP_A2D_MCT_M12 (C macro), 137
 ESP_A2D_MCT_M24 (C macro), 137
 ESP_A2D_MCT_NON_A2DP (C macro), 137
 ESP_A2D_MCT_SBC (C macro), 137
 esp_a2d_mct_t (C++ type), 137
 esp_a2d_register_callback (C++ function), 134
 esp_a2d_register_data_callback (C++ function), 135
 esp_a2d_sink_connect (C++ function), 135
 esp_a2d_sink_deinit (C++ function), 135
 esp_a2d_sink_disconnect (C++ function), 135
 esp_a2d_sink_init (C++ function), 135
 ESP_APP_ID_MAX (C macro), 61
 ESP_APP_ID_MIN (C macro), 61
 esp_apprtrace_buffer_get (C++ function), 352
 esp_apprtrace_buffer_put (C++ function), 352
 esp_apprtrace_dest_t (C++ type), 351
 ESP_APPTRACE_DEST_TRAX (C++ class), 351
 ESP_APPTRACE_DEST_UART0 (C++ class), 351
 esp_apprtrace_flush (C++ function), 353
 esp_apprtrace_flush_nolock (C++ function), 353
 esp_apprtrace_init (C++ function), 352
 esp_apprtrace_read (C++ function), 353
 ESP_APPTRACE_TMO_INFINITE (C macro), 351
 esp_apprtrace_vprintf (C++ function), 353
 esp_apprtrace_vprintf_to (C++ function), 352
 esp_apprtrace_write (C++ function), 352
 esp_attr_control_t (C++ class), 86
 esp_attr_control_t::auto_rsp (C++ member), 87
 esp_attr_desc_t (C++ class), 86
 esp_attr_desc_t::length (C++ member), 86
 esp_attr_desc_t::max_length (C++ member), 86
 esp_attr_desc_t::perm (C++ member), 86
 esp_attr_desc_t::uuid_length (C++ member), 86
 esp_attr_desc_t::uuid_p (C++ member), 86
 esp_attr_desc_t::value (C++ member), 86
 esp_attr_value_t (C++ class), 87
 esp_attr_value_t::attr_len (C++ member), 87
 esp_attr_value_t::attr_max_len (C++ member), 87
 esp_attr_value_t::attr_value (C++ member), 87
 esp_avrc_ct_cb_event_t (C++ type), 142
 esp_avrc_ct_cb_param_t (C++ type), 140
 esp_avrc_ct_cb_param_t::avrc_ct_conn_stat_param (C++ class), 140
 esp_avrc_ct_cb_param_t::avrc_ct_conn_stat_param::connected (C++ member), 140
 esp_avrc_ct_cb_param_t::avrc_ct_conn_stat_param::feat_mask (C++ member), 140
 esp_avrc_ct_cb_param_t::avrc_ct_conn_stat_param::remote_bda (C++ member), 140
 esp_avrc_ct_cb_param_t::avrc_ct_psth_rsp_param (C++ class), 141
 esp_avrc_ct_cb_param_t::avrc_ct_psth_rsp_param::key_code (C++ member), 141
 esp_avrc_ct_cb_param_t::avrc_ct_psth_rsp_param::key_state (C++ member), 141
 esp_avrc_ct_cb_param_t::avrc_ct_psth_rsp_param::tl (C++ member), 141
 esp_avrc_ct_cb_param_t::conn_stat (C++ member), 140

- esp_avrc_ct_cb_param_t::psth_rsp (C++ member), 140
- esp_avrc_ct_cb_t (C++ type), 141
- ESP_AVRC_CT_CONNECTION_STATE_EVT (C++ class), 142
- esp_avrc_ct_deinit (C++ function), 139
- esp_avrc_ct_init (C++ function), 139
- ESP_AVRC_CT_MAX_EVT (C++ class), 142
- ESP_AVRC_CT_PASSTHROUGH_RSP_EVT (C++ class), 142
- esp_avrc_ct_register_callback (C++ function), 139
- esp_avrc_ct_send_passthrough_cmd (C++ function), 140
- ESP_AVRC_FEAT_ADV_CTRL (C++ class), 141
- ESP_AVRC_FEAT_BROWSE (C++ class), 141
- ESP_AVRC_FEAT_META_DATA (C++ class), 141
- ESP_AVRC_FEAT_RCCT (C++ class), 141
- ESP_AVRC_FEAT_RCTG (C++ class), 141
- ESP_AVRC_FEAT_VENDOR (C++ class), 141
- esp_avrc_features_t (C++ type), 141
- ESP_AVRC_PT_CMD_BACKWARD (C++ class), 142
- ESP_AVRC_PT_CMD_FORWARD (C++ class), 142
- ESP_AVRC_PT_CMD_PAUSE (C++ class), 142
- ESP_AVRC_PT_CMD_PLAY (C++ class), 141
- ESP_AVRC_PT_CMD_STATE_PRESSED (C++ class), 142
- ESP_AVRC_PT_CMD_STATE_RELEASED (C++ class), 142
- esp_avrc_pt_cmd_state_t (C++ type), 142
- ESP_AVRC_PT_CMD_STOP (C++ class), 142
- esp_avrc_pt_cmd_t (C++ type), 141
- esp_base_mac_addr_set (C++ function), 350
- ESP_BD_ADDR_HEX (C macro), 61
- ESP_BD_ADDR_LEN (C macro), 61
- ESP_BD_ADDR_STR (C macro), 61
- esp_bd_addr_t (C++ type), 62
- ESP_BLE_AD_MANUFACTURER_SPECIFIC_TYPE (C++ class), 83
- ESP_BLE_AD_TYPE_128SERVICE_DATA (C++ class), 82
- ESP_BLE_AD_TYPE_128SOL_SRV_UUID (C++ class), 82
- ESP_BLE_AD_TYPE_128SRV_CMPL (C++ class), 82
- ESP_BLE_AD_TYPE_128SRV_PART (C++ class), 82
- ESP_BLE_AD_TYPE_16SRV_CMPL (C++ class), 82
- ESP_BLE_AD_TYPE_16SRV_PART (C++ class), 82
- ESP_BLE_AD_TYPE_32SERVICE_DATA (C++ class), 82
- ESP_BLE_AD_TYPE_32SOL_SRV_UUID (C++ class), 82
- ESP_BLE_AD_TYPE_32SRV_CMPL (C++ class), 82
- ESP_BLE_AD_TYPE_32SRV_PART (C++ class), 82
- ESP_BLE_AD_TYPE_ADV_INT (C++ class), 82
- ESP_BLE_AD_TYPE_APPEARANCE (C++ class), 82
- ESP_BLE_AD_TYPE_CHAN_MAP_UPDATE (C++ class), 83
- ESP_BLE_AD_TYPE_DEV_CLASS (C++ class), 82
- ESP_BLE_AD_TYPE_FLAG (C++ class), 82
- ESP_BLE_AD_TYPE_INDOOR_POSITION (C++ class), 82
- ESP_BLE_AD_TYPE_INT_RANGE (C++ class), 82
- ESP_BLE_AD_TYPE_LE_DEV_ADDR (C++ class), 82
- ESP_BLE_AD_TYPE_LE_ROLE (C++ class), 82
- ESP_BLE_AD_TYPE_LE_SECURE_CONFIRM (C++ class), 82
- ESP_BLE_AD_TYPE_LE_SECURE_RANDOM (C++ class), 82
- ESP_BLE_AD_TYPE_LE_SUPPORT_FEATURE (C++ class), 82
- ESP_BLE_AD_TYPE_NAME_CMPL (C++ class), 82
- ESP_BLE_AD_TYPE_NAME_SHORT (C++ class), 82
- ESP_BLE_AD_TYPE_PUBLIC_TARGET (C++ class), 82
- ESP_BLE_AD_TYPE_RANDOM_TARGET (C++ class), 82
- ESP_BLE_AD_TYPE_SERVICE_DATA (C++ class), 82
- ESP_BLE_AD_TYPE_SM_OOB_FLAG (C++ class), 82
- ESP_BLE_AD_TYPE_SM_TK (C++ class), 82
- ESP_BLE_AD_TYPE_SOL_SRV_UUID (C++ class), 82
- ESP_BLE_AD_TYPE_SPAIR_C256 (C++ class), 82
- ESP_BLE_AD_TYPE_SPAIR_R256 (C++ class), 82
- ESP_BLE_AD_TYPE_TRANS_DISC_DATA (C++ class), 82
- ESP_BLE_AD_TYPE_TX_PWR (C++ class), 82
- ESP_BLE_AD_TYPE_URI (C++ class), 82
- esp_ble_addr_type_t (C++ type), 62
- esp_ble_adv_channel_t (C++ type), 83
- ESP_BLE_ADV_DATA_LEN_MAX (C macro), 80
- esp_ble_adv_data_t (C++ class), 75
- esp_ble_adv_data_t::appearance (C++ member), 75
- esp_ble_adv_data_t::flag (C++ member), 75
- esp_ble_adv_data_t::include_name (C++ member), 75
- esp_ble_adv_data_t::include_txpower (C++ member), 75
- esp_ble_adv_data_t::manufacturer_len (C++ member), 75
- esp_ble_adv_data_t::max_interval (C++ member), 75
- esp_ble_adv_data_t::min_interval (C++ member), 75
- esp_ble_adv_data_t::p_manufacturer_data (C++ member), 75
- esp_ble_adv_data_t::p_service_data (C++ member), 75
- esp_ble_adv_data_t::p_service_uuid (C++ member), 75
- esp_ble_adv_data_t::service_data_len (C++ member), 75
- esp_ble_adv_data_t::service_uuid_len (C++ member), 75
- esp_ble_adv_data_t::set_scan_rsp (C++ member), 75
- esp_ble_adv_data_type (C++ type), 81
- esp_ble_adv_filter_t (C++ type), 83
- ESP_BLE_ADV_FLAG_BREDR_NOT_SPT (C macro), 79

ESP_BLE_ADV_FLAG_DMT_CONTROLLER_SPT (C macro), 79

ESP_BLE_ADV_FLAG_DMT_HOST_SPT (C macro), 79

ESP_BLE_ADV_FLAG_GEN_DISC (C macro), 79

ESP_BLE_ADV_FLAG_LIMIT_DISC (C macro), 79

ESP_BLE_ADV_FLAG_NON_LIMIT_DISC (C macro), 79

esp_ble_adv_params_t (C++ class), 74

esp_ble_adv_params_t::adv_filter_policy (C++ member), 75

esp_ble_adv_params_t::adv_int_max (C++ member), 74

esp_ble_adv_params_t::adv_int_min (C++ member), 74

esp_ble_adv_params_t::adv_type (C++ member), 74

esp_ble_adv_params_t::channel_map (C++ member), 75

esp_ble_adv_params_t::own_addr_type (C++ member), 74

esp_ble_adv_params_t::peer_addr (C++ member), 74

esp_ble_adv_params_t::peer_addr_type (C++ member), 74

esp_ble_adv_type_t (C++ type), 83

esp_ble_auth_cmpl_t (C++ class), 79

esp_ble_auth_cmpl_t::addr_type (C++ member), 79

esp_ble_auth_cmpl_t::bd_addr (C++ member), 79

esp_ble_auth_cmpl_t::dev_type (C++ member), 79

esp_ble_auth_cmpl_t::fail_reason (C++ member), 79

esp_ble_auth_cmpl_t::key (C++ member), 79

esp_ble_auth_cmpl_t::key_present (C++ member), 79

esp_ble_auth_cmpl_t::key_type (C++ member), 79

esp_ble_auth_cmpl_t::success (C++ member), 79

esp_ble_auth_req_t (C++ type), 80

esp_ble_confirm_reply (C++ function), 69

ESP_BLE_CONN_PARAM_UNDEF (C macro), 61

esp_ble_conn_update_params_t (C++ class), 76

esp_ble_conn_update_params_t::bda (C++ member), 76

esp_ble_conn_update_params_t::latency (C++ member), 76

esp_ble_conn_update_params_t::max_int (C++ member), 76

esp_ble_conn_update_params_t::min_int (C++ member), 76

esp_ble_conn_update_params_t::timeout (C++ member), 76

ESP_BLE_CSR_KEY_MASK (C macro), 61

ESP_BLE_ENC_KEY_MASK (C macro), 61

ESP_BLE_EVT_CONN_ADV (C++ class), 85

ESP_BLE_EVT_CONN_DIR_ADV (C++ class), 85

ESP_BLE_EVT_DISC_ADV (C++ class), 85

ESP_BLE_EVT_NON_CONN_ADV (C++ class), 85

ESP_BLE_EVT_SCAN_RSP (C++ class), 85

esp_ble_evt_type_t (C++ type), 85

esp_ble_gap_cb_param_t (C++ type), 70

esp_ble_gap_cb_param_t::adv_data_cmpl (C++ member), 70

esp_ble_gap_cb_param_t::adv_data_raw_cmpl (C++ member), 71

esp_ble_gap_cb_param_t::adv_start_cmpl (C++ member), 71

esp_ble_gap_cb_param_t::adv_stop_cmpl (C++ member), 71

esp_ble_gap_cb_param_t::ble_adv_data_cmpl_evt_param (C++ class), 71

esp_ble_gap_cb_param_t::ble_adv_data_cmpl_evt_param::status (C++ member), 71

esp_ble_gap_cb_param_t::ble_adv_data_raw_cmpl_evt_param (C++ class), 71

esp_ble_gap_cb_param_t::ble_adv_data_raw_cmpl_evt_param::status (C++ member), 71

esp_ble_gap_cb_param_t::ble_adv_start_cmpl_evt_param (C++ class), 71

esp_ble_gap_cb_param_t::ble_adv_start_cmpl_evt_param::status (C++ member), 72

esp_ble_gap_cb_param_t::ble_adv_stop_cmpl_evt_param (C++ class), 72

esp_ble_gap_cb_param_t::ble_adv_stop_cmpl_evt_param::status (C++ member), 72

esp_ble_gap_cb_param_t::ble_pkt_data_length_cmpl_evt_param (C++ class), 72

esp_ble_gap_cb_param_t::ble_pkt_data_length_cmpl_evt_param::params (C++ member), 72

esp_ble_gap_cb_param_t::ble_pkt_data_length_cmpl_evt_param::status (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_param_cmpl_evt_param (C++ class), 72

esp_ble_gap_cb_param_t::ble_scan_param_cmpl_evt_param::status (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param (C++ class), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::adv_data_len (C++ member), 73

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::bda (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::ble_addr_type (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::ble_adv (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::ble_evt_type (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::dev_type (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::flag (C++ member), 73

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::num_resps (C++ member), 73

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::rssi (C++ member), 72

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::scan_rsp_len (C++ member), 73

esp_ble_gap_cb_param_t::ble_scan_result_evt_param::search_evt member), 71
 (C++ member), 72
 esp_ble_gap_cb_param_t::ble_scan_rsp_data_cmpl_evt_param member), 71
 (C++ class), 73
 esp_ble_gap_cb_param_t::ble_scan_rsp_data_cmpl_evt_param::status member), 73
 (C++ member), 73
 esp_ble_gap_cb_param_t::ble_scan_rsp_data_raw_cmpl_evt_param member), 71
 (C++ class), 73
 esp_ble_gap_cb_param_t::ble_scan_rsp_data_raw_cmpl_evt_param::status member), 73
 (C++ member), 73
 esp_ble_gap_cb_param_t::ble_scan_start_cmpl_evt_param member), 71
 (C++ class), 73
 esp_ble_gap_cb_param_t::ble_scan_start_cmpl_evt_param::status member), 73
 (C++ member), 73
 esp_ble_gap_cb_param_t::ble_scan_stop_cmpl_evt_param member), 71
 (C++ class), 73
 esp_ble_gap_cb_param_t::ble_scan_stop_cmpl_evt_param::status member), 73
 (C++ member), 73
 esp_ble_gap_cb_param_t::ble_security (C++ member), 71
 esp_ble_gap_cb_param_t::ble_set_rand_cmpl_evt_param member), 71
 (C++ class), 73
 esp_ble_gap_cb_param_t::ble_set_rand_cmpl_evt_param::status member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param member), 71
 (C++ class), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::ble_bda member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::ble_bonding member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::latency member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::max_lmt member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::min_lmt member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::status member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::ble_update_conn_params_evt_param::timeout member), 74
 (C++ member), 74
 esp_ble_gap_cb_param_t::pkt_data_lenth_cmpl (C++ member), 71
 esp_ble_gap_cb_param_t::scan_param_cmpl (C++ member), 70
 esp_ble_gap_cb_param_t::scan_rsp_data_cmpl (C++ member), 70
 esp_ble_gap_cb_param_t::scan_rsp_data_raw_cmpl (C++ member), 71
 esp_ble_gap_cb_param_t::scan_rst (C++ member), 71
 esp_ble_gap_cb_param_t::scan_start_cmpl (C++ member), 71
 esp_ble_gap_cb_param_t::scan_stop_cmpl (C++ member), 71
 esp_ble_gap_cb_param_t::set_rand_addr_cmpl (C++

esp_ble_gap_cb_param_t::update_conn_params (C++ member), 71
 esp_ble_gap_config_adv_data (C++ function), 65
 esp_ble_gap_config_adv_data_raw (C++ function), 68
 esp_ble_gap_config_local_privacy (C++ function), 67
 esp_ble_gap_config_scan_rsp_data_raw (C++ function), 68
 esp_ble_gap_disconnect (C++ function), 69
 esp_ble_gap_register_callback (C++ function), 65
 esp_ble_gap_security_rsp (C++ function), 68
 esp_ble_gap_set_device_name (C++ function), 67
 esp_ble_gap_set_pkt_data_len (C++ function), 67
 esp_ble_gap_set_rand_addr (C++ function), 67
 esp_ble_gap_set_scan_params (C++ function), 66
 esp_ble_gap_set_security_param (C++ function), 68
 esp_ble_gap_start_advertising (C++ function), 66
 esp_ble_gap_start_scanning (C++ function), 66
 esp_ble_gap_stop_advertising (C++ function), 66
 esp_ble_gap_stop_scanning (C++ function), 66
 esp_ble_gap_update_conn_params (C++ function), 67
 esp_ble_gattc_app_register (C++ function), 108
 esp_ble_gattc_app_unregister (C++ function), 108
 esp_ble_gattc_cache_refresh (C++ function), 114
 esp_ble_gattc_cb_param_t (C++ type), 114
 esp_ble_gattc_cb_param_t::cfg_mtu (C++ member), 114
 esp_ble_gattc_cb_param_t::close (C++ member), 114
 esp_ble_gattc_cb_param_t::congest (C++ member), 115
 esp_ble_gattc_cb_param_t::connect (C++ member), 115
 esp_ble_gattc_cb_param_t::disconnect (C++ member), 115
 esp_ble_gattc_cb_param_t::exec_cmpl (C++ member), 115
 esp_ble_gattc_cb_param_t::gattc_cfg_mtu_evt_param (C++ class), 115
 esp_ble_gattc_cb_param_t::gattc_cfg_mtu_evt_param::conn_id (C++ member), 115
 esp_ble_gattc_cb_param_t::gattc_cfg_mtu_evt_param::mtu (C++ member), 115
 esp_ble_gattc_cb_param_t::gattc_cfg_mtu_evt_param::status (C++ member), 115
 esp_ble_gattc_cb_param_t::gattc_close_evt_param (C++ class), 115
 esp_ble_gattc_cb_param_t::gattc_close_evt_param::conn_id (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_close_evt_param::reason (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_close_evt_param::remote_bda (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_close_evt_param::status (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_congest_evt_param (C++ class), 116

esp_ble_gattc_cb_param_t::gattc_congest_evt_param::congestible (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_congest_evt_param::conn_id (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_connect_evt_param (C++ class), 116
 esp_ble_gattc_cb_param_t::gattc_connect_evt_param::conn_id (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_connect_evt_param::remote_bda (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_connect_evt_param::status (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_disconnect_evt_param (C++ class), 116
 esp_ble_gattc_cb_param_t::gattc_disconnect_evt_param::conn_id (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_disconnect_evt_param::remote_bda (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_disconnect_evt_param::status (C++ member), 116
 esp_ble_gattc_cb_param_t::gattc_exec_cmpl_evt_param (C++ class), 116
 esp_ble_gattc_cb_param_t::gattc_exec_cmpl_evt_param::conn_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_exec_cmpl_evt_param::status (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param (C++ class), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param::char_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param::char_props (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param::conn_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param::srvce_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_char_evt_param::status (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param (C++ class), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::char_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::conn_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::descr_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::conn_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::descr_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::srvce_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::status (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::srvce_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::status (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::value (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_descr_evt_param::value_len (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param (C++ class), 117
 esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param::conn_id (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param::incl_srvc_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param::srvce_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_get_incl_srvc_evt_param::status (C++ member), 117
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param (C++ class), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::char_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::conn_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::descr_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::is_notify (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::remote_bda (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::srvce_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::value (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::value_len (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param (C++ class), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::conn_id (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::mtu (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::remote_bda (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::status (C++ member), 118
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::value (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::value_len (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_notify_evt_param::value_type (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_reg_evt_param (C++ class), 119

esp_ble_gattc_cb_param_t::gattc_reg_evt_param::app_id (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_reg_evt_param::status (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_reg_for_notify_evt_param (C++ class), 119
 esp_ble_gattc_cb_param_t::gattc_reg_for_notify_evt_param::char_id (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_reg_for_notify_evt_param::srvc_id (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_reg_for_notify_evt_param::status (C++ member), 119
 esp_ble_gattc_cb_param_t::gattc_search_cmpl_evt_param (C++ class), 119
 esp_ble_gattc_cb_param_t::gattc_search_cmpl_evt_param::cmpl_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_search_cmpl_evt_param::srvc_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_search_res_evt_param (C++ class), 120
 esp_ble_gattc_cb_param_t::gattc_search_res_evt_param::cmpl_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_search_res_evt_param::srvc_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_srvc_chg_evt_param (C++ class), 120
 esp_ble_gattc_cb_param_t::gattc_srvc_chg_evt_param::removal (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_unreg_for_notify_evt_param (C++ class), 120
 esp_ble_gattc_cb_param_t::gattc_unreg_for_notify_evt_param::char_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_unreg_for_notify_evt_param::srvc_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_unreg_for_notify_evt_param::status (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_write_evt_param (C++ class), 120
 esp_ble_gattc_cb_param_t::gattc_write_evt_param::char_id (C++ member), 121
 esp_ble_gattc_cb_param_t::gattc_write_evt_param::conn_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_write_evt_param::descr_id (C++ member), 121
 esp_ble_gattc_cb_param_t::gattc_write_evt_param::srvc_id (C++ member), 120
 esp_ble_gattc_cb_param_t::gattc_write_evt_param::status (C++ member), 120
 esp_ble_gattc_cb_param_t::get_char (C++ member), 115
 esp_ble_gattc_cb_param_t::get_descr (C++ member), 115
 esp_ble_gattc_cb_param_t::get_incl_srvc (C++ member), 115
 esp_ble_gattc_cb_param_t::notify (C++ member), 115
 esp_ble_gattc_cb_param_t::open (C++ member), 114
 esp_ble_gattc_cb_param_t::read (C++ member), 115
 esp_ble_gattc_cb_param_t::reg (C++ member), 114
 esp_ble_gattc_cb_param_t::reg_for_notify (C++ member), 115
 esp_ble_gattc_cb_param_t::search_cmpl (C++ member), 114
 esp_ble_gattc_cb_param_t::search_res (C++ member), 115
 esp_ble_gattc_cb_param_t::srvc_chg (C++ member), 115
 esp_ble_gattc_cb_param_t::unreg_for_notify (C++ member), 115
 esp_ble_gattc_cb_param_t::write (C++ member), 115
 esp_ble_gattc_close (C++ function), 108
 esp_ble_gattc_config_mtu (C++ function), 109
 esp_ble_gattc_execute_write (C++ function), 113
 esp_ble_gattc_get_characteristic (C++ function), 109
 esp_ble_gattc_get_descriptor (C++ function), 110
 esp_ble_gattc_get_included_service (C++ function), 110
 esp_ble_gattc_open (C++ function), 108
 esp_ble_gattc_prepare_write (C++ function), 112
 esp_ble_gattc_prepare_write_char_descr (C++ function), 112
 esp_ble_gattc_read_char (C++ function), 110
 esp_ble_gattc_read_char_descr (C++ function), 111
 esp_ble_gattc_register_callback (C++ function), 108
 esp_ble_gattc_register_for_notify (C++ function), 113
 esp_ble_gattc_search_service (C++ function), 109
 esp_ble_gattc_unregister_for_notify (C++ function), 114
 esp_ble_gattc_write_char (C++ function), 111
 esp_ble_gattc_write_char_descr (C++ function), 111
 esp_ble_gatts_add_char (C++ function), 96
 esp_ble_gatts_add_char_descr (C++ function), 96
 esp_ble_gatts_add_included_service (C++ function), 95
 esp_ble_gatts_app_register (C++ function), 94
 esp_ble_gatts_app_unregister (C++ function), 94
 esp_ble_gatts_cb_param_t (C++ type), 99
 esp_ble_gatts_cb_param_t::add_attr_tab (C++ member), 100
 esp_ble_gatts_cb_param_t::add_char (C++ member), 99
 esp_ble_gatts_cb_param_t::add_char_descr (C++ member), 99
 esp_ble_gatts_cb_param_t::add_incl_srvc (C++ member), 99
 esp_ble_gatts_cb_param_t::cancel_open (C++ member), 100
 esp_ble_gatts_cb_param_t::close (C++ member), 100
 esp_ble_gatts_cb_param_t::conf (C++ member), 99
 esp_ble_gatts_cb_param_t::congest (C++ member), 100
 esp_ble_gatts_cb_param_t::connect (C++ member), 99
 esp_ble_gatts_cb_param_t::create (C++ member), 99
 esp_ble_gatts_cb_param_t::del (C++ member), 99
 esp_ble_gatts_cb_param_t::disconnect (C++ member), 99

esp_ble_gatts_cb_param_t::exec_write (C++ member), esp_ble_gatts_cb_param_t::gatts_conf_evt_param::status
 99 (C++ member), 101
 esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param esp_ble_gatts_cb_param_t::gatts_congest_evt_param
 (C++ class), 100 (C++ class), 102
 esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param::enable esp_ble_gatts_cb_param_t::gatts_congest_evt_param::congested
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param::enable esp_ble_gatts_cb_param_t::gatts_congest_evt_param::conn_id
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param::enable esp_ble_gatts_cb_param_t::gatts_connect_evt_param
 (C++ member), 100 (C++ class), 102
 esp_ble_gatts_cb_param_t::gatts_add_attr_tab_evt_param::enable esp_ble_gatts_cb_param_t::gatts_connect_evt_param::conn_id
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param esp_ble_gatts_cb_param_t::gatts_connect_evt_param::is_connected
 (C++ class), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param::enable esp_ble_gatts_cb_param_t::gatts_connect_evt_param::remote_bda
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param::enable esp_ble_gatts_cb_param_t::gatts_create_evt_param
 (C++ member), 100 (C++ class), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param::enable esp_ble_gatts_cb_param_t::gatts_create_evt_param::service_handle
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_descr_evt_param::enable esp_ble_gatts_cb_param_t::gatts_create_evt_param::service_id
 (C++ member), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_evt_param esp_ble_gatts_cb_param_t::gatts_create_evt_param::status
 (C++ class), 100 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_evt_param::attr_enable esp_ble_gatts_cb_param_t::gatts_delete_evt_param
 (C++ member), 101 (C++ class), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_evt_param::char_enable esp_ble_gatts_cb_param_t::gatts_delete_evt_param::service_handle
 (C++ member), 101 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_evt_param::service_handle esp_ble_gatts_cb_param_t::gatts_delete_evt_param::status
 (C++ member), 101 (C++ member), 102
 esp_ble_gatts_cb_param_t::gatts_add_char_evt_param::status esp_ble_gatts_cb_param_t::gatts_disconnect_evt_param
 (C++ member), 101 (C++ class), 103
 esp_ble_gatts_cb_param_t::gatts_add_incl_srvc_evt_param esp_ble_gatts_cb_param_t::gatts_disconnect_evt_param::conn_id
 (C++ class), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_add_incl_srvc_evt_param::attr_enable esp_ble_gatts_cb_param_t::gatts_disconnect_evt_param::is_connected
 (C++ member), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_add_incl_srvc_evt_param::service_handle esp_ble_gatts_cb_param_t::gatts_disconnect_evt_param::remote_bda
 (C++ member), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_add_incl_srvc_evt_param::status esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param
 (C++ member), 101 (C++ class), 103
 esp_ble_gatts_cb_param_t::gatts_cancel_open_evt_param esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param::bda
 (C++ class), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_cancel_open_evt_param::status esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param::conn_id
 (C++ member), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_close_evt_param (C++ esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param::exec_write_flag
 class), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_close_evt_param::conn_id esp_ble_gatts_cb_param_t::gatts_exec_write_evt_param::trans_id
 (C++ member), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_close_evt_param::status esp_ble_gatts_cb_param_t::gatts_mtu_evt_param (C++
 (C++ member), 101 class), 103
 esp_ble_gatts_cb_param_t::gatts_conf_evt_param (C++ esp_ble_gatts_cb_param_t::gatts_mtu_evt_param::conn_id
 class), 101 (C++ member), 103
 esp_ble_gatts_cb_param_t::gatts_conf_evt_param::conn_id esp_ble_gatts_cb_param_t::gatts_mtu_evt_param::mtu
 (C++ member), 101 (C++ member), 103

[esp_ble_gatts_cb_param_t::gatts_open_evt_param](#) (C++ class), 103
[esp_ble_gatts_cb_param_t::gatts_open_evt_param::status](#) (C++ member), 103
[esp_ble_gatts_cb_param_t::gatts_read_evt_param](#) (C++ class), 103
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::bda](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::conn_id](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::handle](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::is_long](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::need_rsp](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::offset](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_read_evt_param::trans_id](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_reg_evt_param](#) (C++ class), 104
[esp_ble_gatts_cb_param_t::gatts_reg_evt_param::app_id](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_reg_evt_param::status](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_rsp_evt_param](#) (C++ class), 104
[esp_ble_gatts_cb_param_t::gatts_rsp_evt_param::handle](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_rsp_evt_param::status](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_set_attr_val_evt_param](#) (C++ class), 104
[esp_ble_gatts_cb_param_t::gatts_set_attr_val_evt_param::attaphandle](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_set_attr_val_evt_param::status](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_set_attr_val_evt_param::status](#) (C++ member), 104
[esp_ble_gatts_cb_param_t::gatts_start_evt_param](#) (C++ class), 105
[esp_ble_gatts_cb_param_t::gatts_start_evt_param::service](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_start_evt_param::status](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_stop_evt_param](#) (C++ class), 105
[esp_ble_gatts_cb_param_t::gatts_stop_evt_param::service](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_stop_evt_param::status](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param](#) (C++ class), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::bda](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::conn_id](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::handle](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::is_prep](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::len](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::need_rsp](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::offset](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::trans_id](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::gatts_write_evt_param::value](#) (C++ member), 105
[esp_ble_gatts_cb_param_t::mtu](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::open](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::read](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::reg](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::rsp](#) (C++ member), 100
[esp_ble_gatts_cb_param_t::set_attr_val](#) (C++ member), 100
[esp_ble_gatts_cb_param_t::start](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::stop](#) (C++ member), 99
[esp_ble_gatts_cb_param_t::write](#) (C++ member), 99
[esp_ble_gatts_close](#) (C++ function), 98
[esp_ble_gatts_create_attr_tab](#) (C++ function), 95
[esp_ble_gatts_create_service](#) (C++ function), 95
[esp_ble_gatts_delete_service](#) (C++ function), 96
[esp_ble_gatts_get_attr_value](#) (C++ function), 98
[esp_ble_gatts_open](#) (C++ function), 98
[esp_ble_gatts_register_callback](#) (C++ function), 94
[esp_ble_gatts_send_indicate](#) (C++ function), 97
[esp_ble_gatts_send_response](#) (C++ function), 97
[esp_ble_gatts_set_attr_value](#) (C++ function), 98
[esp_ble_gatts_start_service](#) (C++ function), 96
[esp_ble_gatts_stop_service](#) (C++ function), 97
[ESP_BLE_ID_KEY_MASK](#) (C macro), 61
[esp_ble_io_cap_t](#) (C++ type), 80
[ESP_BLE_IS_VALID_PARAM](#) (C macro), 61
[esp_ble_key_t](#) (C++ class), 78
[esp_ble_key_t::bd_addr](#) (C++ member), 78
[esp_ble_key_t::key_type](#) (C++ member), 78
[esp_ble_key_t::p_key_value](#) (C++ member), 78
[esp_ble_key_type_t](#) (C++ type), 80
[esp_ble_key_value_t](#) (C++ type), 70
[esp_ble_key_value_t::lcsrk_key](#) (C++ member), 70
[esp_ble_key_value_t::lenc_key](#) (C++ member), 70
[esp_ble_key_value_t::pcsrk_key](#) (C++ member), 70
[esp_ble_key_value_t::penc_key](#) (C++ member), 70
[esp_ble_key_value_t::pid_key](#) (C++ member), 70

- esp_ble_lcsrk_keys (C++ class), 77
- esp_ble_lcsrk_keys::counter (C++ member), 78
- esp_ble_lcsrk_keys::csrk (C++ member), 78
- esp_ble_lcsrk_keys::div (C++ member), 78
- esp_ble_lcsrk_keys::sec_level (C++ member), 78
- esp_ble_lenc_keys_t (C++ class), 77
- esp_ble_lenc_keys_t::div (C++ member), 77
- esp_ble_lenc_keys_t::key_size (C++ member), 77
- esp_ble_lenc_keys_t::ltk (C++ member), 77
- esp_ble_lenc_keys_t::sec_level (C++ member), 77
- ESP_BLE_LINK_KEY_MASK (C macro), 61
- esp_ble_local_id_keys_t (C++ class), 78
- esp_ble_local_id_keys_t::dhk (C++ member), 79
- esp_ble_local_id_keys_t::irk (C++ member), 79
- esp_ble_local_id_keys_t::ltk (C++ member), 79
- esp_ble_passkey_reply (C++ function), 69
- esp_ble_pcsrk_keys_t (C++ class), 77
- esp_ble_pcsrk_keys_t::counter (C++ member), 77
- esp_ble_pcsrk_keys_t::csrk (C++ member), 77
- esp_ble_pcsrk_keys_t::sec_level (C++ member), 77
- esp_ble_penc_keys_t (C++ class), 76
- esp_ble_penc_keys_t::ediv (C++ member), 77
- esp_ble_penc_keys_t::key_size (C++ member), 77
- esp_ble_penc_keys_t::ltk (C++ member), 76
- esp_ble_penc_keys_t::rand (C++ member), 76
- esp_ble_penc_keys_t::sec_level (C++ member), 77
- esp_ble_pid_keys_t (C++ class), 77
- esp_ble_pid_keys_t::addr_type (C++ member), 77
- esp_ble_pid_keys_t::irk (C++ member), 77
- esp_ble_pid_keys_t::static_addr (C++ member), 77
- esp_ble_pkt_data_length_params_t (C++ class), 76
- esp_ble_pkt_data_length_params_t::rx_len (C++ member), 76
- esp_ble_pkt_data_length_params_t::tx_len (C++ member), 76
- esp_ble_power_type_t (C++ type), 59
- ESP_BLE_PWR_TYPE_ADV (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL0 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL1 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL2 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL3 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL4 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL5 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL6 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL7 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL8 (C++ class), 59
- ESP_BLE_PWR_TYPE_CONN_HDL9 (C++ class), 59
- ESP_BLE_PWR_TYPE_DEFAULT (C++ class), 59
- ESP_BLE_PWR_TYPE_NUM (C++ class), 59
- ESP_BLE_PWR_TYPE_SCAN (C++ class), 59
- esp_ble_resolve_adv_data (C++ function), 68
- esp_ble_scan_filter_t (C++ type), 84
- esp_ble_scan_params_t (C++ class), 75
- esp_ble_scan_params_t::own_addr_type (C++ member), 75
- esp_ble_scan_params_t::scan_filter_policy (C++ member), 76
- esp_ble_scan_params_t::scan_interval (C++ member), 76
- esp_ble_scan_params_t::scan_type (C++ member), 75
- esp_ble_scan_params_t::scan_window (C++ member), 76
- ESP_BLE_SCAN_RSP_DATA_LEN_MAX (C macro), 80
- esp_ble_scan_type_t (C++ type), 84
- esp_ble_sec_act_t (C++ type), 83
- ESP_BLE_SEC_ENCRYPT (C++ class), 83
- ESP_BLE_SEC_ENCRYPT_MITM (C++ class), 83
- ESP_BLE_SEC_ENCRYPT_NO_MITM (C++ class), 83
- esp_ble_sec_key_notif_t (C++ class), 78
- esp_ble_sec_key_notif_t::bd_addr (C++ member), 78
- esp_ble_sec_key_notif_t::passkey (C++ member), 78
- ESP_BLE_SEC_NONE (C++ class), 83
- esp_ble_sec_req_t (C++ class), 78
- esp_ble_sec_req_t::bd_addr (C++ member), 78
- esp_ble_sec_t (C++ type), 70
- esp_ble_sec_t::auth_cmpl (C++ member), 70
- esp_ble_sec_t::ble_id_keys (C++ member), 70
- esp_ble_sec_t::ble_key (C++ member), 70
- esp_ble_sec_t::ble_req (C++ member), 70
- esp_ble_sec_t::key_notif (C++ member), 70
- esp_ble_set_encryption (C++ function), 69
- ESP_BLE_SM_AUTHEN_REQ_MODE (C++ class), 83
- ESP_BLE_SM_IOCAP_MODE (C++ class), 83
- ESP_BLE_SM_MAX_KEY_SIZE (C++ class), 84
- esp_ble_sm_param_t (C++ type), 83
- ESP_BLE_SM_PASSKEY (C++ class), 83
- ESP_BLE_SM_SET_INIT_KEY (C++ class), 83
- ESP_BLE_SM_SET_RSP_KEY (C++ class), 84
- esp_ble_tx_power_get (C++ function), 56
- esp_ble_tx_power_set (C++ function), 56
- esp_bluedroid_deinit (C++ function), 64
- esp_bluedroid_disable (C++ function), 63
- esp_bluedroid_enable (C++ function), 63
- esp_bluedroid_get_status (C++ function), 63
- esp_bluedroid_init (C++ function), 63
- ESP_BLUEDROID_STATUS_ENABLED (C++ class), 64
- ESP_BLUEDROID_STATUS_INITIALIZED (C++ class), 64
- esp_bluedroid_status_t (C++ type), 64
- ESP_BLUEDROID_STATUS_UNINITIALIZED (C++ class), 64
- esp_blufi_callbacks_t (C++ class), 130
- esp_blufi_callbacks_t::checksum_func (C++ member), 130
- esp_blufi_callbacks_t::decrypt_func (C++ member), 130
- esp_blufi_callbacks_t::encrypt_func (C++ member), 130

esp_blufi_callbacks_t::event_cb (C++ member), 130
 esp_blufi_callbacks_t::negotiate_data_handler (C++ member), 130
 esp_blufi_cb_event_t (C++ type), 132
 esp_blufi_cb_param_t (C++ type), 125
 esp_blufi_cb_param_t::blufi_connect_evt_param (C++ class), 126
 esp_blufi_cb_param_t::blufi_connect_evt_param::conn_id (C++ member), 126
 esp_blufi_cb_param_t::blufi_connect_evt_param::remote_bdp (C++ member), 126
 esp_blufi_cb_param_t::blufi_connect_evt_param::server_if (C++ member), 126
 esp_blufi_cb_param_t::blufi_deinit_finish_evt_param (C++ class), 126
 esp_blufi_cb_param_t::blufi_deinit_finish_evt_param::state (C++ member), 126
 esp_blufi_cb_param_t::blufi_disconnect_evt_param (C++ class), 126
 esp_blufi_cb_param_t::blufi_disconnect_evt_param::remote_bdp (C++ member), 126
 esp_blufi_cb_param_t::blufi_init_finish_evt_param (C++ class), 126
 esp_blufi_cb_param_t::blufi_init_finish_evt_param::state (C++ member), 126
 esp_blufi_cb_param_t::blufi_recv_ca_evt_param (C++ class), 126
 esp_blufi_cb_param_t::blufi_recv_ca_evt_param::cert (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_ca_evt_param::cert_len (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_client_cert_evt_param (C++ class), 127
 esp_blufi_cb_param_t::blufi_recv_client_cert_evt_param::cert (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_client_cert_evt_param::cert_len (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_client_cert_evt_param::client_cert (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_client_pkey_evt_param (C++ class), 127
 esp_blufi_cb_param_t::blufi_recv_client_pkey_evt_param::pkey (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_client_pkey_evt_param::pkey_len (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_server_cert_evt_param (C++ class), 127
 esp_blufi_cb_param_t::blufi_recv_server_cert_evt_param::cert (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_server_cert_evt_param::cert_len (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_server_cert_evt_param::server_cert (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_server_pkey_evt_param (C++ class), 127
 esp_blufi_cb_param_t::blufi_recv_server_pkey_evt_param::pkey (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_server_pkey_evt_param::pkey_len (C++ member), 127
 esp_blufi_cb_param_t::blufi_recv_softap_auth_mode_evt_param (C++ class), 127
 esp_blufi_cb_param_t::blufi_recv_softap_auth_mode_evt_param::auth_mode (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_channel_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_softap_channel_evt_param::channel (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_max_conn_num_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_softap_max_conn_num_evt_param::max_conn_num (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_passwd_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_softap_passwd_evt_param::passwd (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_passwd_evt_param::passwd_len (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_ssid_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_softap_ssid_evt_param::ssid (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_softap_ssid_evt_param::ssid_len (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_sta_bssid_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_sta_bssid_evt_param::bssid (C++ member), 128
 esp_blufi_cb_param_t::blufi_recv_sta_passwd_evt_param (C++ class), 128
 esp_blufi_cb_param_t::blufi_recv_sta_passwd_evt_param::passwd (C++ member), 129
 esp_blufi_cb_param_t::blufi_recv_sta_passwd_evt_param::passwd_len (C++ member), 129
 esp_blufi_cb_param_t::blufi_recv_sta_ssid_evt_param (C++ class), 129
 esp_blufi_cb_param_t::blufi_recv_sta_ssid_evt_param::ssid (C++ member), 129
 esp_blufi_cb_param_t::blufi_recv_sta_ssid_evt_param::ssid_len (C++ member), 129
 esp_blufi_cb_param_t::blufi_recv_username_evt_param (C++ class), 129
 esp_blufi_cb_param_t::blufi_recv_username_evt_param::name (C++ member), 129
 esp_blufi_cb_param_t::blufi_recv_username_evt_param::name_len (C++ member), 129
 esp_blufi_cb_param_t::blufi_set_wifi_mode_evt_param (C++ class), 129
 esp_blufi_cb_param_t::blufi_set_wifi_mode_evt_param::op_mode (C++ member), 129
 esp_blufi_cb_param_t::ca (C++ member), 125
 esp_blufi_cb_param_t::client_cert (C++ member), 125
 esp_blufi_cb_param_t::client_pkey (C++ member), 126

- esp_blufi_cb_param_t::connect (C++ member), 125
- esp_blufi_cb_param_t::deinit_finish (C++ member), 125
- esp_blufi_cb_param_t::disconnect (C++ member), 125
- esp_blufi_cb_param_t::init_finish (C++ member), 125
- esp_blufi_cb_param_t::server_cert (C++ member), 125
- esp_blufi_cb_param_t::server_pkey (C++ member), 126
- esp_blufi_cb_param_t::softap_auth_mode (C++ member), 125
- esp_blufi_cb_param_t::softap_channel (C++ member), 125
- esp_blufi_cb_param_t::softap_max_conn_num (C++ member), 125
- esp_blufi_cb_param_t::softap_passwd (C++ member), 125
- esp_blufi_cb_param_t::softap_ssid (C++ member), 125
- esp_blufi_cb_param_t::sta_bssid (C++ member), 125
- esp_blufi_cb_param_t::sta_passwd (C++ member), 125
- esp_blufi_cb_param_t::sta_ssid (C++ member), 125
- esp_blufi_cb_param_t::username (C++ member), 125
- esp_blufi_cb_param_t::wifi_mode (C++ member), 125
- esp_blufi_checksum_func_t (C++ type), 131
- esp_blufi_close (C++ function), 124
- esp_blufi_decrypt_func_t (C++ type), 131
- ESP_BLUFI_DEINIT_FAILED (C++ class), 133
- ESP_BLUFI_DEINIT_OK (C++ class), 133
- esp_blufi_deinit_state_t (C++ type), 133
- esp_blufi_encrypt_func_t (C++ type), 131
- ESP_BLUFI_EVENT_BLE_CONNECT (C++ class), 132
- ESP_BLUFI_EVENT_BLE_DISCONNECT (C++ class), 132
- esp_blufi_event_cb_t (C++ type), 131
- ESP_BLUFI_EVENT_DEAUTHENTICATE_STA (C++ class), 132
- ESP_BLUFI_EVENT_DEINIT_FINISH (C++ class), 132
- ESP_BLUFI_EVENT_GET_WIFI_STATUS (C++ class), 132
- ESP_BLUFI_EVENT_INIT_FINISH (C++ class), 132
- ESP_BLUFI_EVENT_RECV_CA_CERT (C++ class), 132
- ESP_BLUFI_EVENT_RECV_CLIENT_CERT (C++ class), 132
- ESP_BLUFI_EVENT_RECV_CLIENT_PRIV_KEY (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SERVER_CERT (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SERVER_PRIV_KEY (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SLAVE_DISCONNECT (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SOFTAP_AUTH_MODE (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SOFTAP_CHANNEL (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SOFTAP_MAX_CONN_NUM (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SOFTAP_PASSWD (C++ class), 132
- ESP_BLUFI_EVENT_RECV_SOFTAP_SSID (C++ class), 132
- ESP_BLUFI_EVENT_RECV_STA_BSSID (C++ class), 132
- ESP_BLUFI_EVENT_RECV_STA_PASSWD (C++ class), 132
- ESP_BLUFI_EVENT_RECV_STA_SSID (C++ class), 132
- ESP_BLUFI_EVENT_RECV_USERNAME (C++ class), 132
- ESP_BLUFI_EVENT_REQ_CONNECT_TO_AP (C++ class), 132
- ESP_BLUFI_EVENT_REQ_DISCONNECT_FROM_AP (C++ class), 132
- ESP_BLUFI_EVENT_SET_WIFI_OPMODE (C++ class), 132
- esp_blufi_extra_info_t (C++ class), 129
- esp_blufi_extra_info_t::softap_authmode (C++ member), 130
- esp_blufi_extra_info_t::softap_authmode_set (C++ member), 130
- esp_blufi_extra_info_t::softap_channel (C++ member), 130
- esp_blufi_extra_info_t::softap_channel_set (C++ member), 130
- esp_blufi_extra_info_t::softap_max_conn_num (C++ member), 130
- esp_blufi_extra_info_t::softap_max_conn_num_set (C++ member), 130
- esp_blufi_extra_info_t::softap_passwd (C++ member), 130
- esp_blufi_extra_info_t::softap_passwd_len (C++ member), 130
- esp_blufi_extra_info_t::softap_ssid (C++ member), 130
- esp_blufi_extra_info_t::softap_ssid_len (C++ member), 130
- esp_blufi_extra_info_t::sta_bssid (C++ member), 129
- esp_blufi_extra_info_t::sta_bssid_set (C++ member), 129
- esp_blufi_extra_info_t::sta_passwd (C++ member), 130
- esp_blufi_extra_info_t::sta_passwd_len (C++ member), 130
- esp_blufi_extra_info_t::sta_ssid (C++ member), 130
- esp_blufi_extra_info_t::sta_ssid_len (C++ member), 130
- esp_blufi_get_version (C++ function), 124
- ESP_BLUFI_INIT_FAILED (C++ class), 133
- ESP_BLUFI_INIT_OK (C++ class), 133
- esp_blufi_init_state_t (C++ type), 133
- esp_blufi_negotiate_data_handler_t (C++ type), 131
- esp_blufi_profile_deinit (C++ function), 124

- esp_blufi_profile_init (C++ function), 124
- esp_blufi_register_callbacks (C++ function), 124
- esp_blufi_send_wifi_conn_report (C++ function), 124
- ESP_BLUFI_STA_CONN_FAIL (C++ class), 132
- esp_blufi_sta_conn_state_t (C++ type), 132
- ESP_BLUFI_STA_CONN_SUCCESS (C++ class), 132
- esp_bt_controller_config_t (C++ class), 57
- esp_bt_controller_config_t::controller_task_prio (C++ member), 58
- esp_bt_controller_config_t::controller_task_stack_size (C++ member), 58
- esp_bt_controller_config_t::hci_uart_baudrate (C++ member), 58
- esp_bt_controller_config_t::hci_uart_no (C++ member), 58
- esp_bt_controller_deinit (C++ function), 56
- esp_bt_controller_disable (C++ function), 57
- esp_bt_controller_enable (C++ function), 57
- esp_bt_controller_get_status (C++ function), 57
- esp_bt_controller_init (C++ function), 56
- ESP_BT_CONTROLLER_STATUS_ENABLED (C++ class), 59
- ESP_BT_CONTROLLER_STATUS_IDLE (C++ class), 59
- ESP_BT_CONTROLLER_STATUS_INITED (C++ class), 59
- ESP_BT_CONTROLLER_STATUS_NUM (C++ class), 59
- esp_bt_controller_status_t (C++ type), 58
- esp_bt_dev_get_address (C++ function), 64
- esp_bt_dev_set_device_name (C++ function), 64
- esp_bt_dev_type_t (C++ type), 62
- ESP_BT_DEVICE_TYPE_BLE (C++ class), 62
- ESP_BT_DEVICE_TYPE_BREDR (C++ class), 62
- ESP_BT_DEVICE_TYPE_DUMO (C++ class), 62
- esp_bt_gap_set_scan_mode (C++ function), 133
- ESP_BT_MODE_BLE (C++ class), 58
- ESP_BT_MODE_BTDM (C++ class), 58
- ESP_BT_MODE_CLASSIC_BT (C++ class), 58
- ESP_BT_MODE_IDLE (C++ class), 58
- esp_bt_mode_t (C++ type), 58
- ESP_BT_OCTET16_LEN (C macro), 61
- esp_bt_octet16_t (C++ type), 61
- ESP_BT_OCTET8_LEN (C macro), 61
- esp_bt_octet8_t (C++ type), 61
- ESP_BT_SCAN_MODE_CONNECTABLE (C++ class), 134
- ESP_BT_SCAN_MODE_CONNECTABLE_DISCOVERABLE (C++ class), 134
- ESP_BT_SCAN_MODE_NONE (C++ class), 134
- esp_bt_scan_mode_t (C++ type), 134
- ESP_BT_STATUS_AUTH_FAILURE (C++ class), 62
- ESP_BT_STATUS_AUTH_REJECTED (C++ class), 62
- ESP_BT_STATUS_BUSY (C++ class), 62
- ESP_BT_STATUS_CONTROL_LE_DATA_LEN_UNSUPPORTED (C++ class), 62
- ESP_BT_STATUS_DONE (C++ class), 62
- ESP_BT_STATUS_FAIL (C++ class), 62
- ESP_BT_STATUS_INVALID_STATIC_RAND_ADDR (C++ class), 62
- ESP_BT_STATUS_NOMEM (C++ class), 62
- ESP_BT_STATUS_NOT_READY (C++ class), 62
- ESP_BT_STATUS_PARAM_OUT_OF_RANGE (C++ class), 62
- ESP_BT_STATUS_PARM_INVALID (C++ class), 62
- ESP_BT_STATUS_PEER_LE_DATA_LEN_UNSUPPORTED (C++ class), 62
- ESP_BT_STATUS_PENDING (C++ class), 62
- ESP_BT_STATUS_RMT_DEV_DOWN (C++ class), 62
- ESP_BT_STATUS_SUCCESS (C++ class), 62
- esp_bt_status_t (C++ type), 62
- ESP_BT_STATUS_TIMEOUT (C++ class), 62
- ESP_BT_STATUS_UNACCEPT_CONN_INTERVAL (C++ class), 62
- ESP_BT_STATUS_UNHANDLED (C++ class), 62
- ESP_BT_STATUS_UNSUPPORTED (C++ class), 62
- esp_bt_uuid_t (C++ class), 60
- esp_bt_uuid_t::len (C++ member), 61
- esp_deep_sleep_enable_ext0_wakeup (C++ function), 338
- esp_deep_sleep_enable_ext1_wakeup (C++ function), 339
- esp_deep_sleep_enable_timer_wakeup (C++ function), 337
- esp_deep_sleep_enable_touchpad_wakeup (C++ function), 338
- esp_deep_sleep_enable_ulp_wakeup (C++ function), 340
- esp_deep_sleep_get_ext1_wakeup_status (C++ function), 342
- esp_deep_sleep_get_touchpad_wakeup_status (C++ function), 342
- esp_deep_sleep_get_wakeup_cause (C++ function), 341
- esp_deep_sleep_pd_config (C++ function), 340
- esp_deep_sleep_pd_domain_t (C++ type), 341
- esp_deep_sleep_pd_option_t (C++ type), 341
- esp_deep_sleep_start (C++ function), 341
- esp_deep_sleep_wakeup_cause_t (C++ type), 342
- ESP_DEEP_SLEEP_WAKEUP_EXT0 (C++ class), 342
- ESP_DEEP_SLEEP_WAKEUP_EXT1 (C++ class), 342
- ESP_DEEP_SLEEP_WAKEUP_TIMER (C++ class), 342
- ESP_DEEP_SLEEP_WAKEUP_TOUCHPAD (C++ class), 342
- ESP_DEEP_SLEEP_WAKEUP_ULP (C++ class), 342
- ESP_DEEP_SLEEP_WAKEUP_UNDEFINED (C++ class), 342
- ESP_DEFAULT_GATT_IF (C macro), 61
- ESP_EARLY_LOGD (C macro), 348

- ESP_EARLY_LOGE (C macro), 348
- ESP_EARLY_LOGI (C macro), 348
- ESP_EARLY_LOGV (C macro), 348
- ESP_EARLY_LOGW (C macro), 348
- esp_efuse_mac_get_custom (C++ function), 351
- ESP_ERR_FLASH_BASE (C macro), 293
- ESP_ERR_FLASH_OP_FAIL (C macro), 293
- ESP_ERR_FLASH_OP_TIMEOUT (C macro), 293
- ESP_ERR_NVS_BASE (C macro), 311
- ESP_ERR_NVS_INVALID_HANDLE (C macro), 311
- ESP_ERR_NVS_INVALID_LENGTH (C macro), 311
- ESP_ERR_NVS_INVALID_NAME (C macro), 311
- ESP_ERR_NVS_INVALID_STATE (C macro), 311
- ESP_ERR_NVS_KEY_TOO_LONG (C macro), 311
- ESP_ERR_NVS_NO_FREE_PAGES (C macro), 311
- ESP_ERR_NVS_NOT_ENOUGH_SPACE (C macro), 311
- ESP_ERR_NVS_NOT_FOUND (C macro), 311
- ESP_ERR_NVS_NOT_INITIALIZED (C macro), 311
- ESP_ERR_NVS_PAGE_FULL (C macro), 311
- ESP_ERR_NVS_READ_ONLY (C macro), 311
- ESP_ERR_NVS_REMOVE_FAILED (C macro), 311
- ESP_ERR_NVS_TYPE_MISMATCH (C macro), 311
- ESP_ERR_NVS_VALUE_TOO_LONG (C macro), 311
- ESP_ERR_OTA_BASE (C macro), 336
- ESP_ERR_OTA_PARTITION_CONFLICT (C macro), 336
- ESP_ERR_OTA_SELECT_INFO_INVALID (C macro), 336
- ESP_ERR_OTA_VALIDATE_FAILED (C macro), 336
- ESP_ERR_ULP_BASE (C macro), 409
- ESP_ERR_ULP_BRANCH_OUT_OF_RANGE (C macro), 409
- ESP_ERR_ULP_DUPLICATE_LABEL (C macro), 409
- ESP_ERR_ULP_INVALID_LOAD_ADDR (C macro), 409
- ESP_ERR_ULP_SIZE_TOO_BIG (C macro), 409
- ESP_ERR_ULP_UNDEFINED_LABEL (C macro), 409
- ESP_ERR_WIFI_ARG (C macro), 52
- ESP_ERR_WIFI_CONN (C macro), 52
- ESP_ERR_WIFI_FAIL (C macro), 51
- ESP_ERR_WIFI_IF (C macro), 52
- ESP_ERR_WIFI_MAC (C macro), 52
- ESP_ERR_WIFI_MODE (C macro), 52
- ESP_ERR_WIFI_NO_MEM (C macro), 52
- ESP_ERR_WIFI_NOT_INIT (C macro), 52
- ESP_ERR_WIFI_NOT_STARTED (C macro), 52
- ESP_ERR_WIFI_NOT_STOPPED (C macro), 52
- ESP_ERR_WIFI_NOT_SUPPORT (C macro), 52
- ESP_ERR_WIFI_NVS (C macro), 52
- ESP_ERR_WIFI_OK (C macro), 51
- ESP_ERR_WIFI_PASSWORD (C macro), 52
- ESP_ERR_WIFI_SSID (C macro), 52
- ESP_ERR_WIFI_STATE (C macro), 52
- ESP_ERR_WIFI_TIMEOUT (C macro), 52
- ESP_ERR_WIFI_WAKE_FAIL (C macro), 52
- esp_esptouch_set_timeout (C++ function), 54
- esp_eth_disable (C++ function), 144
- esp_eth_enable (C++ function), 144
- esp_eth_free_rx_buf (C++ function), 145
- esp_eth_get_mac (C++ function), 144
- esp_eth_init (C++ function), 143
- esp_eth_smi_read (C++ function), 144
- esp_eth_smi_wait_set (C++ function), 145
- esp_eth_smi_wait_value (C++ function), 144
- esp_eth_smi_write (C++ function), 144
- esp_eth_tx (C++ function), 143
- ESP_EXT1_WAKEUP_ALL_LOW (C++ class), 340
- ESP_EXT1_WAKEUP_ANY_HIGH (C++ class), 340
- esp_ext1_wakeup_mode_t (C++ type), 340
- esp_flash_encrypt_check_and_update (C++ function), 300
- esp_flash_encrypt_region (C++ function), 300
- esp_flash_encryption_enabled (C++ function), 300
- ESP_GAP_BLE_ADV_DATA_RAW_SET_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_ADV_DATA_SET_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_ADV_START_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_ADV_STOP_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_AUTH_CMPL_EVT (C++ class), 81
- esp_gap_ble_cb_event_t (C++ type), 81
- esp_gap_ble_cb_t (C++ type), 80
- ESP_GAP_BLE_KEY_EVT (C++ class), 81
- ESP_GAP_BLE_LOCAL_ER_EVT (C++ class), 81
- ESP_GAP_BLE_LOCAL_IR_EVT (C++ class), 81
- ESP_GAP_BLE_NC_REQ_EVT (C++ class), 81
- ESP_GAP_BLE_OOB_REQ_EVT (C++ class), 81
- ESP_GAP_BLE_PASSKEY_NOTIF_EVT (C++ class), 81
- ESP_GAP_BLE_PASSKEY_REQ_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_PARAM_SET_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_RESULT_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_RSP_DATA_RAW_SET_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_RSP_DATA_SET_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_START_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_SCAN_STOP_COMPLETE_EVT (C++ class), 81
- ESP_GAP_BLE_SEC_REQ_EVT (C++ class), 81
- ESP_GAP_BLE_SET_PKT_LENGTH_COMPLETE_EVT (C++ class), 81

ESP_GAP_BLE_SET_STATIC_RAND_ADDR_EVT (C++ class), 81
 ESP_GAP_BLE_UPDATE_CONN_PARAMS_EVT (C++ class), 81
 ESP_GAP_SEARCH_DI_DISC_CMPL_EVT (C++ class), 85
 ESP_GAP_SEARCH_DISC_BLE_RES_EVT (C++ class), 84
 ESP_GAP_SEARCH_DISC_CMPL_EVT (C++ class), 85
 ESP_GAP_SEARCH_DISC_RES_EVT (C++ class), 84
 esp_gap_search_evt_t (C++ type), 84
 ESP_GAP_SEARCH_INQ_CMPL_EVT (C++ class), 84
 ESP_GAP_SEARCH_INQ_RES_EVT (C++ class), 84
 ESP_GAP_SEARCH_SEARCH_CANCEL_CMPL_EVT (C++ class), 85
 ESP_GATT_ALREADY_OPEN (C++ class), 93
 ESP_GATT_APP_RSP (C++ class), 93
 ESP_GATT_ATTR_HANDLE_MAX (C macro), 90
 ESP_GATT_AUTH_FAIL (C++ class), 92
 ESP_GATT_AUTH_REQ_MITM (C++ class), 93
 ESP_GATT_AUTH_REQ_NO_MITM (C++ class), 93
 ESP_GATT_AUTH_REQ_NONE (C++ class), 93
 ESP_GATT_AUTH_REQ_SIGNED_MITM (C++ class), 93
 ESP_GATT_AUTH_REQ_SIGNED_NO_MITM (C++ class), 93
 esp_gatt_auth_req_t (C++ type), 93
 ESP_GATT_AUTO_RSP (C macro), 91
 ESP_GATT_BODY_SENSOR_LOCATION (C macro), 90
 ESP_GATT_BUSY (C++ class), 92
 ESP_GATT_CANCEL (C++ class), 93
 ESP_GATT_CCC_CFG_ERR (C++ class), 93
 ESP_GATT_CHAR_PROP_BIT_AUTH (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_BROADCAST (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_EXT_PROP (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_INDICATE (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_NOTIFY (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_READ (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_WRITE (C macro), 91
 ESP_GATT_CHAR_PROP_BIT_WRITE_NR (C macro), 91
 esp_gatt_char_prop_t (C++ type), 91
 ESP_GATT_CMD_STARTED (C++ class), 92
 ESP_GATT_CONGESTED (C++ class), 93
 ESP_GATT_CONN_CONN_CANCEL (C++ class), 93
 ESP_GATT_CONN_FAIL_ESTABLISH (C++ class), 93
 ESP_GATT_CONN_L2C_FAILURE (C++ class), 93
 ESP_GATT_CONN_LMP_TIMEOUT (C++ class), 93
 ESP_GATT_CONN_NONE (C++ class), 93
 esp_gatt_conn_reason_t (C++ type), 93
 ESP_GATT_CONN_TERMINATE_LOCAL_HOST (C++ class), 93
 ESP_GATT_CONN_TERMINATE_PEER_USER (C++ class), 93
 ESP_GATT_CONN_TIMEOUT (C++ class), 93
 ESP_GATT_CONN_UNKNOWN (C++ class), 93
 ESP_GATT_DB_FULL (C++ class), 92
 ESP_GATT_DEF_BLE_MTU_SIZE (C macro), 121
 ESP_GATT_DUP_REG (C++ class), 93
 ESP_GATT_ENCRYPTED_MITM (C++ class), 92
 ESP_GATT_ENCRYPTED_NO_MITM (C++ class), 92
 ESP_GATT_ERR_UNLIKELY (C++ class), 92
 ESP_GATT_ERROR (C++ class), 92
 ESP_GATT_HEART_RATE_CNTL_POINT (C macro), 90
 ESP_GATT_HEART_RATE_MEAS (C macro), 90
 esp_gatt_id_t (C++ class), 86
 esp_gatt_id_t::inst_id (C++ member), 86
 esp_gatt_id_t::uuid (C++ member), 86
 ESP_GATT_IF_NONE (C macro), 91
 esp_gatt_if_t (C++ type), 91
 ESP_GATT_ILLEGAL_HANDLE (C macro), 90
 ESP_GATT_ILLEGAL_PARAMETER (C++ class), 92
 ESP_GATT_ILLEGAL_UUID (C macro), 90
 ESP_GATT_INSUF_AUTHENTICATION (C++ class), 92
 ESP_GATT_INSUF_AUTHORIZATION (C++ class), 92
 ESP_GATT_INSUF_ENCRYPTION (C++ class), 92
 ESP_GATT_INSUF_KEY_SIZE (C++ class), 92
 ESP_GATT_INSUF_RESOURCE (C++ class), 92
 ESP_GATT_INTERNAL_ERROR (C++ class), 92
 ESP_GATT_INVALID_ATTR_LEN (C++ class), 92
 ESP_GATT_INVALID_CFG (C++ class), 92
 ESP_GATT_INVALID_HANDLE (C++ class), 92
 ESP_GATT_INVALID_OFFSET (C++ class), 92
 ESP_GATT_INVALID_PDU (C++ class), 92
 ESP_GATT_MAX_ATTR_LEN (C macro), 91
 ESP_GATT_MAX_MTU_SIZE (C macro), 121
 ESP_GATT_MORE (C++ class), 92
 ESP_GATT_NO_RESOURCES (C++ class), 92
 ESP_GATT_NOT_ENCRYPTED (C++ class), 93
 ESP_GATT_NOT_FOUND (C++ class), 92
 ESP_GATT_NOT_LONG (C++ class), 92
 ESP_GATT_OK (C++ class), 92
 ESP_GATT_OUT_OF_RANGE (C++ class), 93
 ESP_GATT_PENDING (C++ class), 92
 ESP_GATT_PERM_READ (C macro), 91
 ESP_GATT_PERM_READ_ENC_MITM (C macro), 91
 ESP_GATT_PERM_READ_ENCRYPTED (C macro), 91
 esp_gatt_perm_t (C++ type), 91
 ESP_GATT_PERM_WRITE (C macro), 91

ESP_GATT_PERM_WRITE_ENC_MITM (C macro), 91
 ESP_GATT_PERM_WRITE_ENCRYPTED (C macro), 91
 ESP_GATT_PERM_WRITE_SIGNED (C macro), 91
 ESP_GATT_PERM_WRITE_SIGNED_MITM (C macro), 91
 ESP_GATT_PRC_IN_PROGRESS (C++ class), 93
 ESP_GATT_PREP_WRITE_CANCEL (C macro), 106
 ESP_GATT_PREP_WRITE_CANCEL (C++ class), 91
 ESP_GATT_PREP_WRITE_EXEC (C macro), 106
 ESP_GATT_PREP_WRITE_EXEC (C++ class), 91
 esp_gatt_prep_write_type (C++ type), 91
 ESP_GATT_PREPARE_Q_FULL (C++ class), 92
 ESP_GATT_READ_NOT_PERMIT (C++ class), 92
 ESP_GATT_REQ_NOT_SUPPORTED (C++ class), 92
 ESP_GATT_RSP_BY_APP (C macro), 91
 esp_gatt_rsp_t (C++ type), 85
 esp_gatt_rsp_t::attr_value (C++ member), 86
 esp_gatt_rsp_t::handle (C++ member), 86
 ESP_GATT_SERVICE_STARTED (C++ class), 92
 esp_gatt_srvc_id_t (C++ class), 86
 esp_gatt_srvc_id_t::id (C++ member), 86
 esp_gatt_srvc_id_t::is_primary (C++ member), 86
 ESP_GATT_STACK_RSP (C++ class), 93
 esp_gatt_status_t (C++ type), 92
 ESP_GATT_UNKNOWN_ERROR (C++ class), 93
 ESP_GATT_UNSUPP_GRP_TYPE (C++ class), 92
 ESP_GATT_UUID_ALERT_LEVEL (C macro), 89
 ESP_GATT_UUID_ALERT_NTF_SVC (C macro), 88
 ESP_GATT_UUID_ALERT_STATUS (C macro), 89
 ESP_GATT_UUID_BATTERY_LEVEL (C macro), 90
 ESP_GATT_UUID_BATTERY_SERVICE_SVC (C macro), 88
 ESP_GATT_UUID_BLOOD_PRESSURE_SVC (C macro), 88
 ESP_GATT_UUID_CHAR_AGG_FORMAT (C macro), 89
 ESP_GATT_UUID_CHAR_CLIENT_CONFIG (C macro), 89
 ESP_GATT_UUID_CHAR_DECLARE (C macro), 89
 ESP_GATT_UUID_CHAR_DESCRIPTION (C macro), 89
 ESP_GATT_UUID_CHAR_EXT_PROP (C macro), 89
 ESP_GATT_UUID_CHAR_PRESENT_FORMAT (C macro), 89
 ESP_GATT_UUID_CHAR_SVR_CONFIG (C macro), 89
 ESP_GATT_UUID_CHAR_VALID_RANGE (C macro), 89
 ESP_GATT_UUID_CSC_FEATURE (C macro), 90
 ESP_GATT_UUID_CSC_MEASUREMENT (C macro), 90
 ESP_GATT_UUID_CURRENT_TIME (C macro), 89
 ESP_GATT_UUID_CURRENT_TIME_SVC (C macro), 88
 ESP_GATT_UUID_CYCLING_POWER_SVC (C macro), 89
 ESP_GATT_UUID_CYCLING_SPEED_CADENCE_SVC (C macro), 89
 ESP_GATT_UUID_DEVICE_INFO_SVC (C macro), 88
 ESP_GATT_UUID_EXT_RPT_REF_DESCR (C macro), 89
 ESP_GATT_UUID_FW_VERSION_STR (C macro), 90
 ESP_GATT_UUID_GAP_CENTRAL_ADDR_RESOL (C macro), 89
 ESP_GATT_UUID_GAP_DEVICE_NAME (C macro), 89
 ESP_GATT_UUID_GAP_ICON (C macro), 89
 ESP_GATT_UUID_GAP_PREF_CONN_PARAM (C macro), 89
 ESP_GATT_UUID_GATT_SRV_CHGD (C macro), 89
 ESP_GATT_UUID_GLUCOSE_SVC (C macro), 88
 ESP_GATT_UUID_GM_CONTEXT (C macro), 89
 ESP_GATT_UUID_GM_CONTROL_POINT (C macro), 89
 ESP_GATT_UUID_GM_FEATURE (C macro), 90
 ESP_GATT_UUID_GM_MEASUREMENT (C macro), 89
 ESP_GATT_UUID_HEALTH_THERMOM_SVC (C macro), 88
 ESP_GATT_UUID_HEART_RATE_SVC (C macro), 88
 ESP_GATT_UUID_HID_BT_KB_INPUT (C macro), 90
 ESP_GATT_UUID_HID_BT_KB_OUTPUT (C macro), 90
 ESP_GATT_UUID_HID_BT_MOUSE_INPUT (C macro), 90
 ESP_GATT_UUID_HID_CONTROL_POINT (C macro), 90
 ESP_GATT_UUID_HID_INFORMATION (C macro), 90
 ESP_GATT_UUID_HID_PROTO_MODE (C macro), 90
 ESP_GATT_UUID_HID_REPORT (C macro), 90
 ESP_GATT_UUID_HID_REPORT_MAP (C macro), 90
 ESP_GATT_UUID_HID_SVC (C macro), 88
 ESP_GATT_UUID_HW_VERSION_STR (C macro), 90
 ESP_GATT_UUID_IEEE_DATA (C macro), 90
 ESP_GATT_UUID_IMMEDIATE_ALERT_SVC (C macro), 88
 ESP_GATT_UUID_INCLUDE_SERVICE (C macro), 89
 ESP_GATT_UUID_LINK_LOSS_SVC (C macro), 88
 ESP_GATT_UUID_LOCAL_TIME_INFO (C macro), 89
 ESP_GATT_UUID_LOCATION_AND_NAVIGATION_SVC (C macro), 89
 ESP_GATT_UUID_MANU_NAME (C macro), 90
 ESP_GATT_UUID_MODEL_NUMBER_STR (C macro), 90

ESP_GATT_UUID_NEXT_DST_CHANGE_SVC (C macro), 88

ESP_GATT_UUID_NW_STATUS (C macro), 89

ESP_GATT_UUID_NW_TRIGGER (C macro), 89

ESP_GATT_UUID_PHONE_ALERT_STATUS_SVC (C macro), 88

ESP_GATT_UUID_PNP_ID (C macro), 90

ESP_GATT_UUID_PRI_SERVICE (C macro), 89

ESP_GATT_UUID_REF_TIME_INFO (C macro), 89

ESP_GATT_UUID_REF_TIME_UPDATE_SVC (C macro), 88

ESP_GATT_UUID_RINGER_CP (C macro), 89

ESP_GATT_UUID_RINGER_SETTING (C macro), 89

ESP_GATT_UUID_RPT_REF_DESCR (C macro), 89

ESP_GATT_UUID_RSC_FEATURE (C macro), 90

ESP_GATT_UUID_RSC_MEASUREMENT (C macro), 90

ESP_GATT_UUID_RUNNING_SPEED_CADENCE_SVC (C macro), 88

ESP_GATT_UUID_SC_CONTROL_POINT (C macro), 90

ESP_GATT_UUID_SCAN_INT_WINDOW (C macro), 90

ESP_GATT_UUID_SCAN_PARAMETERS_SVC (C macro), 88

ESP_GATT_UUID_SCAN_REFRESH (C macro), 90

ESP_GATT_UUID_SEC_SERVICE (C macro), 89

ESP_GATT_UUID_SENSOR_LOCATION (C macro), 90

ESP_GATT_UUID_SERIAL_NUMBER_STR (C macro), 90

ESP_GATT_UUID_SW_VERSION_STR (C macro), 90

ESP_GATT_UUID_SYSTEM_ID (C macro), 90

ESP_GATT_UUID_TX_POWER_LEVEL (C macro), 89

ESP_GATT_UUID_TX_POWER_SVC (C macro), 88

ESP_GATT_UUID_USER_DATA_SVC (C macro), 89

ESP_GATT_UUID_WEIGHT_SCALE_SVC (C macro), 89

esp_gatt_value_t (C++ class), 88

esp_gatt_value_t::auth_req (C++ member), 88

esp_gatt_value_t::handle (C++ member), 88

esp_gatt_value_t::len (C++ member), 88

esp_gatt_value_t::offset (C++ member), 88

esp_gatt_value_t::value (C++ member), 88

ESP_GATT_WRITE_NOT_PERMIT (C++ class), 92

ESP_GATT_WRITE_TYPE_NO_RSP (C++ class), 94

ESP_GATT_WRITE_TYPE_RSP (C++ class), 94

esp_gatt_write_type_t (C++ type), 94

ESP_GATT_WRONG_STATE (C++ class), 92

ESP_GATTC_ACL_EVT (C++ class), 122

ESP_GATTC_ADV_DATA_EVT (C++ class), 122

ESP_GATTC_ADV_VSC_EVT (C++ class), 123

ESP_GATTC_BTH_SCAN_CFG_EVT (C++ class), 122

ESP_GATTC_BTH_SCAN_DIS_EVT (C++ class), 123

ESP_GATTC_BTH_SCAN_ENB_EVT (C++ class), 122

ESP_GATTC_BTH_SCAN_PARAM_EVT (C++ class), 122

ESP_GATTC_BTH_SCAN_RD_EVT (C++ class), 122

ESP_GATTC_BTH_SCAN_THR_EVT (C++ class), 122

ESP_GATTC_CANCEL_OPEN_EVT (C++ class), 122

esp_gattc_cb_event_t (C++ type), 121

esp_gattc_cb_t (C++ type), 121

ESP_GATTC_CFG_MTU_EVT (C++ class), 122

ESP_GATTC_CLOSE_EVT (C++ class), 121

ESP_GATTC_CONGEST_EVT (C++ class), 122

ESP_GATTC_CONNECT_EVT (C++ class), 123

ESP_GATTC_DISCONNECT_EVT (C++ class), 123

ESP_GATTC_ENC_CMPL_CB_EVT (C++ class), 122

ESP_GATTC_EXEC_EVT (C++ class), 122

ESP_GATTC_GET_CHAR_EVT (C++ class), 123

ESP_GATTC_GET_DESCR_EVT (C++ class), 123

ESP_GATTC_GET_INCL_SRVC_EVT (C++ class), 123

ESP_GATTC_MULT_ADV_DATA_EVT (C++ class), 122

ESP_GATTC_MULT_ADV_DIS_EVT (C++ class), 122

ESP_GATTC_MULT_ADV_ENB_EVT (C++ class), 122

ESP_GATTC_MULT_ADV_UPD_EVT (C++ class), 122

ESP_GATTC_NOTIFY_EVT (C++ class), 122

ESP_GATTC_OPEN_EVT (C++ class), 121

ESP_GATTC_PREP_WRITE_EVT (C++ class), 122

ESP_GATTC_READ_CHAR_EVT (C++ class), 121

ESP_GATTC_READ_DESCR_EVT (C++ class), 122

ESP_GATTC_REG_EVT (C++ class), 121

ESP_GATTC_REG_FOR_NOTIFY_EVT (C++ class), 123

ESP_GATTC_SCAN_FLT_CFG_EVT (C++ class), 123

ESP_GATTC_SCAN_FLT_PARAM_EVT (C++ class), 123

ESP_GATTC_SCAN_FLT_STATUS_EVT (C++ class), 123

ESP_GATTC_SEARCH_CMPL_EVT (C++ class), 121

ESP_GATTC_SEARCH_RES_EVT (C++ class), 121

ESP_GATTC_SRVC_CHG_EVT (C++ class), 122

ESP_GATTC_UNREG_EVT (C++ class), 121

ESP_GATTC_UNREG_FOR_NOTIFY_EVT (C++ class), 123

ESP_GATTC_WRITE_CHAR_EVT (C++ class), 121

ESP_GATTC_WRITE_DESCR_EVT (C++ class), 122

ESP_GATTS_ADD_CHAR_DESCR_EVT (C++ class), 106

ESP_GATTS_ADD_CHAR_EVT (C++ class), 106

ESP_GATTS_ADD_INCL_SRVC_EVT (C++ class), 106

esp_gatts_attr_db_t (C++ class), 87

esp_gatts_attr_db_t::att_desc (C++ member), 87

esp_gatts_attr_db_t::attr_control (C++ member), 87

- ESP_GATTS_CANCEL_OPEN_EVT (C++ class), 107
- esp_gatts_cb_event_t (C++ type), 106
- esp_gatts_cb_t (C++ type), 106
- ESP_GATTS_CLOSE_EVT (C++ class), 107
- ESP_GATTS_CONF_EVT (C++ class), 106
- ESP_GATTS_CONGEST_EVT (C++ class), 107
- ESP_GATTS_CONNECT_EVT (C++ class), 107
- ESP_GATTS_CREAT_ATTR_TAB_EVT (C++ class), 107
- ESP_GATTS_CREATE_EVT (C++ class), 106
- ESP_GATTS_DELETE_EVT (C++ class), 107
- ESP_GATTS_DISCONNECT_EVT (C++ class), 107
- ESP_GATTS_EXEC_WRITE_EVT (C++ class), 106
- esp_gatts_incl128_svc_desc_t (C++ class), 87
- esp_gatts_incl128_svc_desc_t::end_hdl (C++ member), 88
- esp_gatts_incl128_svc_desc_t::start_hdl (C++ member), 88
- esp_gatts_incl_svc_desc_t (C++ class), 87
- esp_gatts_incl_svc_desc_t::end_hdl (C++ member), 87
- esp_gatts_incl_svc_desc_t::start_hdl (C++ member), 87
- esp_gatts_incl_svc_desc_t::uuid (C++ member), 87
- ESP_GATTS_LISTEN_EVT (C++ class), 107
- ESP_GATTS_MTU_EVT (C++ class), 106
- ESP_GATTS_OPEN_EVT (C++ class), 107
- ESP_GATTS_READ_EVT (C++ class), 106
- ESP_GATTS_REG_EVT (C++ class), 106
- ESP_GATTS_RESPONSE_EVT (C++ class), 107
- ESP_GATTS_SET_ATTR_VAL_EVT (C++ class), 107
- ESP_GATTS_START_EVT (C++ class), 107
- ESP_GATTS_STOP_EVT (C++ class), 107
- ESP_GATTS_UNREG_EVT (C++ class), 106
- ESP_GATTS_WRITE_EVT (C++ class), 106
- esp_int_wdt_init (C++ function), 333
- esp_intr_alloc (C++ function), 328
- esp_intr_alloc_intrstatus (C++ function), 329
- esp_intr_disable (C++ function), 330
- esp_intr_enable (C++ function), 330
- ESP_INTR_FLAG_EDGE (C macro), 331
- ESP_INTR_FLAG_HIGH (C macro), 331
- ESP_INTR_FLAG_INTRDISABLED (C macro), 331
- ESP_INTR_FLAG_IRAM (C macro), 331
- ESP_INTR_FLAG_LEVEL1 (C macro), 330
- ESP_INTR_FLAG_LEVEL2 (C macro), 330
- ESP_INTR_FLAG_LEVEL3 (C macro), 330
- ESP_INTR_FLAG_LEVEL4 (C macro), 330
- ESP_INTR_FLAG_LEVEL5 (C macro), 330
- ESP_INTR_FLAG_LEVEL6 (C macro), 331
- ESP_INTR_FLAG_LEVELMASK (C macro), 331
- ESP_INTR_FLAG_LOWMED (C macro), 331
- ESP_INTR_FLAG_NMI (C macro), 331
- ESP_INTR_FLAG_SHARED (C macro), 331
- esp_intr_free (C++ function), 329
- esp_intr_get_cpu (C++ function), 329
- esp_intr_get_intno (C++ function), 330
- esp_intr_mark_shared (C++ function), 328
- esp_intr_noniram_disable (C++ function), 330
- esp_intr_noniram_enable (C++ function), 330
- esp_intr_reserve (C++ function), 328
- ESP_IO_CAP_IN (C macro), 80
- ESP_IO_CAP_IO (C macro), 80
- ESP_IO_CAP_KBDISP (C macro), 80
- ESP_IO_CAP_NONE (C macro), 80
- ESP_IO_CAP_OUT (C macro), 80
- ESP_LE_AUTH_BOND (C macro), 80
- ESP_LE_AUTH_NO_BOND (C macro), 80
- ESP_LE_AUTH_REQ_MITM (C macro), 80
- ESP_LE_AUTH_REQ_SC_BOND (C macro), 80
- ESP_LE_AUTH_REQ_SC_MITM (C macro), 80
- ESP_LE_AUTH_REQ_SC_MITM_BOND (C macro), 80
- ESP_LE_AUTH_REQ_SC_ONLY (C macro), 80
- ESP_LE_KEY_LCSRK (C macro), 80
- ESP_LE_KEY_LENC (C macro), 80
- ESP_LE_KEY_LID (C macro), 80
- ESP_LE_KEY_LLK (C macro), 80
- ESP_LE_KEY_NONE (C macro), 79
- ESP_LE_KEY_PCSRK (C macro), 79
- ESP_LE_KEY_PENC (C macro), 79
- ESP_LE_KEY_PID (C macro), 79
- ESP_LE_KEY_PLK (C macro), 80
- esp_link_key (C++ type), 61
- esp_log_buffer_char (C++ function), 347
- esp_log_buffer_hex (C++ function), 347
- ESP_LOG_DEBUG (C++ class), 349
- esp_log_early_timestamp (C++ function), 347
- ESP_LOG_ERROR (C++ class), 349
- ESP_LOG_INFO (C++ class), 349
- esp_log_level_set (C++ function), 346
- esp_log_level_t (C++ type), 349
- ESP_LOG_NONE (C++ class), 349
- esp_log_set_vprintf (C++ function), 347
- esp_log_timestamp (C++ function), 347
- ESP_LOG_VERBOSE (C++ class), 349
- ESP_LOG_WARN (C++ class), 349
- esp_log_write (C++ function), 347
- ESP_LOGD (C macro), 348
- ESP_LOGE (C macro), 348
- ESP_LOGI (C macro), 348
- ESP_LOGV (C macro), 348
- ESP_LOGW (C macro), 348
- esp_ota_begin (C++ function), 334
- esp_ota_end (C++ function), 335
- esp_ota_get_boot_partition (C++ function), 336
- esp_ota_get_next_update_partition (C++ function), 336
- esp_ota_get_running_partition (C++ function), 336
- esp_ota_handle_t (C++ type), 337
- esp_ota_set_boot_partition (C++ function), 335

- esp_ota_write (C++ function), 334
- esp_partition_erase_range (C++ function), 296
- esp_partition_find (C++ function), 294
- esp_partition_find_first (C++ function), 295
- esp_partition_get (C++ function), 295
- esp_partition_iterator_release (C++ function), 295
- esp_partition_iterator_t (C++ type), 298
- esp_partition_mmap (C++ function), 297
- esp_partition_next (C++ function), 295
- esp_partition_read (C++ function), 296
- ESP_PARTITION_SUBTYPE_ANY (C++ class), 300
- ESP_PARTITION_SUBTYPE_APP_FACTORY (C++ class), 298
- ESP_PARTITION_SUBTYPE_APP_OTA_0 (C++ class), 298
- ESP_PARTITION_SUBTYPE_APP_OTA_1 (C++ class), 298
- ESP_PARTITION_SUBTYPE_APP_OTA_10 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_11 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_12 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_13 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_14 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_15 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_2 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_3 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_4 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_5 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_6 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_7 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_8 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_9 (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_MAX (C++ class), 299
- ESP_PARTITION_SUBTYPE_APP_OTA_MIN (C++ class), 298
- ESP_PARTITION_SUBTYPE_APP_TEST (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_COREDUMP (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_ESPHTTPD (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_FAT (C++ class), 300
- ESP_PARTITION_SUBTYPE_DATA_NVS (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_OTA (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_PHY (C++ class), 299
- ESP_PARTITION_SUBTYPE_DATA_SPIFFS (C++ class), 300
- ESP_PARTITION_SUBTYPE_OTA (C macro), 298
- esp_partition_subtype_t (C++ type), 298
- esp_partition_t (C++ class), 297
- esp_partition_t::address (C++ member), 298
- esp_partition_t::encrypted (C++ member), 298
- esp_partition_t::label (C++ member), 298
- esp_partition_t::size (C++ member), 298
- esp_partition_t::subtype (C++ member), 297
- esp_partition_t::type (C++ member), 297
- ESP_PARTITION_TYPE_APP (C++ class), 298
- ESP_PARTITION_TYPE_DATA (C++ class), 298
- esp_partition_type_t (C++ type), 298
- esp_partition_verify (C++ function), 295
- esp_partition_write (C++ function), 296
- ESP_PD_DOMAIN_MAX (C++ class), 341
- ESP_PD_DOMAIN_RTC_FAST_MEM (C++ class), 341
- ESP_PD_DOMAIN_RTC_PERIPH (C++ class), 341
- ESP_PD_DOMAIN_RTC_SLOW_MEM (C++ class), 341
- ESP_PD_OPTION_AUTO (C++ class), 341
- ESP_PD_OPTION_OFF (C++ class), 341
- ESP_PD_OPTION_ON (C++ class), 341
- esp_power_level_t (C++ type), 59
- ESP_PWR_LVL_N11 (C++ class), 60
- ESP_PWR_LVL_N14 (C++ class), 60
- ESP_PWR_LVL_N2 (C++ class), 60
- ESP_PWR_LVL_N5 (C++ class), 60
- ESP_PWR_LVL_N8 (C++ class), 60
- ESP_PWR_LVL_P1 (C++ class), 60
- ESP_PWR_LVL_P4 (C++ class), 60
- ESP_PWR_LVL_P7 (C++ class), 60
- esp_smartconfig_fast_mode (C++ function), 54
- esp_smartconfig_get_version (C++ function), 53
- esp_smartconfig_set_type (C++ function), 54
- esp_smartconfig_start (C++ function), 53
- esp_smartconfig_stop (C++ function), 54
- esp_task_wdt_delete (C++ function), 333
- esp_task_wdt_feed (C++ function), 333
- esp_task_wdt_init (C++ function), 333
- ESP_UUID_LEN_128 (C macro), 61
- ESP_UUID_LEN_16 (C macro), 61
- ESP_UUID_LEN_32 (C macro), 61

- esp_vendor_ie_cb_t (C++ type), 53
- esp_vfs_close (C++ function), 315
- esp_vfs_dev_uart_register (C++ function), 317
- esp_vfs_fat_mount_config_t (C++ class), 319, 322
- esp_vfs_fat_mount_config_t::format_if_mount_failed (C++ member), 319, 322
- esp_vfs_fat_mount_config_t::max_files (C++ member), 319, 322
- esp_vfs_fat_register (C++ function), 318
- esp_vfs_fat_sdmmc_mount (C++ function), 319
- esp_vfs_fat_sdmmc_unmount (C++ function), 320
- esp_vfs_fat_spiflash_mount (C++ function), 322
- esp_vfs_fat_spiflash_unmount (C++ function), 322
- esp_vfs_fat_unregister_path (C++ function), 318
- ESP_VFS_FLAG_CONTEXT_PTR (C macro), 317
- ESP_VFS_FLAG_DEFAULT (C macro), 317
- esp_vfs_fstat (C++ function), 315
- esp_vfs_link (C++ function), 316
- esp_vfs_lseek (C++ function), 315
- esp_vfs_open (C++ function), 315
- ESP_VFS_PATH_MAX (C macro), 317
- esp_vfs_read (C++ function), 315
- esp_vfs_register (C++ function), 316
- esp_vfs_rename (C++ function), 316
- esp_vfs_stat (C++ function), 315
- esp_vfs_t (C++ class), 316
- esp_vfs_t::fd_offset (C++ member), 316
- esp_vfs_t::flags (C++ member), 316
- esp_vfs_unlink (C++ function), 316
- esp_vfs_unregister (C++ function), 316
- esp_vfs_write (C++ function), 315
- esp_vhci_host_callback (C++ class), 58
- esp_vhci_host_callback::notify_host_recv (C++ member), 58
- esp_vhci_host_callback::notify_host_send_available (C++ member), 58
- esp_vhci_host_callback_t (C++ type), 58
- esp_vhci_host_check_send_available (C++ function), 57
- esp_vhci_host_register_callback (C++ function), 57
- esp_vhci_host_send_packet (C++ function), 57
- esp_wifi_ap_get_sta_list (C++ function), 49
- esp_wifi_clear_fast_connect (C++ function), 42
- esp_wifi_connect (C++ function), 41
- esp_wifi_deauth_sta (C++ function), 42
- esp_wifi_deinit (C++ function), 40
- esp_wifi_disconnect (C++ function), 41
- esp_wifi_get_auto_connect (C++ function), 50
- esp_wifi_get_bandwidth (C++ function), 45
- esp_wifi_get_channel (C++ function), 46
- esp_wifi_get_config (C++ function), 49
- esp_wifi_get_country (C++ function), 46
- esp_wifi_get_mac (C++ function), 47
- esp_wifi_get_mode (C++ function), 40
- esp_wifi_get_promiscuous (C++ function), 48
- esp_wifi_get_promiscuous_filter (C++ function), 48
- esp_wifi_get_protocol (C++ function), 44
- esp_wifi_get_ps (C++ function), 44
- esp_wifi_init (C++ function), 39
- esp_wifi_restore (C++ function), 41
- esp_wifi_scan_get_ap_num (C++ function), 43
- esp_wifi_scan_get_ap_records (C++ function), 43
- esp_wifi_scan_start (C++ function), 42
- esp_wifi_scan_stop (C++ function), 43
- esp_wifi_set_auto_connect (C++ function), 50
- esp_wifi_set_bandwidth (C++ function), 45
- esp_wifi_set_channel (C++ function), 45
- esp_wifi_set_config (C++ function), 48
- esp_wifi_set_country (C++ function), 46
- esp_wifi_set_mac (C++ function), 46
- esp_wifi_set_mode (C++ function), 40
- esp_wifi_set_promiscuous (C++ function), 47
- esp_wifi_set_promiscuous_filter (C++ function), 48
- esp_wifi_set_promiscuous_rx_cb (C++ function), 47
- esp_wifi_set_protocol (C++ function), 44
- esp_wifi_set_ps (C++ function), 44
- esp_wifi_set_storage (C++ function), 49
- esp_wifi_set_vendor_ie (C++ function), 50
- esp_wifi_set_vendor_ie_cb (C++ function), 51
- esp_wifi_sta_get_ap_info (C++ function), 43
- esp_wifi_start (C++ function), 40
- esp_wifi_stop (C++ function), 41
- eth_config_t (C++ class), 145
- eth_config_t::flow_ctrl_enable (C++ member), 146
- eth_config_t::gpio_config (C++ member), 146
- eth_config_t::mac_mode (C++ member), 145
- eth_config_t::phy_addr (C++ member), 145
- eth_config_t::phy_check_init (C++ member), 145
- eth_config_t::phy_check_link (C++ member), 145
- eth_config_t::phy_get_duplex_mode (C++ member), 145
- eth_config_t::phy_get_partner_pause_enable (C++ member), 146
- eth_config_t::phy_get_speed_mode (C++ member), 145
- eth_config_t::phy_init (C++ member), 145
- eth_config_t::phy_power_enable (C++ member), 146
- eth_config_t::tcpip_input (C++ member), 145
- eth_duplex_mode_t (C++ type), 146
- eth_gpio_config_func (C++ type), 146
- ETH_MODE_FULLDUPLEX (C++ class), 146
- ETH_MODE_HALFDUPLEX (C++ class), 146
- ETH_MODE_MII (C++ class), 146
- ETH_MODE_RMII (C++ class), 146
- eth_mode_t (C++ type), 146
- eth_phy_base_t (C++ type), 146
- eth_phy_check_init_func (C++ type), 146
- eth_phy_check_link_func (C++ type), 146
- eth_phy_func (C++ type), 146
- eth_phy_get_duplex_mode_func (C++ type), 146
- eth_phy_get_partner_pause_enable_func (C++ type), 146

- eth_phy_get_speed_mode_func (C++ type), 146
 - eth_phy_power_enable_func (C++ type), 146
 - ETH_SPEED_MODE_100M (C++ class), 146
 - ETH_SPEED_MODE_10M (C++ class), 146
 - eth_speed_mode_t (C++ type), 146
 - eth_tcpip_input_func (C++ type), 146
 - ETS_INTERNAL_INTR_SOURCE_OFF (C macro), 331
 - ETS_INTERNAL_PROFILING_INTR_SOURCE (C macro), 331
 - ETS_INTERNAL_SW0_INTR_SOURCE (C macro), 331
 - ETS_INTERNAL_SW1_INTR_SOURCE (C macro), 331
 - ETS_INTERNAL_TIMER0_INTR_SOURCE (C macro), 331
 - ETS_INTERNAL_TIMER1_INTR_SOURCE (C macro), 331
 - ETS_INTERNAL_TIMER2_INTR_SOURCE (C macro), 331
- ## F
- ff_diskio_impl_t (C++ class), 320
 - ff_diskio_impl_t::init (C++ member), 320
 - ff_diskio_impl_t::ioctl (C++ member), 320
 - ff_diskio_impl_t::read (C++ member), 320
 - ff_diskio_impl_t::status (C++ member), 320
 - ff_diskio_impl_t::write (C++ member), 320
 - ff_diskio_register (C++ function), 320
 - ff_diskio_register_sdmmc (C++ function), 320
- ## G
- gpio_config (C++ function), 155
 - gpio_config_t (C++ class), 159
 - gpio_config_t::intr_type (C++ member), 160
 - gpio_config_t::mode (C++ member), 160
 - gpio_config_t::pin_bit_mask (C++ member), 160
 - gpio_config_t::pull_down_en (C++ member), 160
 - gpio_config_t::pull_up_en (C++ member), 160
 - GPIO_FLOATING (C++ class), 162
 - gpio_get_level (C++ function), 156
 - gpio_install_isr_service (C++ function), 158
 - gpio_int_type_t (C++ type), 161
 - GPIO_INTR_ANYEDGE (C++ class), 161
 - GPIO_INTR_DISABLE (C++ class), 161
 - gpio_intr_disable (C++ function), 155
 - gpio_intr_enable (C++ function), 155
 - GPIO_INTR_HIGH_LEVEL (C++ class), 161
 - GPIO_INTR_LOW_LEVEL (C++ class), 161
 - GPIO_INTR_MAX (C++ class), 161
 - GPIO_INTR_NEGEDGE (C++ class), 161
 - GPIO_INTR_POSEDGE (C++ class), 161
 - GPIO_IS_VALID_GPIO (C macro), 160
 - GPIO_IS_VALID_OUTPUT_GPIO (C macro), 160
 - gpio_isr_handle_t (C++ type), 160
 - gpio_isr_handler_add (C++ function), 159
 - gpio_isr_handler_remove (C++ function), 159
 - gpio_isr_register (C++ function), 157
 - gpio_isr_t (C++ type), 160
 - GPIO_MODE_INPUT (C++ class), 161
 - GPIO_MODE_INPUT_OUTPUT (C++ class), 161
 - GPIO_MODE_INPUT_OUTPUT_OD (C++ class), 161
 - GPIO_MODE_OUTPUT (C++ class), 161
 - GPIO_MODE_OUTPUT_OD (C++ class), 161
 - gpio_mode_t (C++ type), 161
 - GPIO_NUM_0 (C++ class), 160
 - GPIO_NUM_1 (C++ class), 160
 - GPIO_NUM_2 (C++ class), 160
 - gpio_num_t (C++ type), 160
 - gpio_pull_mode_t (C++ type), 161
 - gpio_pulldown_dis (C++ function), 158
 - GPIO_PULLDOWN_DISABLE (C++ class), 161
 - gpio_pulldown_en (C++ function), 158
 - GPIO_PULLDOWN_ENABLE (C++ class), 161
 - GPIO_PULLDOWN_ONLY (C++ class), 162
 - gpio_pulldown_t (C++ type), 161
 - gpio_pullup_dis (C++ function), 158
 - GPIO_PULLUP_DISABLE (C++ class), 161
 - gpio_pullup_en (C++ function), 157
 - GPIO_PULLUP_ENABLE (C++ class), 161
 - GPIO_PULLUP_ONLY (C++ class), 162
 - GPIO_PULLUP_PULLDOWN (C++ class), 162
 - gpio_pullup_t (C++ type), 161
 - GPIO_SEL_0 (C macro), 160
 - GPIO_SEL_1 (C macro), 160
 - GPIO_SEL_2 (C macro), 160
 - gpio_set_direction (C++ function), 156
 - gpio_set_intr_type (C++ function), 155
 - gpio_set_level (C++ function), 156
 - gpio_set_pull_mode (C++ function), 156
 - gpio_uninstall_isr_service (C++ function), 159
 - gpio_wakeup_disable (C++ function), 157
 - gpio_wakeup_enable (C++ function), 157
- ## H
- hall_sensor_read (C++ function), 151
 - HSPI_HOST (C++ class), 248
- ## I
- I2C_ADDR_BIT_10 (C++ class), 176
 - I2C_ADDR_BIT_7 (C++ class), 176
 - I2C_ADDR_BIT_MAX (C++ class), 176
 - i2c_addr_mode_t (C++ type), 176
 - I2C_APB_CLK_FREQ (C macro), 175
 - I2C_CMD_END (C++ class), 176
 - i2c_cmd_handle_t (C++ type), 175
 - i2c_cmd_link_create (C++ function), 169
 - i2c_cmd_link_delete (C++ function), 169

I2C_CMD_READ (C++ class), 176
 I2C_CMD_RESTART (C++ class), 176
 I2C_CMD_STOP (C++ class), 176
 I2C_CMD_WRITE (C++ class), 176
 i2c_config_t (C++ class), 175
 i2c_config_t::addr_10bit_en (C++ member), 175
 i2c_config_t::clk_speed (C++ member), 175
 i2c_config_t::mode (C++ member), 175
 i2c_config_t::scl_io_num (C++ member), 175
 i2c_config_t::scl_pullup_en (C++ member), 175
 i2c_config_t::sda_io_num (C++ member), 175
 i2c_config_t::sda_pullup_en (C++ member), 175
 i2c_config_t::slave_addr (C++ member), 175
 I2C_DATA_MODE_LSB_FIRST (C++ class), 176
 I2C_DATA_MODE_MAX (C++ class), 176
 I2C_DATA_MODE_MSB_FIRST (C++ class), 176
 i2c_driver_delete (C++ function), 167
 i2c_driver_install (C++ function), 166
 I2C_FIFO_LEN (C macro), 175
 i2c_get_data_mode (C++ function), 174
 i2c_get_data_timing (C++ function), 174
 i2c_get_period (C++ function), 172
 i2c_get_start_timing (C++ function), 173
 i2c_get_stop_timing (C++ function), 173
 i2c_isr_free (C++ function), 168
 i2c_isr_register (C++ function), 168
 i2c_master_cmd_begin (C++ function), 171
 I2C_MASTER_READ (C++ class), 176
 i2c_master_read (C++ function), 170
 i2c_master_read_byte (C++ function), 170
 i2c_master_start (C++ function), 169
 i2c_master_stop (C++ function), 170
 I2C_MASTER_WRITE (C++ class), 176
 i2c_master_write (C++ function), 169
 i2c_master_write_byte (C++ function), 169
 I2C_MODE_MASTER (C++ class), 175
 I2C_MODE_MAX (C++ class), 175
 I2C_MODE_SLAVE (C++ class), 175
 i2c_mode_t (C++ type), 175
 I2C_NUM_0 (C++ class), 176
 I2C_NUM_1 (C++ class), 176
 I2C_NUM_MAX (C++ class), 176
 i2c_opmode_t (C++ type), 176
 i2c_param_config (C++ function), 167
 i2c_port_t (C++ type), 176
 i2c_reset_rx_fifo (C++ function), 168
 i2c_reset_tx_fifo (C++ function), 167
 i2c_rw_t (C++ type), 176
 i2c_set_data_mode (C++ function), 174
 i2c_set_data_timing (C++ function), 173
 i2c_set_period (C++ function), 172
 i2c_set_pin (C++ function), 168
 i2c_set_start_timing (C++ function), 172
 i2c_set_stop_timing (C++ function), 173
 i2c_slave_read_buffer (C++ function), 171
 i2c_slave_write_buffer (C++ function), 171
 i2c_trans_mode_t (C++ type), 176
 I2S_BITS_PER_SAMPLE_16BIT (C++ class), 184
 I2S_BITS_PER_SAMPLE_24BIT (C++ class), 184
 I2S_BITS_PER_SAMPLE_32BIT (C++ class), 184
 I2S_BITS_PER_SAMPLE_8BIT (C++ class), 183
 i2s_bits_per_sample_t (C++ type), 183
 I2S_CHANNEL_FMT_ALL_LEFT (C++ class), 184
 I2S_CHANNEL_FMT_ALL_RIGHT (C++ class), 184
 I2S_CHANNEL_FMT_ONLY_LEFT (C++ class), 184
 I2S_CHANNEL_FMT_ONLY_RIGHT (C++ class), 184
 I2S_CHANNEL_FMT_RIGHT_LEFT (C++ class), 184
 i2s_channel_fmt_t (C++ type), 184
 I2S_CHANNEL_MONO (C++ class), 184
 I2S_CHANNEL_STEREO (C++ class), 184
 i2s_channel_t (C++ type), 184
 I2S_COMM_FORMAT_I2S (C++ class), 184
 I2S_COMM_FORMAT_I2S_LSB (C++ class), 184
 I2S_COMM_FORMAT_I2S_MSB (C++ class), 184
 I2S_COMM_FORMAT_PCM (C++ class), 184
 I2S_COMM_FORMAT_PCM_LONG (C++ class), 184
 I2S_COMM_FORMAT_PCM_SHORT (C++ class), 184
 i2s_comm_format_t (C++ type), 184
 i2s_config_t (C++ class), 182
 i2s_config_t::bits_per_sample (C++ member), 182
 i2s_config_t::channel_format (C++ member), 182
 i2s_config_t::communication_format (C++ member), 182
 i2s_config_t::dma_buf_count (C++ member), 183
 i2s_config_t::dma_buf_len (C++ member), 183
 i2s_config_t::intr_alloc_flags (C++ member), 182
 i2s_config_t::mode (C++ member), 182
 i2s_config_t::sample_rate (C++ member), 182
 I2S_DAC_CHANNEL_BOTH_EN (C++ class), 186
 I2S_DAC_CHANNEL_DISABLE (C++ class), 186
 I2S_DAC_CHANNEL_LEFT_EN (C++ class), 186
 I2S_DAC_CHANNEL_MAX (C++ class), 186
 I2S_DAC_CHANNEL_RIGHT_EN (C++ class), 186
 i2s_dac_mode_t (C++ type), 185
 i2s_driver_install (C++ function), 179
 i2s_driver_uninstall (C++ function), 179
 I2S_EVENT_DMA_ERROR (C++ class), 185
 I2S_EVENT_MAX (C++ class), 185
 I2S_EVENT_RX_DONE (C++ class), 185
 i2s_event_t (C++ class), 183
 i2s_event_t::size (C++ member), 183
 i2s_event_t::type (C++ member), 183
 I2S_EVENT_TX_DONE (C++ class), 185
 i2s_event_type_t (C++ type), 185
 i2s_isr_handle_t (C++ type), 183
 I2S_MODE_DAC_BUILT_IN (C++ class), 185
 I2S_MODE_MASTER (C++ class), 185
 I2S_MODE_PDM (C++ class), 185
 I2S_MODE_RX (C++ class), 185

I2S_MODE_SLAVE (C++ class), 185
 i2s_mode_t (C++ type), 185
 I2S_MODE_TX (C++ class), 185
 I2S_NUM_0 (C++ class), 185
 I2S_NUM_1 (C++ class), 185
 I2S_NUM_MAX (C++ class), 185
 i2s_pin_config_t (C++ class), 183
 i2s_pin_config_t::bck_io_num (C++ member), 183
 i2s_pin_config_t::data_in_num (C++ member), 183
 i2s_pin_config_t::data_out_num (C++ member), 183
 i2s_pin_config_t::ws_io_num (C++ member), 183
 I2S_PIN_NO_CHANGE (C macro), 183
 i2s_pop_sample (C++ function), 180
 i2s_port_t (C++ type), 185
 i2s_push_sample (C++ function), 180
 i2s_read_bytes (C++ function), 180
 i2s_set_clk (C++ function), 182
 i2s_set_dac_mode (C++ function), 179
 i2s_set_pin (C++ function), 178
 i2s_set_sample_rates (C++ function), 181
 i2s_start (C++ function), 181
 i2s_stop (C++ function), 181
 i2s_write_bytes (C++ function), 179
 i2s_zero_dma_buffer (C++ function), 181
 I_ADDI (C macro), 412
 I_ADDR (C macro), 412
 I_ANDI (C macro), 412
 I_ANDR (C macro), 412
 I_BGE (C macro), 411
 I_BL (C macro), 411
 I_BXFI (C macro), 411
 I_BXFR (C macro), 411
 I_BXI (C macro), 411
 I_BXR (C macro), 411
 I_BXZI (C macro), 411
 I_BXZR (C macro), 411
 I_DELAY (C macro), 410
 I_END (C macro), 410
 I_HALT (C macro), 410
 I_LD (C macro), 410
 I_LSHI (C macro), 412
 I_LSHR (C macro), 412
 I_MOVI (C macro), 412
 I_MOVR (C macro), 412
 I_ORI (C macro), 412
 I_ORR (C macro), 412
 I_RD_REG (C macro), 411
 I_RSHI (C macro), 413
 I_RSHR (C macro), 412
 I_ST (C macro), 410
 I_SUBI (C macro), 412
 I_SUBR (C macro), 412
 I_WR_REG (C macro), 410
 intr_handle_data_t (C++ type), 331

intr_handle_t (C++ type), 331
 intr_handler_t (C++ type), 331

L

LEDC_APB_CLK (C++ class), 193
 LEDC_APB_CLK_HZ (C macro), 193
 ledc_bind_channel_timer (C++ function), 190
 LEDC_CHANNEL_0 (C++ class), 194
 LEDC_CHANNEL_1 (C++ class), 194
 LEDC_CHANNEL_2 (C++ class), 194
 LEDC_CHANNEL_3 (C++ class), 194
 LEDC_CHANNEL_4 (C++ class), 194
 LEDC_CHANNEL_5 (C++ class), 194
 LEDC_CHANNEL_6 (C++ class), 194
 LEDC_CHANNEL_7 (C++ class), 194
 ledc_channel_config (C++ function), 186
 ledc_channel_config_t (C++ class), 192
 ledc_channel_config_t::channel (C++ member), 192
 ledc_channel_config_t::duty (C++ member), 192
 ledc_channel_config_t::gpio_num (C++ member), 192
 ledc_channel_config_t::intr_type (C++ member), 192
 ledc_channel_config_t::speed_mode (C++ member), 192
 ledc_channel_config_t::timer_sel (C++ member), 192
 LEDC_CHANNEL_MAX (C++ class), 194
 ledc_channel_t (C++ type), 194
 ledc_clk_src_t (C++ type), 193
 LEDC_DUTY_DIR_DECREASE (C++ class), 193
 LEDC_DUTY_DIR_INCREASE (C++ class), 193
 ledc_duty_direction_t (C++ type), 193
 ledc_fade_func_install (C++ function), 191
 ledc_fade_func_uninstall (C++ function), 191
 LEDC_FADE_MAX (C++ class), 194
 ledc_fade_mode_t (C++ type), 194
 LEDC_FADE_NO_WAIT (C++ class), 194
 ledc_fade_start (C++ function), 191
 LEDC_FADE_WAIT_DONE (C++ class), 194
 ledc_get_duty (C++ function), 188
 ledc_get_freq (C++ function), 188
 LEDC_HIGH_SPEED_MODE (C++ class), 193
 LEDC_INTR_DISABLE (C++ class), 193
 LEDC_INTR_FADE_END (C++ class), 193
 ledc_intr_type_t (C++ type), 193
 ledc_isr_handle_t (C++ type), 193
 ledc_isr_register (C++ function), 189
 LEDC_LOW_SPEED_MODE (C++ class), 193
 ledc_mode_t (C++ type), 193
 LEDC_REF_CLK_HZ (C macro), 193
 LEDC_REF_TICK (C++ class), 193
 ledc_set_duty (C++ function), 188
 ledc_set_fade (C++ function), 188
 ledc_set_fade_with_step (C++ function), 190
 ledc_set_fade_with_time (C++ function), 191
 ledc_set_freq (C++ function), 187
 LEDC_SPEED_MODE_MAX (C++ class), 193

[ledc_stop](#) (C++ function), 187
[LEDC_TIMER_0](#) (C++ class), 193
[LEDC_TIMER_1](#) (C++ class), 193
[LEDC_TIMER_10_BIT](#) (C++ class), 194
[LEDC_TIMER_11_BIT](#) (C++ class), 194
[LEDC_TIMER_12_BIT](#) (C++ class), 194
[LEDC_TIMER_13_BIT](#) (C++ class), 194
[LEDC_TIMER_14_BIT](#) (C++ class), 194
[LEDC_TIMER_15_BIT](#) (C++ class), 194
[LEDC_TIMER_2](#) (C++ class), 193
[LEDC_TIMER_3](#) (C++ class), 194
[ledc_timer_bit_t](#) (C++ type), 194
[ledc_timer_config](#) (C++ function), 186
[ledc_timer_config_t](#) (C++ class), 192
[ledc_timer_config_t::bit_num](#) (C++ member), 192
[ledc_timer_config_t::freq_hz](#) (C++ member), 192
[ledc_timer_config_t::speed_mode](#) (C++ member), 192
[ledc_timer_config_t::timer_num](#) (C++ member), 192
[ledc_timer_pause](#) (C++ function), 190
[ledc_timer_resume](#) (C++ function), 190
[ledc_timer_rst](#) (C++ function), 189
[ledc_timer_set](#) (C++ function), 189
[ledc_timer_t](#) (C++ type), 193
[ledc_update_duty](#) (C++ function), 187
[LOG_COLOR_D](#) (C macro), 348
[LOG_COLOR_E](#) (C macro), 348
[LOG_COLOR_I](#) (C macro), 348
[LOG_COLOR_V](#) (C macro), 348
[LOG_COLOR_W](#) (C macro), 348
[LOG_FORMAT](#) (C macro), 348
[LOG_LOCAL_LEVEL](#) (C macro), 348
[LOG_RESET_COLOR](#) (C macro), 348

M

[M_BGE](#) (C macro), 413
[M_BL](#) (C macro), 413
[M_BX](#) (C macro), 413
[M_BXF](#) (C macro), 413
[M_BXZ](#) (C macro), 413
[M_LABEL](#) (C macro), 413
[MCPWM0A](#) (C++ class), 207
[MCPWM0B](#) (C++ class), 207
[MCPWM1A](#) (C++ class), 207
[MCPWM1B](#) (C++ class), 207
[MCPWM2A](#) (C++ class), 207
[MCPWM2B](#) (C++ class), 208
[mcpwm_action_on_pwmxa_t](#) (C++ type), 210
[mcpwm_action_on_pwmxb_t](#) (C++ type), 210
[MCPWM_ACTIVE_HIGH_COMPLIMENT_MODE](#) (C++ class), 211
[MCPWM_ACTIVE_HIGH_MODE](#) (C++ class), 211
[MCPWM_ACTIVE_LOW_COMPLIMENT_MODE](#) (C++ class), 211
[MCPWM_ACTIVE_LOW_MODE](#) (C++ class), 211

[MCPWM_ACTIVE_RED_FED_FROM_PWMXA](#) (C++ class), 211
[MCPWM_ACTIVE_RED_FED_FROM_PWMXB](#) (C++ class), 211
[MCPWM_BYPASS_FED](#) (C++ class), 211
[MCPWM_BYPASS_RED](#) (C++ class), 211
[MCPWM_CAP_0](#) (C++ class), 208
[MCPWM_CAP_1](#) (C++ class), 208
[MCPWM_CAP_2](#) (C++ class), 208
[mcpwm_capture_disable](#) (C++ function), 204
[mcpwm_capture_enable](#) (C++ function), 204
[mcpwm_capture_on_edge_t](#) (C++ type), 211
[mcpwm_capture_signal_get_edge](#) (C++ function), 204
[mcpwm_capture_signal_get_value](#) (C++ function), 204
[mcpwm_capture_signal_t](#) (C++ type), 211
[mcpwm_carrier_config_t](#) (C++ class), 207
[mcpwm_carrier_config_t::carrier_duty](#) (C++ member), 207
[mcpwm_carrier_config_t::carrier_ivt_mode](#) (C++ member), 207
[mcpwm_carrier_config_t::carrier_os_mode](#) (C++ member), 207
[mcpwm_carrier_config_t::carrier_period](#) (C++ member), 207
[mcpwm_carrier_config_t::pulse_width_in_os](#) (C++ member), 207
[mcpwm_carrier_disable](#) (C++ function), 200
[mcpwm_carrier_enable](#) (C++ function), 200
[mcpwm_carrier_init](#) (C++ function), 200
[mcpwm_carrier_oneshot_mode_disable](#) (C++ function), 201
[mcpwm_carrier_oneshot_mode_enable](#) (C++ function), 201
[mcpwm_carrier_os_t](#) (C++ type), 209
[MCPWM_CARRIER_OUT_IVT_DIS](#) (C++ class), 209
[MCPWM_CARRIER_OUT_IVT_EN](#) (C++ class), 209
[mcpwm_carrier_out_ivt_t](#) (C++ type), 209
[mcpwm_carrier_output_invert](#) (C++ function), 201
[mcpwm_carrier_set_duty_cycle](#) (C++ function), 201
[mcpwm_carrier_set_period](#) (C++ function), 200
[mcpwm_config_t](#) (C++ class), 206
[mcpwm_config_t::cmpr_a](#) (C++ member), 207
[mcpwm_config_t::cmpr_b](#) (C++ member), 207
[mcpwm_config_t::counter_mode](#) (C++ member), 207
[mcpwm_config_t::duty_mode](#) (C++ member), 207
[mcpwm_config_t::frequency](#) (C++ member), 207
[MCPWM_COUNTER_MAX](#) (C++ class), 209
[mcpwm_counter_type_t](#) (C++ type), 209
[mcpwm_deadtime_disable](#) (C++ function), 202
[mcpwm_deadtime_enable](#) (C++ function), 202
[MCPWM_DEADTIME_TYPE_MAX](#) (C++ class), 212
[mcpwm_deadtime_type_t](#) (C++ type), 211
[MCPWM_DOWN_COUNTER](#) (C++ class), 209
[MCPWM_DUTY_MODE_0](#) (C++ class), 209

MCPWM_DUTY_MODE_1 (C++ class), 209
MCPWM_DUTY_MODE_MAX (C++ class), 209
mcpwm_duty_type_t (C++ type), 209
MCPWM_FAULT_0 (C++ class), 208
MCPWM_FAULT_1 (C++ class), 208
MCPWM_FAULT_2 (C++ class), 208
mcpwm_fault_deinit (C++ function), 203
mcpwm_fault_init (C++ function), 202
mcpwm_fault_input_level_t (C++ type), 210
mcpwm_fault_set_cyc_mode (C++ function), 203
mcpwm_fault_set_oneshot_mode (C++ function), 203
mcpwm_fault_signal_t (C++ type), 210
MCPWM_FORCE_MCPWMXA_HIGH (C++ class), 210
MCPWM_FORCE_MCPWMXA_LOW (C++ class), 210
MCPWM_FORCE_MCPWMXB_HIGH (C++ class), 211
MCPWM_FORCE_MCPWMXB_LOW (C++ class), 211
mcpwm_get_duty (C++ function), 198
mcpwm_get_frequency (C++ function), 198
mcpwm_gpio_init (C++ function), 196
MCPWM_HIGH_LEVEL_TGR (C++ class), 210
mcpwm_init (C++ function), 197
mcpwm_io_signals_t (C++ type), 207
mcpwm_isr_register (C++ function), 205
MCPWM_LOW_LEVEL_TGR (C++ class), 210
MCPWM_NEG_EDGE (C++ class), 211
MCPWM_NO_CHANGE_IN_MCPWMXA (C++ class), 210
MCPWM_NO_CHANGE_IN_MCPWMXB (C++ class), 210
MCPWM_ONESHOT_MODE_DIS (C++ class), 209
MCPWM_ONESHOT_MODE_EN (C++ class), 209
mcpwm_operator_t (C++ type), 208
MCPWM_OPR_A (C++ class), 209
MCPWM_OPR_B (C++ class), 209
MCPWM_OPR_MAX (C++ class), 209
mcpwm_pin_config_t (C++ class), 206
mcpwm_pin_config_t::mcpwm0a_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm0b_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm1a_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm1b_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm2a_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm2b_out_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_cap0_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_cap1_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_cap2_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_fault0_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_fault1_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_fault2_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_sync0_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_sync1_in_num (C++ member), 206
mcpwm_pin_config_t::mcpwm_sync2_in_num (C++ member), 206
MCPWM_POS_EDGE (C++ class), 211
MCPWM_SELECT_CAP0 (C++ class), 211
MCPWM_SELECT_CAP1 (C++ class), 211
MCPWM_SELECT_CAP2 (C++ class), 211
MCPWM_SELECT_F0 (C++ class), 210
MCPWM_SELECT_F1 (C++ class), 210
MCPWM_SELECT_F2 (C++ class), 210
MCPWM_SELECT_SYNC0 (C++ class), 210
MCPWM_SELECT_SYNC1 (C++ class), 210
MCPWM_SELECT_SYNC2 (C++ class), 210
mcpwm_set_duty (C++ function), 197
mcpwm_set_duty_in_us (C++ function), 197
mcpwm_set_duty_type (C++ function), 198
mcpwm_set_frequency (C++ function), 197
mcpwm_set_pin (C++ function), 196
mcpwm_set_signal_high (C++ function), 199
mcpwm_set_signal_low (C++ function), 199
mcpwm_start (C++ function), 199
mcpwm_stop (C++ function), 199
MCPWM_SYNC_0 (C++ class), 208
MCPWM_SYNC_1 (C++ class), 208
MCPWM_SYNC_2 (C++ class), 208
mcpwm_sync_disable (C++ function), 205
mcpwm_sync_enable (C++ function), 205
mcpwm_sync_signal_t (C++ type), 210
MCPWM_TIMER_0 (C++ class), 208
MCPWM_TIMER_1 (C++ class), 208
MCPWM_TIMER_2 (C++ class), 208
MCPWM_TIMER_MAX (C++ class), 208
mcpwm_timer_t (C++ type), 208
MCPWM_TOG_MCPWMXA (C++ class), 210
MCPWM_TOG_MCPWMXB (C++ class), 211
MCPWM_UNIT_0 (C++ class), 208
MCPWM_UNIT_1 (C++ class), 208
MCPWM_UNIT_MAX (C++ class), 208
mcpwm_unit_t (C++ type), 208
MCPWM_UP_COUNTER (C++ class), 209
MCPWM_UP_DOWN_COUNTER (C++ class), 209

mdns_free (C++ function), 281
mdns_init (C++ function), 281
mdns_query (C++ function), 284
mdns_query_end (C++ function), 284
mdns_result_free (C++ function), 285
mdns_result_get (C++ function), 284
mdns_result_get_count (C++ function), 284
mdns_result_s (C++ class), 285
mdns_result_s::addr (C++ member), 285
mdns_result_s::addrv6 (C++ member), 285
mdns_result_s::host (C++ member), 285
mdns_result_s::instance (C++ member), 285
mdns_result_s::next (C++ member), 285
mdns_result_s::port (C++ member), 285
mdns_result_s::priority (C++ member), 285
mdns_result_s::txt (C++ member), 285
mdns_result_s::weight (C++ member), 285
mdns_result_t (C++ type), 286
mdns_server_t (C++ type), 286
mdns_service_add (C++ function), 282
mdns_service_instance_set (C++ function), 283
mdns_service_port_set (C++ function), 283
mdns_service_remove (C++ function), 282
mdns_service_remove_all (C++ function), 284
mdns_service_txt_set (C++ function), 283
mdns_set_hostname (C++ function), 282
mdns_set_instance (C++ function), 282

N

nvs_close (C++ function), 310
nvs_commit (C++ function), 310
nvs_erase_all (C++ function), 310
nvs_erase_key (C++ function), 309
nvs_flash_erase (C++ function), 306
nvs_flash_init (C++ function), 305
nvs_get_blob (C++ function), 308
nvs_get_i16 (C++ function), 307
nvs_get_i32 (C++ function), 307
nvs_get_i64 (C++ function), 307
nvs_get_i8 (C++ function), 307
nvs_get_str (C++ function), 307
nvs_get_u16 (C++ function), 307
nvs_get_u32 (C++ function), 307
nvs_get_u64 (C++ function), 307
nvs_get_u8 (C++ function), 307
nvs_handle (C++ type), 311
nvs_open (C++ function), 308
nvs_open_mode (C++ type), 312
NVS_READONLY (C++ class), 312
NVS_READWRITE (C++ class), 312
nvs_set_blob (C++ function), 309
nvs_set_i16 (C++ function), 306
nvs_set_i32 (C++ function), 307
nvs_set_i64 (C++ function), 307

nvs_set_i8 (C++ function), 306
nvs_set_str (C++ function), 307
nvs_set_u16 (C++ function), 307
nvs_set_u32 (C++ function), 307
nvs_set_u64 (C++ function), 307
nvs_set_u8 (C++ function), 306

O

OTA_SIZE_UNKNOWN (C macro), 336

P

PCNT_CHANNEL_0 (C++ class), 218
PCNT_CHANNEL_1 (C++ class), 218
PCNT_CHANNEL_MAX (C++ class), 219
pcnt_channel_t (C++ type), 218
pcnt_config_t (C++ class), 217
pcnt_config_t::channel (C++ member), 217
pcnt_config_t::counter_h_lim (C++ member), 217
pcnt_config_t::counter_l_lim (C++ member), 217
pcnt_config_t::ctrl_gpio_num (C++ member), 217
pcnt_config_t::hctrl_mode (C++ member), 217
pcnt_config_t::lctrl_mode (C++ member), 217
pcnt_config_t::neg_mode (C++ member), 217
pcnt_config_t::pos_mode (C++ member), 217
pcnt_config_t::pulse_gpio_num (C++ member), 217
pcnt_config_t::unit (C++ member), 217
PCNT_COUNT_DEC (C++ class), 218
PCNT_COUNT_DIS (C++ class), 218
PCNT_COUNT_INC (C++ class), 218
PCNT_COUNT_MAX (C++ class), 218
pcnt_count_mode_t (C++ type), 218
pcnt_counter_clear (C++ function), 213
pcnt_counter_pause (C++ function), 213
pcnt_counter_resume (C++ function), 213
pcnt_ctrl_mode_t (C++ type), 218
pcnt_event_disable (C++ function), 214
pcnt_event_enable (C++ function), 214
PCNT_EVT_H_LIM (C++ class), 219
PCNT_EVT_L_LIM (C++ class), 219
PCNT_EVT_MAX (C++ class), 219
PCNT_EVT_THRES_0 (C++ class), 219
PCNT_EVT_THRES_1 (C++ class), 219
pcnt_evt_type_t (C++ type), 219
PCNT_EVT_ZERO (C++ class), 219
pcnt_filter_disable (C++ function), 215
pcnt_filter_enable (C++ function), 215
pcnt_get_counter_value (C++ function), 212
pcnt_get_event_value (C++ function), 214
pcnt_get_filter_value (C++ function), 216
pcnt_intr_disable (C++ function), 213
pcnt_intr_enable (C++ function), 213
pcnt_isr_handle_t (C++ type), 217
pcnt_isr_register (C++ function), 215
PCNT_MODE_DISABLE (C++ class), 218

PCNT_MODE_KEEP (C++ class), 218
 PCNT_MODE_MAX (C++ class), 218
 PCNT_MODE_REVERSE (C++ class), 218
 PCNT_PIN_NOT_USED (C macro), 217
 pcnt_set_event_value (C++ function), 214
 pcnt_set_filter_value (C++ function), 216
 pcnt_set_mode (C++ function), 216
 pcnt_set_pin (C++ function), 215
 PCNT_UNIT_0 (C++ class), 218
 PCNT_UNIT_1 (C++ class), 218
 PCNT_UNIT_2 (C++ class), 218
 PCNT_UNIT_3 (C++ class), 218
 PCNT_UNIT_4 (C++ class), 218
 PCNT_UNIT_5 (C++ class), 218
 PCNT_UNIT_6 (C++ class), 218
 PCNT_UNIT_7 (C++ class), 218
 pcnt_unit_config (C++ function), 212
 PCNT_UNIT_MAX (C++ class), 218
 pcnt_unit_t (C++ type), 218
 PDM_PCM_CONV_DISABLE (C++ class), 185
 PDM_PCM_CONV_ENABLE (C++ class), 185
 pdm_pcm_conv_t (C++ type), 185
 PDM_SAMPLE_RATE_RATIO_128 (C++ class), 185
 PDM_SAMPLE_RATE_RATIO_64 (C++ class), 184
 pdm_sample_rate_ratio_t (C++ type), 184
 PHY0 (C++ class), 146
 PHY1 (C++ class), 146
 PHY10 (C++ class), 147
 PHY11 (C++ class), 147
 PHY12 (C++ class), 147
 PHY13 (C++ class), 147
 PHY14 (C++ class), 147
 PHY15 (C++ class), 147
 PHY16 (C++ class), 147
 PHY17 (C++ class), 147
 PHY18 (C++ class), 147
 PHY19 (C++ class), 147
 PHY2 (C++ class), 147
 PHY20 (C++ class), 147
 PHY21 (C++ class), 147
 PHY22 (C++ class), 147
 PHY23 (C++ class), 147
 PHY24 (C++ class), 147
 PHY25 (C++ class), 147
 PHY26 (C++ class), 147
 PHY27 (C++ class), 147
 PHY28 (C++ class), 147
 PHY29 (C++ class), 147
 PHY3 (C++ class), 147
 PHY30 (C++ class), 147
 PHY31 (C++ class), 147
 PHY4 (C++ class), 147
 PHY5 (C++ class), 147
 PHY6 (C++ class), 147

PHY7 (C++ class), 147
 PHY8 (C++ class), 147
 PHY9 (C++ class), 147
 phy_lan8720_check_phy_init (C++ function), 149
 phy_lan8720_default_ethernet_config (C++ member), 143
 phy_lan8720_dump_registers (C++ function), 149
 phy_lan8720_get_duplex_mode (C++ function), 149
 phy_lan8720_get_speed_mode (C++ function), 149
 phy_lan8720_init (C++ function), 149
 phy_lan8720_power_enable (C++ function), 149
 phy_mii_check_link_status (C++ function), 148
 phy_mii_enable_flow_ctrl (C++ function), 148
 phy_mii_get_partner_pause_enable (C++ function), 148
 phy_rmii_configure_data_interface_pins (C++ function), 148
 phy_rmii_smi_configure_pins (C++ function), 148
 phy_tlk110_check_phy_init (C++ function), 148
 phy_tlk110_default_ethernet_config (C++ member), 143
 phy_tlk110_dump_registers (C++ function), 148
 phy_tlk110_get_duplex_mode (C++ function), 148
 phy_tlk110_get_speed_mode (C++ function), 148
 phy_tlk110_init (C++ function), 148
 phy_tlk110_power_enable (C++ function), 148

R

R0 (C macro), 410
 R1 (C macro), 410
 R2 (C macro), 410
 R3 (C macro), 410
 RMT_BASECLK_APB (C++ class), 232
 RMT_BASECLK_MAX (C++ class), 232
 RMT_BASECLK_REF (C++ class), 232
 RMT_CARRIER_LEVEL_HIGH (C++ class), 232
 RMT_CARRIER_LEVEL_LOW (C++ class), 232
 RMT_CARRIER_LEVEL_MAX (C++ class), 232
 rmt_carrier_level_t (C++ type), 232
 RMT_CHANNEL_0 (C++ class), 231
 RMT_CHANNEL_1 (C++ class), 231
 RMT_CHANNEL_2 (C++ class), 231
 RMT_CHANNEL_3 (C++ class), 231
 RMT_CHANNEL_4 (C++ class), 231
 RMT_CHANNEL_5 (C++ class), 231
 RMT_CHANNEL_6 (C++ class), 231
 RMT_CHANNEL_7 (C++ class), 231
 RMT_CHANNEL_MAX (C++ class), 231
 rmt_channel_t (C++ type), 231
 rmt_clr_intr_enable_mask (C++ function), 226
 rmt_config (C++ function), 227
 rmt_config_t (C++ class), 230
 rmt_config_t::channel (C++ member), 230
 rmt_config_t::clk_div (C++ member), 231
 rmt_config_t::gpio_num (C++ member), 231
 rmt_config_t::mem_block_num (C++ member), 231

[rmt_config_t::rmt_mode \(C++ member\), 230](#)
[rmt_config_t::rx_config \(C++ member\), 231](#)
[rmt_config_t::tx_config \(C++ member\), 231](#)
[RMT_DATA_MODE_FIFO \(C++ class\), 232](#)
[RMT_DATA_MODE_MAX \(C++ class\), 232](#)
[RMT_DATA_MODE_MEM \(C++ class\), 232](#)
[rmt_data_mode_t \(C++ type\), 232](#)
[rmt_driver_install \(C++ function\), 228](#)
[rmt_driver_uninstall \(C++ function\), 228](#)
[rmt_fill_tx_items \(C++ function\), 228](#)
[rmt_get_clk_div \(C++ function\), 220](#)
[rmt_get_mem_block_num \(C++ function\), 221](#)
[rmt_get_mem_pd \(C++ function\), 222](#)
[rmt_get_memory_owner \(C++ function\), 223](#)
[rmt_get_ringbuf_handler \(C++ function\), 229](#)
[rmt_get_rx_idle_thresh \(C++ function\), 220](#)
[rmt_get_source_clk \(C++ function\), 225](#)
[rmt_get_status \(C++ function\), 225](#)
[rmt_get_tx_loop_mode \(C++ function\), 224](#)
[RMT_IDLE_LEVEL_HIGH \(C++ class\), 232](#)
[RMT_IDLE_LEVEL_LOW \(C++ class\), 232](#)
[RMT_IDLE_LEVEL_MAX \(C++ class\), 232](#)
[rmt_idle_level_t \(C++ type\), 232](#)
[rmt_isr_deregister \(C++ function\), 228](#)
[rmt_isr_handle_t \(C++ type\), 231](#)
[rmt_isr_register \(C++ function\), 227](#)
[RMT_MEM_BLOCK_BYTE_NUM \(C macro\), 231](#)
[RMT_MEM_ITEM_NUM \(C macro\), 231](#)
[RMT_MEM_OWNER_MAX \(C++ class\), 232](#)
[RMT_MEM_OWNER_RX \(C++ class\), 232](#)
[rmt_mem_owner_t \(C++ type\), 231](#)
[RMT_MEM_OWNER_TX \(C++ class\), 232](#)
[rmt_memory_rw_rst \(C++ function\), 223](#)
[RMT_MODE_MAX \(C++ class\), 232](#)
[RMT_MODE_RX \(C++ class\), 232](#)
[rmt_mode_t \(C++ type\), 232](#)
[RMT_MODE_TX \(C++ class\), 232](#)
[rmt_rx_config_t \(C++ class\), 230](#)
[rmt_rx_config_t::filter_en \(C++ member\), 230](#)
[rmt_rx_config_t::filter_ticks_thresh \(C++ member\), 230](#)
[rmt_rx_config_t::idle_threshold \(C++ member\), 230](#)
[rmt_rx_start \(C++ function\), 222](#)
[rmt_rx_stop \(C++ function\), 223](#)
[rmt_set_clk_div \(C++ function\), 219](#)
[rmt_set_err_intr_en \(C++ function\), 226](#)
[rmt_set_idle_level \(C++ function\), 225](#)
[rmt_set_intr_enable_mask \(C++ function\), 225](#)
[rmt_set_mem_block_num \(C++ function\), 220](#)
[rmt_set_mem_pd \(C++ function\), 221](#)
[rmt_set_memory_owner \(C++ function\), 223](#)
[rmt_set_pin \(C++ function\), 227](#)
[rmt_set_rx_filter \(C++ function\), 224](#)
[rmt_set_rx_idle_thresh \(C++ function\), 220](#)
[rmt_set_rx_intr_en \(C++ function\), 226](#)
[rmt_set_source_clk \(C++ function\), 224](#)
[rmt_set_tx_carrier \(C++ function\), 221](#)
[rmt_set_tx_intr_en \(C++ function\), 226](#)
[rmt_set_tx_loop_mode \(C++ function\), 223](#)
[rmt_set_tx_thr_intr_en \(C++ function\), 226](#)
[rmt_source_clk_t \(C++ type\), 232](#)
[rmt_tx_config_t \(C++ class\), 230](#)
[rmt_tx_config_t::carrier_duty_percent \(C++ member\), 230](#)
[rmt_tx_config_t::carrier_en \(C++ member\), 230](#)
[rmt_tx_config_t::carrier_freq_hz \(C++ member\), 230](#)
[rmt_tx_config_t::carrier_level \(C++ member\), 230](#)
[rmt_tx_config_t::idle_level \(C++ member\), 230](#)
[rmt_tx_config_t::idle_output_en \(C++ member\), 230](#)
[rmt_tx_config_t::loop_en \(C++ member\), 230](#)
[rmt_tx_start \(C++ function\), 222](#)
[rmt_tx_stop \(C++ function\), 222](#)
[rmt_wait_tx_done \(C++ function\), 229](#)
[rmt_write_items \(C++ function\), 229](#)
[rtc_gpio_deinit \(C++ function\), 162](#)
[rtc_gpio_desc_t \(C++ class\), 165](#)
[rtc_gpio_desc_t::func \(C++ member\), 165](#)
[rtc_gpio_desc_t::hold \(C++ member\), 165](#)
[rtc_gpio_desc_t::hold_force \(C++ member\), 165](#)
[rtc_gpio_desc_t::ie \(C++ member\), 165](#)
[rtc_gpio_desc_t::mux \(C++ member\), 165](#)
[rtc_gpio_desc_t::pulldown \(C++ member\), 165](#)
[rtc_gpio_desc_t::pullup \(C++ member\), 165](#)
[rtc_gpio_desc_t::reg \(C++ member\), 165](#)
[rtc_gpio_desc_t::rtc_num \(C++ member\), 166](#)
[rtc_gpio_desc_t::slpie \(C++ member\), 165](#)
[rtc_gpio_desc_t::slpsel \(C++ member\), 165](#)
[rtc_gpio_force_hold_dis_all \(C++ function\), 165](#)
[rtc_gpio_get_level \(C++ function\), 162](#)
[rtc_gpio_hold_dis \(C++ function\), 165](#)
[rtc_gpio_hold_en \(C++ function\), 164](#)
[rtc_gpio_init \(C++ function\), 162](#)
[RTC_GPIO_IS_VALID_GPIO \(C macro\), 166](#)
[rtc_gpio_is_valid_gpio \(C++ function\), 162](#)
[RTC_GPIO_MODE_DISABLED \(C++ class\), 166](#)
[RTC_GPIO_MODE_INPUT_ONLY \(C++ class\), 166](#)
[RTC_GPIO_MODE_INPUT_OUTPUT \(C++ class\), 166](#)
[RTC_GPIO_MODE_OUTPUT_ONLY \(C++ class\), 166](#)
[rtc_gpio_mode_t \(C++ type\), 166](#)
[rtc_gpio_pulldown_dis \(C++ function\), 164](#)
[rtc_gpio_pulldown_en \(C++ function\), 163](#)
[rtc_gpio_pullup_dis \(C++ function\), 164](#)
[rtc_gpio_pullup_en \(C++ function\), 163](#)
[rtc_gpio_set_direction \(C++ function\), 163](#)
[rtc_gpio_set_level \(C++ function\), 163](#)
[RTC_SLOW_MEM \(C macro\), 413](#)

S

[sc_callback_t \(C++ type\), 55](#)

- SC_STATUS_FIND_CHANNEL (C++ class), 55
- SC_STATUS_GETTING_SSID_PSWD (C++ class), 55
- SC_STATUS_LINK (C++ class), 55
- SC_STATUS_LINK_OVER (C++ class), 55
- SC_STATUS_WAIT (C++ class), 55
- SC_TYPE_AIRKISS (C++ class), 55
- SC_TYPE_ESPTOUCH (C++ class), 55
- SC_TYPE_ESPTOUCH_AIRKISS (C++ class), 55
- sdmmc_card_init (C++ function), 236
- sdmmc_card_t (C++ class), 235
 - sdmmc_card_t::cid (C++ member), 235
 - sdmmc_card_t::csd (C++ member), 235
 - sdmmc_card_t::host (C++ member), 235
 - sdmmc_card_t::ocr (C++ member), 235
 - sdmmc_card_t::rca (C++ member), 235
 - sdmmc_card_t::scr (C++ member), 235
- sdmmc_cid_t (C++ class), 235
 - sdmmc_cid_t::date (C++ member), 236
 - sdmmc_cid_t::mfg_id (C++ member), 236
 - sdmmc_cid_t::name (C++ member), 236
 - sdmmc_cid_t::oem_id (C++ member), 236
 - sdmmc_cid_t::revision (C++ member), 236
 - sdmmc_cid_t::serial (C++ member), 236
- sdmmc_command_t (C++ class), 234
 - sdmmc_command_t::arg (C++ member), 234
 - sdmmc_command_t::blklen (C++ member), 235
 - sdmmc_command_t::data (C++ member), 234
 - sdmmc_command_t::datalen (C++ member), 234
 - sdmmc_command_t::error (C++ member), 235
 - sdmmc_command_t::flags (C++ member), 235
 - sdmmc_command_t::opcode (C++ member), 234
 - sdmmc_command_t::response (C++ member), 234
- sdmmc_csd_t (C++ class), 235
 - sdmmc_csd_t::capacity (C++ member), 235
 - sdmmc_csd_t::card_command_class (C++ member), 235
 - sdmmc_csd_t::csd_ver (C++ member), 235
 - sdmmc_csd_t::mmc_ver (C++ member), 235
 - sdmmc_csd_t::read_block_len (C++ member), 235
 - sdmmc_csd_t::sector_size (C++ member), 235
 - sdmmc_csd_t::tr_speed (C++ member), 235
- SDMMC_FREQ_DEFAULT (C macro), 234
- SDMMC_FREQ_HIGHSPEED (C macro), 234
- SDMMC_FREQ_PROBING (C macro), 234
- SDMMC_HOST_DEFAULT (C macro), 238
- sdmmc_host_deinit (C++ function), 239
- sdmmc_host_do_transaction (C++ function), 239
- SDMMC_HOST_FLAG_1BIT (C macro), 234
- SDMMC_HOST_FLAG_4BIT (C macro), 234
- SDMMC_HOST_FLAG_8BIT (C macro), 234
- SDMMC_HOST_FLAG_SPI (C macro), 234
- sdmmc_host_init (C++ function), 237
- sdmmc_host_init_slot (C++ function), 238
- sdmmc_host_set_bus_width (C++ function), 238
- sdmmc_host_set_card_clk (C++ function), 239
- SDMMC_HOST_SLOT_0 (C macro), 237
- SDMMC_HOST_SLOT_1 (C macro), 238
- sdmmc_host_t (C++ class), 233
 - sdmmc_host_t::deinit (C++ member), 234
 - sdmmc_host_t::do_transaction (C++ member), 234
 - sdmmc_host_t::flags (C++ member), 233
 - sdmmc_host_t::init (C++ member), 234
 - sdmmc_host_t::io_voltage (C++ member), 234
 - sdmmc_host_t::max_freq_khz (C++ member), 234
 - sdmmc_host_t::set_bus_width (C++ member), 234
 - sdmmc_host_t::set_card_clk (C++ member), 234
 - sdmmc_host_t::slot (C++ member), 233
- sdmmc_read_sectors (C++ function), 237
- sdmmc_scr_t (C++ class), 236
 - sdmmc_scr_t::bus_width (C++ member), 236
 - sdmmc_scr_t::sd_spec (C++ member), 236
- SDMMC_SLOT_CONFIG_DEFAULT (C macro), 238
- sdmmc_slot_config_t (C++ class), 238
 - sdmmc_slot_config_t::gpio_cd (C++ member), 238
 - sdmmc_slot_config_t::gpio_wp (C++ member), 238
 - sdmmc_slot_config_t::width (C++ member), 238
- SDMMC_SLOT_NO_CD (C macro), 238
- SDMMC_SLOT_NO_WP (C macro), 238
- SDMMC_SLOT_WIDTH_DEFAULT (C macro), 238
- sdmmc_write_sectors (C++ function), 236
- SIGMADELTA_CHANNEL_0 (C++ class), 242
- SIGMADELTA_CHANNEL_1 (C++ class), 242
- SIGMADELTA_CHANNEL_2 (C++ class), 242
- SIGMADELTA_CHANNEL_3 (C++ class), 242
- SIGMADELTA_CHANNEL_4 (C++ class), 242
- SIGMADELTA_CHANNEL_5 (C++ class), 242
- SIGMADELTA_CHANNEL_6 (C++ class), 242
- SIGMADELTA_CHANNEL_7 (C++ class), 242
- SIGMADELTA_CHANNEL_MAX (C++ class), 242
- sigmadelta_channel_t (C++ type), 242
- sigmadelta_config (C++ function), 240
- sigmadelta_config_t (C++ class), 241
 - sigmadelta_config_t::channel (C++ member), 241
 - sigmadelta_config_t::sigmadelta_duty (C++ member), 241
 - sigmadelta_config_t::sigmadelta_gpio (C++ member), 241
 - sigmadelta_config_t::sigmadelta_prescale (C++ member), 241
- sigmadelta_set_duty (C++ function), 240
- sigmadelta_set_pin (C++ function), 241
- sigmadelta_set_prescale (C++ function), 241
- slave_transaction_cb_t (C++ type), 257
- smartconfig_status_t (C++ type), 55
- smartconfig_type_t (C++ type), 55
- spi_bus_add_device (C++ function), 249
- spi_bus_config_t (C++ class), 247
 - spi_bus_config_t::max_transfer_sz (C++ member), 247
 - spi_bus_config_t::miso_io_num (C++ member), 247

- spi_bus_config_t::mosi_io_num (C++ member), 247
- spi_bus_config_t::quadhd_io_num (C++ member), 247
- spi_bus_config_t::quadwp_io_num (C++ member), 247
- spi_bus_config_t::sclk_io_num (C++ member), 247
- spi_bus_free (C++ function), 249
- spi_bus_initialize (C++ function), 248
- spi_bus_remove_device (C++ function), 249
- SPI_DEVICE_3WIRE (C macro), 252
- SPI_DEVICE_BIT_LSBFIRST (C macro), 252
- SPI_DEVICE_CLK_AS_CS (C macro), 252
- spi_device_get_trans_result (C++ function), 250
- SPI_DEVICE_HALFDUPLEX (C macro), 252
- spi_device_handle_t (C++ type), 253
- spi_device_interface_config_t (C++ class), 250
- spi_device_interface_config_t::address_bits (C++ member), 251
- spi_device_interface_config_t::clock_speed_hz (C++ member), 251
- spi_device_interface_config_t::command_bits (C++ member), 251
- spi_device_interface_config_t::cs_ena_posttrans (C++ member), 251
- spi_device_interface_config_t::cs_ena_pretrans (C++ member), 251
- spi_device_interface_config_t::dummy_bits (C++ member), 251
- spi_device_interface_config_t::duty_cycle_pos (C++ member), 251
- spi_device_interface_config_t::flags (C++ member), 251
- spi_device_interface_config_t::mode (C++ member), 251
- spi_device_interface_config_t::post_cb (C++ member), 251
- spi_device_interface_config_t::pre_cb (C++ member), 251
- spi_device_interface_config_t::queue_size (C++ member), 251
- spi_device_interface_config_t::spics_io_num (C++ member), 251
- SPI_DEVICE_POSITIVE_CS (C macro), 252
- spi_device_queue_trans (C++ function), 249
- SPI_DEVICE_RXBIT_LSBFIRST (C macro), 252
- spi_device_transmit (C++ function), 250
- SPI_DEVICE_TXBIT_LSBFIRST (C macro), 252
- spi_flash_cache2phys (C++ function), 292
- SPI_FLASH_CACHE2PHYS_FAIL (C macro), 294
- spi_flash_cache_enabled (C++ function), 292
- spi_flash_erase_range (C++ function), 289
- spi_flash_erase_sector (C++ function), 289
- spi_flash_get_chip_size (C++ function), 289
- spi_flash_guard_end_func_t (C++ type), 294
- spi_flash_guard_funcs_t (C++ class), 293
- spi_flash_guard_funcs_t::end (C++ member), 293
- spi_flash_guard_funcs_t::op_lock (C++ member), 293
- spi_flash_guard_funcs_t::op_unlock (C++ member), 293
- spi_flash_guard_funcs_t::start (C++ member), 293
- spi_flash_guard_set (C++ function), 292
- spi_flash_guard_start_func_t (C++ type), 294
- spi_flash_init (C++ function), 289
- spi_flash_mmap (C++ function), 291
- SPI_FLASH_MMAP_DATA (C++ class), 294
- spi_flash_mmap_dump (C++ function), 292
- spi_flash_mmap_handle_t (C++ type), 294
- SPI_FLASH_MMAP_INST (C++ class), 294
- spi_flash_mmap_memory_t (C++ type), 294
- spi_flash_mmap_pages (C++ function), 291
- SPI_FLASH_MMU_PAGE_SIZE (C macro), 294
- spi_flash_munmap (C++ function), 291
- spi_flash_op_lock_func_t (C++ type), 294
- spi_flash_op_unlock_func_t (C++ type), 294
- spi_flash_phys2cache (C++ function), 292
- spi_flash_read (C++ function), 290
- spi_flash_read_encrypted (C++ function), 290
- SPI_FLASH_SEC_SIZE (C macro), 294
- spi_flash_write (C++ function), 290
- spi_flash_write_encrypted (C++ function), 290
- SPI_HOST (C++ class), 248
- spi_host_device_t (C++ type), 248
- SPI_MAX_DMA_LEN (C macro), 247
- SPI_SLAVE_BIT_LSBFIRST (C macro), 257
- spi_slave_free (C++ function), 255
- spi_slave_get_trans_result (C++ function), 255
- spi_slave_initialize (C++ function), 254
- spi_slave_interface_config_t (C++ class), 256
- spi_slave_interface_config_t::flags (C++ member), 256
- spi_slave_interface_config_t::mode (C++ member), 256
- spi_slave_interface_config_t::post_setup_cb (C++ member), 256
- spi_slave_interface_config_t::post_trans_cb (C++ member), 256
- spi_slave_interface_config_t::queue_size (C++ member), 256
- spi_slave_interface_config_t::spics_io_num (C++ member), 256
- spi_slave_queue_trans (C++ function), 255
- SPI_SLAVE_RXBIT_LSBFIRST (C macro), 257
- spi_slave_transaction_t (C++ class), 257
- spi_slave_transaction_t (C++ type), 257
- spi_slave_transaction_t::length (C++ member), 257
- spi_slave_transaction_t::rx_buffer (C++ member), 257
- spi_slave_transaction_t::tx_buffer (C++ member), 257
- spi_slave_transaction_t::user (C++ member), 257
- spi_slave_transmit (C++ function), 256
- SPI_SLAVE_TXBIT_LSBFIRST (C macro), 257
- SPI_TRANS_MODE_DIO (C macro), 252
- SPI_TRANS_MODE_DIOQIO_ADDR (C macro), 252
- SPI_TRANS_MODE_QIO (C macro), 252
- SPI_TRANS_USE_RXDATA (C macro), 252
- SPI_TRANS_USE_TXDATA (C macro), 252

spi_transaction_t (C++ class), 251
 spi_transaction_t (C++ type), 252
 spi_transaction_t::address (C++ member), 251
 spi_transaction_t::command (C++ member), 251
 spi_transaction_t::flags (C++ member), 251
 spi_transaction_t::length (C++ member), 251
 spi_transaction_t::rx_buffer (C++ member), 252
 spi_transaction_t::rx_data (C++ member), 252
 spi_transaction_t::rxlength (C++ member), 251
 spi_transaction_t::tx_buffer (C++ member), 252
 spi_transaction_t::tx_data (C++ member), 252
 spi_transaction_t::user (C++ member), 252
 spicommon_bus_free_io (C++ function), 245
 spicommon_bus_initialize_io (C++ function), 244
 SPICOMMON_BUSFLAG_MASTER (C macro), 247
 SPICOMMON_BUSFLAG_QUAD (C macro), 247
 SPICOMMON_BUSFLAG_SLAVE (C macro), 247
 spicommon_cs_free (C++ function), 245
 spicommon_cs_initialize (C++ function), 245
 spicommon_dmaworkaround_idle (C++ function), 246
 spicommon_dmaworkaround_req_reset (C++ function), 246
 spicommon_dmaworkaround_reset_in_progress (C++ function), 246
 spicommon_dmaworkaround_transfer_active (C++ function), 246
 spicommon_hw_for_host (C++ function), 246
 spicommon_irqsource_for_host (C++ function), 246
 spicommon_periph_claim (C++ function), 244
 spicommon_periph_free (C++ function), 244
 spicommon_setup_dma_desc_links (C++ function), 245

T

TIMER_0 (C++ class), 264
 TIMER_1 (C++ class), 264
 TIMER_ALARM_DIS (C++ class), 264
 TIMER_ALARM_EN (C++ class), 264
 TIMER_ALARM_MAX (C++ class), 264
 timer_alarm_t (C++ type), 264
 TIMER_AUTORELOAD_DIS (C++ class), 264
 TIMER_AUTORELOAD_EN (C++ class), 265
 TIMER_AUTORELOAD_MAX (C++ class), 265
 timer_autoreload_t (C++ type), 264
 TIMER_BASE_CLK (C macro), 263
 timer_config_t (C++ class), 263
 timer_config_t::alarm_en (C++ member), 263
 timer_config_t::auto_reload (C++ member), 263
 timer_config_t::counter_dir (C++ member), 263
 timer_config_t::counter_en (C++ member), 263
 timer_config_t::divider (C++ member), 263
 timer_config_t::intr_type (C++ member), 263
 timer_count_dir_t (C++ type), 264
 TIMER_COUNT_DOWN (C++ class), 264
 TIMER_COUNT_MAX (C++ class), 264
 TIMER_COUNT_UP (C++ class), 264
 timer_disable_intr (C++ function), 262
 timer_enable_intr (C++ function), 262
 timer_get_alarm_value (C++ function), 260
 timer_get_config (C++ function), 261
 timer_get_counter_time_sec (C++ function), 258
 timer_get_counter_value (C++ function), 258
 TIMER_GROUP_0 (C++ class), 263
 TIMER_GROUP_1 (C++ class), 263
 timer_group_intr_disable (C++ function), 262
 timer_group_intr_enable (C++ function), 262
 TIMER_GROUP_MAX (C++ class), 263
 timer_group_t (C++ type), 263
 timer_idx_t (C++ type), 264
 timer_init (C++ function), 261
 TIMER_INTR_LEVEL (C++ class), 264
 TIMER_INTR_MAX (C++ class), 264
 timer_intr_mode_t (C++ type), 264
 timer_isr_handle_t (C++ type), 263
 timer_isr_register (C++ function), 261
 TIMER_MAX (C++ class), 264
 TIMER_PAUSE (C++ class), 264
 timer_pause (C++ function), 259
 timer_set_alarm (C++ function), 260
 timer_set_alarm_value (C++ function), 260
 timer_set_auto_reload (C++ function), 259
 timer_set_counter_mode (C++ function), 259
 timer_set_counter_value (C++ function), 258
 timer_set_divider (C++ function), 259
 TIMER_START (C++ class), 264
 timer_start (C++ function), 258
 timer_start_t (C++ type), 264
 transaction_cb_t (C++ type), 252

U

UART_BITRATE_MAX (C macro), 276
 UART_BREAK (C++ class), 278
 UART_BUFFER_FULL (C++ class), 278
 uart_clear_intr_status (C++ function), 268
 uart_config_t (C++ class), 275
 uart_config_t::baud_rate (C++ member), 275
 uart_config_t::data_bits (C++ member), 275
 uart_config_t::flow_ctrl (C++ member), 275
 uart_config_t::parity (C++ member), 275
 uart_config_t::rx_flow_ctrl_thresh (C++ member), 275
 uart_config_t::stop_bits (C++ member), 275
 UART_DATA (C++ class), 277
 UART_DATA_5_BITS (C++ class), 276
 UART_DATA_6_BITS (C++ class), 276
 UART_DATA_7_BITS (C++ class), 276
 UART_DATA_8_BITS (C++ class), 276
 UART_DATA_BITS_MAX (C++ class), 276
 UART_DATA_BREAK (C++ class), 278
 uart_disable_intr_mask (C++ function), 268

- uart_disable_pattern_det_intr (C++ function), 274
 - uart_disable_rx_intr (C++ function), 269
 - uart_disable_tx_intr (C++ function), 269
 - uart_driver_delete (C++ function), 272
 - uart_driver_install (C++ function), 271
 - uart_enable_intr_mask (C++ function), 268
 - uart_enable_pattern_det_intr (C++ function), 274
 - uart_enable_rx_intr (C++ function), 268
 - uart_enable_tx_intr (C++ function), 269
 - UART_EVENT_MAX (C++ class), 278
 - uart_event_t (C++ class), 275
 - uart_event_t::size (C++ member), 275
 - uart_event_t::type (C++ member), 275
 - uart_event_type_t (C++ type), 277
 - UART_FIFO_LEN (C macro), 276
 - UART_FIFO_OVF (C++ class), 278
 - uart_flush (C++ function), 274
 - UART_FRAME_ERR (C++ class), 278
 - uart_get_baudrate (C++ function), 267
 - uart_get_buffered_data_len (C++ function), 274
 - uart_get_hw_flow_ctrl (C++ function), 267
 - uart_get_parity (C++ function), 266
 - uart_get_stop_bits (C++ function), 266
 - uart_get_word_length (C++ function), 265
 - uart_hw_flowcontrol_t (C++ type), 277
 - UART_HW_FLOWCTRL_CTS (C++ class), 277
 - UART_HW_FLOWCTRL_CTS_RTS (C++ class), 277
 - UART_HW_FLOWCTRL_DISABLE (C++ class), 277
 - UART_HW_FLOWCTRL_MAX (C++ class), 277
 - UART_HW_FLOWCTRL_RTS (C++ class), 277
 - uart_intr_config (C++ function), 271
 - uart_intr_config_t (C++ class), 275
 - uart_intr_config_t::intr_enable_mask (C++ member), 275
 - uart_intr_config_t::rx_timeout_thresh (C++ member), 275
 - uart_intr_config_t::rxfifo_full_thresh (C++ member), 275
 - uart_intr_config_t::txfifo_empty_intr_thresh (C++ member), 275
 - UART_INTR_MASK (C macro), 276
 - UART_INVERSE_CTS (C macro), 276
 - UART_INVERSE_DISABLE (C macro), 276
 - UART_INVERSE_RTS (C macro), 276
 - UART_INVERSE_RXD (C macro), 276
 - UART_INVERSE_TXD (C macro), 276
 - uart_isr_free (C++ function), 270
 - uart_isr_handle_t (C++ type), 276
 - uart_isr_register (C++ function), 269
 - UART_LINE_INV_MASK (C macro), 276
 - UART_NUM_0 (C++ class), 277
 - UART_NUM_1 (C++ class), 277
 - UART_NUM_2 (C++ class), 277
 - UART_NUM_MAX (C++ class), 277
 - uart_param_config (C++ function), 271
 - UART_PARITY_DISABLE (C++ class), 277
 - UART_PARITY_ERR (C++ class), 278
 - UART_PARITY_EVEN (C++ class), 277
 - UART_PARITY_ODD (C++ class), 277
 - uart_parity_t (C++ type), 277
 - UART_PATTERN_DET (C++ class), 278
 - UART_PIN_NO_CHANGE (C macro), 276
 - uart_port_t (C++ type), 277
 - uart_read_bytes (C++ function), 273
 - uart_set_baudrate (C++ function), 266
 - uart_set_dtr (C++ function), 270
 - uart_set_hw_flow_ctrl (C++ function), 267
 - uart_set_line_inverse (C++ function), 267
 - uart_set_parity (C++ function), 266
 - uart_set_pin (C++ function), 270
 - uart_set_rts (C++ function), 270
 - uart_set_stop_bits (C++ function), 265
 - uart_set_word_length (C++ function), 265
 - UART_STOP_BITS_1 (C++ class), 277
 - UART_STOP_BITS_1_5 (C++ class), 277
 - UART_STOP_BITS_2 (C++ class), 277
 - UART_STOP_BITS_MAX (C++ class), 277
 - uart_stop_bits_t (C++ type), 276
 - uart_tx_chars (C++ function), 272
 - uart_wait_tx_done (C++ function), 272
 - uart_word_length_t (C++ type), 276
 - uart_write_bytes (C++ function), 272
 - uart_write_bytes_with_break (C++ function), 273
 - ulp_load_binary (C++ function), 416
 - ulp_process_macros_and_load (C++ function), 409
 - ulp_run (C++ function), 409, 417
 - ulp_set_wakeup_period (C++ function), 417
- V**
- vprintf_like_t (C++ type), 348
 - VSPI_HOST (C++ class), 248
- W**
- WIFI_AMPDU_ENABLED (C macro), 52
 - WIFI_DYNAMIC_TX_BUFFER_NUM (C macro), 52
 - WIFI_INIT_CONFIG_DEFAULT (C macro), 52
 - WIFI_INIT_CONFIG_MAGIC (C macro), 52
 - wifi_init_config_t (C++ class), 51
 - wifi_init_config_t::ampdu_enable (C++ member), 51
 - wifi_init_config_t::dynamic_rx_buf_num (C++ member), 51
 - wifi_init_config_t::dynamic_tx_buf_num (C++ member), 51
 - wifi_init_config_t::event_handler (C++ member), 51
 - wifi_init_config_t::magic (C++ member), 51
 - wifi_init_config_t::nano_enable (C++ member), 51
 - wifi_init_config_t::nvs_enable (C++ member), 51
 - wifi_init_config_t::static_rx_buf_num (C++ member), 51
 - wifi_init_config_t::static_tx_buf_num (C++ member), 51
 - wifi_init_config_t::tx_buf_type (C++ member), 51

WIFI_NANO_FORMAT_ENABLED (C macro), 52
WIFI_NVS_ENABLED (C macro), 52
wifi_promiscuous_cb_t (C++ type), 53
WIFI_STATIC_TX_BUFFER_NUM (C macro), 52
wl_erase_range (C++ function), 323
wl_handle_t (C++ type), 325
WL_INVALID_HANDLE (C macro), 325
wl_mount (C++ function), 323
wl_read (C++ function), 324
wl_sector_size (C++ function), 325
wl_size (C++ function), 325
wl_unmount (C++ function), 323
wl_write (C++ function), 324