


Hisense VRF Air Conditioning

Gateway for the integration of Hisense VRF systems into KNX home automation systems

USER MANUAL

Issue date: 01/2019 r1.1 ENGLISH

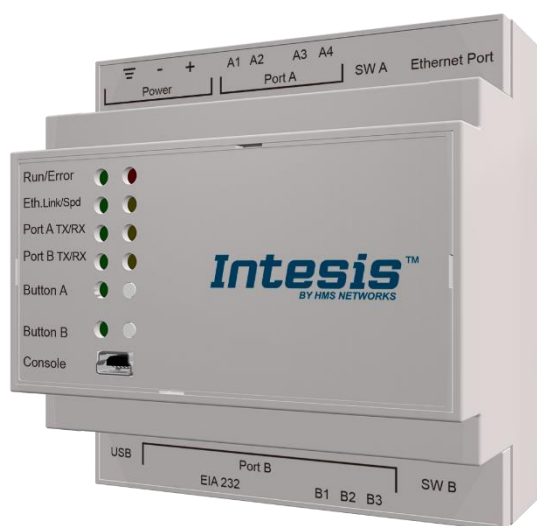

Important User Information

Disclaimer

The information in this document is for informational purposes only. Please inform HMS Industrial Networks of any inaccuracies or omissions found in this document. HMS Industrial Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Industrial Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Industrial Networks and is subject to change without notice. HMS Industrial Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Industrial Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

Gateway for the integration of Hisense VRF systems into KNX home automation systems.

ORDER CODE	LEGACY ORDER CODE
INKNXHIS016O000	HS-AC-KNX-16
INKNXHIS064O000	HS-AC-KNX-64

INDEX

1	Description	5
1.1	Introduction	5
1.1	Functionality	6
1.2	Capacity of Intesis	7
2	KNX System	8
2.1	Description	8
2.2	Points definition	8
3	Connections	9
3.1	Power device	10
3.2	Connect to Hisense installation	10
3.3	Connection to KNX	10
3.4	Connection to the configuration tool	10
4	Set-up process and troubleshooting	11
4.1	Pre-requisites	11
4.2	Intesis MAPS. Configuration & monitoring tool for Intesis KNX series	11
4.2.1	Introduction	11
4.2.2	Connection	11
4.2.3	Configuration tab	12
4.2.4	KNX configuration	12
4.2.5	Hisense configuration	15
4.2.6	Signals	17
4.2.7	Sending the configuration to Intesis	18
4.2.8	Diagnostic	18
4.2.9	Set-up procedure	20
5	Electrical & Mechanical Features	20
6	Dimensions	22
7	AC Unit Types compatibility	23
8	Error codes for Indoor and Outdoor Units	24
9	Appendix A – Communication Objects Table	27

1 Description

1.1 Introduction


This document describes the integration of Hisense VRF air conditioning systems into KNX home automation systems using gateway *Intesis KNX – Hisense VRF*.

The aim of this integration is to monitor and control your Hisense air conditioning system, from your KNX TP-1 installation. To do it so, Intesis performs as a one more KNX device, sending and receiving telegrams to group addresses in the KNX network.

Intesis makes available the Hisense air conditioning system indoor units' datapoints through independent KNX objects.

Up to 64 indoor units supported, depending on product version.

This document assumes that the user is familiar with KNX and Hisense technologies and their technical terms.

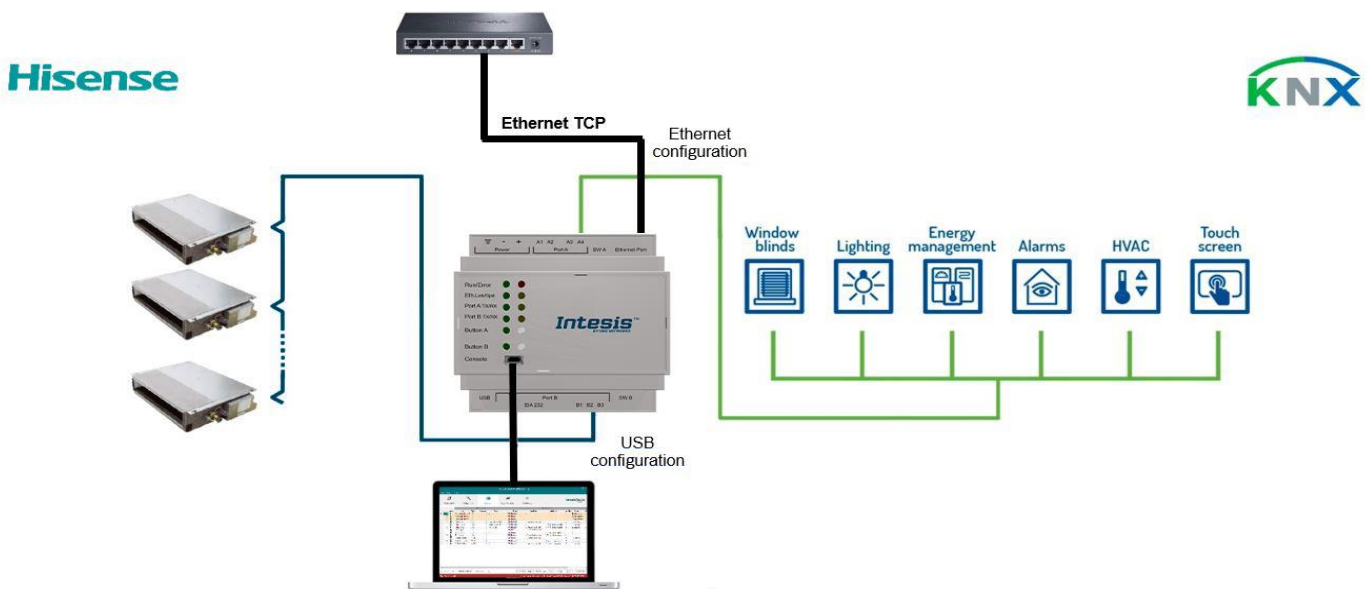

**Integration of Hisense VRF systems into
KNX control systems**

1.1 Functionality

Intesis™ continuously monitors Hisense VRF network for all configured signals and keeps the updated status of all of them in its memory. It triggers updates on configured group addresses to KNX network on value change.

Commands toward the indoor unit communication adaptor are permitted.

Each indoor unit is offered as a set of KNX objects.

Element	Object supported
Outdoor Unit	<ul style="list-style-type: none">• Communication status• Status
Indoor Unit	<ul style="list-style-type: none">• Status• Command• Communication status
General signals (all units)	<ul style="list-style-type: none">• Command

1.2 Capacity of Intesis

Element	Max.	Notes
Number of indoor units	64*	Number of indoor units that can be controlled through Intesis

* There are different models of *Intesis KNX – Hisense VRF* each one with different capacity. The table above shows the capacity for the top model (with maximum capacity).

Their order codes are:

- INKNXHIS016O000: Model supporting up to 16 indoor units
- INKNXHIS064O000: Model supporting up to 64 indoor units

2 KNX System

In this section, a common description for all Intesis KNX series gateways is given, from the point of view of KNX system which is called from now on *internal system*. Connection with the Hisense system is also called from now on *external system*.

2.1 Description

Intesis KNX connects directly to the KNX TP-1 bus and performs as one more device into the KNX system, with the same configuration and operational characteristics as other KNX devices.

Internally, the circuit part connected to the KNX bus is opto-isolated from the rest of the electronics.

Intesis KNX receives, manages and sends all the telegrams related to its configuration to the KNX bus.

On receiving WRITE telegrams of KNX group addresses associated to communication objects, the corresponding messages are sent to the external system (Hisense installation).

When a change in a signal of the external system is detected, a WRITE telegram is sent to the KNX bus (addressed with the group address associated to the corresponding group object), in order to maintain both systems synchronised in every moment.

The status of the KNX bus is checked continuously and, if a bus drop-down is detected, for example due to failure in the bus power supply, after the KNX bus is restored again, Intesis will send READ telegrams to group addresses of all communication objects marked with flag 'Ri'. The behaviour of each individual point into Intesis is determined by the flags configured for the communication object. See details below.

2.2 Points definition

Every group object in configuration has following KNX properties:


Property	Description
Description	Descriptive information about the communication object or signal.
Object function	Information on range of values for the group object.
DPT	Datapoint type. It is the KNX data type used to encode the signal's value. It will depend on the type of signal associated in the external system in every case.
Group	It is the KNX group to which the point is associated. It is also the group to which the read (R), write (W), transmit (T), update (U) and read on init (Ri) flags are applied. It is the sending group.
Listening addresses	They are the addresses that can write on the group object, a part of the main group address.
R	Read. If this flag is activated, READ telegrams of this group address will be accepted.
Ri	Read on Init. If this flag is activated, the object will trigger corresponding READ request (on associated group address) on initialization.
W	Write. If this flag is activated, WRITE telegrams on this group object will be accepted.
T	Transmit. If this flag is activated, when the group object value changes, due to a change in the external system, a WRITE telegram of the associated group address will be sent to the KNX bus.
U	Update. If this flag is activated, UPDATE telegrams (response to READ telegrams) on this group object will be accepted.
Active	If activated, the point will be active in Intesis, if not, the behaviour will be as if the point is not defined. This allows deactivating points without the need of delete them for possible future use.

These properties are common for all Intesis KNX series gateways. Although each integration may have specific properties according to the type of signals of the external system.

See list of communication objects in section **9 APPENDIX A – COMMUNICATION OBJECTS TABLE**.

3 Connections

Find below information regarding the Intesis connections available.

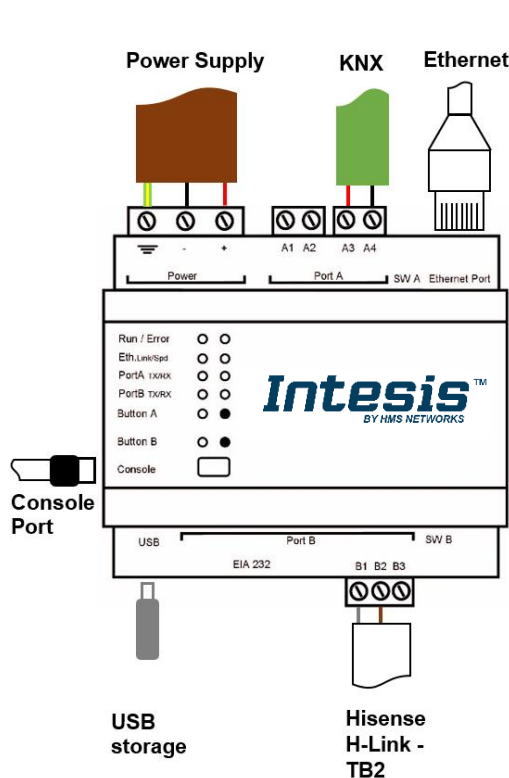

Power Supply

Must use NEC Class 2 or Limited Power Source (LPS) and SELV rated power supply.

If using DC power supply:

Respect polarity applied of terminals (+) and (-). Be sure the voltage applied is within the range admitted (check table below). The power supply can be connected to earth but only through the negative terminal, never through the positive terminal.

If using AC power supply:

Make sure the voltage applied is of the value admitted (24 Vac). Do not connect any of the terminals of the AC power supply to earth, and make sure the same power supply is not supplying any other device.

Ethernet

Connect the cable coming from the IP network to the connector ETH of the gateway. Use an Ethernet CAT5 cable. If communicating through the LAN of the building, contact the network administrator and make sure traffic on the port used is allowed through all the LAN path (check the gateway user manual for more information). Default IP is 192.168.100.246. DHCP is enabled by default.

PortA / KNX

Connect the KNX TP1 bus to connectors A3 (+) and A4 (-) of gateway's PortA. Respect the polarity.

PortB / H-Link Hisense

Connect the H-Link terminals (TB2) of Hisense Outdoor Unit to the connectors B1 and B2 of gateway's PortB. There is no polarity to be respected.

Console Port

Connect a mini-type B USB cable from your computer to the gateway to allow communication between the Configuration Software and the gateway. Remember that Ethernet connection is also allowed. Check the user manual for more information.

USB

Connect a USB storage device (not a HDD) if required. Check the user manual for more information.

Ensure proper space for all connectors when mounted (see section 6)

3.1 Power device

The first step to perform is to power up the device. To do so, a power supply working with any of the voltage range allowed is needed (check section 5). Once connected the ON led will turn on.

WARNING! In order to avoid earth loops that can damage the gateway, and/or any other equipment connected to it, we strongly recommend:

- The use of DC power supplies, floating or with the negative terminal connected to earth. **Never use a DC power supply with the positive terminal connected to earth.**
- The use of AC power supplies only if they are floating and not powering any other device.

3.2 Connect to Hisense installation

Use the Port B connector of the Intesis device in order to connect Hisense H-Link bus to the Intesis. Remember to follow all safety precautions indicated by Hisense.

Connect the Hisense H-Link bus to connectors B1 and B2 of gateway's PortB. Bus is not sensitive to polarity.

3.3 Connection to KNX

Connect the KNX TP1 bus to connectors A3 (+) and A4 (-) of gateway's PortA. Respect the polarity.

3.4 Connection to the configuration tool

This action allows the user to have access to configuration and monitoring of the device (more information can be found in the configuration tool User Manual). Two methods to connect to the PC can be used:

- **Ethernet:** Using the Ethernet port of Intesis.
- **USB:** Using the console port of Intesis, connect a USB cable from the console port to the PC.

4 Set-up process and troubleshooting

4.1 Pre-requisites

It is necessary to have a KNX installation, device or interface operative and well connected to the corresponding KNX port of Intesis. It is also required to have a Hisense Air Conditioner installation, with accessible H-Link/TB2 port for connection of Intesis.

Connectors, connection cables, PC to use the configuration tool and other auxiliary material, if needed, are not supplied by HMS Networks SLU for this standard integration.

Items supplied by HMS Networks for this integration are:

- Intesis gateway.
- Link to download the configuration tool.
- USB Console cable to communicate with Intesis.
- Product documentation.

4.2 Intesis MAPS. Configuration & monitoring tool for Intesis KNX series

4.2.1 Introduction

Intesis MAPS is a Windows® compatible software developed specifically to monitor and configure Intesis new generation gateways.

The installation procedure and main functions are explained in the *Intesis MAPS KNX User Manual*. This document can be downloaded from the link indicated in the installation sheet supplied with the Intesis device or in the product website at www.intesis.com

In this section, only the specific case of Hisense to KNX systems will be covered.

Please check the Intesis MAPS KNX User Manual for specific information about the different parameters and how to configure them.

4.2.2 Connection

To configure the Intesis connection parameters press on the **Connection** button in the *menu bar*.

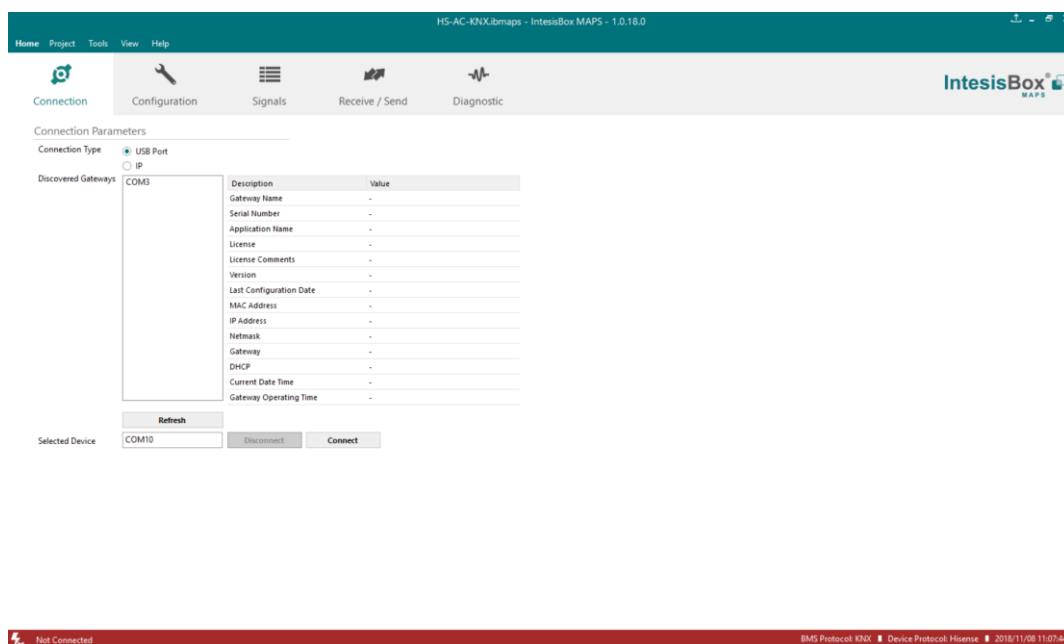


Figure 4.1 MAPS connection

4.2.3 Configuration tab

Select the **Configuration** tab to configure the connection parameters. Three subsets of information are shown in this window: General (Gateway general parameters), KNX (KNX interface configuration) and Hisense (Hisense interface parameters).

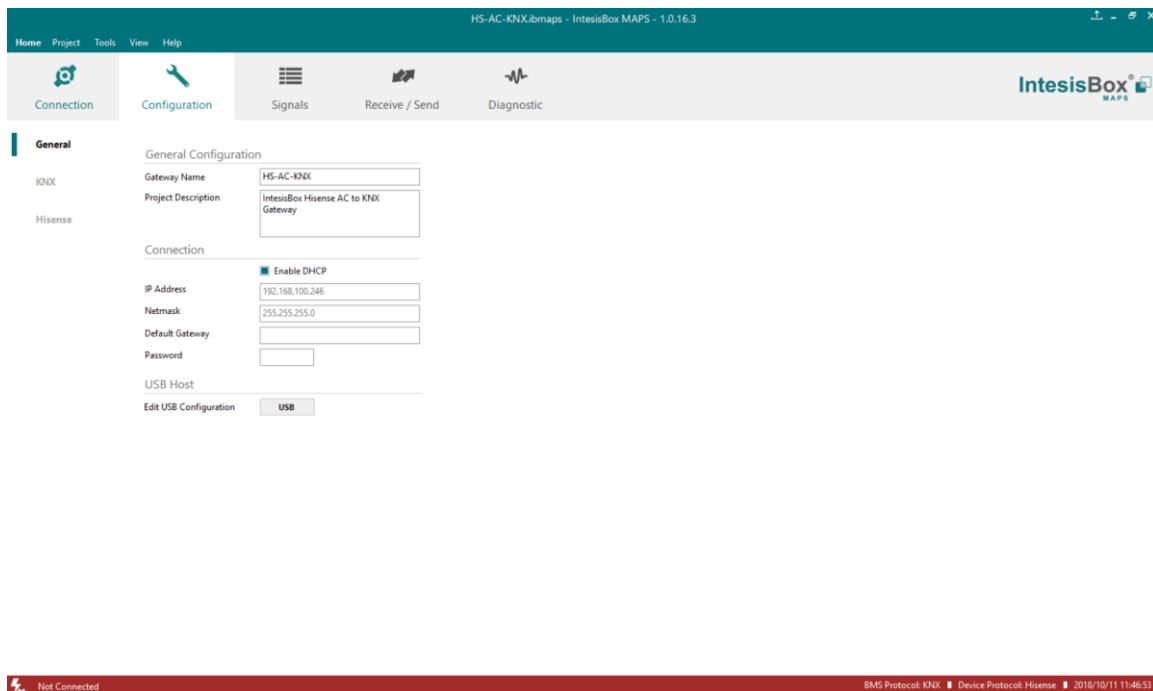


Figure 4.2 Intesis MAPS configuration tab

4.2.4 KNX configuration

Set parameters of KNX interface of Intesis.

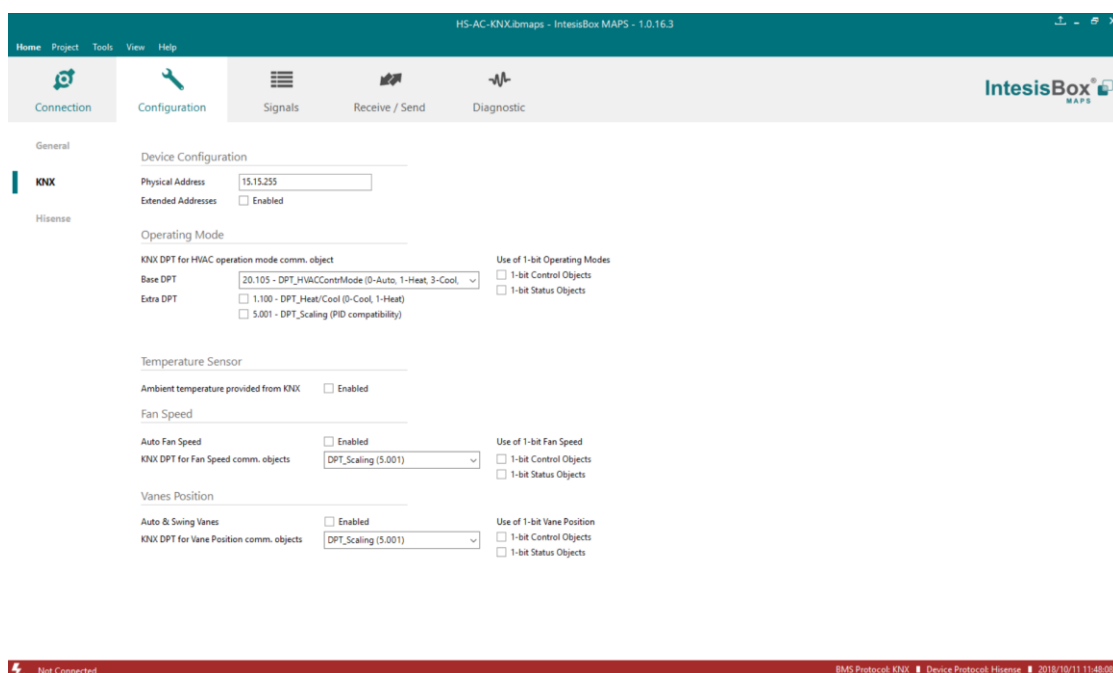


Figure 4.3 Intesis MAPS KNX configuration tab

1. Device configuration

1.1. Physical Address. KNX physical address of the device in the network

1.2. Extended Addresses. Enables usage of KNX Extended addresses (range from 16/0/0 to 32/7/255).

2. Operating Mode. Settings related to KNX interface for control and feedback of AC unit's operating mode.

2.1. KNX DPT for HVAC operation mode comm object. Base DPT. Base DPT to use for control/monitor the operating mode. Following DPT types are offered:

- DPT_20.105. DPT_HVACContrMode: 0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
- DPT_5.x (non-standardized): 0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool

2.2. KNX DPT for HVAC operation mode comm object. Extra DPT. Additional DPT to use for control/monitor the operating mode.

- DPT_1.100. DPT_Heat/Cool: 0-Cool, 1-Heat.
- DPT_5.001. DPT_Scaling: Enables objects "Control_Heat Mode & On" and "Control_Cool Mode & On". Their type is DPT_Scaling (0..100%), and their ending is to be able to control parameters On/Off, Cool/Heat of indoor unit from a single percentage object. They are meant to provide compatibility with certain thermostats oriented to the operation of valves for Heating/Cooling. Whenever a value > 0% is received at each of these two objects, the corresponding operating mode and ON operation is sent to the indoor unit. Whenever both values are 0%, indoor unit is set to OFF

2.3. Use of 1-bit Operating Modes. 1-bit Control Objects. Enables a bit-type object for the control of each operating mode.

2.4. Use of 1-bit Operating Modes. 1-bit Status Objects. Enables a bit-type object for monitoring each operating mode.

3. Temperature Sensor.

3.1. Ambient temperature provided from KNX. Enables object Control_KNX ambient temperature.



NOTE: Indoor unit does not accept, by itself, that an ambient temperature for control of operation of the indoor unit is provided. To allow regulation of indoor unit according to a temperature reference from KNX, what Intesis does is passing a different temperature setpoint to the indoor unit than the one required by the user. The passed setpoint is such that the difference 'Ambient temperature reported by Hisense IU – AC setpoint' is equal to 'Ambient temperature reported by KNX – AC setpoint required by KNX', using the following formula:

$$\text{"AC Setp. Temp"} = \text{"AC Ret. Temp"} - (\text{"KNX Amb. Temp."} - \text{"KNX Setp. Temp"})$$

Where:

- AC Setp. Temp: AC indoor unit setpoint temperature
- AC Ret. Temp: AC indoor unit return temperature
- KNX Amb. Temp.: Ambient temperature provided from KNX
- KNX Setp. Temp: Setpoint temperature provided from KNX

Consequently, when using this feature (Ambient temp provided from KNX), setpoint at AC and setpoint in KNX will not necessarily be the same (actually, user will not be able to operate setpoint from AC System controllers as the remote controller).

4. **Fan Speed.** Settings related to KNX interface for control and feedback of AC unit's fan speed.
 - 4.1. **Auto Fan Speed.** Configures availability of Auto Fan Speed control/monitoring objects. Necessary if your indoor unit has auto fan speed.
 - 4.2. **KNX DPT for Fan Speed comm objects. DPT_5.001, DPT_Scaling.** Control/monitoring of Fan Speed is performed by means of scaling (percentage) objects. Thresholds for control object and values for status object will vary according to number of fanspeeds of the unit.
 - 4.2. **KNX DPT for Fan Speed comm objects. DPT_5.010, DPT_Value_1_Ucount.** Control/monitoring of Fan Speed is performed by means of enumerated values.
 - 4.4. **Use of 1-bit Fan Speed. 1-bit Control Objects.** Enables a bit-type object for control of fan speed.
 - 4.5. **Use of 1-bit Fan Speed. 1-bit Status Objects.** Enables a bit-type object for monitoring of each fan speed.
5. **Vanes Position.** Settings related to KNX interface for control and feedback of AC unit's vanes position.
 - 4.1. **Auto&Swing Vanes.** Configures availability of Auto and Swing control/monitoring objects.
 - 4.2. **KNX DPT for Vane Position comm objects. DPT_5.001, DPT_Scaling.** Control/monitoring of Vanes Positions is performed by means of scaling (percentage) objects. Thresholds for control object and values for status object will vary according to number of vanes positions of the unit.
 - 4.2. **KNX DPT for Vane Position comm objects. DPT_5.010, DPT_Value_1_Ucount.** Control/monitoring of Vanes Positions is performed by means of enumerated values.
 - 4.4. **Use of 1-bit Fan Speed. 1-bit Control Objects.** Enables a bit-type object for control of Vanes Positions.
 - 4.5. **Use of 1-bit Fan Speed. 1-bit Status Objects.** Enables a bit-type object for monitoring of each Vanes Position.

4.2.5 Hisense configuration

Set parameters for connection with Hisense's installation.

Units Configuration

Autodiscover

Unit ID	Unit Type	IU	OU	Description
<input checked="" type="checkbox"/> Unit 1	Not Defined	1	1	Indoor Unit 1
<input type="checkbox"/> Unit 2	Not Defined	2	1	Indoor Unit 2
<input type="checkbox"/> Unit 3	Not Defined	3	1	Indoor Unit 3
<input type="checkbox"/> Unit 4	Not Defined	4	1	Indoor Unit 4
<input type="checkbox"/> Unit 5	Not Defined	5	1	Indoor Unit 5
<input type="checkbox"/> Unit 6	Not Defined	6	1	Indoor Unit 6
<input type="checkbox"/> Unit 7	Not Defined	7	1	Indoor Unit 7
<input type="checkbox"/> Unit 8	Not Defined	8	1	Indoor Unit 8
<input type="checkbox"/> Unit 9	Not Defined	9	1	Indoor Unit 9
<input type="checkbox"/> Unit 10	Not Defined	10	1	Indoor Unit 10
<input type="checkbox"/> Unit 11	Not Defined	11	1	Indoor Unit 11
<input type="checkbox"/> Unit 12	Not Defined	12	1	Indoor Unit 12
<input type="checkbox"/> Unit 13	Not Defined	13	1	Indoor Unit 13
<input type="checkbox"/> Unit 14	Not Defined	14	1	Indoor Unit 14
<input type="checkbox"/> Unit 15	Not Defined	15	1	Indoor Unit 15
<input type="checkbox"/> Unit 16	Not Defined	16	1	Indoor Unit 16
<input type="checkbox"/> Unit 17	Not Defined	17	1	Indoor Unit 17
<input type="checkbox"/> Unit 18	Not Defined	18	1	Indoor Unit 18
<input type="checkbox"/> Unit 19	Not Defined	19	1	Indoor Unit 19
<input type="checkbox"/> Unit 20	Not Defined	20	1	Indoor Unit 20
<input type="checkbox"/> Unit 21	Not Defined	21	1	Indoor Unit 21

Supported Active Units: -

Figure 4.4 Intesis MAPS Hisense configuration tab

In Units Configuration section you need to enter, for each unit:

- **Active.** If it's active (checkbox at Unit xx), ranging from 1 to 64 indoor units that will be integrated (maximum number of units will depend on Intesis model)
- **IU address.** Address 1..64 of Unit in Hisense H-Link bus.
- **OU address.** Address 1..64 of Outdoor Unit in Hisense H-Link bus.
- **Description.** Descriptive name to easy identification of the unit (for example, 'living room floor 1 unit', etc).

Additional to manual entry of each unit, autodiscover of present units in an H-Link installation is possible. To do so, click button **Scan**. Following window will appear:

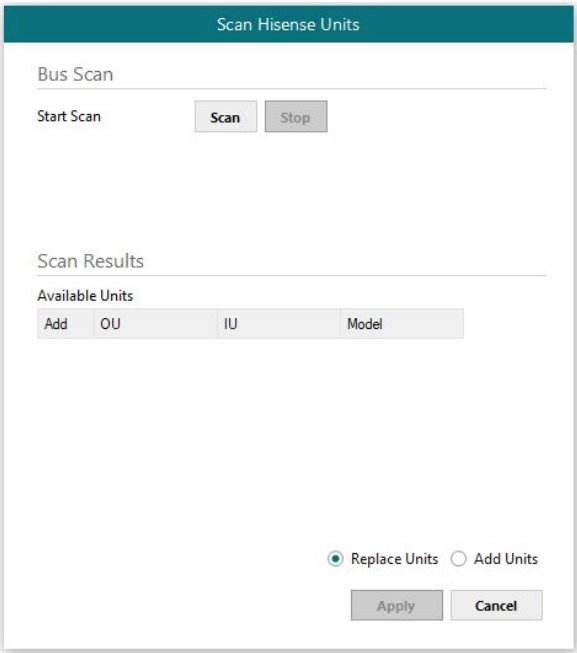


Figure 4.5 Intesis MAPS Scan Hisense Units window

By pressing **Scan** button, connected Hisense H-Link bus will be scanned for available units. Error window will appear if there is a problem in the connection with H-Link bus (units not powered, bus not connected, ...).

A progress bar will appear during the scan, which will take up to a few minutes. After scan is completed, detected units will be shown in available units as follows:

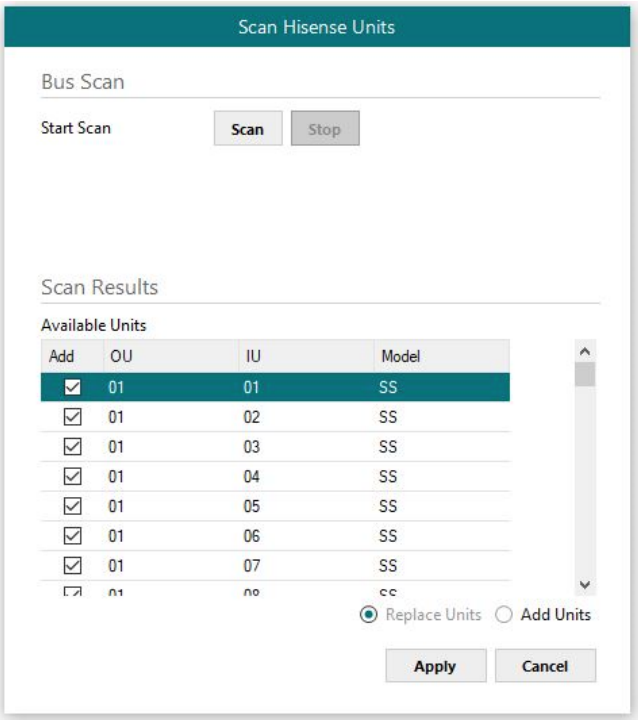


Figure 4.6 Intesis MAPS Scan Hisense Units window with scan results

Select with its checkbox units to add (or replace) in installation, according to selection **Replace Units** / **Add Units**. After units to be integrated are selected, click button **Apply**, and changes will appear in previous **Units Configuration** window.

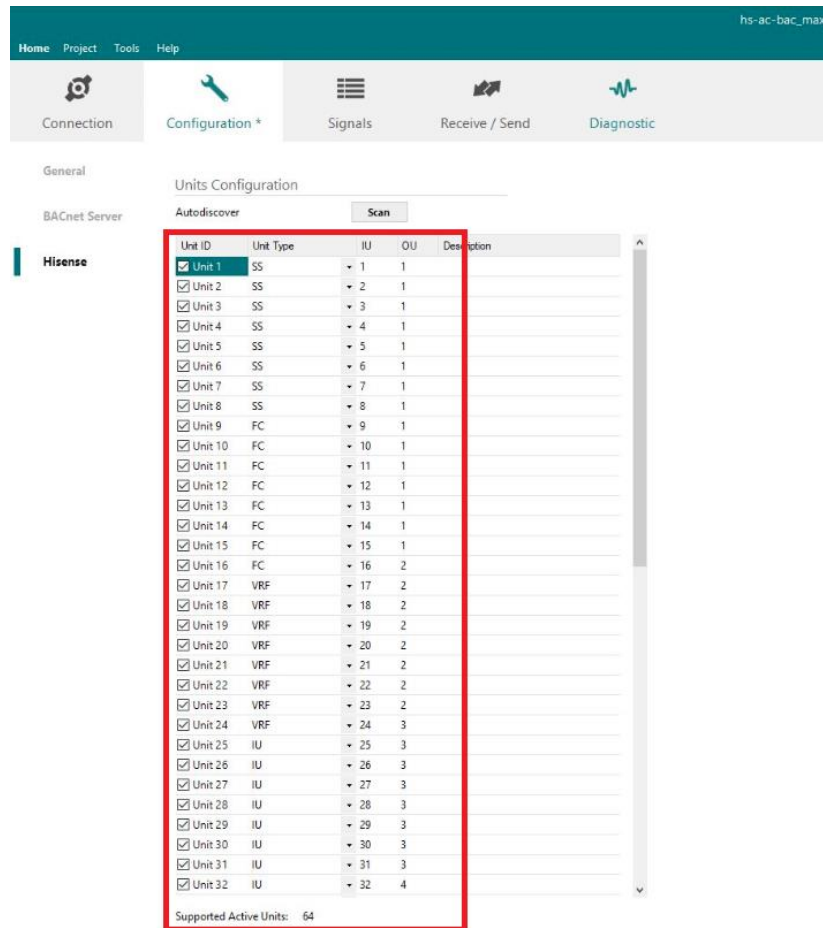


Figure 4.7 Intesis MAPS Hisense configuration tab after importing scan results

4.2.6 Signals

All available KNX objects, its corresponding description and other main parameters are listed in the signals tab.

HomeProjectToolsViewHelp

Connection

Configuration *

Signals

Receive / Send

Diagnostic

IntesisBox[®]

MAPS

#	Active	Description	Object Function	KNX	DPT	Sending	Listening	U	T	Ri	W	R	Unit ID	IU	OU
1	<input checked="" type="checkbox"/>	On/Off (all units)	0-Off, 1-On	1.001: switch	0/0/16						W	-	-	-	-
2	<input checked="" type="checkbox"/>	Operating Mode (all units)	0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool	5.x	0/0/18						W	-	-	-	-
3	<input checked="" type="checkbox"/>	Fan Speed (all units)	1-Low, 2-Mid, 3-High, 4-High+	5.x	0/0/19						W	-	-	-	-
4	<input checked="" type="checkbox"/>	Vane position (all units)	1-Position 1,7-Position 7	5.x	0/0/21						W	-	-	-	-
5	<input checked="" type="checkbox"/>	Temperature Setpoint (°C) (all units)	Cool:19.30 °C; Heat:17.30 °C	9.001: temperature (C)	0/0/23						W	-	-	-	-
6	<input checked="" type="checkbox"/>	Status_Communication Error OU	0-No error, 1-Error	1.005: alarm	0/1/10					T		R	-	-	1
7	<input checked="" type="checkbox"/>	Status_Outdoor Air Temperature (°C)	-50.99 °C	9.001: temperature (C)	0/1/11					T		R	-	-	1
8	<input checked="" type="checkbox"/>	Status_Compressor Top Temperature (°C)	0.200 °C	9.001: temperature (C)	0/1/12					T		R	-	-	1
9	<input checked="" type="checkbox"/>	Status_Total Real Compressor Freq.	0.255 Hz	14.033: frequency (Hz)	0/1/13					T		R	-	-	1
10	<input checked="" type="checkbox"/>	Status_Total Compressor Current	0.255 A	14.019: electric current (A)	0/1/14					T		R	-	-	1
11	<input checked="" type="checkbox"/>	Status_Out Exp. Valve 1 Open	0.100 %	5.001: percentage (0..100%)	0/1/15					T		R	-	-	1
12	<input checked="" type="checkbox"/>	Status_Discharge Pressure	-5.0..9.9 Mpa	14.058: pressure (Pa)	0/1/16					T		R	-	-	1
13	<input checked="" type="checkbox"/>	Status_Suction Pressure	-5.0..9.9 Mpa	14.058: pressure (Pa)	0/1/17					T		R	-	-	1
14	<input checked="" type="checkbox"/>	Control_On/Off	0-Off, 1-On	1.001: switch	1/1/19						W		Unit 1	1	1
15	<input checked="" type="checkbox"/>	Status_On/Off	0-Off, 1-On	1.001: switch	1/1/20					T		R	Unit 1	1	1
16	<input checked="" type="checkbox"/>	Control_Operation mode	0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool	5.x	1/1/33						W		Unit 1	1	1
17	<input checked="" type="checkbox"/>	Status_Operation mode	0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool	5.x	1/1/34					T		R	Unit 1	1	1
18	<input checked="" type="checkbox"/>	Control_Fan speed scaling	Thresholds (0%..37%: 38%..62%: 63%..87%: 88%..100%)	5.001: percentage (0..100%)	1/1/51						W		Unit 1	1	1
19	<input checked="" type="checkbox"/>	Status_Fan speed scaling	Thresholds (25%: 50%: 75%: 100%)	5.001: percentage (0..100%)	1/1/52					T		R	Unit 1	1	1
20	<input checked="" type="checkbox"/>	Control_Vane position scaling	Thresholds (0..21%:22..36%:37..50%:51..64%:65..79%:80..93%...	5.001: percentage (0..100%)	1/1/65						W		Unit 1	1	1
21	<input checked="" type="checkbox"/>	Status_Vane position scaling	Thresholds (0..14%:15..29%:30..43%:44..57%:58..71%:72..86%...	5.001: percentage (0..100%)	1/1/66					T		R	Unit 1	1	1
22	<input checked="" type="checkbox"/>	Control_Temperature Setpoint (°C)	Cool:19.30 °C; Heat:17.30 °C	9.001: temperature (C)	1/1/83						W		Unit 1	1	1
23	<input checked="" type="checkbox"/>	Status_Temperature Setpoint (°C)	Cool:19.30 °C; Heat:17.30 °C	9.001: temperature (C)	1/1/84					T		R	Unit 1	1	1
24	<input checked="" type="checkbox"/>	Status_AC Ambient Temperature (°C)	-63.63 °C	9.001: temperature (C)	1/1/85					T		R	Unit 1	1	1
25	<input checked="" type="checkbox"/>	Status_Remote Sensor Temperature (°C)	-63.63 °C	9.001: temperature (C)	1/1/86					T		R	Unit 1	1	1
26	<input checked="" type="checkbox"/>	Status_Outlet Temperature (°C)	-63.63 °C	9.001: temperature (C)	1/1/88					T		R	Unit 1	1	1
27	<input checked="" type="checkbox"/>	Status_GasPipe Temperature (°C)	-63.63 °C	9.001: temperature (C)	1/1/89					T		R	Unit 1	1	1
28	<input checked="" type="checkbox"/>	Status_LiquidPipe Temperature (°C)	-63.63 °C	9.001: temperature (C)	1/1/90					T		R	Unit 1	1	1
29	<input checked="" type="checkbox"/>	Status_Unit error	0-No error, 1-Error	1.005: alarm	1/1/91					T		R	Unit 1	1	1

Active signals: 52 / -

Not Connected

BMS Protocol: KNX | Device Protocol: Hisense | 2018/10/11 13:06:21

Figure 4.8 Intesis MAPS Signals tab

4.2.7 Sending the configuration to Intesis

When the configuration is finished, follow the next steps.

- 1.- Save the project (Menu option **Project->Save**) on your hard disk (more information in Intesis MAPS User Manual).
- 2.- Go to tab '**Receive / Send**' of MAPS, and in **Send** section, press **Send** button. Intesis will reboot automatically once the new configuration is loaded.

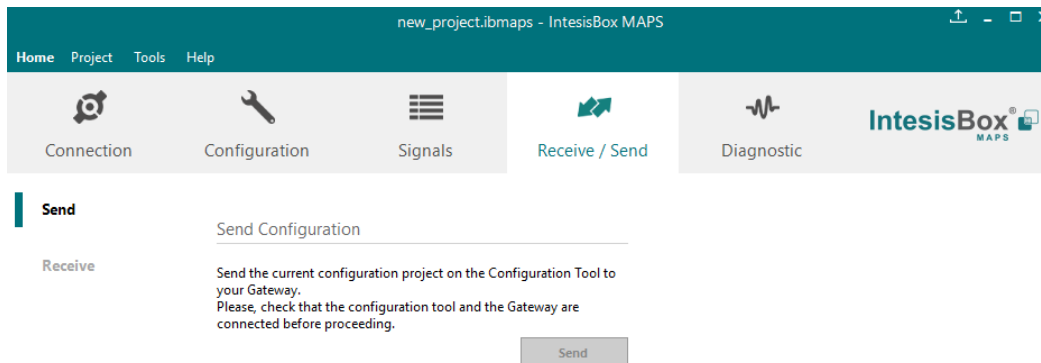


Figure 4.9 Intesis MAPS Receive/Send tab

After any configuration change, do not forget to send the configuration file to the Intesis using the Send button in the Receive / Send section.

4.2.8 Diagnostic

To help integrators in the commissioning tasks and troubleshooting, the Configuration Tool offers some specific tools and viewers.

In order to start using the diagnostic tools, connection with the Gateway is required.

The Diagnostic section is composed by two main parts: Tools and Viewers.

- **Tools**
Use the tools section to check the current hardware status of the box, log communications into compressed files to be sent to the support, change the Diagnostic panels' view or send commands to the gateway.
- **Viewers**
In order to check the current status, viewer for the Internal and External protocols are available. It is also available a generic Console viewer for general information about communications and the gateway status and finally a Signals Viewer to simulate the BMS behavior or to check the current values in the system.

HS-AC-KNXlibmaps - IntesisBox MAPS - 1.0.16.3

Home Project Tools View Help

Connection Configuration Signals Receive / Send Diagnostic

IntesisBox MAPS

ToolBox

Console

Clear AutoScroll

INFO?< INFO?< INFO:GNAME:SH-ACN-BAC< INFO:SH:00000000 / 0000000000000000< INFO:APPNAME:SH-ACN-BAC< INFO:APPLIC:64< INFO:APPVERSION:0.0.0.2< INFO:CFGFILEDATE:02/11/2017 17:34:42< INFO:CFGFILEXCHG:N< INFO:MID:1< INFO:ETHMAC:CC:3F:1D:00:00:00< INFO:NETIP:192.168.100.120< INFO:NETMASK:255.255.255.0< INFO:NETGW:192.168.100.9< INFO:NETDHCP:ON< INFO:UPTIME:0018d 22:00:37< INFO:DATETIME:21/11/2017 17:58:21< INFO:COMPID:12< INFO:STATUS:RUNNING< INFO:END

KNX Viewer

Clear Comms Debug AutoScroll

Hisense Viewer

Clear Comms Debug AutoScroll

Signals Viewer

Clear Refresh Edit columns

#	KNX	Hisense	Description	DPT	Sending	Listening
1			On/Off (all units)	1.001: switch	0/0/16	Listening
2			Operating Mode (all units)	5.x	0/0/18	
3			Fan Speed (all units)	5.x	0/0/19	
4			Vane position (all units)	5.x	0/0/21	
5			Temperature Setpoint (°C) (all units)	9.001: temperature (C)	0/0/23	
6			Status_Communication Error OU	1.005: alarm	0/1/10	
7			Status_Outdoor Air Temperature (°C)	9.001: temperature (C)	0/1/11	
8			Status_Compressor Top Temperature (°C)	9.001: temperature (C)	0/1/12	
9			Status_Total Real Compressor Freq.	14.033: frequency (Hz)	0/1/13	
10			Status_Total Compressor Current	14.019: electric current (A)	0/1/14	
11			Status_Out Exp. Valve 1 Open	5.001: percentage (0..100%)	0/1/15	
12			Status_Discharge Pressure	14.058: pressure (Pa)	0/1/16	
13			Status_Suction Pressure	14.058: pressure (Pa)	0/1/17	
14			Control_On/Off	1.001: switch	1/1/19	
15			Status_On/Off	1.001: switch	1/1/20	
16			Control_Operation mode	5.x	1/1/33	
17			Status_Operation mode	5.x	1/1/34	
18			Control_Fan speed scaling	5.001: percentage (0..100%)	1/1/51	
19			Status_Fan speed scaling	5.001: percentage (0..100%)	1/1/52	
20			Control_Vane position scaling	5.001: percentage (0..100%)	1/1/65	
21			Status_Vane position scaling	5.001: percentage (0..100%)	1/1/66	
22			Control_Temperature Setpoint (°C)	9.001: temperature (C)	1/1/83	
23			Status_Temperature Setpoint (°C)	9.001: temperature (C)	1/1/84	
24			Status_AC Ambient Temperature (°C)	9.001: temperature (C)	1/1/85	
25			Status_Remote Sensor Temperature (°C)	9.001: temperature (C)	1/1/86	
26			Status_Outlet Temperature (°C)	9.001: temperature (C)	1/1/88	
27			Status_Grading Temperature (°C)	9.001: temperature (C)	1/1/89	

Not Connected

BMS Protocol: KNX Device Protocol: Hisense 2018/10/11 13:14:03

Figure 4.10 Diagnostic

More information about the Diagnostic section can be found in the Configuration Tool manual.

4.2.9 Set-up procedure

1. Install Intesis MAPS on your laptop, use the setup program supplied for this and follow the instructions given by the Installation wizard.
2. Install Intesis in the desired installation site. Installation can be on DIN rail or on a stable not vibrating surface (DIN rail mounted inside a metallic industrial cabinet connected to ground is recommended).
3. Connect the KNX communication cable coming from the KNX network to the port marked as Port A on Intesis (More details in section 3).
4. Connect the communication cable coming from the Hisense H-Link installation to the port marked as Port B of Intesis (More details in section 3).
5. Power up Intesis. The supply voltage can be 9 to 36 Vdc or just 24 Vac. Take care of the polarity of the supply voltage applied.

WARNING! In order to avoid earth loops that can damage Intesis and/or any other equipment connected to it, we strongly recommend:

- The use of DC power supplies, floating or with the negative terminal connected to earth. **Never use a DC power supply with the positive terminal connected to earth.**
 - The use of AC power supplies only if they are floating and not powering any other device.
6. If you want to connect using IP, connect the Ethernet cable from the laptop PC to the port marked as Ethernet of Intesis (More details in section 3).
- If you want to connect using USB, connect the USB cable from the laptop PC to the port marked as Console of Intesis (More details in section 3).
7. Open Intesis MAPS, create a new project selecting a copy of the one named **INKNXHIS---O000**.
 8. Modify the configuration as desired, save it and download the configuration file to Intesis as explained in the Intesis MAPS user manual.
 9. Visit the Diagnostic section and check that there is communication activity, some TX frames and some other RX frames. This means that the communication with the KNX installation and Hisense installation is OK. In case there is no communication activity between Intesis and the KNX side and/or Hisense units, check that those are operative: check communication cable used to connect all devices and any other communication parameter.

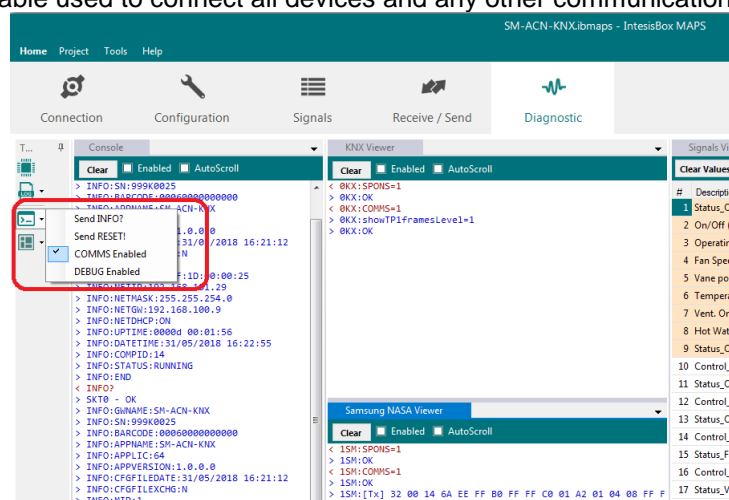



Figure 4.11 Enable COMMS

5 Electrical & Mechanical Features




Enclosure	Plastic, type PC (UL 94 V-0) Net dimensions (dxwxh): 90x88x56 mm Recommended space for installation (dxwxh): 130x100x100mm Color: Light Grey. RAL 7035	Battery	Size: Coin 20mm x 3.2mm Capacity: 3V / 225mAh Type: Manganese Dioxide Lithium
Mounting	Wall. DIN rail EN60715 TH35.	Console Port	Mini Type-B USB 2.0 compliant 1500VDC isolation
Terminal Wiring (for power supply and low-voltage signals)	Per terminal: solid wires or stranded wires (twisted or with ferrule) 1 core: 0.5mm ² ... 2.5mm ² 2 cores: 0.5mm ² ... 1.5mm ² 3 cores: not permitted	USB port	Type-A USB 2.0 compliant Only for USB flash storage device (USB pen drive) Power consumption limited to 150mA (HDD connection not allowed)
Power	1 x Plug-in screw terminal block (3 poles) 9 to 36VDC +/-10%, Max.: 140mA. 24VAC +/-10% 50-60Hz, Max.: 127mA Recommended: 24VDC	Push Button	Button A: Check the user manual Button B: Check the user manual
Ethernet	1 x Ethernet 10/100 Mbps RJ45 2 x Ethernet LED: port link and activity	Operation Temperature	0°C to +60°C
Port A	1 x KNX TP-1 Plug-in screw terminal block orange (2 poles) 2500VDC isolation from other ports KNX power consumption: 5mA Voltage rating: 29VDC 1 x Plug-in screw terminal block green (2 poles) Reserved for future use	Operational Humidity	5 to 95%, no condensation
Switch A (SWA)	1 x DIP-Switch for PORT A configuration: Reserved for future use	Protection	IP20 (IEC60529)
PORT B	1 x Serial EIA232 (SUB-D9 male connector) Reserved for future use 1 x H-Link Plug-in screw terminal block (3 poles) 1500VDC isolation from other ports	LED Indicators	10 x Onboard LED indicators 2 x Run (Power)/Error 2 x Ethernet Link/Speed 2 x Port A TX/RX 2 x Port B TX/RX 1 x Button A indicator 1 x Button B indicator
Switch B (SWB)	1 x DIP-Switch for PORT B configuration: Reserved for future use (leave OFF, default)		

6 Dimensions

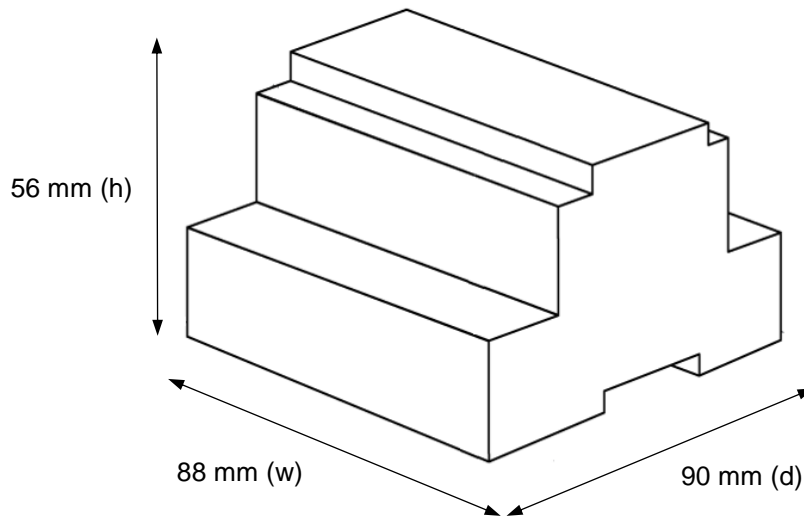

Recommended available space for its installation into a cabinet (wall or DIN rail mounting), with space enough for external connections

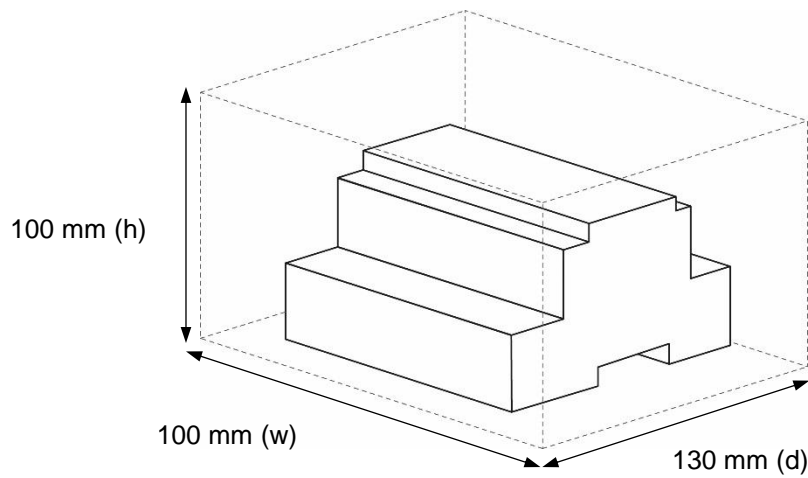

7 AC Unit Types compatibility

A list of Hisense unit model references compatible with INKNXHIS016O000 / INKNXHIS064O000 and their available features can be found in:

https://www.intesis.com/docs/compatibilities/inxxxhis001r000_compatibility

8 Error codes for Indoor and Outdoor Units

This list contains all possible values shown in KNX Object for “Error Code” for each indoor unit and outdoor unit.

It must be taken into account that Outdoor Units are only able to reflect a single error for each indoor / outdoor unit in the system. Thus, a unit having two or more active errors from that list will only report a single error code – the one of the first error that has been detected.

Error Code	Category	Content of Abnormality	Leading Cause
01	Indoor Unit	Activation of Protection Device (Float Switch)	Activation of Float Switch (High Water Level in Drain Pan, Abnormality of Drain Pipe, Float Switch or Drain Pan)
02	Outdoor Unit	Activation of Protection Device (High Pressure Cut)	Activation of PSH (Pipe Clogging, Excessive Refrigerant! Inert Gas Mixing)
03	Transmission	Abnormality between Indoor and Outdoor	incorrect Wiring, Loose Terminals, Disconnect Wire, Blowout of Fuse, Outdoor Unit Power OFF
04		Abnormality between Inverter PCB and Outdoor PCB	Inverter PCB - Outdoor PCB Transmission Failure (Loose Connector, Wire Breaking, Blowout of Fuse)
04.		Abnormality between Fan Controller and Outdoor PCB	Fan Controller - Outdoor PCB Transmission Failure (Loose Connector, Wire Breaking, Blowout of Fuse)
05	Supply Phase	Abnormality Power Source Phases	Incorrect Power Source, Connection to Reversed Phase, Open-Phase
06	Voltage	Abnormal Inverter Voltage	Outdoor Voltage Drop, insufficient Power Capacity
06.		Abnormal Fan Controller Voltage	Outdoor Voltage Drop, Insufficient Power Capacity
07	Cycle	Decrease in Discharge Gas Superheat	Excessive Refrigerant! Charge, Failure of Thermistor, Incorrect Wiring, Incorrect Piping Connection, Expansion Valve Locking at Opened Position (Disconnect Connector)
08		Increase in Discharge Gas Temperature	Insufficient Refrigerant! Charge, Pipe Clogging, Failure of Thermistor, Incorrect Wiring, Incorrect Piping Connection, Expansion Valve Locking at Closed Position (Disconnect Connector)
0A	Transmission	Abnormality between Outdoor and Outdoor	Incorrect Wiring, Breaking Wire, Loose Terminals
0b	Outdoor Unit	Incorrect Outdoor Unit Address Setting	Duplication of Address Setting for Outdoor Units (Sub Units) in Same Refrigerant! Cycle System
0c		Incorrect Outdoor Unit Main Unit	Two (or more) Outdoor Units Set

		Setting	as "Main Unit" Exist in Same Refrigerant! Cycle System
11	Sensor on Indoor Unit	Inlet Air Thermistor	Incorrect Wiring, Disconnecting Wiring Breaking Wire, Short Circuit
12		Outlet Air Thermistor	
13		Freeze Protection Thermistor	
14		Gas Piping Thermistor	
19	Fan Motor	Activation of Protection Device for Indoor Fan	Fan Motor Overheat, Locking
21	Sensor on Outdoor Unit	High Pressure Sensor	Incorrect Wiring, Disconnecting Wiring Breaking Wire, Short Circuit
22		Outdoor Air Thermistor	
23		Discharge Gas Thermistor on Top of Compressor	
24		Heat Exchanger Liquid Pipe Thermistor	
25		Heat Exchanger Gas Pipe Thermistor	
29		Low Pressure Sensor	
31	System	Incorrect Capacity Setting of Outdoor Unit and Indoor Unit	Incorrect Capacity Code Setting of Combination Excessive or Insufficient Indoor Unit Total Capacity Code
35		Incorrect Setting of Indoor Unit No.	Duplication of Indoor Unit No. in same Ref. Gr.
36		Incorrect of Indoor Unit Combination	Indoor Unit is Designed for R22
38		Abnormality of Picking up Circuit for Protection in Outdoor Unit	Failure of Protection Detecting Device (Incorrect Wiring of Outdoor PCB)
39	Compressor	Abnormality Running Current at Constant! Speed Compressor	Overcurrent, Blowout Fuse, Current Sensor Failure, instantaneous Power Failure, Voltage Drop, Abnormal Power Supply
3A	Outdoor Unit	Abnormality of Outdoor Unit Capacity	Outdoor Unit Capacity > 510kBtu/h
3b		Incorrect Setting of Outdoor Unit Models Combination or Voltage	Incorrect Setting of Main and Sub Unit(s) Combination or Voltage
3d		Abnormality Transmission between Main Unit and Sub Unit(s)	Incorrect Wiring, Disconnect Wire, Breaking Wire, PCB Failure
43	Protection Device	Activation of Low Compression Ratio Protection Device	Defective Compression (Failure of Compressor of Inverter, Loose Power Supply Connection)
44		Activation of Low Pressure Increase Protection Device	Overload at Cooling, High Temperature at Heating, Expansion Valve Locking (Loose Connector)
45		Activation of High Pressure Increase Protection Device	Overload Operation (Clogging, Short-Pass), Pipe Clogging, Excessive Refrigerant!, Inert Gas Mixing
47		Activation of Low Pressure Decrease Protection Device (Vacuum Operation Protection)	Insufficient Refrigerant!, Refrigerant! Piping, Clogging, Expansion Valve Locking at Open Position (Loose Connector)

48		Activation of Inverter Overcurrent Protection Device	Overload Operation, Compressor Failure
51	Sensor	Abnormal Inverter Current! Sensor	Current! Sensor Failure
53	Inverter	Inverter Error Signal Detection	Driver IC Error Signal Detection (Protection for Overcurrent, Low Voltage, Short Circuit)
54		Abnormality of Inverter Fin Temperature	Abnormal Inverter Fin Thermistor, Heat Exchanger Clogging, Fan Motor Failure
55		Inverter Failure	Inverter PCB Failure
57	Fan Controller	Activation of Fan Controller Protection	Driver IC Error Signal Detection (Protection for Overcurrent, Low Voltage, Short Circuit), Instantaneous Overcurrent
5A		Abnormality of Fan Controller Fin Temperature	Fin Thermistor Failure, Heat Exchanger Clogging, Fan Motor Failure
5b		Activation of Overcurrent Protection	Fan Motor Failure
5C		Abnormality of Fan Controller Sensor	Failure of Current! Sensor (Instantaneous Overcurrent, Increase of Fin Temperature, Low Voltage, Earth Fault, Step-Out)
EE	Compressor	Compressor Protection Alarm (It is cannot be reset from remote Controller)	This alarm code appears when the following alarms• occurs three times within 6 hours. *02, 07, 08, 39, 43 to 45, 47
b1	Outdoor Unit No. Setting	Incorrect Setting of Unit and Refrigerant! Cycle No.	Over 64 Number is Set for Address or Refrigerant! Cycle.
b5	Indoor Unit No. Setting	Incorrect Indoor Unit Connection Number Setting	More than 17 Non-Corresponding to Hi-NET Units are Connected to One System.
C1	Switch Box Unit	Incorrect Indoor Unit Connection	2 or more Switch Box Units are connected between outdoor unit and indoor unit.
C2		Incorrect Indoor Unit Connection No. Setting	9 or More Indoor Units Connected to Switch Box Unit
C3		Incorrect Indoor Unit Connection	The indoor units of different refrigerant! cycle is connected to Switch Box unit.

9 Appendix A – Communication Objects Table

TOPIC		NAME	LEN	DATAPOINT TYPE		FLAGS				FUNCTION
				DPT_NAME	DPT_ID	R	W	T	U	
GLOBAL SIGNALS	ON/OFF	On/Off (all units)	1 bit	DPT_Switch	1.001		W			0-Off, 1-On
	OP MODE	Operating Mode (all units)	1 byte	DPT_HVACContrMode	20.105		W			0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		Operating Mode (all units)	1 byte	Non-standarized	5.x		W			0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
	FAN SPEED	Fan Speed (all units)	1 byte	Non-standarized	5.x		W			1-Low, 2-Mid, 3-High, 4-High+
		Fan Speed AUTO (all units)	1 bit	DPT_Switch	1.001		W			1-Set auto fan; 0-Stop auto fan
	VANE POSITION	Vane position (all units)	1 byte	Non-standarized	5.x		W			1-Position 1...7-Position 7
		Vane position AUTO (all units)	1 bit	DPT_Switch	1.001		W			1-Set auto vane; 0-Stop auto vane
	SETP TEMP	Temperature Setpoint (°C) (all units)	2 byte	DPT_Value_Temp	9.001		W			Cool:19..30 °C; Heat:17..30 °C
OUTDOOR UNIT SIGNALS	COMM ERROR	Status_Communication Error OU	1 bit	DPT_Alarm	1.005	R		T		0-No error, 1-Error
	TEMPERATURES	Status_Outdoor Air Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T		-50..99 °C
		Status_Compresor Top Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T		0..200 °C
	COMPRESOR	Status_Total Real Compresor Freq.	4 byte	DPT_Value_Frequency	14.033	R		T		0..255 Hz
		Status_Total Compresor Current	4 byte	DPT_Value_Electric_Current	14.019	R		T		0..255 A
	VALVE	Status_Out Exp. Valve 1 Open	1 byte	DPT_Scaling	5.001	R		T		0..100 %
	PRESSURE	Status_Discharge Pressure	4 byte	DPT_Value_Pressure	14.058	R		T		-5.0..9.9 Mpa
		Status_Suction Pressure	4 byte	DPT_Value_Pressure	14.058	R		T		-5.0..9.9 Mpa
	ON / OFF	Control_On/Off	1 bit	DPT_Switch	1.001		W			0-Off,1-On
		Status_On/Off	1 bit	DPT_Switch	1.001	R		T		0-Off,1-On
	OP MODE	Control_Operation mode	1 byte	DPT_HVACContrMode	20.105		W			0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		Status_Operation mode	1 byte	DPT_HVACContrMode	20.105	R		T		0-Auto, 1-Heat, 3-Cool, 9-Fan, 14-Dry
		Control_Operation mode	1 byte	Non-standarized	5.x		W			0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
		Status_Operation mode	1 byte	Non-standarized	5.x	R		T		0-Auto, 1-Heat, 2-Dry, 3-Fan, 4-Cool
		Control_Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100		W			0-Cool, 1-Heat
		Status_Mode Cool/Heat	1 bit	DPT_Heat/Cool	1.100	R		T		0-Cool, 1-Heat
		Control_Heat mode&ON	1 byte	DPT_Scaling	5.001		W			0%-Off, 1%-100%-On+Heat

INDOOR UNIT SIGNALS		Control_Cool mode&ON	1 byte	DPT_Scaling	5.001		W		0%-Off, 1%-100%-On+Cool
		Control_Auto mode	1 bit	DPT_Switch	1.001		W		1-Set auto mode
		Status_Auto mode	1 bit	DPT_Switch	1.001	R		T	1-Auto mode active, 0-Auto mode not active
		Control_Heat mode	1 bit	DPT_Switch	1.001		W		1-Set heat mode
		Status_Heat mode	1 bit	DPT_Switch	1.001	R		T	1-Heat mode active, 0-Heat mode not active
		Control_Cool mode	1 bit	DPT_Switch	1.001		W		1-Set cool mode
		Status_Cool mode	1 bit	DPT_Switch	1.001	R		T	1-Cool mode active, 0-Cool mode not active
		Control_Fan mode	1 bit	DPT_Switch	1.001		W		1-Set fan mode
		Status_Fan mode	1 bit	DPT_Switch	1.001	R		T	1-Fan mode active, 0-Fan mode not active
		Control_Dry mode	1 bit	DPT_Switch	1.001		W		1-Set dry mode
		Status_Dry mode	1 bit	DPT_Switch	1.001	R		T	1-Dry mode active, 0-Dry mode not active
	FAN SPEED	Control_Fan speed enumerated	1 byte	Non-standarized	5.x		W		1-Low, 2-Mid, 3-High, 4-High+
		Status_Fan speed enumerated	1 byte	Non-standarized	5.x	R		T	1-Low, 2-Mid, 3-High, 4-High+
		Control_Fan speed scaling	1 byte	DPT_Scaling	5.001		W		Thersholds (0%..37%; 38%..62%; 63%..87%; 88%..100%)
		Status_Fan speed scaling	1 byte	DPT_Scaling	5.001	R		T	Thersholds (25%; 50%; 75%; 100%)
		Control_Fan speed low	1 bit	DPT_Switch	1.001		W		1-Set fan speed low
		Status_Fan speed low	1 bit	DPT_Switch	1.001	R		T	1-Speed low active, 0-Speed low not active
		Control_Fan speed mid	1 bit	DPT_Switch	1.001		W		1-Set fan speed mid
		Status_Fan speed mid	1 bit	DPT_Switch	1.001	R		T	1-Speed mid active, 0-Speed mid not active
		Control_Fan speed high	1 bit	DPT_Switch	1.001		W		1-Set fan speed high
		Status_Fan speed high	1 bit	DPT_Switch	1.001	R		T	1-Speed high active, 0-Speed high not active
		Control_Fan speed high+	1 bit	DPT_Switch	1.001		W		1-Set fan speed high+
		Status_Fan speed high+	1 bit	DPT_Switch	1.001	R		T	1-Speed high+ active, 0-Speed high+ not active
		Control_Fan speed Man/Auto	1 bit	DPT_Switch	1.001		W		0-Manual; 1-Auto
		Status_Fan speed Man/Auto	1 bit	DPT_Switch	1.001	R		T	0-Manual; 1-Auto
	VANE POS	Control_Vane position enumerated	1 byte	Non-standarized	5.x		W		1-Position 1..7-Position 7
		Status_Vane position enumerated	1 byte	Non-standarized	5.x	R		T	1-Position 1..7-Position 7
		Control_Vane position scaling	1 byte	DPT_Scaling	5.001		W		Thersholds(0..21%;22..36%;37..50%;51..64%;65..79%;80..93%;94..100%)

INDOOR UNIT SIGNALS		Status_Vane position scaling	1 byte	DPT_Scaling	5.001	R		T	Thersholds(0..14%;15..29%;30..43%;44..57%;58..71%;72..86%;87..100%)
		Control_Vane position auto	1 bit	DPT_Switch	1.001	R		T	1-Set auto vane, 0-Stop auto vane
		Status_Vane position auto	1 bit	DPT_Switch	1.001		W		1-Vane auto active, 0-Vane auto not active
		Control_Vane position position-1	1 bit	DPT_Switch	1.001	R		T	1-Set position-1 vane
		Status_Vane position position-1	1 bit	DPT_Switch	1.001		W		1-Vane position-1 active, 0-Vane position-1 not active
		Control_Vane position position-2	1 bit	DPT_Switch	1.001	R		T	1-Set position-2 vane
		Status_Vane position position-2	1 bit	DPT_Switch	1.001		W		1-Vane position-2 active, 0-Vane position-2 not active
		Control_Vane position position-3	1 bit	DPT_Switch	1.001	R		T	1-Set position-3 vane
		Status_Vane position position-3	1 bit	DPT_Switch	1.001		W		1-Vane position-3 active, 0-Vane position-3 not active
		Control_Vane position position-4	1 bit	DPT_Switch	1.001	R		T	1-Set position-4 vane
		Status_Vane position position-4	1 bit	DPT_Switch	1.001		W		1-Vane position-4 active, 0-Vane position-4 not active
		Control_Vane position position-5	1 bit	DPT_Switch	1.001	R		T	1-Set position-5 vane
		Status_Vane position position-5	1 bit	DPT_Switch	1.001		W		1-Vane position-5 active, 0-Vane position-5 not active
		Control_Vane position position-6	1 bit	DPT_Switch	1.001	R		T	1-Set position-6 vane
		Status_Vane position position-6	1 bit	DPT_Switch	1.001		W		1-Vane position-6 active, 0-Vane position-6 not active
		Control_Vane position position-7	1 bit	DPT_Switch	1.001	R		T	1-Set position-7 vane
		Status_Vane position position-7	1 bit	DPT_Switch	1.001		W		1-Vane position-7 active, 0-Vane position-7 not active
	TEMPERATURES	Control_Temperature Setpoint (°C)	2 byte	DPT_Value_Temp	9.001		W		Cool: 19..30 °C; Heat: 17..30 °C
		Status_Temperature Setpoint (°C)	2 byte	DPT_Value_Temp	9.001	R		T	Cool: 19..30 °C; Heat: 17..30 °C
		Status_AC Ambient Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T	-63..63 °C
		Status_Remote Sensor Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T	-63..63 °C
		Control_KNX ambient Temperature (°C)	2 byte	DPT_Value_Temp	9.001		W		°C
		Status_Outlet Temperature (°C)	2 byte	DPT_Value_Temp	9.001		W		-63..63 °C
		Status_GasPipe Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T	-63..63 °C
		Status_LiquidPipe Temperature (°C)	2 byte	DPT_Value_Temp	9.001		W		-63..63 °C
	ERROR CODE	Status_Unit error	1 bit	1.005-DPT_Alarm	1.005	R		T	0-No error, 1-Error
		Status_Unit error code	2 byte	Non-standarized	8.x	R		T	0-No Error, X-Error (100..999)
	FILTER	Status_FilterSign	1 bit	DPT_Alarm	1.005	R		T	0-Normal, 1-Alarm

INDOOR UNIT SIGNALS	COMM STATUS	Control_FilterReset	1 bit	DPT_Reset	1.015		W		0-No reset, 1-Reset
		Status_Communication status	1 bit	DPT_Switch	1.001	R		T	0-Not exist, 1-Exist
	REMOC.	Control_On/Off Remote controll disablement	1 bit	DPT_Bool	1.002		W		0-No disabled, 1-Disabled
		Status_On/Off Remote controll disablement	1 bit	DPT_Bool	1.002	R		T	0-No disabled, 1-Disabled
		Control_Mode Remote controll disablement	1 bit	DPT_Bool	1.002		W		0-No disabled, 1-Disabled
		Status_Mode Remote controll disablement	1 bit	DPT_Bool	1.002	R		T	0-No disabled, 1-Disabled
		Control_Setpoint Remote controll disablement	1 bit	DPT_Bool	1.002		W		0-No disabled, 1-Disabled
		Status_Setpoint Remote controll disablement	1 bit	DPT_Bool	1.002	R		T	0-No disabled, 1-Disabled
		Control_Fan Remote controll disablement	1 bit	DPT_Bool	1.002		W		0-No disabled, 1-Disabled
		Status_Fan Remote controll disablement	1 bit	DPT_Bool	1.002	R		T	0-No disabled, 1-Disabled
	SYSTEM INFO	Status_Unit type	1 byte	DPT_Value_1_Ucount	5.010	R		T	1-SS, 2-FC, 3-VRF, 4-IU, 5-ES, 13-Not Defined
		Status_Unit adress	1 byte	DPT_Value_1_Ucount	5.010	R		T	1..64
		Status_System adress	1 byte	DPT_Value_1_Ucount	5.010	R		T	1..64
	DEHUMIDIFICATION	Status_Dehumidification	1 bit	DPT_Switch	1.001	R		T	0-Off, 1-On
		Control_Dehumidification correction	1 byte	DPT_Value_1_Ucount	5.010		W		0..2
		Status_Dehumidification correction	1 byte	DPT_Value_1_Ucount	5.010	R		T	0..2
	OTHERS	Status_Compresor stop cause	2 byte	Non-standarized	8.x	R		T	X-Cause (0-254), 255-Operation Off
		Status_Expansion valve open	1 byte	DPT_Scaling	5.001	R		T	0..100 %
		Status_Operation condition	1 byte	Non-standarized	5.x	R		T	0-Off, 1-Thermo Off, 2-Thermo On, 3-Alarm
		Status_RC SW Temperature (°C)	2 byte	DPT_Value_Temp	9.001	R		T	-63..63 °C
		Status_RC SW Configuration	1 bit	DPT_Switch	1.001	R		T	0-Without RCS, 1-With RCS

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[HMS Networks:](#)

[INKNXHIS016O000](#) [INKNXHIS064O000](#)