



Operation Procedures for Floating Socket


[Mating]

1. Hold part A on the floating socket, and place it on the receptacle so that part A matches to part B. 2. Align the floating socket edge on the side of friction lock to receptacle housing edge in a line. (Forcible mating without above alignment process could cause contact deformation.)

3. Press down at the center surface of the floating socket. (Press down until the floating socket touches to the receptacle.)

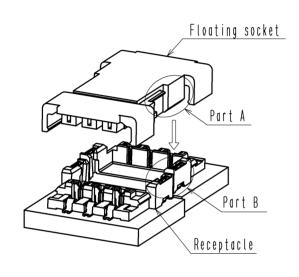

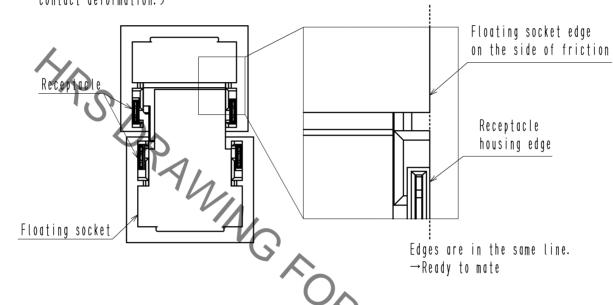


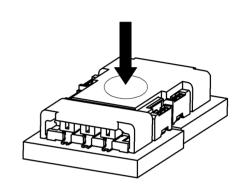


[Unmating]

FORM HC0011-5-4_AN

1. Hook the lever on either sides of socket with finger and lift up to the upper direction for unlock. (Lift up until friction lock is released.)

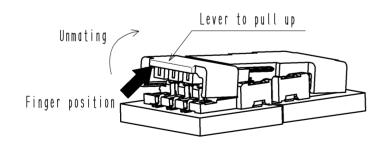

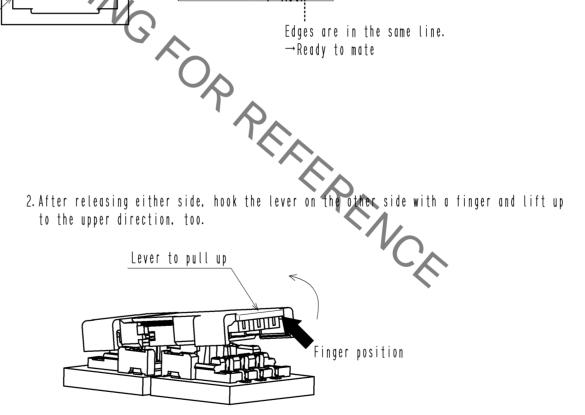

EDC3-334142-01 DF59-2P-4FC(50) CL667-0020-5-50

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Hirose Electric:

DF59-2P-4FC(50)