LTC3878EGN

DESCRIPTION

Demonstration circuit 1292 is a NO RSENSE STEP-DOWN DC/DC CONVERTER featuring the LTC3878EGN. Its output supplies 1.2V @ 18A and its input voltage range is 4.5V to 14V. The demo board uses a high density, two sided drop-in layout. The power components, excluding the bulk output capacitors and bulk input capacitors, fit within a 0.94" x 0.63" area on the top layer. The control circuit on the bottom layer has a footprint of 0.63" x 0.40". The fixed on-time valley current mode architecture of the LTC3878EGN provides a very fast load step response. Other features of the board include a RUN/SS pin, a PGOOD pin and jumper to select either CCM or DCM operation at light load.

Design files for this circuit board are available. Call the LTC factory.

PowerPath is a trademark of Linear Technology Corporation

PARAMETER	CONDITION	VALUE
Minimum Input Voltage		4.5V
Maximum Input Voltage		14V
Output Voltage	V _{IN} = 4.5V to 14V, I _{OUT} = 0A to 18A	1.2V ±2%
Maximum Output Current		18A
Typical Output Voltage Ripple	V _{IN} = 12V, I _{OUT} = 18A (20MHz BW)	17mVp-p
Nominal Switching Frequency	100% load, V _{IN} = 12V, I _{OUT} = 18A	340kHz
Efficiency (see Figure 3 for efficiency curves)	V _{IN} = 12V, 100% load	88.4% Typical

Table 1. Performance Summary ($T_A = 25^{\circ}C$)

QUICK START PROCEDURE

Demonstration circuit 1292 is easy to set up to evaluate the performance of the LTC3878EGN. Refer to Figure 1 for proper measurement equipment setup and follow the procedure below:

NOTE: When measuring the input or output voltage ripple, care must be taken to avoid a long ground lead on the oscilloscope probe. See Figure 2 for proper scope probe technique. Short, stiff leads should be soldered to the (+) and (-) terminals of an output capacitor. The probe's ground ring needs to touch the (-) lead and the probe tip needs to touch the (+) lead.

- 1. Place jumpers in the following positions: JP1 RUN ON JP2 MODE CCM
- 2. With power off, connect the input power supply to Vin and GND.
- 3. Turn on the power at the input.
- 4. Check for the proper output voltages. Vout = 1.176V to 1.224V
- 5. Once the proper output voltages are established, adjust the loads within the operating range and observe the output voltage regulation, ripple voltage, efficiency and other parameters.

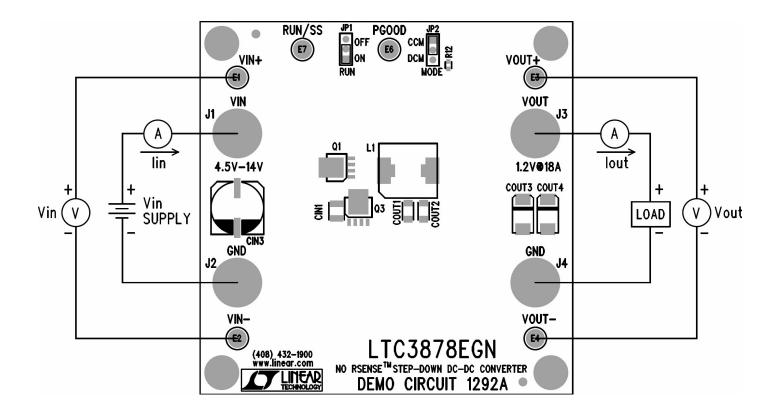


Figure 1. Proper Measurement Equipment Setup

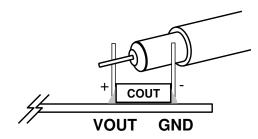


Figure 2. Measuring Output Voltage Ripple


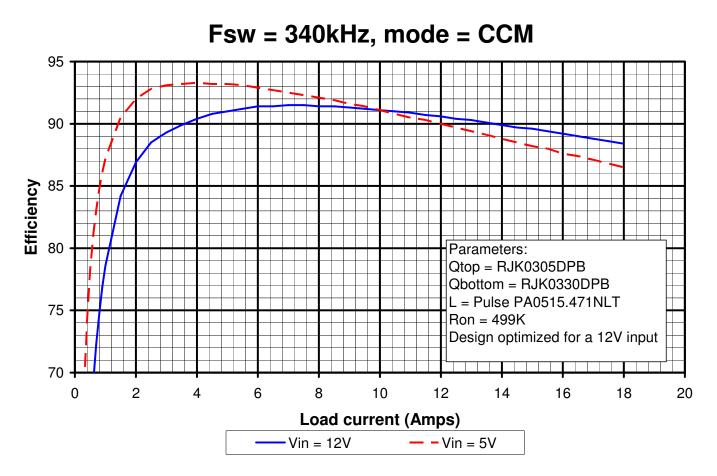


Figure 3. Typical efficiency curves

QUICK START GUIDE FOR DEMONSTRATION CIRCUIT 1292 NO RSENSE STEP-DOWN DC/DC CONVERTER

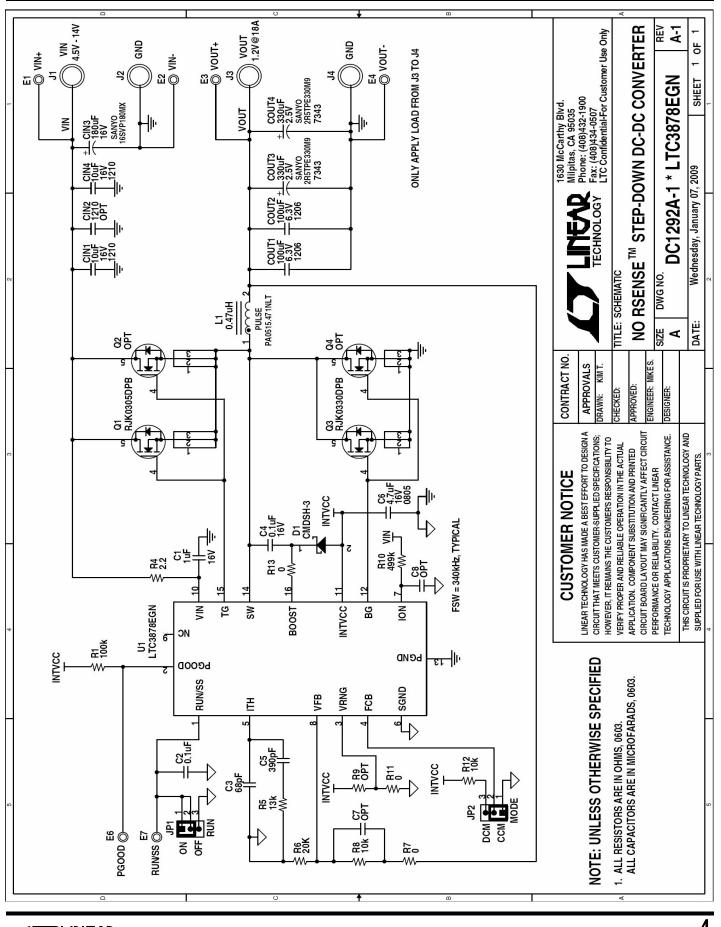

4

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Analog Devices Inc.: DC1292A