


Oct.1.2025 Copyright 2025 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.

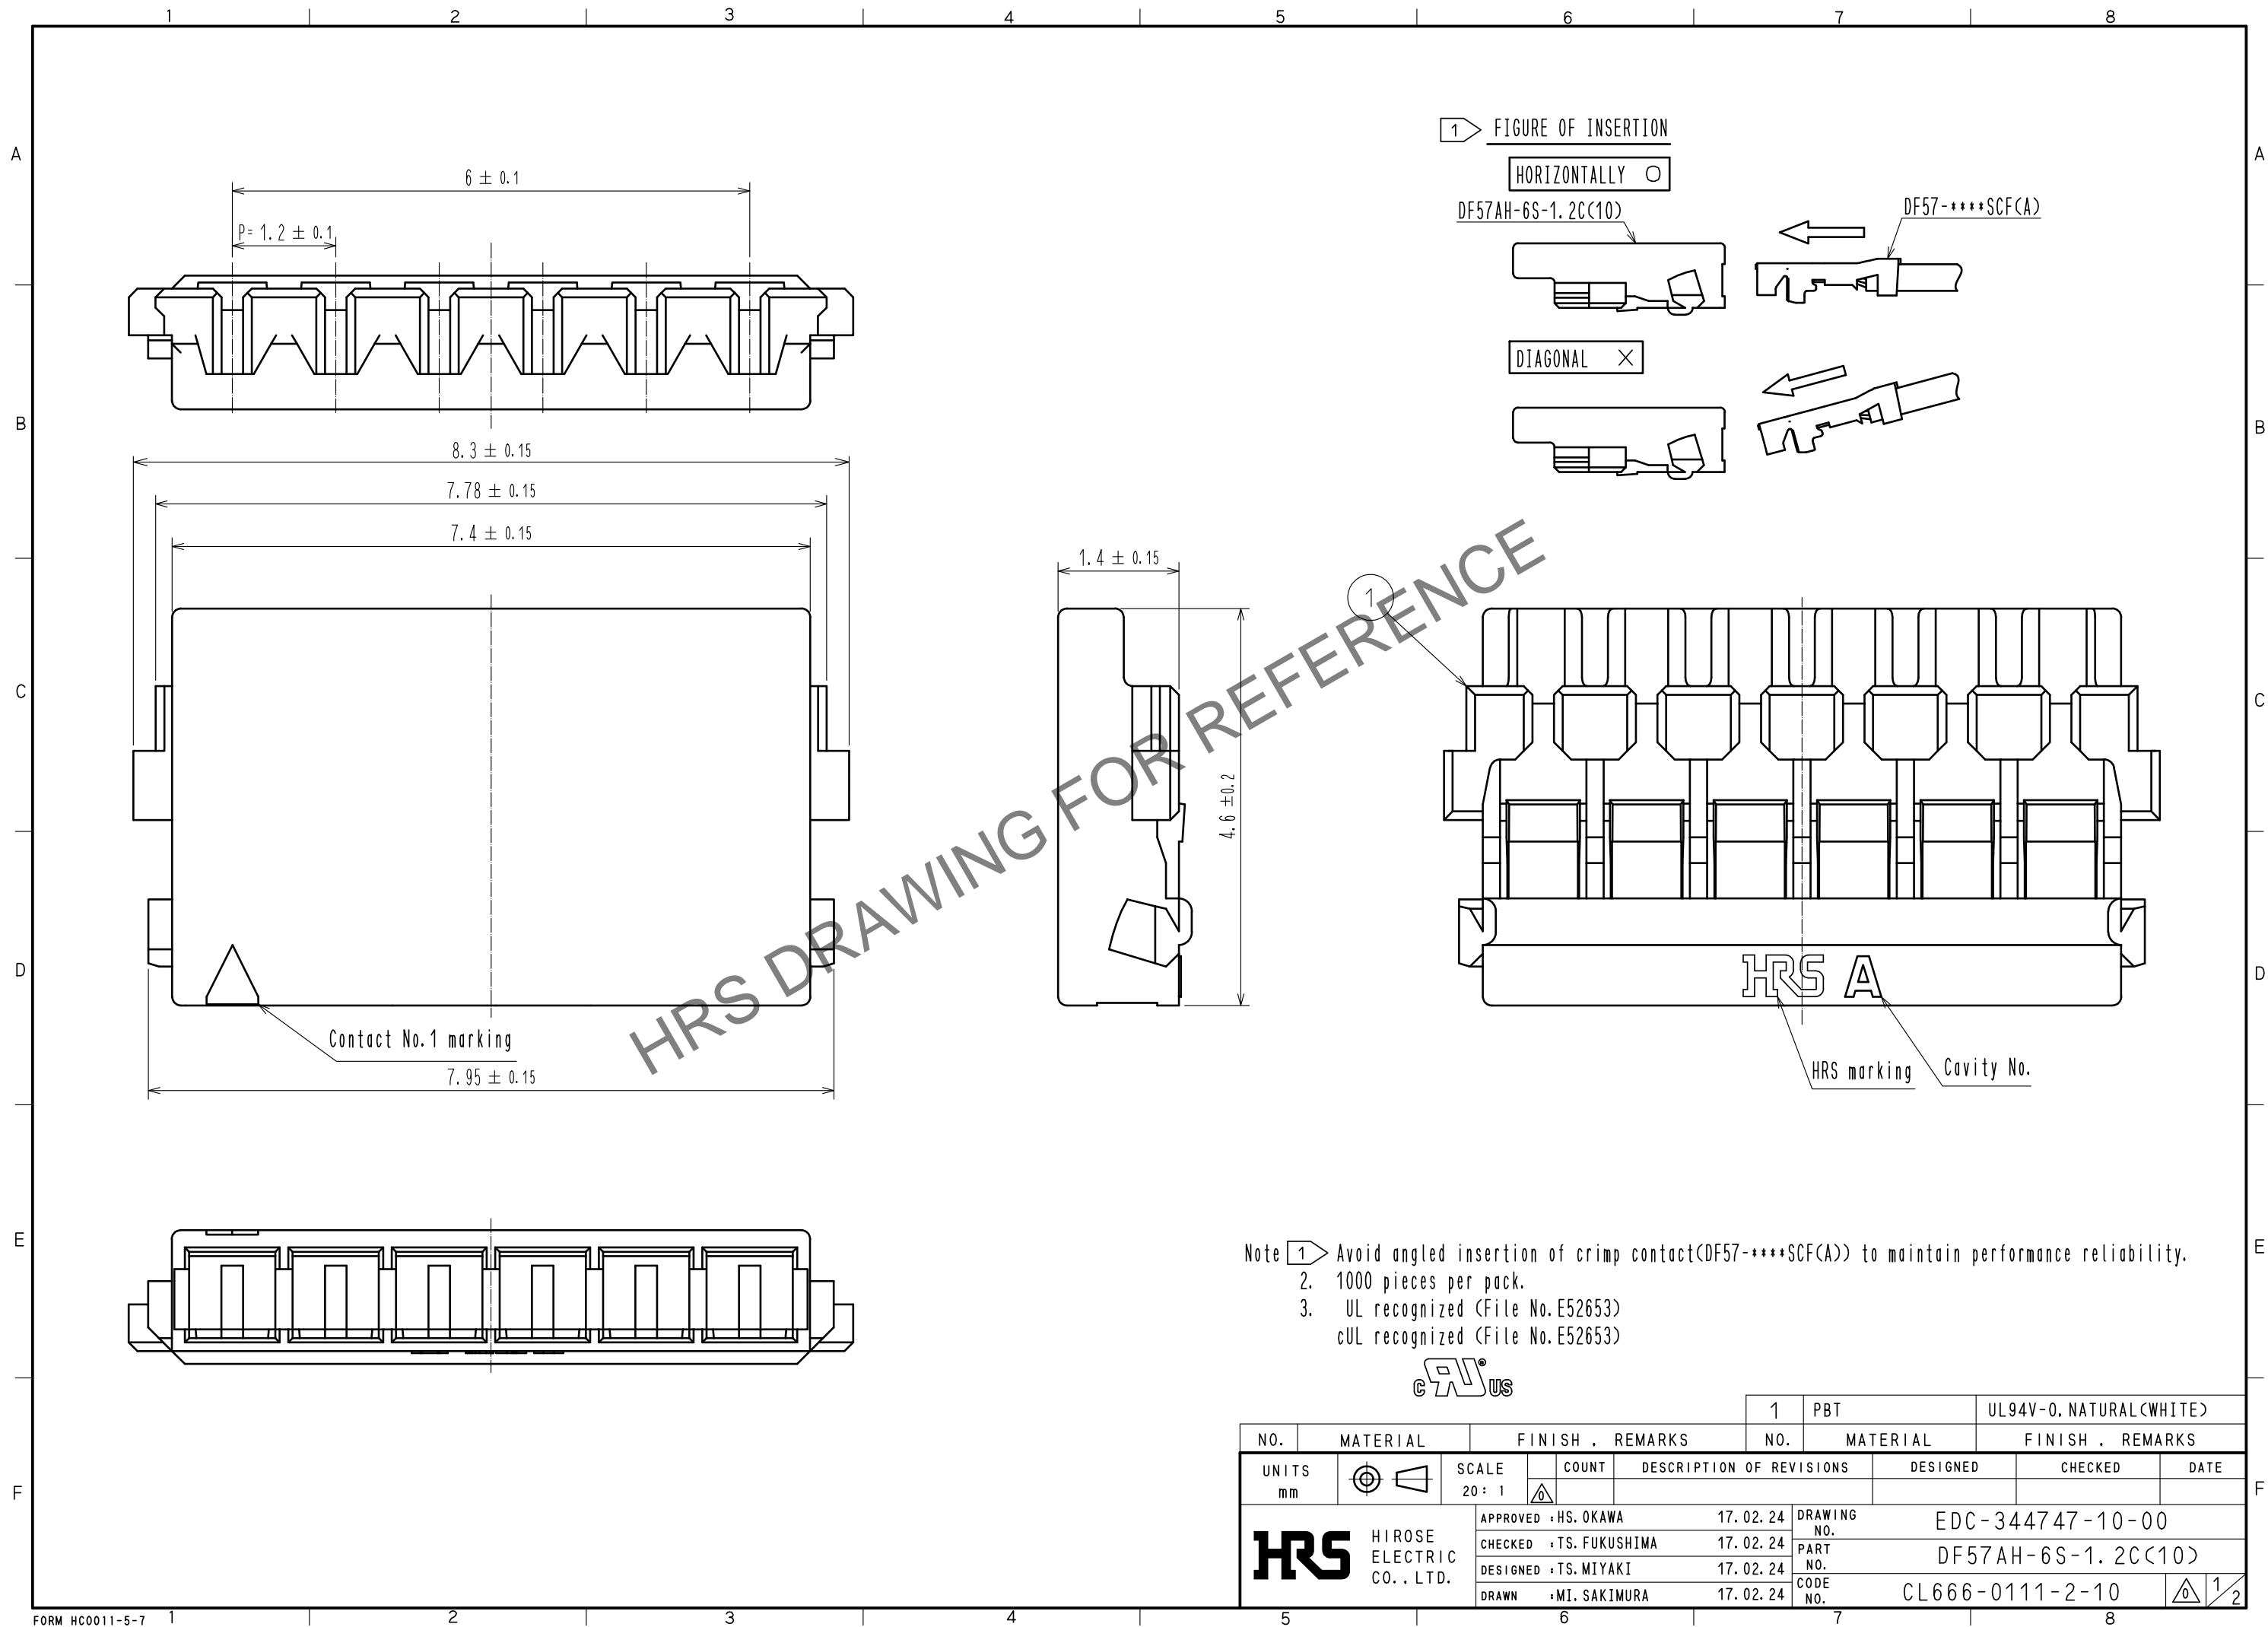


Oct.1.2025 Copyright 2025 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


# DF57 Series Mating / Unmating Operation Instruction (For DF57 series)

## Mating


①By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

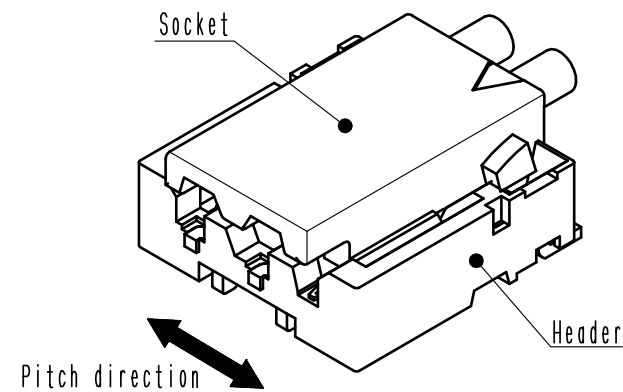

②Slightly press the socket down at cable side to tilted angle.

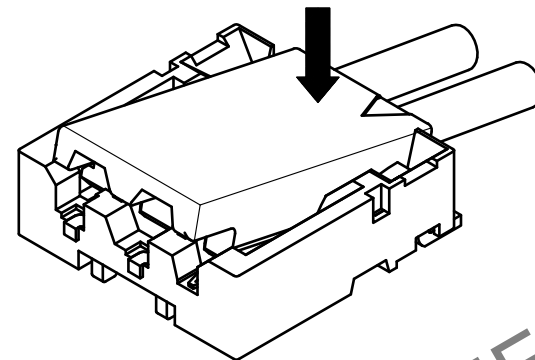


③Press down at the lever side with stabilizing the cable side to insert. Mating completes.

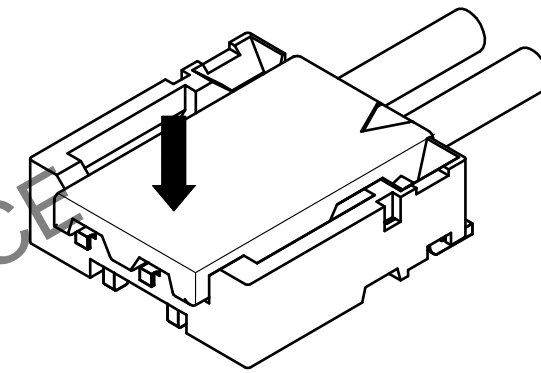


## Unmating


①Hook the lever with finger nail.

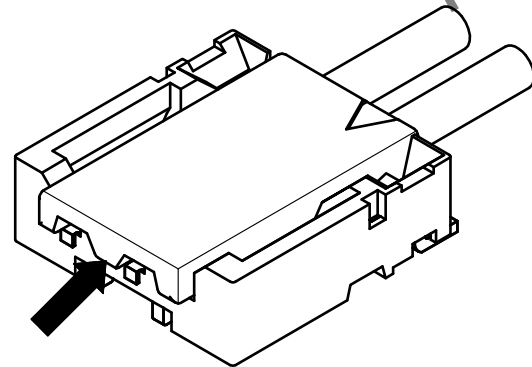

②Lift up to the upper direction and friction lock is released.

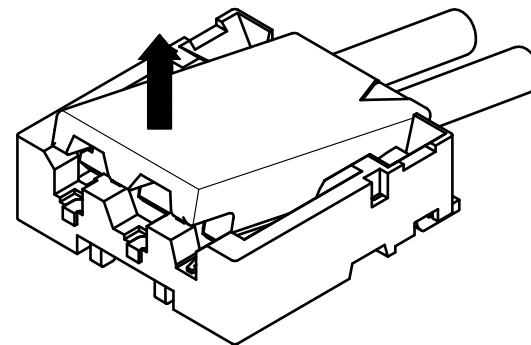

③Lift up to the upper direction and positive lock is released. Removal completes.

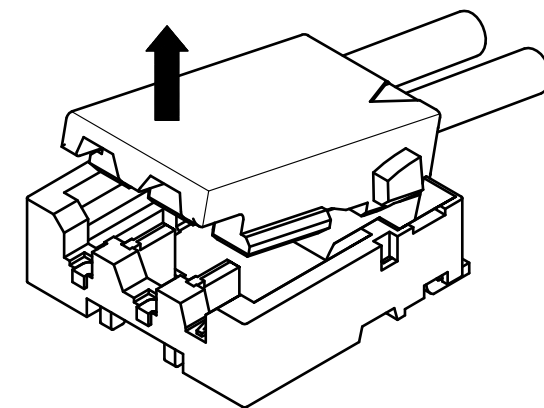

**HRS**

DRAWING NO.	EDC-344747-10-00
PART NO.	DF57AH-6S-1. 2C<10>
CODE NO.	CL666-0111-2-10

2/2