


# Building a Part Number

# Standard Options

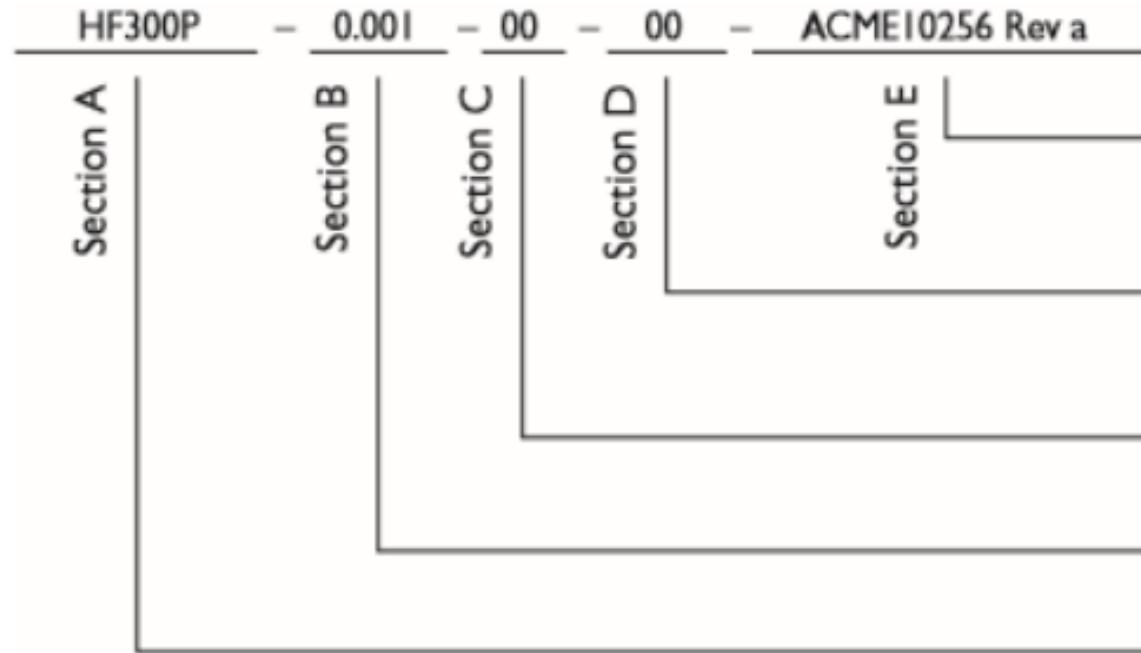

◀ example

NA = Selected standard option. If not selecting a standard option, insert company name, drawing number, and revision level.

— = Standard configuration dash number.  
1112 = 11" x 12" sheets, 11/250 = 11" x 250' rolls, or  
00 = custom configuration

AC = Adhesive, one side  
00 = No adhesive

Standard polyimide thicknesses available: 0.001", 0.0015",  
0.002"

HF300P = Hi-Flow 300P Phase Change Material

Note: To build a part number, visit our website at [www.bergquistcompany.com](http://www.bergquistcompany.com).

Hi- Flow®: U.S. Patent 6,197,859 and others