
Building a Part Number

Standard Options

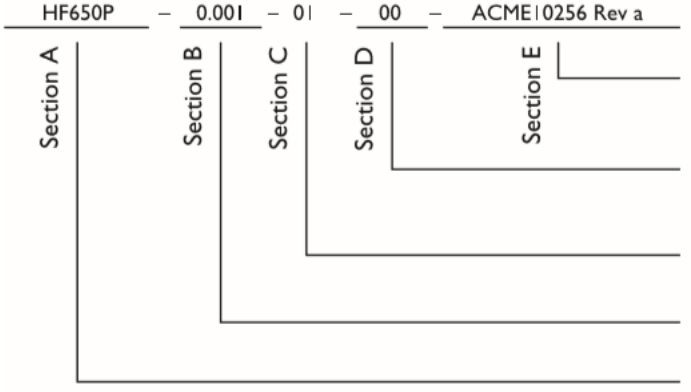

◀◀ *example*

NA = Selected standard option. If not selecting a standard option, insert company name, drawing number, and revision level.

1112 = 11" x 12" sheets, 11/250 = 11" x 250' rolls, or 00 = custom configuration

01 = Natural Tack

Standard Polyimide Thickness Available = 0.001", 0.0015", 0.002"

HF650P = Hi-Flow 650P Phase Change Material

Note: To build a part number, visit our website at www.bergquistcompany.com.